

2018 **ROGUE** **SPORT**

QUICK REFERENCE GUIDE





- | | | | |
|--|---|--|--|
| 1 Vehicle Information Display* | 7 Steering Wheel Switches for Audio Control*/ Navigation / Vehicle Information Display | 11 Heated Steering Wheel Switch* | 17 Audio and Navigation System |
| 2 Headlight and Turn Signal Switch | 8 Cruise Control / Bluetooth® Switches | 12 Intelligent 4x4 Lock Switch* | 18 Heater and Air Conditioner (automatic) |
| 3 Low Tire Pressure Warning Light | 9 Vehicle Dynamic Control (VDC) OFF Switch* | 13 ECO Mode Switch | 19 Front Passenger Air Bag Status Light* |
| 4 Instrument Brightness Control Button* | 10 Intelligent Lane Intervention (I-LI) Switch* | 14 Steering Wheel Tilt Adjustment | 20 USB Port/Aux Jack / Power Outlet |
| 5 Trip Reset Switch | | 15 Fuel-filler Door Release | |
| 6 Wiper and Washer Switch | | 16 Hood Release* | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

NissanConnect® Services Powered by SiriusXM® (if so equipped)	2
Intelligent Around View Monitor (I-AVM) (if so equipped)	4
Drive Mode	6
Blind Spot Warning (BSW) (if so equipped)	6
Rear Cross Traffic Alert (RCTA) (if so equipped)	6
Hill Start Assist	7
Automatic Emergency Braking (AEB) (if so equipped)	7
Automatic Emergency Braking (AEB) with Pedestrian Detection System (if so equipped)	7
Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI) (if so equipped)	8
Active Ride Control (ARC)	9
Intelligent Trace Control (I-TC)	9
Intelligent Engine Brake (I-EB) (if so equipped)	9
Sirius® Eyes Free	10
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	10

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	11
Loose Fuel Cap and Fuel-filler Door	12
Outside Temperature Display	12
Towing your Vehicle	13
Clock Set/Adjustment	13

FIRST DRIVE FEATURES

Nissan Intelligent Key® System (if so equipped)	14
Intelligent 4x4 (I-4X4) (if so equipped)	15
Outside Mirror Control Switch	16
Front Power Seat Adjustments (if so equipped)	16
2 ND Row Seats	16
Starting/Stopping the Engine	17
Headlight Control Switch	17
Wiper and Washer Switch	18
Center Console Storage Box	19
Heater and Air Conditioner (automatic) (if so equipped)	19
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)	21
Cruise Control (if so equipped)	22
Intelligent Cruise Control (ICC) (if so equipped)	22
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface	23
Power Moonroof (if so equipped)	24
Tilt and Telescopic Steering Wheel Adjustments	24

SYSTEM GUIDE

Vehicle Information Display	25
NissanConnect® Mobile Apps (if so equipped)	26
Hands-free Text Messaging Assistant (if so equipped)	27
Bluetooth® Hands-free Phone System	28
• System Operating Tips	28
Bluetooth® System with Navigation (if so equipped)	29
Bluetooth® System without Navigation (if so equipped)	30
Navigation System (if so equipped)	32



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Heater, air conditioner, audio and phone system (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

 
NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call 855-426-6628.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the  headset icon **2** on the map screen, via NissanConnect Services Companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.

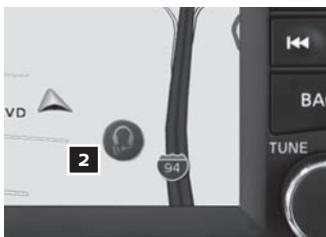


- Remote Door Lock/Unlock, for use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start with Intelligent Climate Control (if so equipped), start your engine remotely using the NissanConnect Services companion app or website.
- Journey Planner, with which you can send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification, this system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert, receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search, select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle's location.
- Valet Alert, use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert, specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Press the **APPS·i** button **3** on the control panel, then
- Touch the "NissanConnect Services" key **4**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

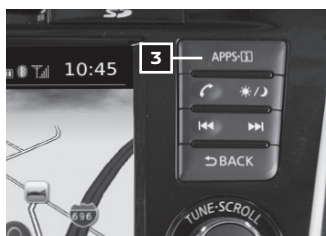

NEW SYSTEM FEATURES

INTELLIGENT AROUND VIEW MONITOR (I-AVM) (if so equipped)

 
- With the ignition switch in the ON position, the Intelligent Around View Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.



- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Start from any Control Panel screen


Front view & bird's-eye view

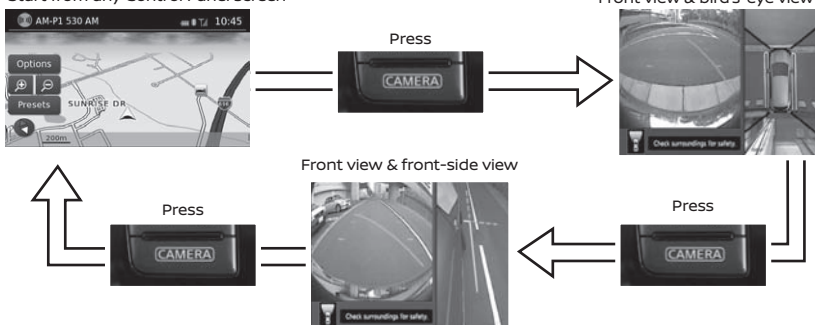

- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:



Rear view & bird's-eye view

 Rear view & front-side view

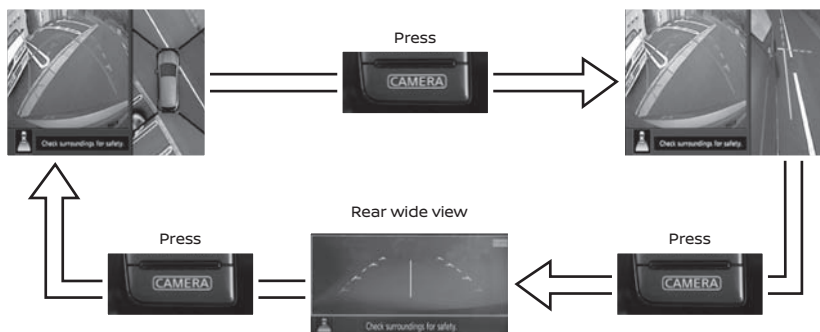

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

  - There are some areas where the system will not detect objects:
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

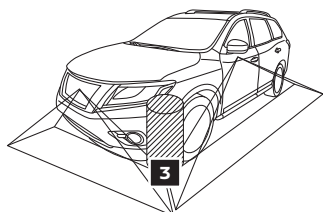

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **P (PARK)**, **R (REVERSE)**, **N (NEUTRAL)** or **D (DRIVE)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

NEW SYSTEM FEATURES

DRIVE MODE

NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
 - Push the **ECO** switch **1** on the instrument panel to activate.
 - The ECO drive mode indicator will appear on the meter.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

BLIND SPOT WARNING (BSW) (if so equipped)

- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light **2** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- The RCTA system can help alert the driver of an approaching vehicle when the driver is backing out of a parking space.
- When the shift position is in R (Reverse) and the vehicle speed is less than approximately 5 mph (8 km/h), the RCTA system is operational.
- If the radar detects an approaching vehicle from either side, the system chimes (once) and the side indicator light flashes on the side the vehicle is approaching from.
- The RCTA system can be turned on or off through the Parking Aids menu in the Driver Assistance menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- Hill Start Assist will not operate when the shift lever is in the **N (NEUTRAL)** or **P (PARK)** position or on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) (if so equipped)

- The AEB system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h).
- If there is a risk of a forward collision with a vehicle, the first visual warning (yellow) **1** will illuminate in the vehicle information display and an audible alert will sound. If the driver applies brakes quickly and forcefully, the system automatically applies partial braking.
- If the driver does not take action, the AEB system will provide a second set of audible and visual warning (flashing) (red) **1** to the driver and then automatically apply harder braking.
- If the risk of collision becomes imminent, the AEB with pedestrian detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM (if so equipped)

- The AEB with Pedestrian Detection System can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB system operates at speeds between 6-37 mph (10-60 km/h).



NEW SYSTEM FEATURES

 
- If a risk of a forward collision is detected, the AEB with pedestrian detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with pedestrian detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with pedestrian detection system issues the second visual (flashing) (red) **1** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with pedestrian detection system applies harder braking automatically.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) (if so equipped)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will chime and the orange LDW light **1** on the vehicle information display will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW system can be turned on and off through the Vehicle Information Display. To temporarily turn off the system, push the Intelligent Lane Intervention switch **2** on the instrument panel.
- When the system is off, the indicator light on the switch **3** is off.

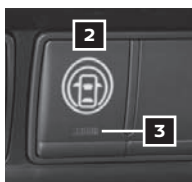

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

ACTIVE RIDE CONTROL (ARC)

The Active Ride Control system senses upper body motion of the vehicle based on wheel speed information. It controls engine torque and four wheel brake pressure to enhance ride comfort in effort to restrain uncomfortable upper body movement.

This function cannot be set to OFF (disabled) through the vehicle's information display. This feature can be turned OFF by pressing the Vehicle Dynamic Control (VDC) OFF switch.

- This system will come into effect above 25 mph (40 km/h).
- When the Vehicle Dynamic Control (VDC) OFF switch is used to turn off the VDC system, the Active Ride Control is also turned off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

INTELLIGENT TRACE CONTROL (I-TC)

The Intelligent Trace Control function senses driving based on the driver's steering, acceleration and braking patterns. It controls brake pressure at each of the individual wheels to aid tracing at corners and help for a smooth vehicle response.

This system can be set to OFF (disabled) through the vehicle's information display, but some functions will remain on to assist the driver (e.g. emergency avoidance scenes).

- To turn off the Intelligent Trace Control through the vehicle information display **1**:

1. Select "Settings"
2. Select "Driver Assistance"
3. Select "Chassis Control"
4. Select "Trace Control"



If Vehicle Dynamic Control (VDC) OFF switch is pressed, VDC and All Chassis Control will be OFF.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

INTELLIGENT ENGINE BRAKE (I-EB) (if so equipped)

The Intelligent Engine Brake adds subtle deceleration by controlling the Continuously Variable Transmission (CVT) in the vehicle based on the driver's steering and sensors. This allows the vehicle to easily adjust speed when braking at corners.

This function can be set to OFF (disabled) through the vehicle's information display, but the Vehicle Dynamic Control (VDC) function will remain on (e.g. emergency avoidance scene).

NEW SYSTEM FEATURES

- To turn off the Intelligent Engine Brake through the vehicle information display **1**:

1. Select "Settings".
2. Select "Driver Assistance".
3. Select "Chassis Control".
4. Select "Engine Brake".



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

SIRI® EYES FREE

If you have a compatible iPhone® with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth® system.

If you have a compatible iPhone® connected to the system, press and hold the  button **1** on the steering wheel for a few seconds. Select "Short Press" or "Long Press" for Siri® Eyes Free activation mode. Switch action can also be changed from the Bluetooth® settings menu.

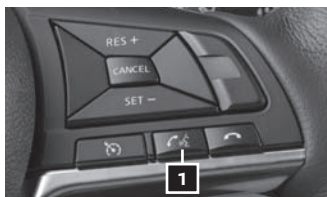


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

 - Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

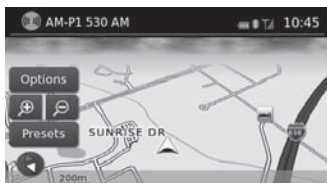

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your NissanConnect® Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals outside the vehicle to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert system:
 1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low - Add Air** warning message and low tire pressure warning light **2** will extinguish.
- In addition to the **Tire Pressure Low - Add Air** warning message, you can view the individual tire's pressure in the vehicle information display as well as the recommended pressure, denoted by blue lettering, for each tire.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the **"Technical and consumer information (section 10)"** of your Owner's Manual for the location of the Tire and Loading Information label.

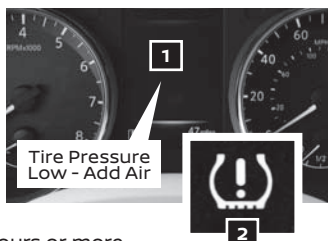

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"**, the **"In case of emergency (section 6)"** and **"Do-it-yourself (section 8)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

LOOSE FUEL CAP AND FUEL-FILLER DOOR

LOOSE FUEL CAP

- A **Loose Fuel Cap** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the **OK** button, located on the steering wheel, is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



FUEL-FILLER DOOR

- The fuel-filler door is located on the passenger's side of the vehicle.
- To open the fuel-filler door, pull the release lever **2**, located on the instrument panel to the left of the steering wheel.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the ON position, the outside air temperature will appear in the vehicle information display **1**.
- If the outside air temperature is below 24°F (-4°C), the outside temperature display will have a snowflake **2** blinking for 20 seconds then remain illuminated with the ignition switch in the ON position.
- If the outside air temperature is between 26°F and 37°F (-3°C and +3°C), the outside temperature display will have a snowflake **2** blink continuously with the ignition switch in the ON position.
- If the outside air temperature is 39°F (+4°C) the outside temperature display will have a snowflake **2** that will blink and then extinguish.

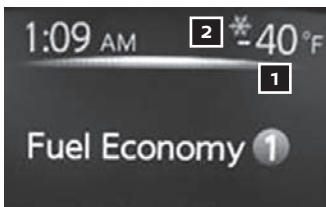

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

TOWING YOUR VEHICLE

ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)

- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, Nissan recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"In case of emergency (section 6)"** and **"Technical and consumer information (section 10)"** of your Owner's Manual.

CLOCK SET/ADJUSTMENT

WITH NAVIGATION (if so equipped)

 
- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **1**.
2. Select the "Settings" key.
3. Select the "System" key.
4. Select the "Clock/Date" key.



- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Select this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.
 - **Time Zone:** Select the "Time Zone" key **2** to choose from the applicable time zone list and/or select "Daylight Savings Time" to switch between ON and OFF.
 - **Auto:** Automatically sets the clock to the vehicle's current location.

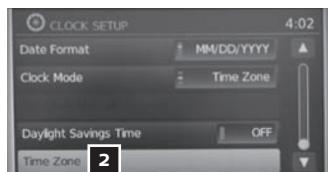

- Press the **BACK** button **3** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® System allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The remote start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For the remote start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.

- To start your vehicle remotely:

1. Press the  button **1**.
2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.

- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside air temperature.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.

LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3**, push the liftgate request switch **4** or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once and the corresponding door will unlock. Push the request switch **3** again within 1 minute; all other doors will unlock, or
 - Press the  button **5** on the key fob to unlock the driver's side door. Press the  button **5** again; all other doors will unlock.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, press the ignition switch **START/STOP** button while depressing the brake pedal and the engine will start.

* State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" and "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

INTELLIGENT 4X4 (I-4X4) (if so equipped)

- Rogue Sport uses an intuitive Intelligent 4x4 system.
- Push the **AWD LOCK** switch **1** to turn ON or OFF the LOCK mode.

LOCK MODE

- LOCK Mode will place the vehicle in All-Wheel Drive (AWD).
- LOCK Mode is recommended for driving at low-speeds, such as during takeoff or on rough roads.
- Push the **AWD LOCK** switch **1** to activate. The AWD indicator light illuminates on the instrument panel.

After takeoff, **AWD LOCK** mode returns to AUTO mode automatically when the vehicle has been driven at a high speed.

AUTO MODE

- AUTO Mode is recommended for driving on paved or slippery roads. Torque will be distributed to both the front and rear wheels automatically for stability, depending on road conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.



FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH

- Move the small switch **1** to select the right or left side mirror.
- Adjust each mirror to the desired position using the large switch **2**.
- To prevent accidentally moving the mirror, move the small switch **1** to the center (neutral) position.

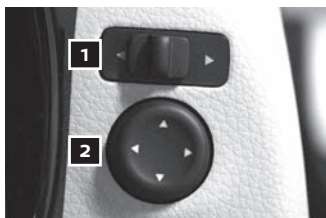

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the back end of the switch **1** up or down.

LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

2ND ROW SEATS

- To fold the rear seats:
 - Lift the seatback release lever **1** to fold the seatback forward.
 - To return the seats to seating position, push up on the seatback until it latches in place.
- Pull the armrest down (if so equipped) **2** to access the cup holders.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to the ON position.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch **START/STOP** button to the OFF position.

AUTO ACCESSORY

- With the vehicle in the **P (PARK)** position, the Intelligent Key with you (that is, in your pocket or purse) and the ignition switch placed from ON to OFF, the radio can still be used for a period of time or until the driver's door is opened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the DCE position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the DCE position **2** to turn on the headlights.



INTELLIGENT AUTO HEADLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed. The headlights will turn on automatically in twilight or rainy weather (when the windshield wiper is operated continuously).
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the OFF position, DCE position **1** or DCE position **2**.

HIGH BEAM ASSIST (if so equipped)

- The High Beam Assist system will operate when the vehicle is driven at approximately 22 mph (35 km/h) and above. If an oncoming vehicle or leading vehicle appears in front of your vehicle when the high beam is on, the headlights will automatically be switched to the low beam.
- Following the procedure below only activates the High Beam Assist system. This does not necessarily turn on the high beam even if there is no other traffic. Both ambient light and traffic conditions have to be correct for the high beam to illuminate.

FIRST DRIVE FEATURES

- To activate High Beam Assist, turn the headlight control switch to the **AUTO** position **3** and push the headlight control switch **4** forward to turn on the high beam. The High Beam Assist indicator light will illuminate.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the **⊗** position **5** to turn the fog lights on.
- Turn the switch (inside collar) to the OFF position to turn the fog lights off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

1 Mist  — One sweep operation of the front wipers.

2 Intermittent  — Operates the speed-sensing front wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.

4 Low  — Front wipers operate at a continuous low-speed.

5 High  — Front wipers operate at a continuous high-speed.

6 Front Washer  — Pull the lever toward you to activate the front washer. The front wipers will operate several times.



REAR WIPER AND WASHER

- 7** Intermittent  — Rear wiper operates intermittently.
- 8** Low  — Rear wiper operates at a continuous low-speed.
- 9** Rear Washer  — Push the lever forward to activate the rear washer. The rear wiper will operate several times.



DRIP WIPER

- Once the wiper spray cycle is finished, there will be a short delay. Then the wipers will sweep one more time to clear off any remaining drips from the windshield.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

CENTER CONSOLE STORAGE BOX

- To access the storage bin, pull up on the lever **1**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 DEFROSTING FRONT AND SIDE WINDOWS

- Press the front defroster  **FRONT** button. If it is difficult to defrost the windows, press the **A/C** button **6**. This feature removes humidity from the air.
- Turn the temperature control dial **3** left or right to set the desired temperature.
- To set the front defroster on high, press the fan speed  button **5** all the way up and turn the driver's side temperature control dial **3** all the way to the right.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

2 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window defroster  switch **2**. Push the switch again to manually turn the rear defroster off. This function automatically turns off after approximately 15 minutes.

3 ON-OFF BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **ON/OFF** button to turn the climate controls on or off. Turn the temperature control dial to the left for cooler air or right for warmer air.

4 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

5 FAN SPEED CONTROL BUTTONS

- Press the fan speed control button  for low fan speeds or  for high fan speeds.

6 A/C ON-OFF BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

7 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

8 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  **FRONT** or the front defroster and foot vent mode .

9 AUTO BUTTON

 
- Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake  button to draw outside air into the passenger compartment. The fresh air intake indicator light on the button will illuminate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

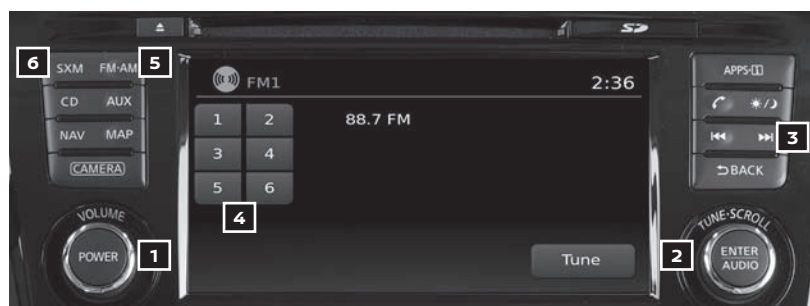

FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 POWER BUTTON/VOLUME CONTROL KNOB

- Press the **POWER** button to turn the system on or off.
- Turn the **VOLUME** control knob to the right or left to increase or decrease the volume.

2 ENTER|AUDIO BUTTON/TUNE-SCROLL KNOB

- Press the **ENTER|AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next touch and hold the desired station select key (1-6) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key (1-6).

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE** ON/OFF switch **4** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET -** switch **3** on the steering wheel and release. A green circle indicator light in the instrument panel will illuminate, and the set speed will display next to the indicator light. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES +** switch **1** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET -** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **2** on the steering wheel.
- To turn off cruise control, push the **CANCEL** switch **2** on the steering wheel. Both the **CRUISE** indicator light and green circle indicator light in the instrument panel will extinguish.

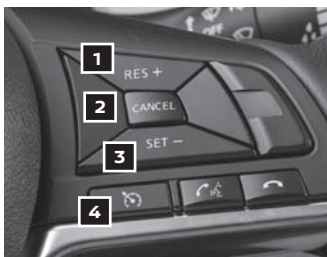


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

 - To set Vehicle-To-Vehicle Distance Control mode, push the **CRUISE** ON/OFF switch **1** on the steering wheel. The **CRUISE** indicator light **7** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **2** on the steering wheel and release it. ICC will be set to the desired speed.

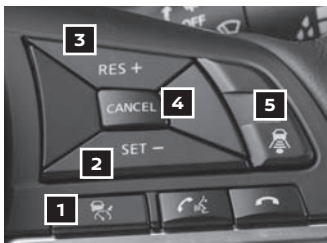

- Push the Distance  switch **5** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the Set distance and Set vehicle speed indicator lights will illuminate **6** in set mode.
- When a vehicle is detected ahead of you in the lane, the Vehicle ahead detection, Set distance and Set vehicle speed indicator lights will illuminate **7** in set mode.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel or tap the brake pedal. The set vehicle speed indicator lights **6** will extinguish.
- To turn off ICC, push the CRUISE  ON/OFF switch **1** on the steering wheel. The CRUISE indicator light **6** in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port/Aux jack **1** is located beneath the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

POWER MOONROOF (if so equipped)

- To fully open or close the moonroof, push the switch to the OPEN position **1** or CLOSE position **2** and release it. The roof will open or close automatically. To stop the roof, push the switch once while it is opening or closing.



TILTING THE MOONROOF

- To tilt the moonroof up, push the tilt switch **2** while it is fully closed. To tilt the moonroof down, push the switch to the tilt down position **1**.

AUTO-REVERSE

- When the auto-reverse function is activated, the moonroof will automatically open or tilt up when the control unit detects something caught in the moonroof when the moonroof is closing or tilting down.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL ADJUSTMENTS

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Trip computer information
- Driver Assistance
- Audio information
- Nissan Intelligent Key® operation information
- Navigation turn-by-turn
- Chassis control
- Cruise control system information
- Intelligent Cruise Control (ICC) system
- Indicators and warnings
- Tire pressure information
- Other information



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2** and the **▲** or **▼** buttons **3** located on the steering wheel.

- Press the **OK** button **2** on the steering wheel to change the display mode.
- Press the **▲** buttons **3** on the steering wheel up or down to navigate through the vehicle information display menu.
- Press the **OK** button **2** on the steering wheel to change or select an item.
- Press the **↶** button **4** on the steering wheel to go back to the previous menu.



START-UP DISPLAY

When the ignition switch is in the ON position, the vehicle information display will support three of the following modes:

- Trip Computer
- Fuel Economy
- Warnings (if there are any)

RESETTING THE TRIP ODOMETER

1. Press the **▶◀** button **3** on the steering wheel until you reach the trip computer mode.
2. Press the **OK** button **2**.
3. Select one of the following items:
 - "Cancel" - returns to the previous screen without resetting the trip computer.
 - "Fuel Economy" - resets Fuel Economy.
 - "All" - resets all linked values for the selected drive computer. This includes "Average Speed", "Elapsed time and trip odometer" and "Fuel economy".

SYSTEM GUIDE

SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance (if so equipped) ■ Clock ■ Tire Pressures ■ Unit
- Language (if so equipped) ■ Factory Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

NISSANCONNECT® MOBILE APPS (if so equipped)

- Your vehicle may be equipped with NissanConnect® Mobile Apps, allowing you to control various compatible smartphone applications through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle.
- To enroll in NissanConnect® Mobile Apps:
 1. Create a Nissan Owner Portal account at **www.owners.NissanUSA.com**.
 - Make sure to include your vehicle's VIN when creating your account.
 2. Under the NissanConnect Mobile Apps tab, select the red button next to Manage Subscription to enroll.
 3. Next, download the NissanConnect® Mobile Apps companion app from Google Play™ or the App Store®. Log into the companion app using your Nissan Owner Portal ID and password.
 4. Launch the app, select "United States", and accept the Terms and Conditions.
 5. Select "Sign In", then sign in with the email username and password you created when registering on the Nissan Owner Portal website.
- Pair your cellular phone to the vehicle.
 - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-Free Phone system.
 - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your cellular phone's USB cable.
 - For iPhone® on vehicles WITHOUT Navigation, connect the device using the Bluetooth® Hands-Free Phone system.
- You can select which apps you want activated in the vehicle from the NissanConnect® Mobile Apps companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some apps require you to have the app downloaded and installed on your cellular phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnect application site are available on all models.

- To help identify specific apps available for your vehicle or to contact a specialist via chat, please visit www.NissanUSA.com/connect/support.
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet. For additional information on connecting your device, see your Owner's Manual or visit www.NissanUSA.com/bluetooth.



- The NissanConnect app must be running on your device and the **Connected** icon **1** must be green before using your apps. If the **Disconnected** icon **2** is displayed, press the **APPS** **i** button **3** multiple times to ensure the connection is established.
- To access your apps with the vehicle controls, start your vehicle and then press the **APPS** **i** button **3** on the control panel. The system may take a few seconds to boot up before the NissanConnect Mobile Apps button **3** is enabled. This is normal.
- If available, your apps can be accessed once the vehicle and cellular phone are connected through the NissanConnect Mobile Apps companion app.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.



SYSTEM GUIDE

- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, say "Cancel" or press and hold the  button on the steering wheel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **—** or **+** on the steering wheel or turn the **VOLUME** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your Owner's Manual for detailed information.



- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Send predefined or custom text messages through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Once your compatible device is connected to the vehicle's audio system, the audio files will play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.
2. Select the "Settings" key .
3. Select the "Phone & Bluetooth" key .
4. Select the "Connect New Device" key .
5. Initiate the connecting process from the handset. The system will display the message:

 
 
"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.

VEHICLE PHONEBOOK

To access the vehicle phonebook:


1. Press the  button on the control panel.
2. Select the "Phonebook" key .
3. Choose the desired entry from the displayed list.

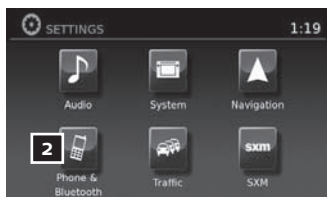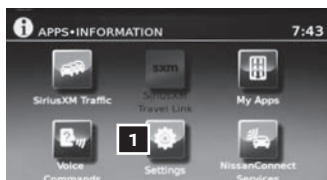

SYSTEM GUIDE


MAKING A CALL

 1. Press the  button on the control panel. The "PHONE" screen **5** will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 - : Input the phone number manually using the keypad displayed on the screen.

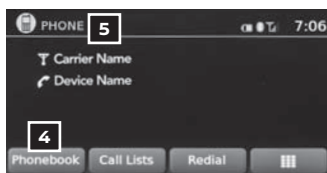

RECEIVING/ENDING A CALL

 - To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To end a call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

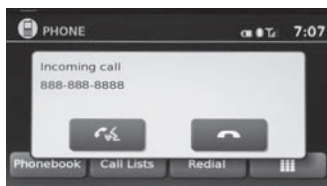

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual, the **"Hands-free phone (section 4)"** of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
 - A cellular phone can also be added at any time by selecting "Settings" > "Bluetooth" > "Add Phone".

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

3. Initiate pairing from the cellular phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
- When prompted, compare the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

 
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE

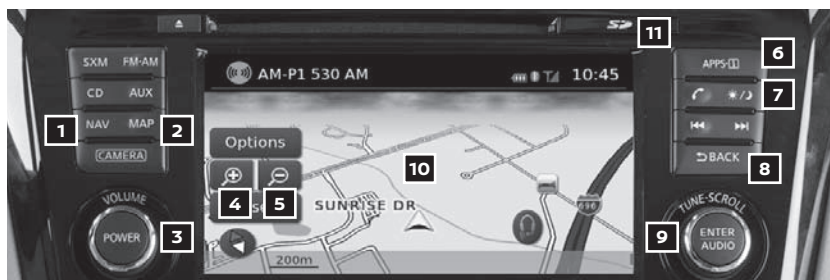

NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

- 1 NAV button** – Press to access the functions of the Navigation System.
- 2 MAP button** – Press to display the current location map screen.
- 3 VOLUME control knob** – Turn right to increase the volume or left to decrease the volume.
- 4 + key** – Touch to zoom the map in.
- 5 - key** – Touch to zoom the map out.
- 6 APPS button** – Press to access SiriusXM Traffic, MyApps, SiriusXM Travel Link, Voice Commands and Settings.
- 7 Day/Night button** – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE/SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK button** – Press to return to the previous screen.
- 9 TUNE/SCROLL knob** – Turn to scroll through the items in a list. Press to select a menu item.
- 10 Touch-screen display**
- 11 SD-card location** – An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information. For more information, refer to your NissanConnect® Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ Store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2018/roguesport or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsguide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2017 Nissan North America, Inc.

QR18EA 0J11U1

Printing: December 2017

