 


2018 **VERSA**
SEDAN

QUICK REFERENCE GUIDE



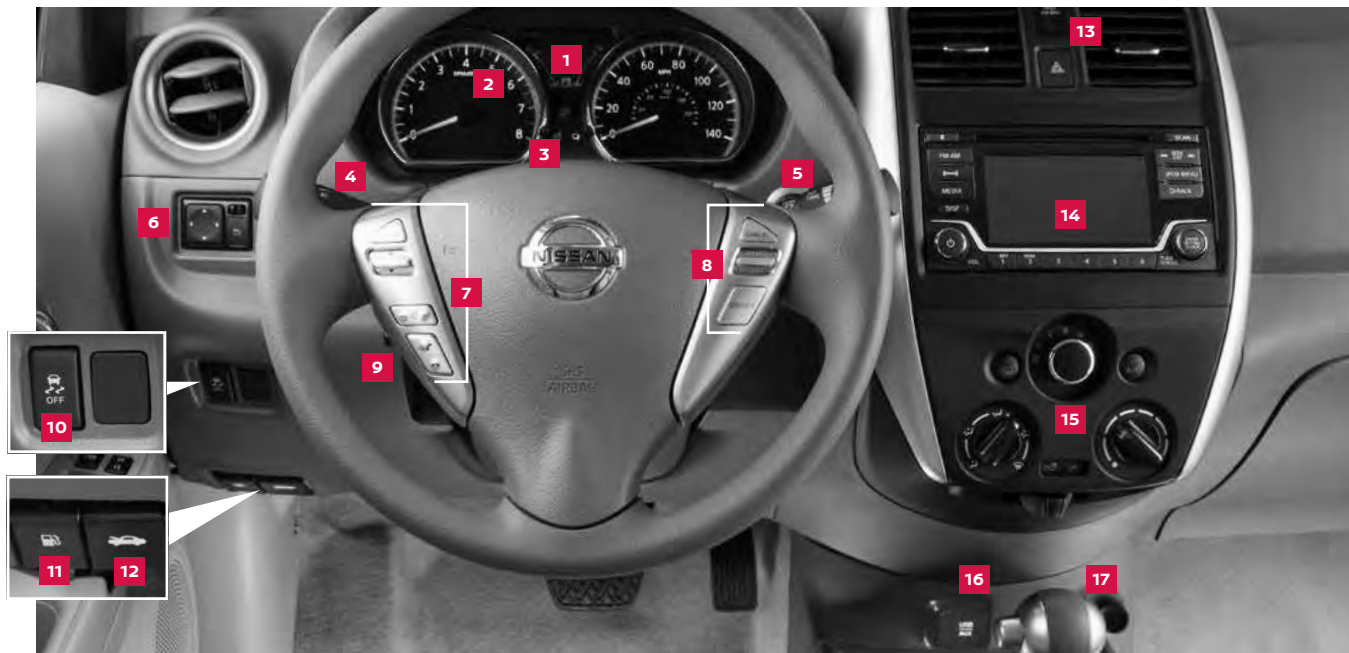

- | | | | |
|---|---|---|---|
| 1 Trip Computer | 6 Outside Mirror Control Switch | 10 Vehicle Dynamic Control (VDC) OFF Switch* | 14 Audio System |
| 2 Low Tire Pressure Warning Light | 7 Steering Wheel Switches for Audio / Bluetooth® | 11 Fuel-filler Door Release | 15 Heater and Air Conditioner (manual) |
| 3 Instrument Brightness Control* | 8 Cruise Control | 12 Hood Release* | 16 USB / AUX Jack |
| 4 Headlight and Turn Signal Switch | 9 Steering Wheel Tilt Adjustment* | 13 Front Passenger Air Bag Status Light* | 17 12V Power Outlet |
| 5 Wiper and Washer Switch | | | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

RearView Monitor (if so equipped)	2
Trip Computer	2
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface (if so equipped).....	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	4
Loose Fuel Cap.....	5
Fuel-filler Door	5
Clock Set/Adjustment (if so equipped)	5

FIRST DRIVE FEATURES

Rear Trunk Release (if so equipped)	7
Seat Adjustments.....	7
Starting/Stopping the Engine	7
Headlight Control Switch	8
Wiper and Washer Switch.....	9
Power Outside Mirror Control Switch.....	9
Heater and Air Conditioner (manual)	10
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped).....	11
Cruise Control (if so equipped).....	12

SYSTEM GUIDE

Hands-free Text Messaging Assistant (if so equipped)	13
Bluetooth® Hands-free Phone System	14
• System Operating Tips	14



Additional information about your vehicle is also available in your Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**", the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

NEW SYSTEM FEATURES

REARVIEW MONITOR (if so equipped)

- When the shift lever is moved to the **R (REVERSE)** position, the front display shows the view to the rear of the vehicle.
- The colored lines on the display screen indicate approximate distances to objects.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m);
 - Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

TRIP COMPUTER

- With the ignition switch in the ON position, modes of the trip computer **1** can be selected by pressing the trip computer change/reset button **2** on the instrument panel.
- The following modes can be selected in the display (if so equipped):
 - **ODO** – records the total distance the vehicle has been driven.
 - **Trip A** – measures the distance of one specific trip.
 - **Trip B** – measures the distance of a second specific trip.
 - **mpg** – displays the instant fuel consumption.
 - **mpg AVG** – displays the average fuel consumption since the last reset.
 - **DTE** ➡ – displays the estimated distance that can be driven before refueling.
 - **Outside Air Temperature (if so equipped)** – displays the outside air temperature in °F or °C.
- To reset **Trip A**, **Trip B**, **mpg** or **mpg AVG**, go to the desired mode on the trip computer and press and hold the trip computer change/reset button **2** for more than 3 seconds.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/AUX jack **1** is located below the instrument panel under the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/AUX jack, compatible audio files stored on the device can be played through the vehicle's audio system.

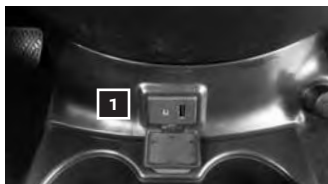

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRES** warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the odometer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the trip computer change/reset button **2** is pressed for more than 1 second.
- If the cap is not fully tightened, the Malfunction Indicator Light  may also illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel and below the instrument panel.
- To open the fuel-filler door, pull the release. To lock, close the fuel-filler door securely.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

CLOCK SET/ADJUSTMENT (if so equipped)

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type A) (if so equipped)

1. Press the **MENU** button **1** repeatedly until "Adjust Clock: NO" appears on the display.
2. Turn the **TUNE/FOLDER** knob **2** to change to "Adjust Clock: Yes".
3. Press the **MENU** button **1**.
4. When "Change Hour" appears, turn the **TUNE/FOLDER** knob **2** to adjust the hours.
5. Press the **MENU** button **1**.
6. When "Change Minute" appears, turn the **TUNE/FOLDER** knob **2** to adjust the minutes.
7. Press the **MENU** button **1** to finish.



ESSENTIAL INFORMATION

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type B) (if so equipped)

1. Press the **SETUP** button **3**.
2. Turn the **TUNE/MENU** knob **5** to select "CLOCK".
3. Press the **ENTER** button **4**.
4. Turn the **TUNE/MENU** knob **5** to select "Set time".
5. Press the **ENTER** button **4**.



The display will return to the regular clock display after 10 seconds.

FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

1. Press the **ENTER/SETTING/CLOCK** button **6** to show the "Settings" screen on the display.
2. Turn the **TUNE/SCROLL** knob **7** to highlight "Clock Adjust".
3. Press the **ENTER/SETTING/CLOCK** button **6** to highlight the hours or minutes and use the **TUNE/SCROLL** knob **7** to adjust the value.
4. Press the **ENTER/SETTING/CLOCK** button **6** to set the value.
5. Press the **BACK** button **8** to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

 
FIRST DRIVE FEATURES

REAR TRUNK RELEASE (if so equipped)

- Use one of the following methods to open the trunk:
 - Push the trunk opener request switch **1**, located under the driver's seat on the floor and pull up to release the rear trunk.
 - Press the trunk release  button **2** on the key fob for more than 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

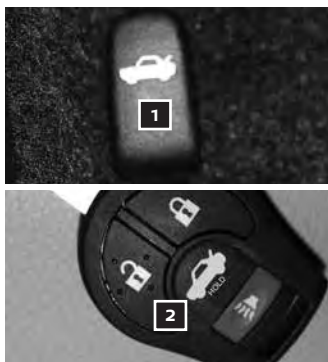

SEAT ADJUSTMENTS

 
- To slide the front seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

SEAT LIFTER (if so equipped for driver's seat)

- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

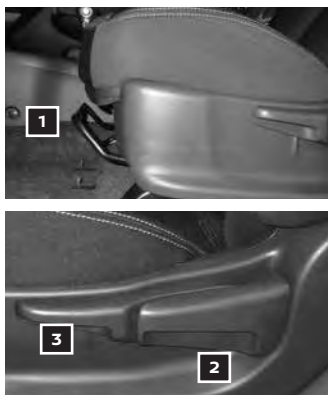

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION/ MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (NEUTRAL)** position (continuously transmission only).
- Depress the clutch pedal to the floor (manual transmission only).
- Turn the ignition switch to the **START** position.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

TURNING THE ENGINE OFF

- For the Continuously Variable Transmission, apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.
- For a manual transmission, apply the brake pedal, place the vehicle in **N (NEUTRAL)**, apply the parking brake and turn the ignition switch to the **LOCK** position.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

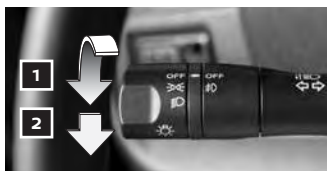


HIGH BEAM SELECT

- With the headlights on, push the headlight control switch forward **3** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **4** to flash the headlight high beams on and off.




FOG LIGHT SWITCH (if so equipped)

 - The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **5** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

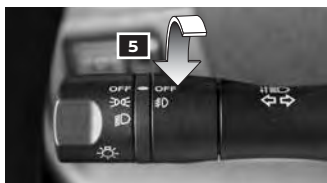

LANE CHANGE SIGNAL

 - Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

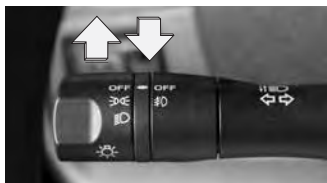

- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

 
1 Mist (**MIST**) – One sweep operation of the wipers.

2 Intermittent (**INT**) – Wipers operate intermittently. The intermittent operation speed can be adjusted by rotating the time control ring **3** to increase or decrease wiper speed (if so equipped).

4 Low (**LO**) – Wipers operate at a continuous low-speed.

5 High (**HI**) – Wipers operate at a continuous high-speed.

6 Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

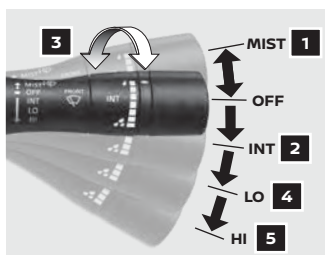


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

POWER OUTSIDE MIRROR CONTROL SWITCH

 - Push the switch **1** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Push the switch **1** to the center (neutral) position to prevent accidentally moving the mirrors.

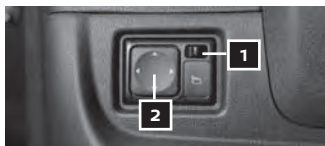

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FIRST DRIVE FEATURES

HEATER AND AIR CONDITIONER (manual)

1 FAN SPEED CONTROL DIAL

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

2 AIR FLOW CONTROL DIAL

- Turn the dial to select one of the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the front defroster and foot vents.
 -  Air flows mainly from the front defroster and side vents.

 


3 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

4 DEFROSTING FRONT AND SIDE WINDOWS

- First, move the air intake lever **5** to the left position  to draw fresh air into the vehicle.
- Then turn the air flow control dial **2** to the front window defroster mode .
- Align the left and right side vents **6** to direct air flow toward the front side windows.
- When the  or  position is selected, the air conditioner will turn on automatically for better performance. This will dehumidify the air and help defog the windows.

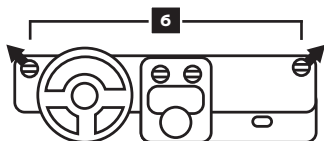

7 REAR WINDOW DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner on. This system helps cool and dehumidify the air inside the cabin and defog the windows.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 VOL (volume) KNOB/POWER BUTTON

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 ENTER/SETTING/CLOCK BUTTON AND TUNE/SCROLL CONTROL KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK/CAT BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or the **XM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now select and hold the desired station memory button (1-6) **4** until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory button (1-6) **4**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

SYSTEM GUIDE

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



CONNECTING PROCEDURE

The vehicle must be stationary when connecting the cellular phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
5. Say a name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.



PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on transferring phone numbers from NISSAN-recommended cellular phones.

SYSTEM GUIDE

4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.
1. Press the  button on the steering wheel.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

MEMO

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2018/versasedan or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manuals/Guide>. If you have questions concerning any information in your Owner's Manual, contact Nissan Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

