



The Ultimate
Driving Machine®



QUICK REFERENCE.
THE BMW X5.

Online Edition for Part no. 01402723974 - VII/18

WELCOME TO BMW.

BMW X5.

This Quick Reference Guide tells you about the most important basic functions of your BMW. This Quick Reference Guide also describes and illustrates features that are not available in your vehicle, for instance because of the selected optional features or the country-specific version. In the interests of safety, please read the Owner's Manual for the vehicle as well. It contains important information on vehicle operation that will help you make full use of the technical features available in your BMW.

We hope you get off to a good start and have great fun with your BMW.

TABLE OF CONTENTS

Opening and closing	6
Displays and control elements	12
Seats, mirrors, and steering wheel	16
Infotainment	20
Driving	24
Climate control	34
Refueling	35
Providing assistance	38

© 2018 Bayerische Motoren Werke
Aktiengesellschaft
Munich, Germany


Reprinting, including excerpts, only with the written consent of BMW AG, Munich.

US English VI/18, 07 18 490

Printed on environmentally friendly paper, bleached without chlorine, suitable for recycling.

Opening and closing

Buttons on the remote control

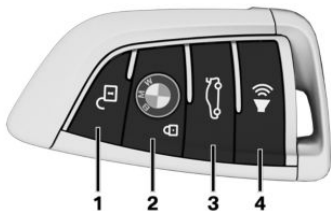

- 1 Unlocking
- 2 Locking
- 3 Opening the tailgate
- 4 Press and hold or press three times in quick succession: panic mode

Press briefly: headlight courtesy delay feature

Unlocking the vehicle



Press the button on the remote control.

Depending on the settings, either only the driver's door or all vehicle access points are unlocked.

If only the driver's door is unlocked, press the button on the remote control again to unlock the other vehicle access points.



Press and hold the button on the remote control after unlocking.

The windows and the glass sunroof are opened, as long as the button on the remote control is pressed.

Locking the vehicle



Press the button on the remote control.

All vehicle access points are locked.

The windows and the glass sunroof are closed, as long as the button on the remote control is pressed.

Buttons for the central locking system

Overview



Buttons for the central locking system.

Locking



Pressing the button locks the vehicle if the front doors are closed.

The fuel filler flap remains unlocked.

Unlocking



Pressing the button unlocks the vehicle.

Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



▶ Press the button on the remote control and hold for at least 3 seconds.

▶ Briefly press the button on the remote control three times in succession.

To switch off the alarm: press any button.

Comfort Access

Concept

The vehicle can be accessed without activating the remote control.

All you need to do is to have the remote control with you, such as in your pants pocket.


The vehicle automatically detects the remote control when it is in close proximity or in the car's interior.

Unlocking the vehicle



Grasp the handle of a vehicle door completely.

Locking the vehicle

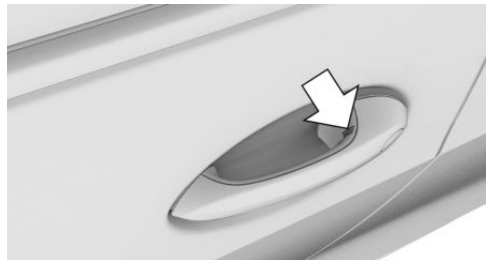

Touch the grooved surface on the handle of a closed vehicle door with your finger for approx. 1 second without grasping the door handle.

Opening and closing the tailgate with no-touch activation


Concept

The tailgate can be opened and closed with no-touch activation using the remote control you are carrying.

Performing the foot movement


1. Stand in the middle behind the vehicle at approx. one arm's length away from the rear of the vehicle.
2. Wave a foot under the vehicle in the direction of travel and immediately pull it back. With

this movement, the leg must pass through the ranges of both sensors.

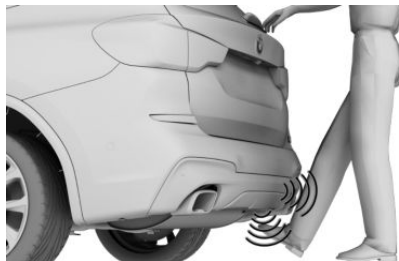

Tailgate

Opening

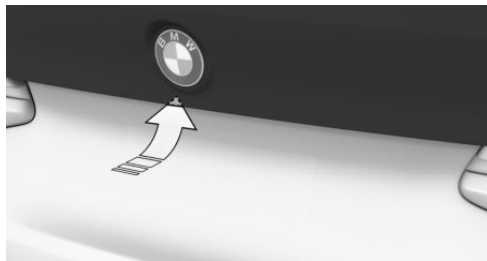

- ▷ Without Comfort Access: unlock the vehicle, then press the button on the outside of the tailgate.

With Comfort Access: unlock the vehicle or carry the remote control with you and then

press the button on the outside of the tailgate.

- ▷  Press and hold the button on the remote control for approx. 1 second.

With Comfort Access: depending on the settings, the lower tailgate may also be opened.

Depending on the settings, the doors may be unlocked.

Closing

Without Comfort Access:

1. Closing the lower tailgate manually.
2. Press the button on the inside of the upper tailgate.



With Comfort Access:

- ▷  Press the button on the inside of the tailgate.

The lower tailgate will be closed automatically with the upper tailgate.


- ▷  Press the button on the inside of the tailgate.

The lower tailgate will be closed automatically with the upper tailgate.

The vehicle will be locked after closing the tailgate. The driver's door must be closed for this purpose and the remote control must be outside of the vehicle in the area of the tailgate.

Displays and control elements

In the vicinity of the steering wheel

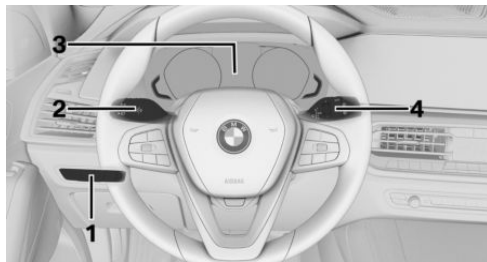

- 1 Light switch element
2 Turn signal indicator, high beams

3 Instrument cluster

4 Wipers


Indicator/warning lights

Instrument cluster

The indicator/warning lights can light up in a variety of combinations and colors.


Several lights indicate function checks and light up only temporarily when standby state or standby state are activated.

Driver's door

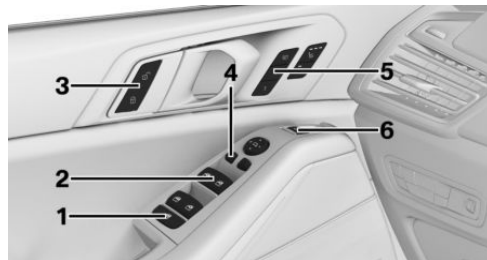

- 1** Safety switch
- 2** Power windows
- 3** Central locking system
- 4** Exterior mirrors
- 5** Seats, comfort features
- 6** Opening/closing the tailgate

Switch console

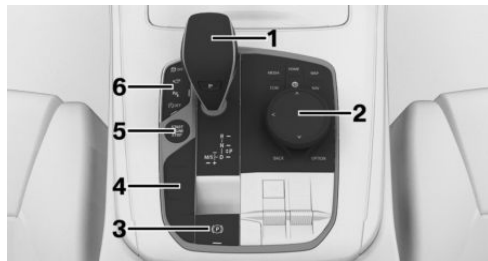

- 1 Selector lever
- 2 Controller
- 3 Parking brake, Automatic Hold
- 4 Driving Dynamics Control
- 5 Start/Stop button
- 6 Assistance systems

iDrive

Concept

iDrive includes a large number of functions. These functions can be operated via the Controller and, depending on the equipment version, via touchscreen, voice activation system or gesture control.

Buttons on the Controller

Button	Function
	Opens the main menu.
	Open the Apps menu.
	Open the Communication menu.

Button	Function
	Open the Media/Radio menu.
	Open destination input menu for navigation.
	Open navigation map.
	Open the previous display.
	Open the Options menu.

Voice activation

Activating the voice activation system

-  Press the button on the steering wheel.
- Wait for the signal.
- Say the command.



The symbol on the Control Display indicates that voice activation system is active.

If no other commands are possible, operate the function via iDrive.


Terminating the voice activation system



Press the button on the steering wheel or ›Cancel‹.

Seats, mirrors, and steering wheel

Electrically adjustable seats

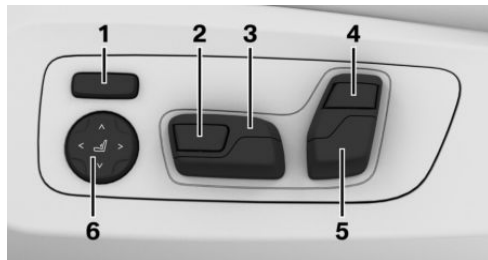


- 1 Backrest width
- 2 Thigh support
- 3 Forward/backward, height, seat tilt
- 4 Upper backrest

5 Backrest tilt, head restraint

6 Lumbar support

Adjusting the head restraint

Height

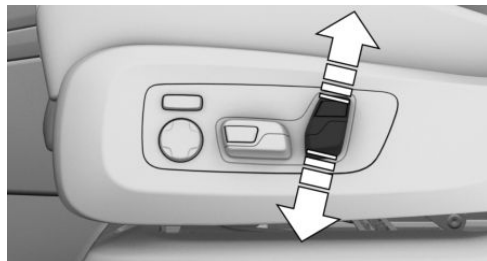

Push switch up or down.

Distance to back of head




- ▶ Back: press the button and push the head restraint toward the rear.
- ▶ Forward: pull the head restraint toward the front.

Side extensions



Fold the side extensions forward to increase lateral support.


Adjusting the exterior mirrors

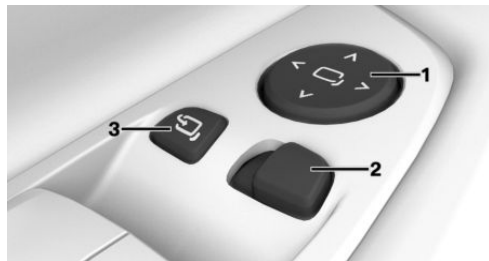

- 1 Settings
- 2 Selecting a mirror, Automatic Curb Monitor
- 3 Folding in and out

Adjusting the steering wheel

Electrical steering wheel adjustment

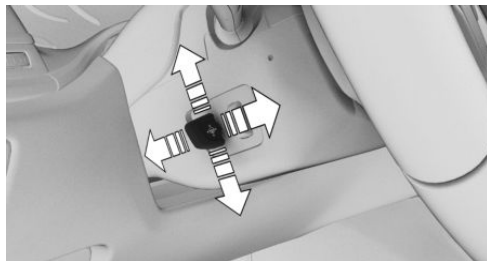

Move the steering wheel to the preferred height and angle to suit your seating position by pressing the switch.

Memory function

Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- ▷ Seat position.
- ▷ Exterior mirror position.
- ▷ Steering wheel position.
- ▷ Height of the Head-up Display.

Storing


1. Set the desired position.
2.  Press the button. The writing on the button lights up.
3. Press selected button 1 or 2 at the door while the writing is lit. A signal sounds.

Calling up settings

Press selected button 1 or 2.

Infotainment

Radio

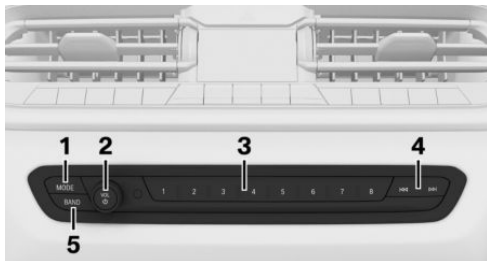

- 1 Changing the entertainment source
- 2 Sound output on/off, volume
- 3 Programmable memory buttons
- 4 Change station/track
- 5 Waveband/satellite radio

Navigation destination entry

Entering a destination via quick search

1.  Press the button on the Controller.
2.  "Where to?"
3. Enter at least two letters or characters.
The search term may be completed automatically in gray print.
Press or move the controller up to apply the suggested search term.
4. **OK** Select the symbol, if needed.
Results are displayed in a list.
5. "Search area": Select search location.
6. Move the Controller to the right.
7. Select desired destination.

Connecting a mobile phone

General information

After the mobile phone is connected once to the vehicle, the mobile phone can be operated using iDrive, the steering wheel buttons, voice activation, and gestures.

Connecting the mobile phone via Bluetooth

Via iDrive:

1. "COM"
2. If necessary, select the following setting:
"Telephone"
3. "Connect new phone"
4. To perform additional steps on the mobile phone, refer to the mobile phone owner's

manual: e.g., search for or connect the Bluetooth device or a new device.

The Bluetooth name of the vehicle appears on the mobile phone display. Select the Bluetooth name of the vehicle.

5. Depending on the mobile device, a control number is displayed or the control number must be entered.

► Compare the control number displayed on the Control Display with the control number on the display of the device.

Confirm the control number on the device and on the Control Display.

► Enter and confirm the same control number on the device and via iDrive.

The device is connected and displayed in the device list.

Using the phone

Accepting a call

Incoming calls can be answered in several ways.

- ▶ Via iDrive:

 "Accept"

- ▶  Press the button on the steering wheel.

- ▶ Via the selection list in the instrument cluster:
Use the thumbwheel on the steering wheel to select: "Accept"

Dialing a number

1. "COM"
2. "Dial number"
3. Enter the numbers.

4.  Select the symbol. The connection is established via the mobile phone to which this function has been assigned.

If connection is to be set up via the additional phone:

1.  Press the button.
2. "Call via"

Apple CarPlay preparation

Concept

CarPlay allows certain functions of a compatible Apple iPhone to be used via Siri voice operation and iDrive.

Functional requirements

- ▶ Compatible iPhone.

iPhone 5 or later with iOS 7.1 or later.

- ▶ Corresponding mobile wireless contract.
- ▶ Bluetooth, WiFi, and Siri voice operation are switched on on the iPhone.

"Apple CarPlay"

The iPhone is connected to the vehicle and displayed in the device list.

Switching on Bluetooth and CarPlay

Via iDrive:

1. "COM"
2. "Mobile devices"
3. "Settings"
4. Select the following setting:
"Apple CarPlay"
5. Activate the function.

Pairing iPhone with CarPlay

Pair iPhone via Bluetooth with the vehicle.

Select CarPlay as the function:

Driving

Drive-ready state

Switching on drive-ready state



- ▶ Depress the brake pedal.
- ▶ Press the Start/Stop button.

Switching off drive-ready state

Steptronic transmission:

1. Engage selector lever position P with the vehicle stopped.
2. Press the Start/Stop button.
The engine is switched off.

3. Set the parking brake.

Auto Start/Stop function

The Auto Start/Stop function switches the engine off automatically while stationary to save fuel. The engine starts automatically under the following preconditions:

Steptronic transmission:

- ▶ By releasing the brake pedal.
- ▶ When Automatic Hold is activated: step on the accelerator pedal.

Parking brake

Setting



Pull the switch.

The LED and indicator light light up.

Releasing



With drive-ready state switched on:

Press the switch while stepping on the brake pedal or selector lever position P is set.

The LED and indicator light go out.

The parking brake is released.

Parking

The parking brake is automatically set if the vehicle is being held by Automatic Hold and the drive-ready state is switched off or the vehicle is exited.

Steptronic transmission

Engaging selector lever position D, N, R



- ▷ Drive mode D.
- ▷ Neutral N.
- ▷ Reverse R.

With the driver's safety belt fastened, briefly push the selector lever in the desired direction, past a


resistance point, if needed. The selector lever returns to the center position in each case.

To prevent the vehicle from creeping after you select a drive mode or reverse, maintain pressure on the brake pedal until you are ready to start.

A selector lever lock prevents the inadvertent shifting to selector lever position R or the inadvertent shifting from selector lever position P.

Engage selector lever position R only when the vehicle is stationary.

Releasing the selector lever lock

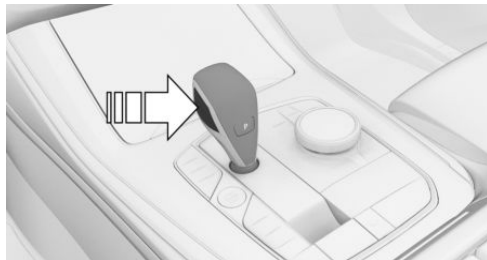

Press the button.

Engaging P

Engage selector lever position P only when the vehicle is stationary.



Press button P.

Steptronic transmission, Sport program and manual mode



Activate the sport program/manual mode:

Press the selector lever to the left out of selector lever position D.

Manual mode:

- To shift down: press the selector lever forward.


- ▶ To shift up: pull the selector lever rearwards.

End the sport program/manual mode:

Push the selector lever to the right.

High beams, headlight flasher, turn signal

High beams, headlight flasher

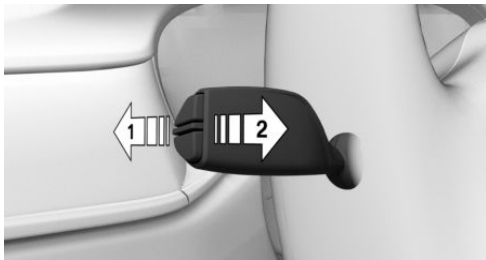


Push the lever forward or pull it backward.

- ▶ High beams on, arrow 1.

The high beams light up when the low beams are switched on.

- ▶ High beams off/headlight flasher, arrow 2.

Turn signal

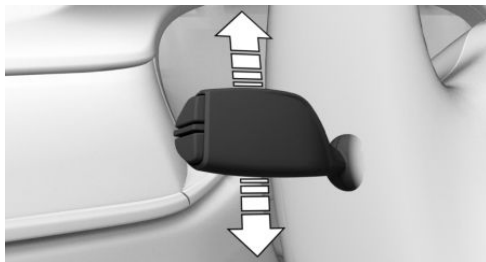

- ▶ On: press the lever past the resistance point.
- ▶ Off: press the lever past the resistance point in the opposite direction.

- ▶ Triple turn signal activation: lightly tap the lever up or down.
- ▶ Brief signaling: press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

Lights and lighting

Light functions

Symbol	Function
	Front fog lights.
	Night vision.


Symbol	Function
	Lights off. Daytime running lights.
	Parking lights.
	Automatic headlight control. Adaptive light functions.
	Low beams.
	Instrument lighting.

Symbol	Function
	Right roadside parking light.
	Left roadside parking light.

Washer/wiper system

Switching the wipers on/off and brief wipe

Switching on

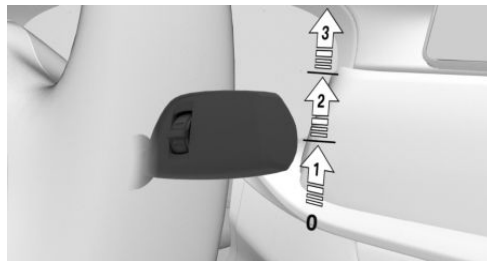


Press the lever up until the desired position is reached.

- ▶ Resting position of the wipers: position 0.

- ▶ Rain sensor: position 1.
- ▶ Normal wiper speed: position 2.
- ▶ Fast wiper speed: position 3.

Brief wipe and switching off

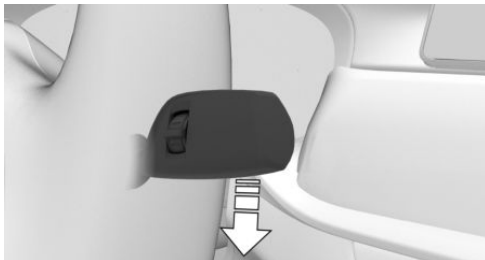


Press the lever down.

- ▶ Switching off: press the lever down until it reaches its standard position.

- ▶ Brief wipe: press the lever down from the standard position.

Rain sensor


Activating/deactivating

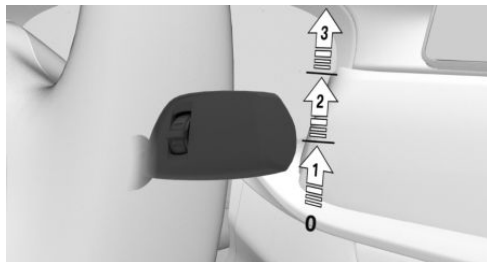

To activate: press the lever up once from its standard position, arrow 1.

To deactivate: press the lever back into the standard position.

Adjusting the sensitivity

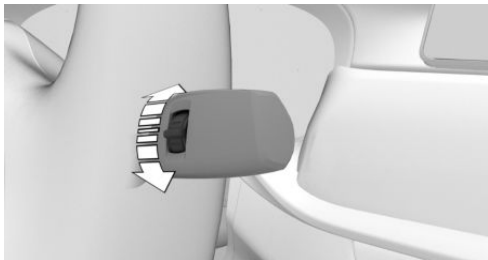

Turn the thumbwheel on the wiper lever.


Cleaning the windshield



Pull the wiper lever towards you.

Rear window wiper

Switching on the rear window wiper

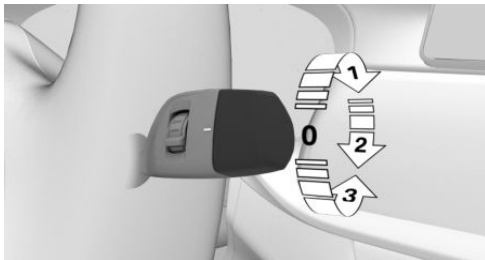

Turn the outer switch upward.

- ▶ Resting position of the wiper, position 0.
- ▶ Intermittent mode, arrow 1. When reverse gear is engaged, the system switches to continuous operation.

Clean the rear window

Turn the outer switch in the desired direction.

- ▶ In resting position: turn the switch downward, arrow 3. The switch automatically returns to its idle position when released.
- ▶ In intermittent mode: turn the switch further, arrow 2. The switch automatically returns to its interval position when released.

Climate control

Automatic climate control

Button	Function
	Temperature.
	Climate control operation.
	Maximum cooling.
	AUTO program.
	Recirculated-air mode.
	Air flow, manual.

Button	Function
	Air distribution, manual.
	Defrost and defog the windshield.
	Rear window defroster.
	Active seat ventilation.
	Seat and armrest heating.
	Open the Climate menu. For the following settings, for instance: upper body temperature adjustment, parked-car ventilation.

Refueling

Refueling

Fuel cap

1. Press the rear edge of the fuel filler flap to open it.



2. Turn the fuel cap counterclockwise.

3. Place the fuel cap in the bracket attached to the fuel filler flap.

Gasoline

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Fuels that are marked on the gas pump as containing metal must not be used.

Information on the recommended fuel grade can be found in the Owner's Manual for the vehicle.

Wheels and tires

Tire inflation pressure specifications

The tire inflation pressure specifications can be found in the tire inflation pressure table in the printed Owner's Manual.

After correcting the tire inflation pressure

Reinitialize the Flat Tire Monitor.

Reset the Tire Pressure Monitor.

Checking the tire inflation pressure

Regularly check the tire inflation pressure and correct it as needed:

- ▶ At least twice a month.
- ▶ Before embarking on an extended trip.

Cleaning the wheels

The friction during hard braking may produce brake dust and make the rims dirty. Brake dust can be removed by cleaning the rims. BMW recommends using vehicle care and cleaning products from BMW.

Electronic oil measurement

Functional requirements

A current measured value is available after approx. 30 minutes of normal driving.

Displaying the engine oil level

Via iDrive:

1. "CAR"
2. "Vehicle status"
3.  "Engine oil level"

Different messages appear on the Control Display depending on the engine oil level. Pay attention to these messages.

Adding engine oil

General information

Safely park the vehicle and switch off drive-ready state before adding engine oil.

Adding



Only add engine oil when the message is displayed in the instrument cluster.

Observe the quantity to be added in the message.

Take care not to add too much engine oil.

Observe recommended engine oil types.

Providing assistance

Hazard warning flashers



The button is located in the center console.

Breakdown assistance

BMW Roadside Assistance

Via iDrive:

1. "COM"
2. "BMW Assist"
3. If necessary, "BMW Roadside Assistance"

A voice connection is established.

ConnectedDrive

Concierge service

The BMW Assist Concierge service offers information on events, gas stations or hotels, and provides phone numbers and addresses. Many hotels can be booked directly by the BMW Concierge service. The Concierge service is part of the optional BMW Assist Response Center.

Via iDrive:

1. "COM"
2. "BMW Assist"
3. If necessary, "Concierge"

A voice connection to the Concierge service is established.

- ▶ Automatic Service Request.
- ▶ Teleservice Report.
- ▶ Teleservice Battery Guard.
- ▶ Your dealer's service center.

Teleservices

Teleservices are services that help to maintain vehicle mobility.

Teleservices can comprise the following services:

- ▶ BMW Roadside Assistance.
- ▶ BMW Accident Assistance
- ▶ Service Request.
- ▶ Manual Service Request.



01402723974 ue



The Ultimate
Driving Machine®



BMW DRIVER'S GUIDE APP.



Download on the
App Store



GET IT ON
Google Play



01402723974 ue

Online Edition for Part no. 01402723974 - VI/18