



C-HR

2 0 1 9



QUICK REFERENCE GUIDE

2019

C-HR

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new C-HR.



A word about safe vehicle operations

This Quick Reference Guide is not a full description of C-HR operations. Every C-HR owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	9
Fuel tank door release & cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	9
Keyless entry ^{1,2}	6
Smart Key system ^{1,2}	7

FEATURES & OPERATIONS

Air conditioning/heating	16
Audio	18
Auxiliary storage	20
Blind Spot Monitor with Rear	
Cross Traffic Alert (BSM w/RCTA)	17
Clock	14
Continuously variable transmission	10
Cup holders-Adjust size	20
Door locks	13
Driving mode select	15
Electric parking brake	11
Lights ¹ & turn signals	12
Multi-Information Display (MID) ¹	15
Power outlet-12V DC	14
Rear view monitor system	21
Seat adjustments-Front	13
Seat heaters	16
Seats-Folding rear	13
Seats-Head restraints	13
Steering lock release	12
Steering wheel switches & telephone controls (Bluetooth®)	19
Tilt & telescopic steering wheel	10
TRAC/VSC OFF switch	20
USB media/AUX port	21
Windows-Power	14
Windshield wipers & washers	22

TOYOTA SAFETY SENSE™ P (TSS-P)

Automatic High Beams (AHB)	33
Full-Speed Range Dynamic Radar	
Cruise Control (DRCC)	30-32
Lane Departure Alert with	
Steering Assist (LDA w/SA)	26-29
Pre-Collision System with Pedestrian	
Detection (PCS w/PD)	24-26
Quick overview-	
Toyota Safety Sense™ P (TSS-P)	23
Sensors	23

SAFETY & EMERGENCY FEATURES

Floor mat installation	38
Rear door child safety locks	34
Seat belts	34
Seat belts-Shoulder belt anchor	34
Spare tire & tools	36
Star Safety System™	37-38
Tire Pressure Monitoring (warning) System (TPMS)	35

 
 
BLUETOOTH® DEVICE PAIRING SECTION

40-42

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

Instrument panel

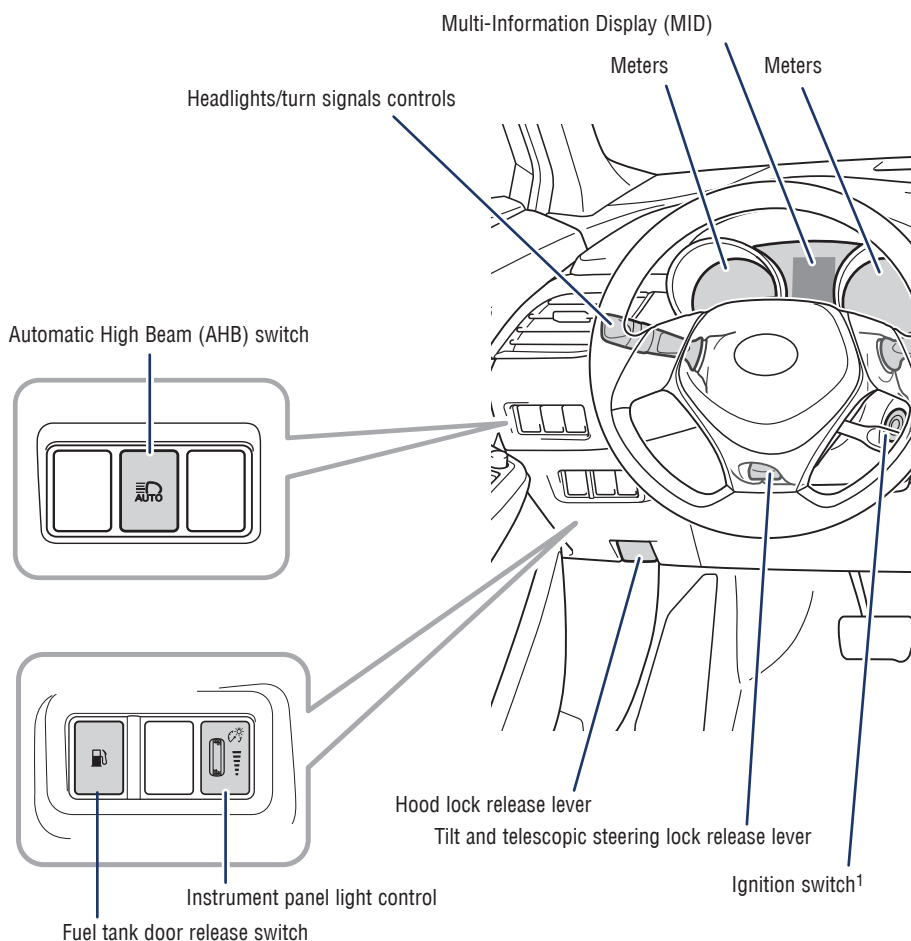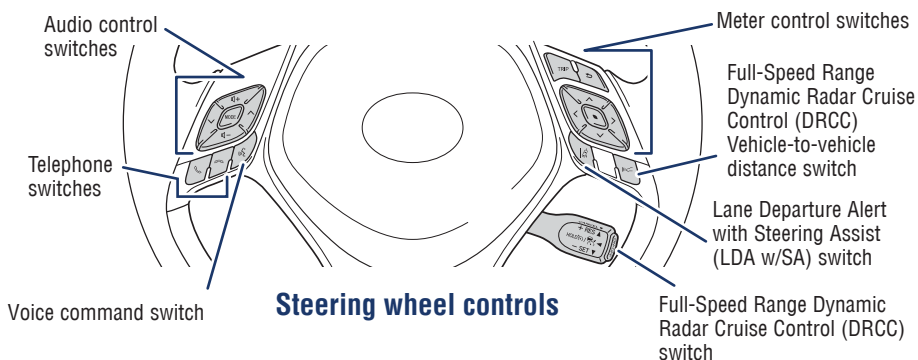


¹ If equipped.

 ² For details, refer to the “Navigation System Owner’s Manual” or visit www.toyota.com/entune for additional audio/multimedia resources.

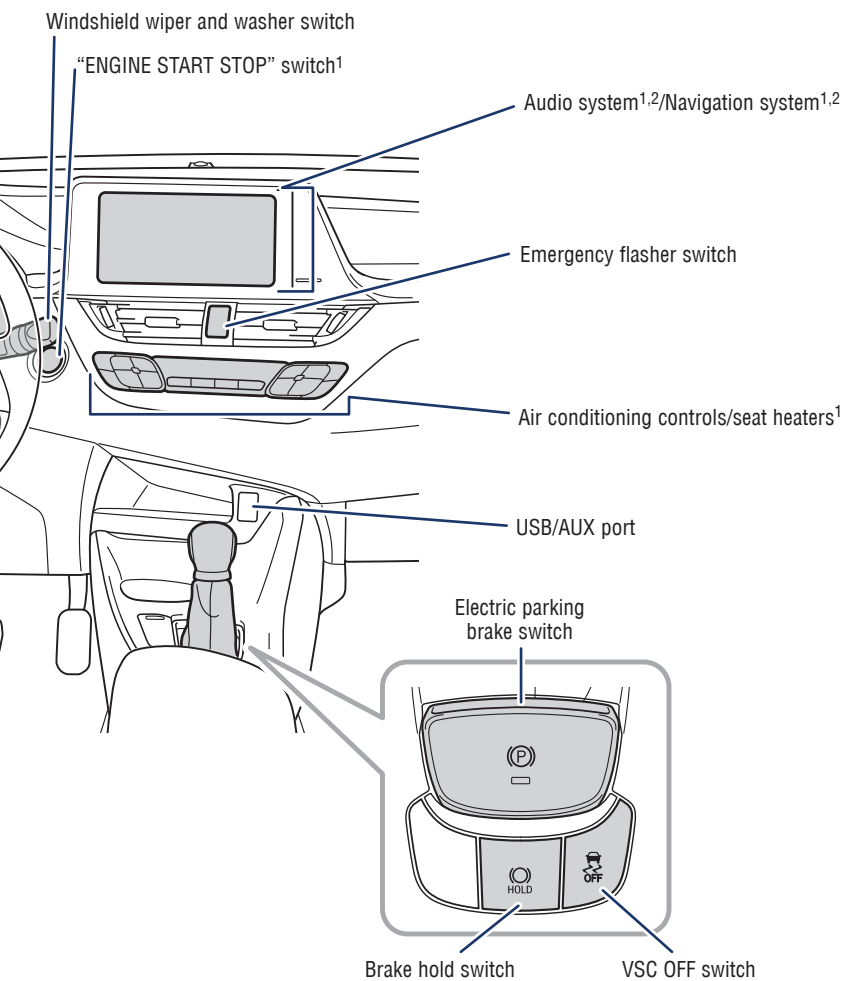

Instrument cluster

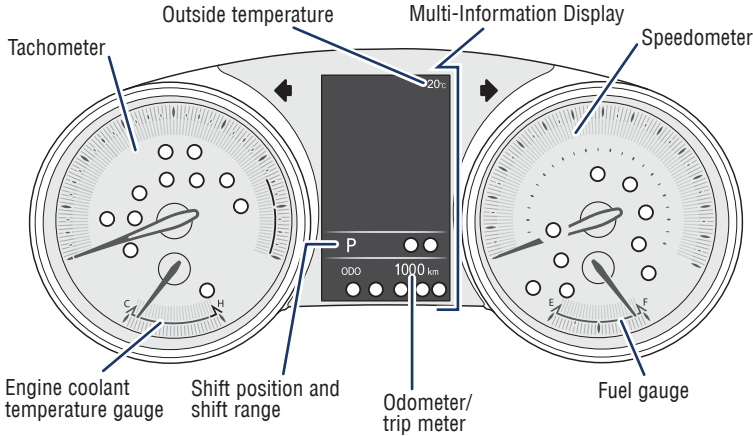 

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2, 2019 Owner’s Manual.



“AIRBAG ON/OFF” indicator¹



AIRBAG SRS warning¹



Anti-lock Brake System (ABS) warning¹



Arrow direction indicates fuel tank door position



Automatic High Beam (AHB) indicator



Blind Spot Monitor (BSM) indicator²



BSM outside rear view mirror indicators²



BSM w/Rear Cross Traffic Alert (RCTA) indicator²



Brake hold operated indicator¹



Brake hold standby indicator¹



Brake Override System/ Drive-Start Control



Brake system warning¹



Brake system warning (yellow)¹



Charging system warning



Constant speed cruise control indicator/Constant speed cruise control SET indicator



Full-Speed Dynamic Radar Cruise Control (DRCC) indicator/DRCC SET indicator



Driver's and front passenger's seat belt reminder (alarm will sound if speed is over 12 mph)



ECO MODE indicator



Eco Driving Indicator



Electric power steering system warning (red/yellow)¹

  Headlight low/high beam indicators

 High engine coolant temperature warning

 Lane Departure Alert (LDA) with steering assist indicator

 Low engine oil pressure warning

 Low fuel level warning

 Low outside temperature indicator

 Low Tire Pressure Warning¹

 Malfunction/Check Engine indicator¹

 PARK Parking brake indicator²

 Pre-Collision System (PCS) warning light^{1,2}

 Rear passengers' seat belt reminder indicator

 Security indicator

 Slip indicator indicator^{1,3}

 Smart Key system²

 SPORT SPORT mode indicator

 Turn signal indicator

 Vehicle Stability Control (VSC) OFF indicator¹

¹ If the indicator does not turn off within a few seconds of starting the engine, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner's Manual.

 
³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.

OVERVIEW

Keyless entry

UNLOCKING OPERATION

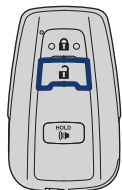

Push

ONCE: Driver door
TWICE: All doors

Carry Smart
Key remote

 
Front door unlock*

Grasp



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

LOCKING OPERATION

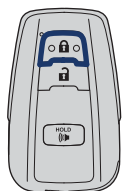

Push

Carry Smart
Key remote

All-door lock

Touch



PANIC BUTTON



HOLD



 
Push and hold



BACK DOOR LOCKING/UNLOCKING



Carry Smart
Key remote

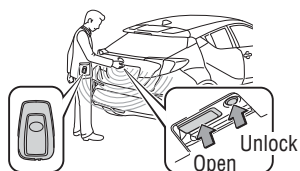


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. In some models, grasping front passenger door handle will unlock all doors. *Please refer to the Owner's Manual for more details on how to program the doors.*

NOTE: Doors may also be locked/unlocked using remote.

Smart Key system (if equipped)

 
START FUNCTION

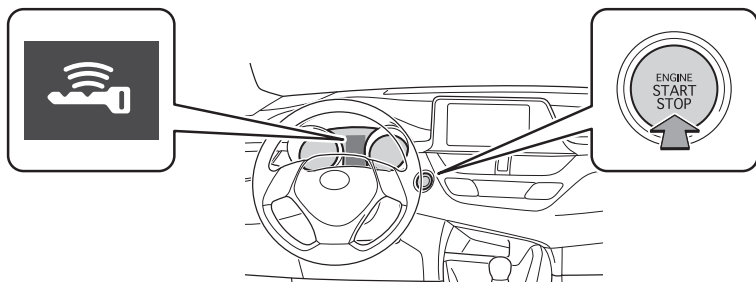




NOTE: The Smart Key must be carried to enable the start function. With the gear shift lever in Park and the brake pedal depressed, push the Engine Start button.

POWER (WITHOUT STARTING ENGINE)

 Without depressing the brake pedal, press the engine switch firmly and it will change the operation mode in succession from:



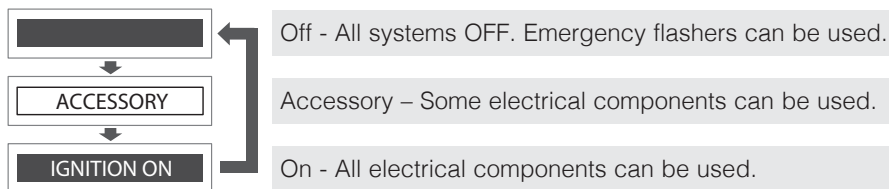


Fuel tank door release & cap

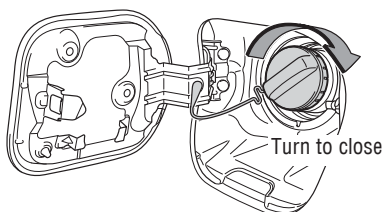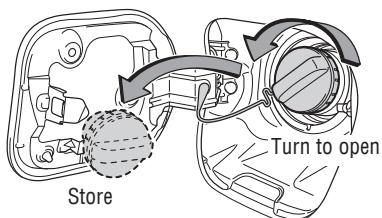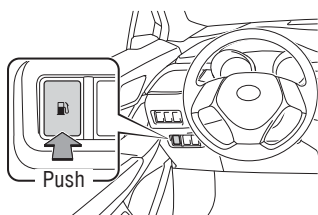   


NOTE: Tighten until one click is heard. If the cap is not locked or tightened, Check Engine “” indicator may illuminate.

   
Hood release

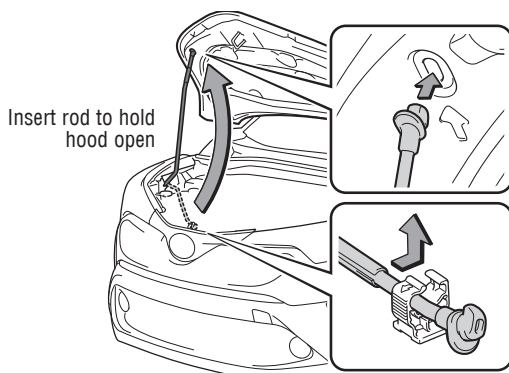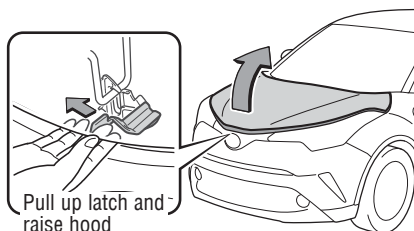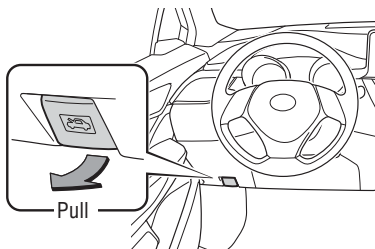

Instrument panel light control

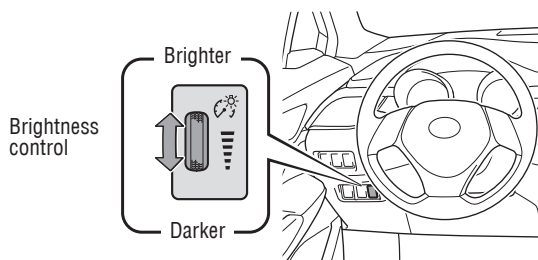 


Engine maintenance

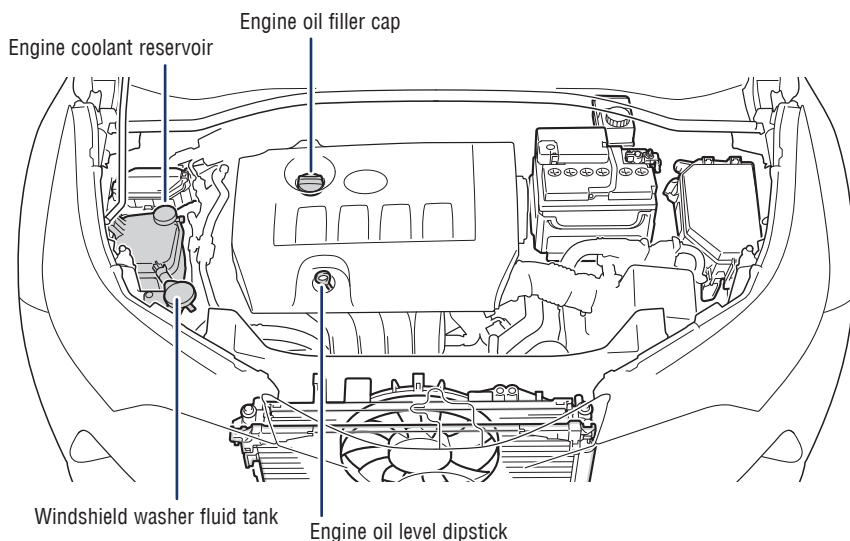 

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

FEATURES & OPERATIONS

 Continuously variable transmission

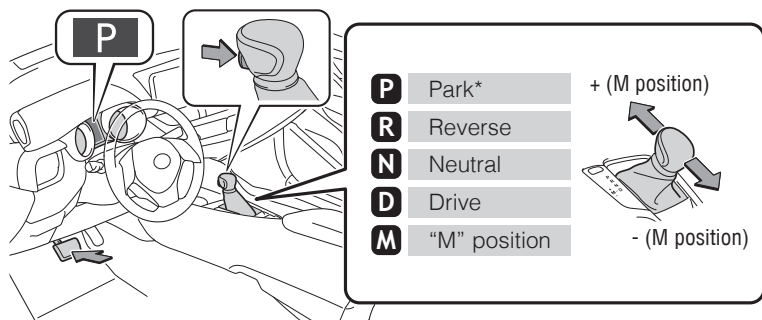

* The "ENGINE START STOP" switch/ignition switch must be "IGNITION ON"/"ON" and the brake pedal depressed to shift from Park.

7-SPEED SPORT SEQUENTIAL SHIFTMATIC MODE (M POSITION)

 
Shift the shift lever to "M" position from "D" position.

- + : Upshifting
- : Downshifting

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Refer to the Owner's Manual for more details.

Tilt & telescopic steering wheel

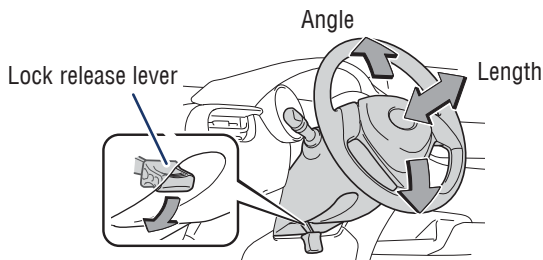

Hold wheel, push lever down, set angle and length, and return lever.

 
NOTE: Do not attempt to adjust while the vehicle is in motion.

Electric parking brake


Automatic mode



Manual mode

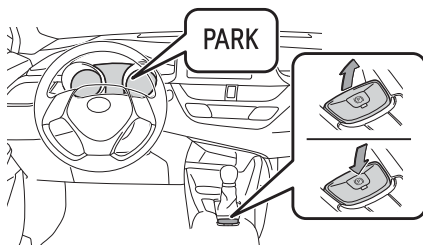

Brake HOLD switch

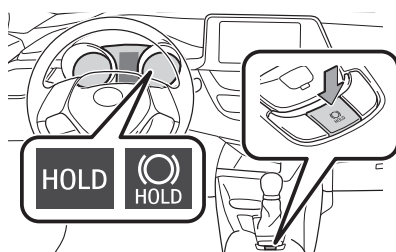 

Automatic (shift lever operation)

To turn automatic mode ON, while vehicle is stopped, pull and hold switch until "EPB Shift Interlock Function Activated" displays in Multi-Information Display (MID). While depressing brake, shifting into P position will automatically set the brake and turn the parking brake indicator and parking brake light on. To release brake, depress brake and shift out of P. The indicator light and the light on the switch turn off.

To turn automatic mode OFF, push and hold parking brake switch until "EPB Shift Interlock Function Deactivated" displays on the MID.

Manual

While vehicle is stopped and brake pedal is depressed, pull to set parking brake and turn the parking brake indicator and parking brake light on. To release, press the brake pedal and push switch. The indicator light turns off.

Brake HOLD switch

 
The brake hold system keeps the brake applied when the shift lever is in any position other than P or R with the system on and the brake pedal has been depressed to stop the vehicle (yellow indicator light.) The system releases the brake when the accelerator pedal is depressed with the shift lever in any position other than P or N to allow smooth start off (green indicator light.)

Refer to the Owner's Manual for limitations and more details.

FEATURES & OPERATIONS

Lights & turn signals

HEADLIGHTS

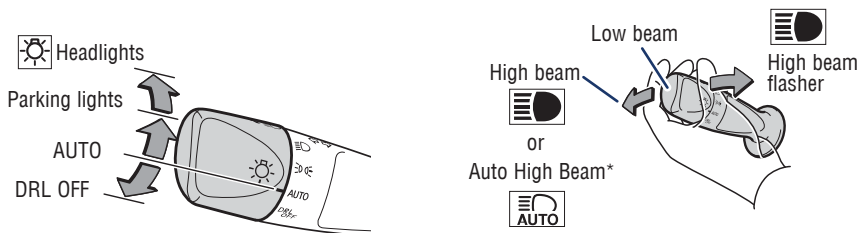

Daytime Running Light system (DRL)

Automatically turns on the headlights at a reduced intensity.

 
Automatic light cut off system

Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.

Automatic High Beam (AHB) system Automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. *Refer to Toyota Safety Sense™ P (TSS-P) in this guide or the Owner's Manual for more details on the Automatic High Beam feature.*

* Operating conditions must be met. Refer to Owner's Manual for details.


TURN SIGNALS

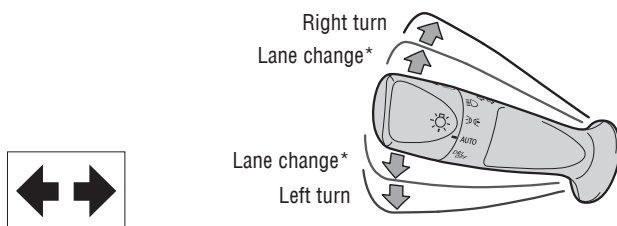

* Move lever partway and release; signal will flash three times


Steering lock release

 Without Smart Key system

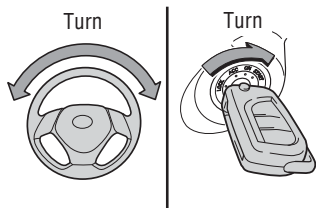


When starting the engine, the engine switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly left and right.

 With Smart Key system

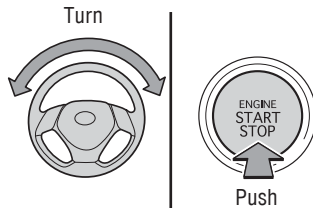


The green indicator light on the engine switch will flash and a message will be shown on the multi-information display. Press the engine switch while turning the steering wheel left and right.

 
Seat adjustments-Front

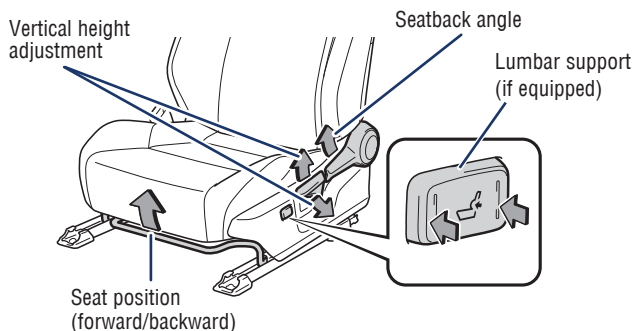


Seats-Folding rear

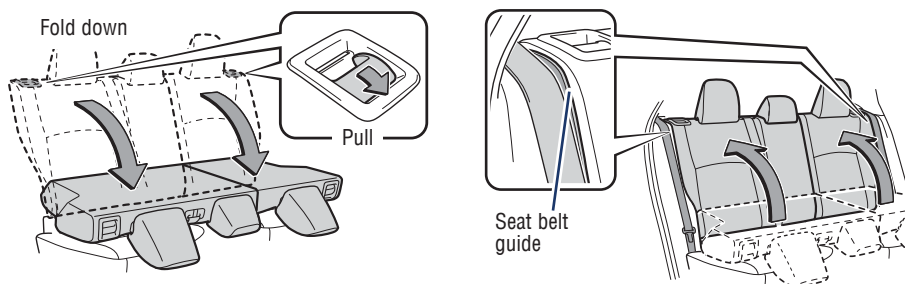 

Seats-Head restraints

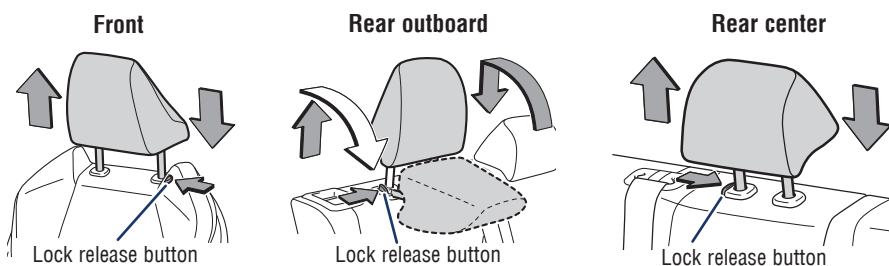 


Door locks

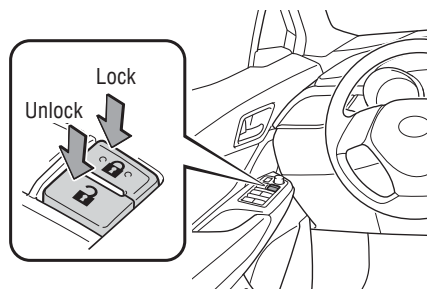 


FEATURES & OPERATIONS

 Power outlet-12V DC

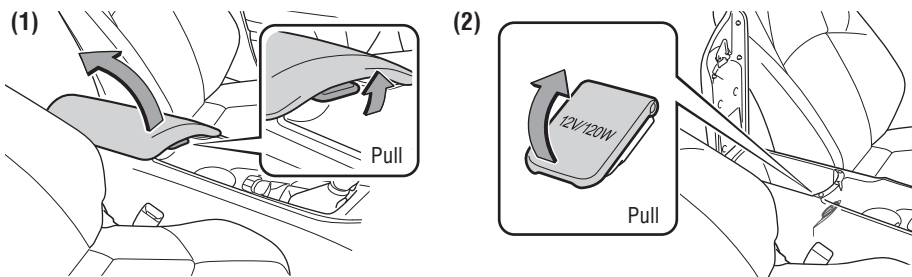


The engine switch must be in the “ACC” or “ON”/ACCESSORY or IGNITION ON position for use.

 Clock

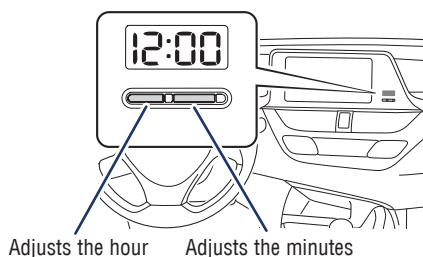

Windows-Power

 Driver side

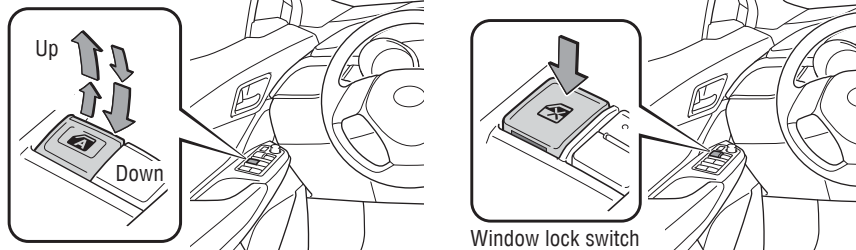

Automatic operation

 
Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch


Deactivates all passenger windows. Driver's window remains operable.

Multi-Information Display (MID)

Multi-Information Display (MID)

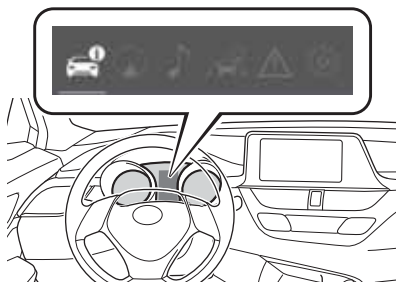

Steering wheel switches

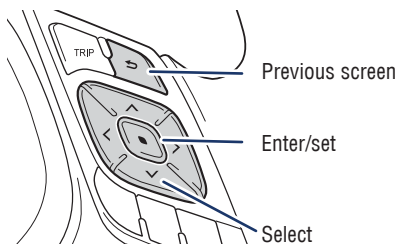 

Push MID control switches to view or change information in the following:



Driving information



Navigation system-linked display (if equipped)



Audio system-linked display



Driving assist system information



Warning message display



Settings display

Refer to the Owner's Manual for more settings and customizable features.

Driving mode select

Use the the steering wheel meter control switches to operate the MID. See above.

"NORMAL" - Suitable for city driving.

"SPORT" - Suitable for roads with many curves needing improved driving response.

"ECO" - Suitable for improved fuel economy and energy saving controlled air/heating.

(1) Press steering wheel switches "<>" to find and select  in the MID.

(2) Press steering wheel switches "<◇>" switches and select "Drive Mode" in the MID.

(3) Select a driving mode:

The "SPORT" and "ECO" indicators display in the Multi-Information Display (MID).

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

FEATURES & OPERATIONS

Air conditioning/heating

Automatic climate control ON

 
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

Airflow vent

In “” or “” mode, use outside air (“” indicator OFF) to reduce window fogging.




ECO mode switch**

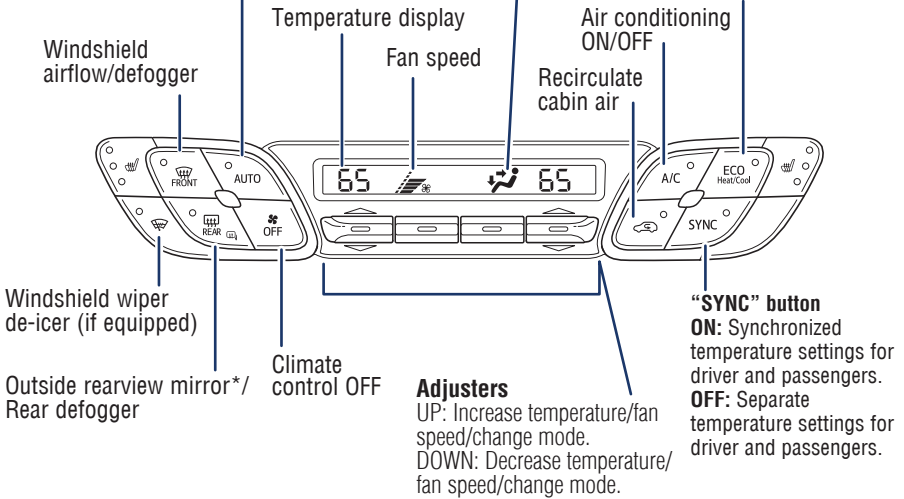

* Defoggers automatically turn off after a period of time.


** Air conditioning feature that helps lower fuel consumption by controlling and prioritizing functions like reducing fan speed, etc.

 Seat heaters (if equipped)

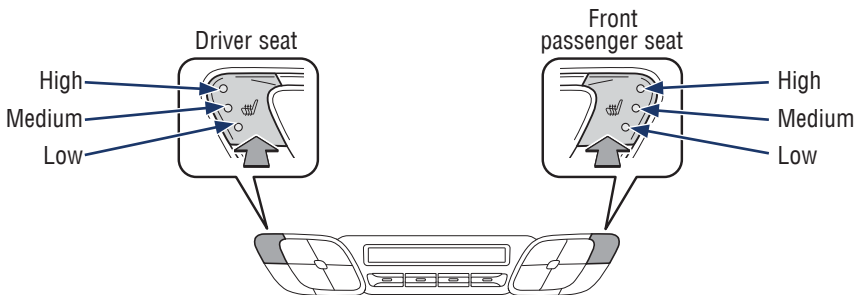

The engine switch must be in “ON”/“IGNITION ON” mode.

 Blind Spot Monitor with Rear Cross Traffic Alert (BSM w/RCTA) (if equipped)

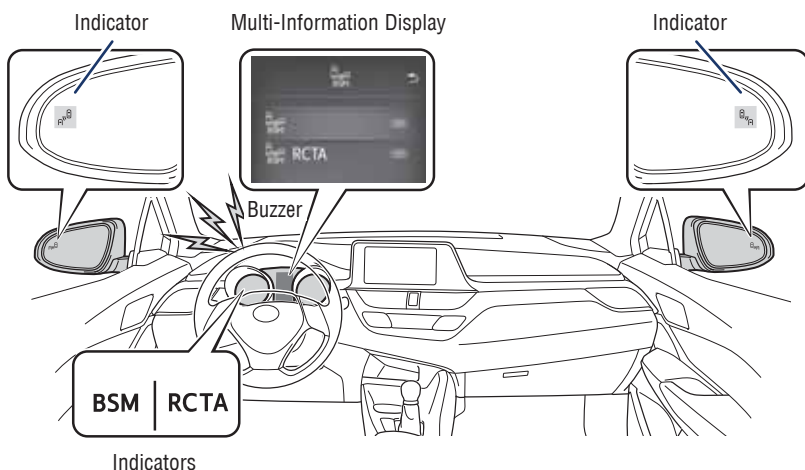

The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in making the decision when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system is designed to use radar sensors to detect vehicles traveling in the vehicle's blind spot and advises the driver of the vehicles' presence via the outside rear view mirror indicators.

Note: Use  in the Multi-Information Display (MID) to change settings. The system will continue in the last state it was in (ON or OFF) when the engine is started again.

Refer to the Toyota Owner's Manual for limitations and more details on this system before attempting to use it.

 
FEATURES & OPERATIONS

Audio

ENTUNE™ 3.0 AUDIO

ENTUNE™ 3.0 AUDIO PLUS

ENTUNE™ 3.0 PREMIUM AUDIO, WITH APP SUITE AND DYNAMIC NAVIGATION

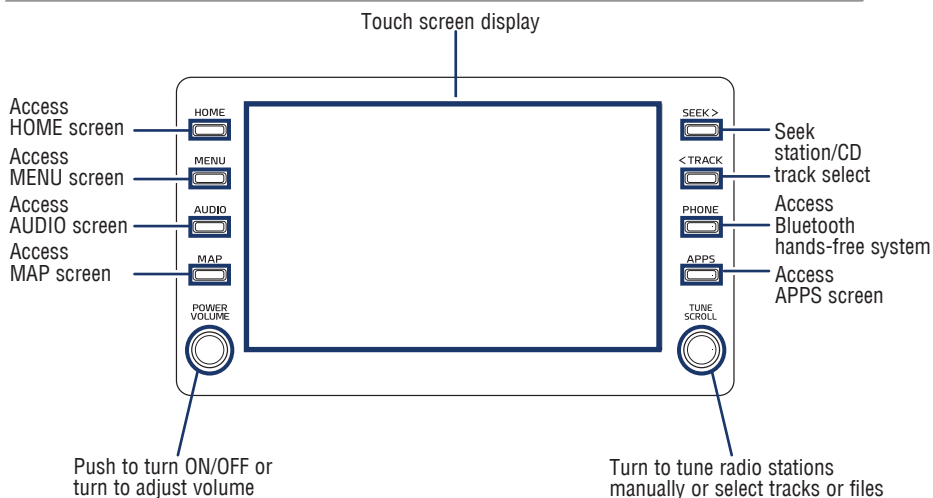

Refer to the "Navigation System Owner's Manual" or visit www.toyota.com/entune for additional audio/multimedia resources.

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.

 
Visually match your vehicle's Entune™ 3.0 audio system to one featured in this guide for the most accurate information.

Steering wheel switches & telephone controls (Bluetooth®)


Steering wheel telephone switches

“**Λ V**” Use to search within the selected audio source (radio, USB, etc.).

“**+**” or “**-**”
Volume control.

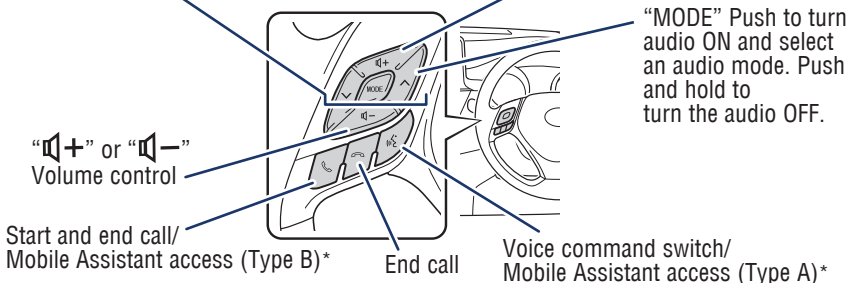

Microphone

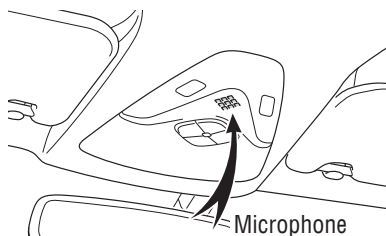 

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

* Push and hold to access Mobile Assistant. When a compatible smartphone is Bluetooth® connected push and hold the off hook switch 2-3 seconds to access Siri® Eyes Free.

 
 
Refer to the “Bluetooth® Device Pairing Section” in this guide for more information about phone connections and compatibility.

Refer to the “Navigation System Owner’s Manual” for more details.

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.


FEATURES & OPERATIONS

Cup holders-Adjust size

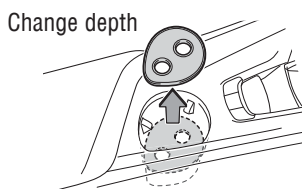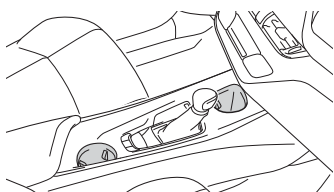


Auxiliary storage

 
Console box

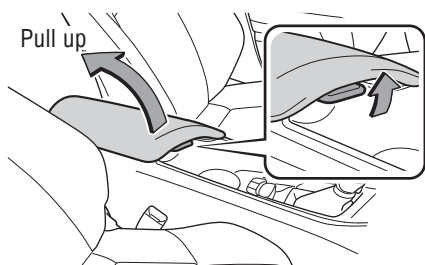

Luggage compartment auxiliary boxes

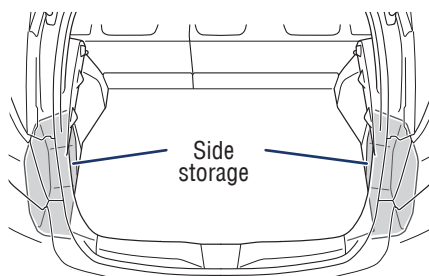 

TRAC/VSC OFF switch

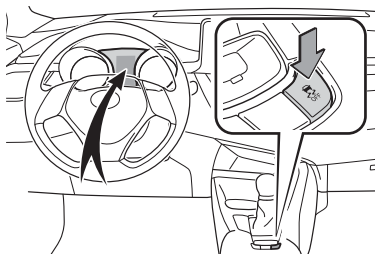 


The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While car is stopped, press switch to disable the TRAC system.

To disable both VSC and TRAC systems, press and hold the switch for at least 3 seconds.

Refer to the Owner's Manual for more details.

 Rear view monitor system

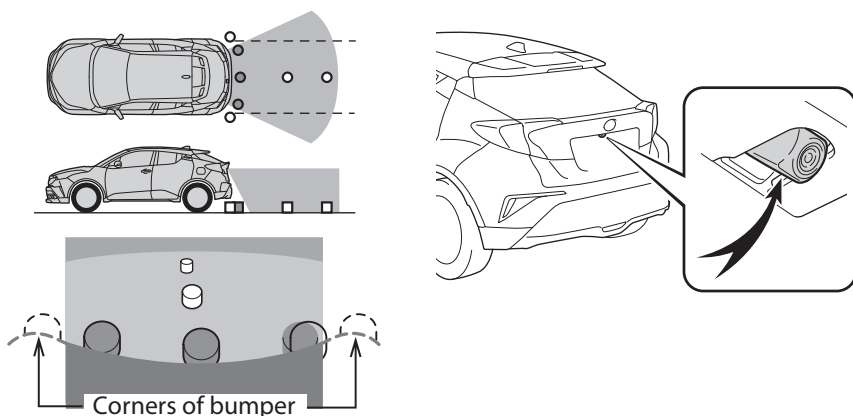


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the "MENU" button and select "Display" on the "Setup" screen. Select "Camera" to adjust the screen contrast and brightness.

Refer to the Navigation Owner's Manual for limitations and more details on this system.

 USB media/AUX port

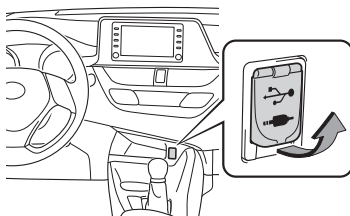

USB media port

By connecting a USB-compatible portable audio device or USB memory stick into the USB media port, you can listen to music through the vehicle's speaker system.

 
AUX port

By inserting an AUX cable into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

FEATURES & OPERATIONS


Windshield wipers & washers

WITH INTERMITTENT WIPER (IF EQUIPPED)

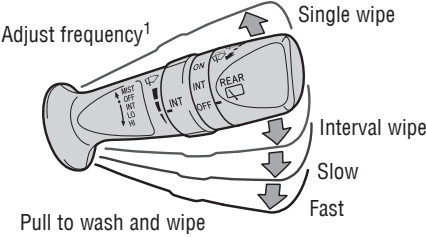


¹ Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

 WITH AUTO RAIN-SENSING WIPER (IF EQUIPPED)

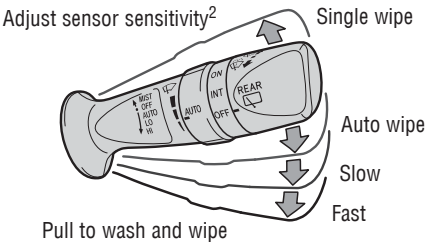

² Rain-sensing windshield wiper
Rotate to increase/decrease sensor sensitivity.

 REAR

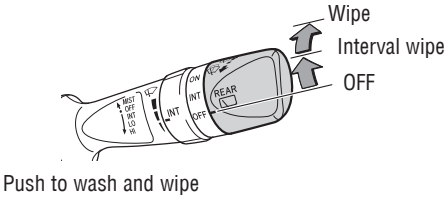

Refer to the Owner's Manual for more information.

Quick overview-Toyota Safety Sense™ P (TSS-P)

Toyota Safety Sense™ P (TSS-P) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS-P is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to <http://www.toyota.com/safety-sense>

 


Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.



Advanced millimeter-wave radar sensor system is designed to work with the camera sensor to help recognize a preceding pedestrian, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Departure Alert with Steering Assist (LDA w/SA)

LDA w/SA is designed to provide notification when the system detects an unintended lane departure.

The Steering Assist function is designed to provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.



Full-Speed Range Dynamic Radar Cruise Control (DRCC)

DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed.

 


Automatic High Beams (AHB)


AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.

Sensors

TSS-P combines an in-vehicle camera mounted in front of the inside rear view mirror and a millimeter-wave radar mounted in the front grill. These sensors support the driver assist systems.

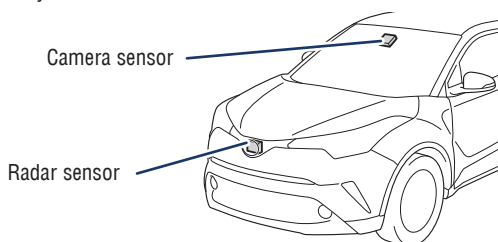

 Pre-Collision System with Pedestrian Detection (PCS w/PD)

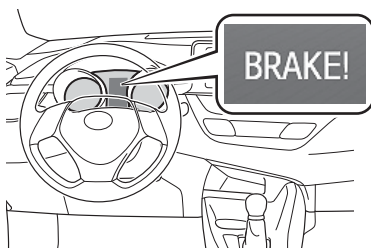

The Pre-Collision System with Pedestrian Detection uses a radar sensor and camera sensor to help detect a vehicle or pedestrian in front of your vehicle.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS w/PD instead of normal braking operations under any circumstances. Do not attempt to test the operation of the pre-collision system yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

Refer to a Toyota Owner's Manual for a list of additional situations in which the system may not operate properly.

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.

 
Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to a Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.


PCS PEDESTRIAN DETECTION

In certain conditions, the PCS system included with the TSS-P package may also help to detect a pedestrian in front of your vehicle. With Toyota Safety Sense™ P, PCS uses an in-vehicle camera and front-grill mounted millimeter-wave radar to help detect a pedestrian in front of your vehicle in certain conditions. The in-vehicle camera of PCS detects a potential pedestrian based on size, profile, and motion of the detected pedestrian. However, a pedestrian may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian, preventing the system from operating or engaging. *Refer to a Toyota Owner's Manual for additional information.*

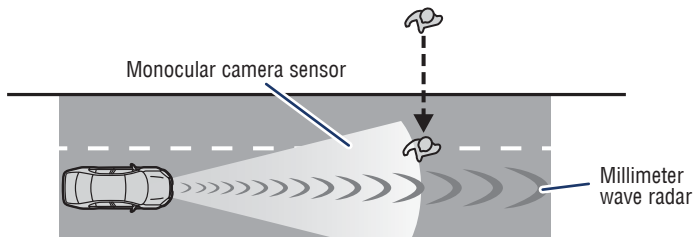


As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.

 CHANGING PCS ALERT TIMING

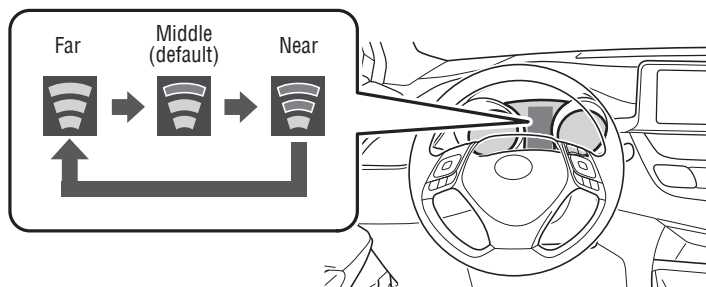

- (1) Press “<>” switches and select  from the Multi-Information Display (MID).
- (2) Press “<” switches and select the  setting function and then press “<”.
- The setting screen is displayed.
- (3) Press “<” switches and select “ Sensitivity” from the MID and then press “<” to select the desired setting. You can press “<” to go back to the menu.

 Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same).

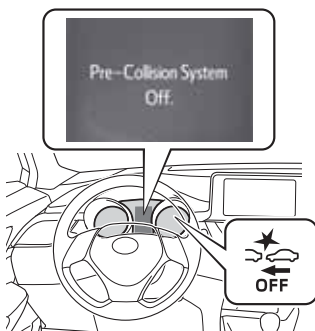


- (1) Press “<>” switches and select  from the Multi-Information Display (MID).
- (2) Press “⬢” switches and select  and then press “⬢” to select ON or OFF setting.
- (3) You can press “⬢” to go back to the menu.

Note: The system is enabled each time the power switch is turned to ON mode.

Refer to a Toyota Owner's Manual for additional information on PCS operation, settings adjustments, limitations, and precautions before attempting to use it.

 Lane Departure Alert with Steering Assist (LDA w/SA)

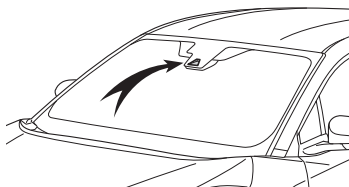

LDA w/SA in TSS-P uses an in-vehicle camera designed to detect visible white and yellow lane markers in front of the vehicle and the vehicle's position on the road. If the system determines that the vehicle is starting to unintentionally deviate from its lane, the system alerts the driver with an audio and visual alert. When the alerts occur, the driver must check the surrounding road situation and carefully operate the steering wheel to move the vehicle back to the center part of their lane.

LDA is designed to function at speeds of approximately 32 MPH or higher on relatively straight roadways.

In addition to the alert function, LDA w/SA also features a steering assist function. When enabled, if the system determines that the vehicle is on a path to unintentionally depart from its lane, the system may provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.

TURNING THE LDA SYSTEM ON/OFF



 
Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: The system will continue in the last state it was in (ON or OFF) when the engine is started again.

Refer to a Toyota Owner's Manual for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

LANE DEPARTURE ALERT

LDA function display

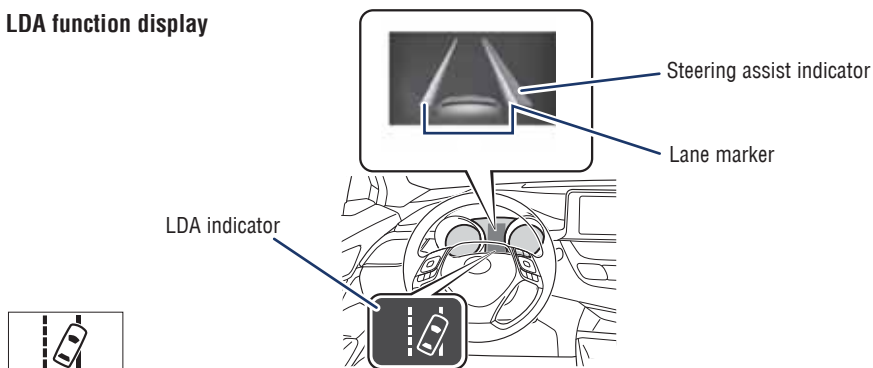

Lane Departure Alert (LDA w/SA) indicator flashes amber when operating



LANE DEPARTURE ALERT (CONTINUED)

The LDA w/SA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

(1) The system displays solid white lines on the LDA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.

(2) The system displays outlines on the LDA indicator when lane markers on the road are not detected or the function is temporarily cancelled.

Note: When operational conditions are no longer met, the function may be temporarily canceled. However, when the operational conditions are met again, operation of the function is automatically restored. For example, LDA w/SA may not function on the side(s) where white/yellow lines are not detectable.

Refer to a Toyota Owner's Manual for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

DISABLING STEERING ASSIST

(1) Press “<>” switches and select  from the Multi-Information Display (MID).

(2) Press “<>” switches and select the  Steering Assist function and then press “<>”.

(3) Press “<>” each time to change the setting.

(4) Press “<>” to go back to the menu.

Note: Operation of the LDA w/SA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING LDA ALERT SENSITIVITY

The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

(1) Press “<>” switches and select  from the Multi-Information Display (MID).

(2) Press “<>” switches and select the  Alert function and then press “<>” to set sensitivity to Normal or High.

(3) Press “<>” each time to change the setting.

(4) Press “<>” to go back to the menu.

SWAY WARNING SYSTEM



Continuous lane deviations from swaying.



Gentle swaying from driver's inattentiveness.



Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

SWS is a function of LDA and is designed to detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning displays in the MID.

DISABLING LDA SWAY WARNING SYSTEM

- (1) Press “<>” switches to find and select .
- (2) Press “<” switches to find the  Steering Assist function and then press “<”.
- (3) Press “<” each time to change the setting.
- (4) Press “<” to go back to the menu.

 
Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING SWAY ALERT SENSITIVITY

- (1) Press “<>” switches to find and select .
- (2) Press “<” switches to find the  Steering Assist function and then press “<”.
- (3) Press “<” each time to change the setting.
- (4) Press “<” to go back to the menu.


Full-Speed Range Dynamic Radar Cruise Control (DRCC)

DRCC helps maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. This mode is always selected first when the cruise control button is depressed. Constant speed cruise control mode is also available. Full-Speed Range DRCC is designed to function at speeds between 0 to approximately 110 MPH and is intended for highway use.

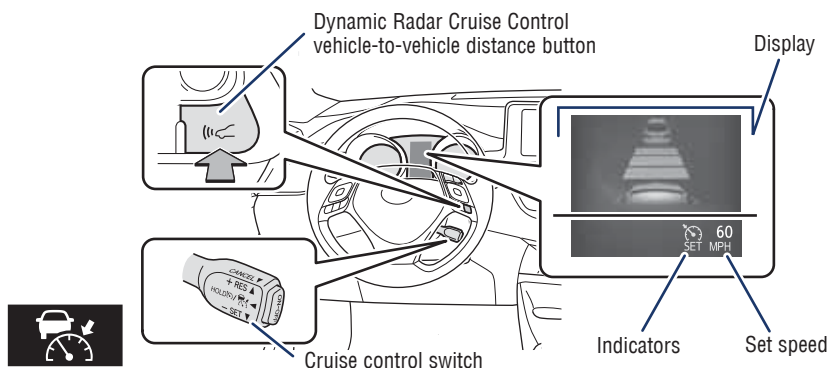

TURNING SYSTEM ON/OFF

 (1)

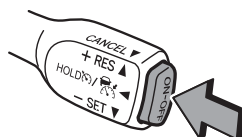


Push once: On
Push again: Off


Refer to page 32 for switching to Constant Speed (Cruise) Control Mode.

ADJUSTING SET SPEED

 (2)

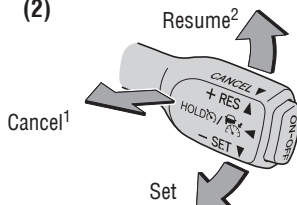

 (3)

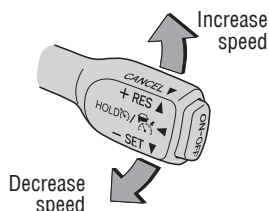

SET

 
Vehicle will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

- (1) Push the ON-OFF button. The "RADAR READY" or "DRCC" indicator will come on.
- (2) Push the lever down to SET speed, push it up to Resume and pull it or depress brake to Cancel.
- (3) Push up to increase the set speed, push down to decrease (1 mph [1.6 km/h] or 1 km/h [0.6 mph]).

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.


ADJUSTING DISTANCE

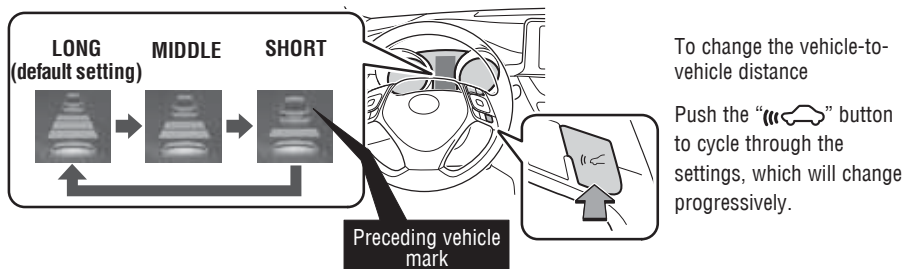

This mode employs a radar sensor to detect the presence of vehicles up to approximately 328ft (100m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a preset following distance from the vehicle ahead. These distances vary based on vehicle speed.

Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

 ADJUSTING DISTANCE (CONTINUED)

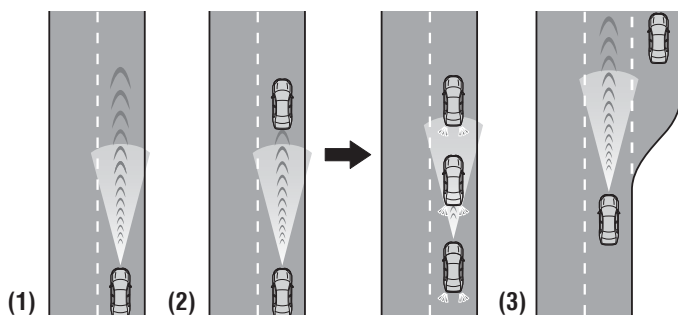

(1) **Constant speed cruising when there are no vehicles ahead**

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

(2) **Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears**

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the brake lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

 
ADJUSTING DISTANCE (CONTINUED)

(3) **Acceleration when there are no longer any preceding vehicles driving slower than the set speed**

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

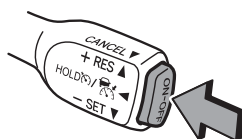


1.5 seconds

If you are already using DRCC “”, push ON-OFF button to turn the system off first, then push and hold ON-OFF button for at least 1.5 seconds to switch.

Note: When the engine is turned off, it will automatically default to DRCC.

Refer to a Toyota Owner’s Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

 SETTING CONSTANT SPEED (CRUISE) CONTROL

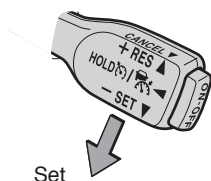


Set

To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET SPEED on page 30.

Refer to a Toyota Owner’s Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

 Automatic High Beams (AHB)

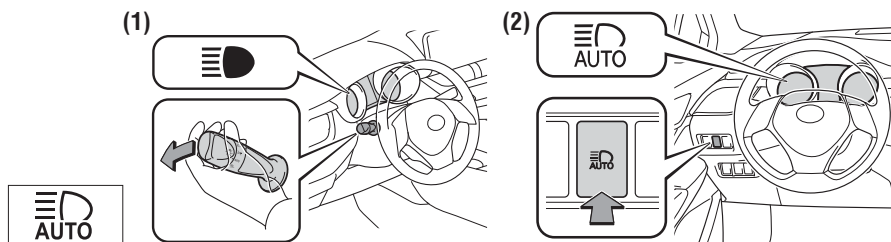

AHB is a safety system designed to help drivers see more of what's ahead at nighttime and reduce glare for oncoming drivers. When enabled, AHB uses an in-vehicle camera to help detect the headlights of oncoming vehicles and tail lights of preceding vehicles, then automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. By using high beams more frequently, the system may allow earlier detection of pedestrians and obstacles.

Refer to a Toyota Owner's Manual for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

ACTIVATING THE AHB SYSTEM

- (1) With the engine switch in ON/IGNITION ON mode, turn the headlight switch to “ ” or “AUTO” position.
- (2) Push lever away from you.
- (3) Press the “ ” switch.

The AHB indicator will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Pull the lever back toward you to turn the AHB system off.

The AHB indicator will turn off. To turn switch to “ ” position and the manual high beam indicator “ ” turns on.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of these conditions are met, high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (34 km/h.)
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few street lights on the road ahead.

If any of these conditions occur, the system is designed to automatically turn off high beams:

- Vehicle speed drops below approximately 17 mph (27 km/h.)
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

SAFETY & EMERGENCY FEATURES

 
Seat belts



NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the Toyota Owner's Manual.

Seat belts-Shoulder belt anchor

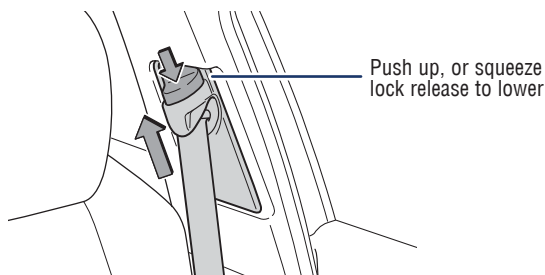

Rear door child safety locks

 Rear door

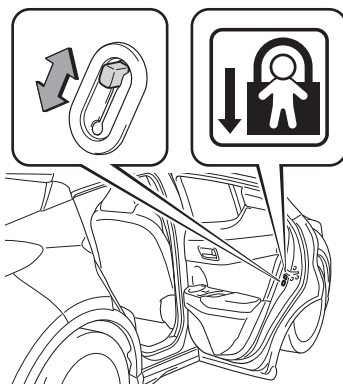

Moving the lever downward will allow the door to be opened only from the outside.

Tire Pressure Monitoring (warning) System (TPMS)



The tire pressure warning system can be selected on “” of the multi-information display (MID).

System rest initialization

- (1) Select “Vehicle Settings” and then push and hold “”.
- (2) Select “ Setup” then push and hold “”.

The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display (MID).

Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.

 
If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

SAFETY & EMERGENCY FEATURES


Spare tire & tools

TOOL LOCATION

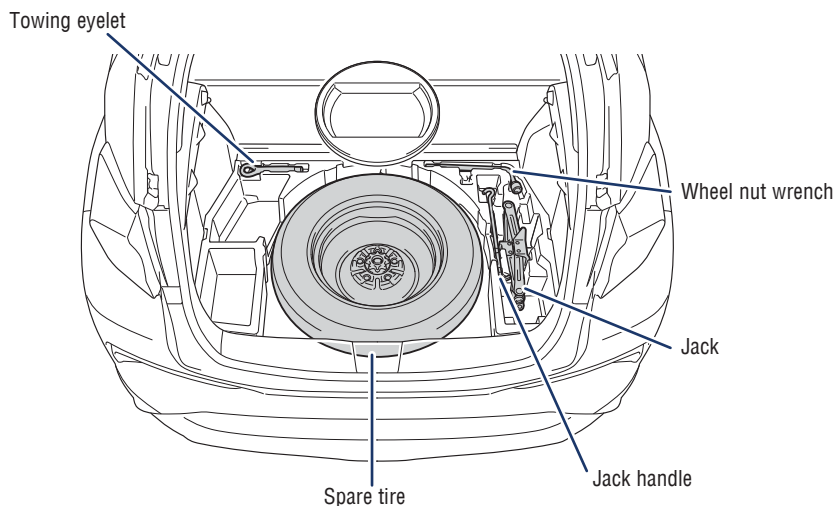


REMOVE THE SPARE TIRE

 
Remove the deck board and cushion.

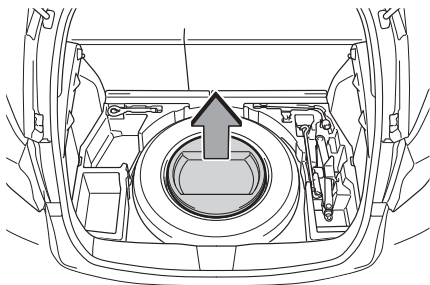

 Loosen the center fastener that secures the spare tire.

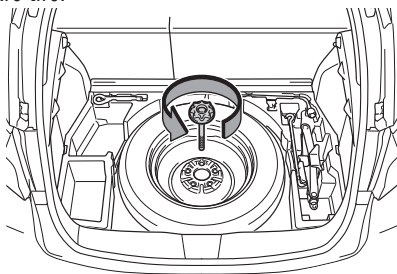

Take out jack.

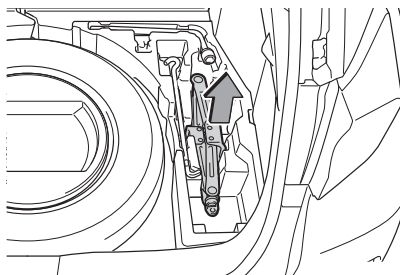 

Refer to the Toyota Owner's Manual for tire changing and jack positioning procedures.

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

SAFETY & EMERGENCY FEATURES

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

 
Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

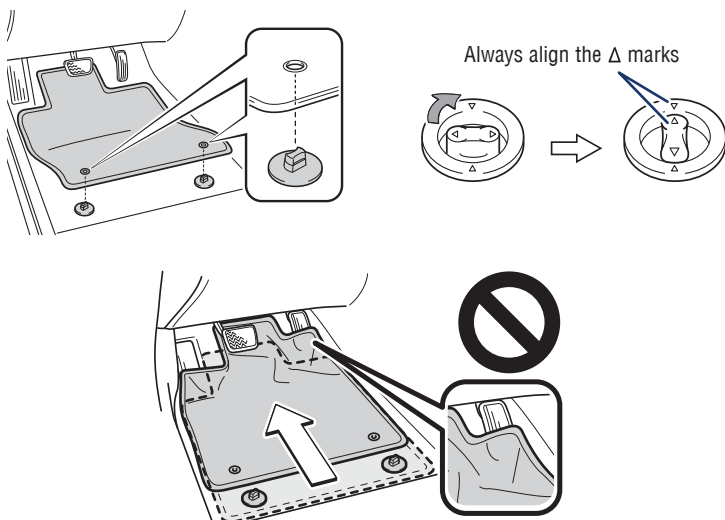

BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.

 
To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your multimedia system.

Bluetooth® Pairing for your phone

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy. All you have to do is setup the phone and multimedia system to form a connection.¹



Entune Audio/Entune Audio Plus

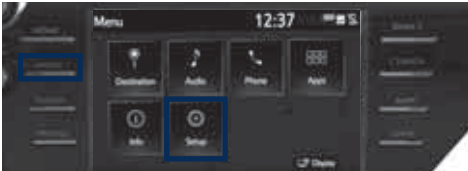


Entune Premium Audio

STEP 1 Press [MENU] on the faceplate, then select "Setup" on display screen.



 iPhone bluetooth Menu

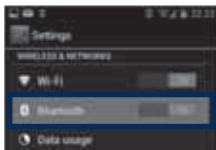

Android bluetooth Menu

STEP 2 Ensure Bluetooth is turned on for your device.



STEP 3 Select "Bluetooth", then select "Add New Device" on display screen.



STEP 4 Select "Device Name".



STEP 5 Check the display on your smart phone. Does the PIN XXXX match the PIN displayed on "DCC #10 Pioneer"? If it does select "Pair".

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Bluetooth® Pairing for your phone (cont.)

 


STEP 6 "Connecting" displays while device is forming the connection to your multimedia system.




STEP 7 Enable Notifications (text message). While pairing your device message will display: **"You may need to allow message access on your phone"**.

Note: You may also select "Skip" on display screen to skip enabling notifications. If skipped proceed to **Step 8**.

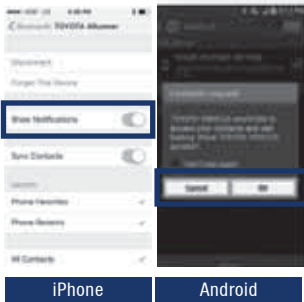

 STEP 8 Turn on "Show Notifications" for iPhone or "ON" for Android.

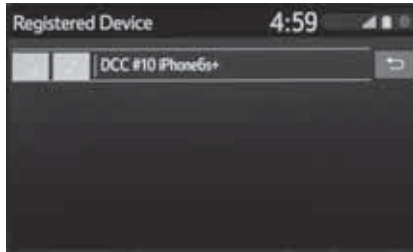

STEP 9 A confirmation will appear once your phone has been paired and connected.

NOTES



www.toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 4/18

18-MKG-11816



00505QRG19CHR