

2019



ATS Convenience & Personalization Guide


cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac ATS. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

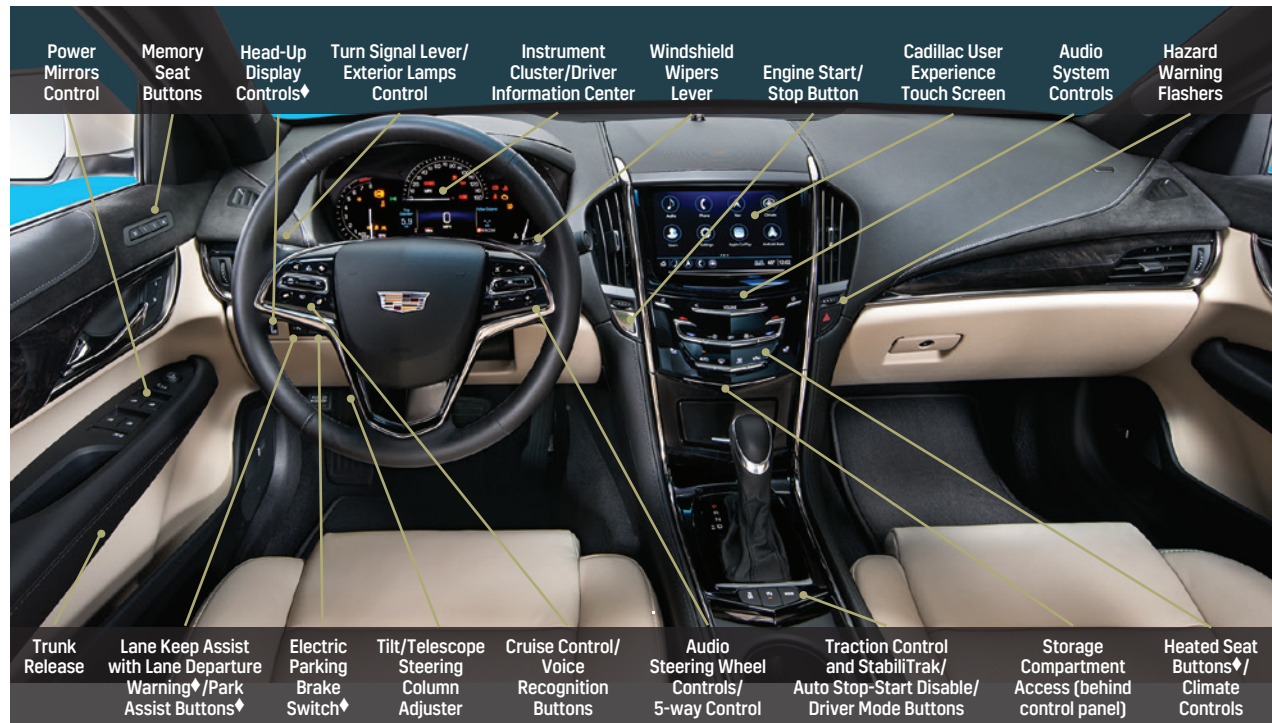

REMOTE KEYLESS ENTRY TRANSMITTER



Press to lock all doors.



Press to unlock the driver's door.

Press again to unlock all doors.
Press and hold to open all windows.

Note: To change the Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Press to start the engine from outside the vehicle. See Adaptive Remote Start on page 17.



Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the button is pressed again or the vehicle is started.



Press twice to open the trunk.

See Keys, Doors and Windows in your Owner's Manual.




KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the trunk.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the Lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the Lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.

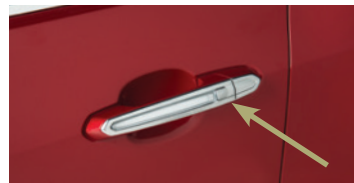

KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the Lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

START

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** (and clutch pedal, if equipped) and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate. **ENGINE START/STOP** will illuminate on the button when the headlamps are on.



Note: The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket at the front of the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park (automatic transmission), or 1st or Reverse (manual transmission), and press the **ENGINE START/STOP** button to turn off the engine.

Power is available to operate the audio system for 10 minutes or until the driver's door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the vehicle in Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION (IF EQUIPPED)

A fuel-saving automatic engine stop/start system is included on vehicles equipped with the 2.0L I4 turbocharged engine or 3.6L V6 engine.

While driving, when the brake pedal is applied and the vehicle is at a complete stop, the auto engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than D (Drive).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time is greater than 2 minutes.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button on the center console when the engine is running to disable the auto engine stop/start system.

When the system is disabled, the button indicator will not be illuminated and the **(A)** symbol on the instrument cluster will change from green to white with a slash through it.

STEERING WHEEL CONTROLS

CRUISE CONTROL/ADAPTIVE CRUISE CONTROL-ADVANCED

On/Off

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ - Adjust Speed

When active, press the control bar up (+) or down (-) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory. Press and hold to switch between regular Cruise Control and Adaptive Cruise Control.

Following Gap (Adaptive Cruise Control-Advanced)

Press repeatedly to select a gap setting (the time between your vehicle and a detected vehicle) of Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.

HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner's Manual.

◆ Optional equipment



VOICE RECOGNITION

Push to Talk

Press to answer an incoming call or interact with the OnStar, Bluetooth or infotainment system.

End Call/Mute

Press to end/decline a call or mute/unmute the audio system.

See your Cadillac User Experience Manual.

DRIVER INFORMATION CENTER CONTROL

The 5-way control moves left/right, up/down, and in.

Left/Right

Press to view the left or right cluster display. Press the left < to exit a display menu.

Up/Down

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner's Manual.

AUDIO CONTROLS

Volume

Press  or  to increase or decrease the volume.

Next/Previous

Press  or  to select the next or previous favorite radio station or track.

See your Cadillac User Experience Manual.



INSTRUMENT CLUSTER



Symbols

	StabiliTrak Off		Forward Collision Alert		Safety Belt Reminder
	Low Tire Pressure		StabiliTrak/Traction Control Engaged		Adaptive Forward Lighting Activated
	Service Electric Parking Brake		Engine Oil Pressure Warning		Electric Parking Brake Set
	Antilock Brake System Warning		Security Notification		Check Engine Warning
	Airbag Readiness		Lights On Reminder		Traction Control Off
	Brake System Warning		Charging System Warning		Cruise Control Activated
	High Beam Headlamps		Low Fuel Warning		Adaptive Cruise Control Activated
	Lane Keep Assist/ Lane Departure Warning		Engine Coolant Temperature		AutoStop

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER



The Driver Information Center displays a variety of vehicle information on three display zones. Zones can be personalized to display: digital speedometer, trip odometer, fuel range, average fuel economy, compass, oil life, tire pressure, navigation, phone or other vehicle information.

Use the 5-way control on the right side of the steering wheel to navigate and select between the available menus. To select the desired display information:

1. Press the **< left** or **> right** side of the control bar to select one of the three display zones.
2. Press the control bar **^ up** or **v down** to scroll through a menu.
3. Press **SEL (Select)** to select a menu item. Press and hold to reset values on certain screens.
4. Press the **< left** or **> right** side of the control bar to retain the information view and to exit the display zone.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY ♦

The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

ROTATION OPTION

- To adjust the angle of the HUD, use the 5-way control to view the Options menu on the instrument cluster and select HUD Rotation. Press **^ up** or **v down** to adjust the angle.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS

Applications:
Touch a screen icon to access the application

VOLUME:
Touch arrows or swipe finger above chrome bar

Power/Mute:
Press and hold to turn the infotainment system On/Off; press to mute/unmute audio

Driver's Temperature Control

Climate Control Fan Speed Off

Driver's Heated Seat Control

AUTO:
Automatic Climate Control Operation

Windshield Defrost Mode



Wi-Fi Indicator

Home Page

Passenger's Temperature Control

Recirculation Mode

Passenger's Heated Seat Control

Rear Window Defog

Storage Compartment:
Press and hold the bright bar to open/close

The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.

CADILLAC USER EXPERIENCE MENUS

Your ATS offers a variety of entertainment, communication and vehicle system options. You can use simple gestures on the touch screen just as you would on a smartphone, such as tap, drag, pinch and spread, to interact with the infotainment system. Touch an application icon on the touch screen to access the following items.



Audio

- Most Recent Audio Sources
- More Audio Sources
- Seek Up/Down
- Tune
- HD Radio
- Browse
- Sound
- Station Favorites



Navigation

- Search
- Favorite
- Recent
- Cancel
- Map Menu
- Zoom Out
- Zoom In
- Destination
- Vehicle Icon



Phone

- Favorites
- Keypad
- Recent
- Contacts
- Devices

Note: Press and hold the  **Push to Talk** steering wheel button to activate Bluetooth Speech Recognition. See page 12.



Climate

- Front/Rear Settings
- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Fan Speed
- Air Distribution Settings
- On/Off
- A/C Mode
- Automatic Setting
- Recirculation Setting
- Sync Temperature Settings



Settings

- System
- Apps
- Vehicle
- Personal

CADILLAC USER EXPERIENCE FEATURES

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Use a Bluetooth or USB connection to link a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.

INTERACTING WITH THE TOUCH SCREEN

You can use simple gestures on the touch screen just as you would on a smartphone.

Tap



Touch and Hold



Drag



Spread



Pinch



SETTING THE TIME

1. Touch Settings on the Home page, and then touch System.
2. Touch Time/Date.
3. Touch Set Time.
4. Touch  or  to adjust the hours, minutes, and AM or PM.
5. Touch  to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Display the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite item.

CADILLAC USER EXPERIENCE FEATURES

APPS♦

Connected apps linking to music, news, weather, travel information, sports, entertainment and more are available for download to the infotainment system through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.



PORTABLE AUDIO DEVICES

USB ports and an auxiliary audio input jack are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch Audio, and then touch More and select the USB device. Search for music on-screen or by voice commands.

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

VOICE RECOGNITION

Control the music source and navigation destination♦, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
 2. The radio will play a prompt followed by a beep.
 3. After the beep, say what you want it to do.
- **Hands-free calling** – Example commands: “Call Amanda” or “Dial 555-1212”
 - **Connected music device search** – Example commands: “Play artist [name]” or “Play song [name]”
 - **Radio control** – Example commands: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - **Navigation control♦** – Example commands: “Destination Address” or “Destination Contact”
 - **Help** – Say “Help” for voice recognition assistance

BLUETOOTH SPEECH RECOGNITION

Bluetooth Speech Recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri® Eyes Free or Voice Command.

- To activate Bluetooth Speech Recognition, press and hold the  **Push to Talk** steering wheel button.

Visit my.cadillac.com/learn for more information.

See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. Visit my.cadillac.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say “Pair Phone.”
To use the infotainment screen, select Phone > Add Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Cadillac User Experience Manual.

VALET MODE

- To lock/unlock various features of the vehicle, go to Settings > Vehicle > Valet Mode and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

See your Cadillac User Experience Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the infotainment system. Settings may include Rear Seat Reminder; Climate and Air Quality; Collision/ Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; Remote Lock, Unlock, Start; Teen Driver; and Valet Mode.

1. Touch **Settings** on the Home page.
2. Touch **Vehicle**.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch **< BACK** to exit each menu.

See Instruments and Controls in your Owner's Manual.



TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See your Cadillac User Experience Manual.

UNIVERSAL REMOTE SYSTEM ♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors

and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

WIRELESS CHARGING

The Wireless Charging system for mobile devices is located in the storage compartment behind the climate controls. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the mobile device, face up, on the symbol on the charging pad.
4. Move the device slowly until the battery charging symbol displays by the phone icon on the infotainment screen, indicating the device is charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

MEMORY SEATS



SET MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and power steering column to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound. Repeat these steps using button **2** for a second driver.

To store driver's seat and power steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the **Exit** button.

RECALL POSITIONS

- Press button **1**, **2** or **Exit**. The button must be held down until the seat, mirrors and power steering column reach the set position.

Note: To change the Auto Memory Recall settings, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the band to operate the exterior lamps.

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 **Parking Lamps**

 **Headlamps**

ADAPTIVE FORWARD LIGHTING (INCLUDED WITH HID HEADLAMPS)♦

The Adaptive Forward Lighting (AFL) system pivots the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS



Move the lever to operate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent (Rainsense™ Sensitivity)

If equipped with Rainsense automatic wipers♦, place the lever in the INT position and rotate the band to adjust the system sensitivity. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

Note: When entering an automatic car wash, it is recommended to turn off the Rainsense windshield wipers♦. If Rainsense is active, the transmission is in Neutral and vehicle speed is very slow, the windshield wipers will stop at the base of the windshield to protect the wiper arms from potential damage.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

Safety Alert Seat – The driver's seat pulses — left side, right side, or simultaneously — to alert the driver of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Lane Keep Assist with Lane Departure Warning – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  Lane Keep Assist button on the left side of the instrument panel.

Forward Collision Alert – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To set the alert timing, press the  Following Gap button on the left side of the steering wheel. The setting is displayed on the Driver Information Center (A).

Following Distance Indicator – The following distance to the vehicle ahead is indicated in seconds on the Driver Information Center (B). If no vehicle is detected ahead, dashes are displayed.



Adaptive Cruise Control–Advanced – The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ To set a following gap, press the  Following Gap button on the left side of the steering wheel.

Lane Change Alert with Side Blind Zone Alert – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Rear Cross Traffic Alert – With the vehicle in Reverse, the system warns of cross traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, press the  Park Assist button on the left side of the instrument panel. This will also turn on/off the Park Assist and Rear Automatic Braking systems.

DRIVER ASSISTANCE SYSTEMS◆

Forward/Reverse Automatic Braking◆ – In potential front- and rear-end imminent collision situations with vehicles directly ahead or behind, and with some objects behind your vehicle, the brakes may be applied, if you have not already done so, to help reduce the collision's severity or help avoid collisions at very low speeds.

- ▶ To set Forward Automatic Braking to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ To set Reverse Automatic Braking to on or off, press the  **Park Assist** button on the left side of the instrument panel. This will also turn on/off the Park Assist and Rear Cross Traffic Alert systems.

Automatic Safety Belt Tightening◆ – The front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

See Driving and Operating in your Owner's Manual.

AUTO HEATED SEATS/ STEERING WHEEL◆

When the vehicle is on, the automatic heated seats and automatic heated steering wheel will be activated based on the vehicle's interior temperature. The heated seat level is shown on the heated seat control indicators. Turn off the heated seats using the heated seat controls. Turn off the heated steering wheel using the steering wheel control.

- ▶ To turn the features on or off, go to Settings > Vehicle > Climate and Air Quality.

See Seats and Restraints in your Owner's Manual.

ADAPTIVE REMOTE START◆

STARTING THE VEHICLE

1. Press and release the  **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the  **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 15 minutes. Repeat these steps for a 15-minute time extension. Remote start can be extended only once.

3. Before driving, simultaneously press the brake pedal and the **ENGINE START/STOP** button to turn on the ignition.

CANCELING A REMOTE START

- ▶ Press and hold the  **Remote Start** button until the parking lamps turn off.

CLIMATE CONTROL OPERATION

During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

HEATED SEAT OPERATION

Select the Remote Start Auto Heat Seats option in the Settings menu to have the heated seats turn on during a remote start on cold days. The heated seat button indicators do not illuminate and the temperature performance of the unoccupied heated seat may be reduced during the remote start. The heated seats turn off when the ignition is turned on.

See Keys, Doors and Windows in your Owner's Manual.

AUTOMATIC TRANSMISSION TAP SHIFT◆



The 8-speed automatic transmission has an available Tap Shift mode that allows you to shift gears similar to a manual transmission.

USING TAP SHIFT

1. While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection.

2. Pull the right paddle to upshift or the left paddle to downshift. If current vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically shift to 1st gear.

The automatic transmission also can be manually controlled by moving the shift lever to the left gate; tap the lever forward to upshift and rearward to downshift.

See Driving and Operating in your Owner's Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS◆

The traction control system limits wheelspin and the StabiliTrak system assists with the stability of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center console. The  Traction Control Off light on the instrument cluster will illuminate.
- ▶ Press the  button again to turn on traction control.

See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL SYSTEM◆

The Driver Mode Control System automatically adjusts steering, automatic transmission (if equipped) and Magnetic Ride Control (if equipped) settings in real time.

- ▶ Press the **MODE** button on the center console to select Tour (default at each ignition cycle), Sport, or Snow/Ice◆ mode.

See Driving and Operating in your Owner's Manual.

SUNROOF◆

EXPRESS OPEN/CLOSE THE SUNROOF

- ▶ Fully press the  **SLIDE** switch to express open the sunroof. Press the switch again while the sunroof is in motion to stop the sunroof at that position.
- ▶ Fully press the  **SLIDE** switch to express close the sunroof. Press the switch again while the sunroof is in motion to stop the sunroof at that position.



TILT/CLOSE THE SUNROOF

- ▶ Press the  **TILT** switch to tilt the sunroof.
- ▶ Press the  **TILT** switch to close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.

REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

Note: When using a portable gas can, insert the funnel adapter, located under the cargo floor, into the capless fuel fill.

See Driving and Operating in your Owner's Manual.

TIRES

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

TIRE SEALANT AND COMPRESSOR KIT◆

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the kit instructions for complete operating information.

See Vehicle Care in your Owner's Manual.

ELECTRIC PARKING BRAKE◆

- ▶ To apply the parking brake, pull the  **Parking Brake** switch on the left side of the instrument panel (automatic transmission) or on the center console (manual transmission).
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the  switch.



See Driving and Operating in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar Roadside Assistance: If you have a current OnStar Safety & Security plan, push the blue OnStar button or red Emergency button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit **onstar.com** or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

MYCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CADILLAC ONLINE OWNER CENTER

Create an account at **my.cadillac.com** to access an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 by General Motors. All rights reserved.

