

2019



CTS Convenience & Personalization Guide


cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac CTS. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

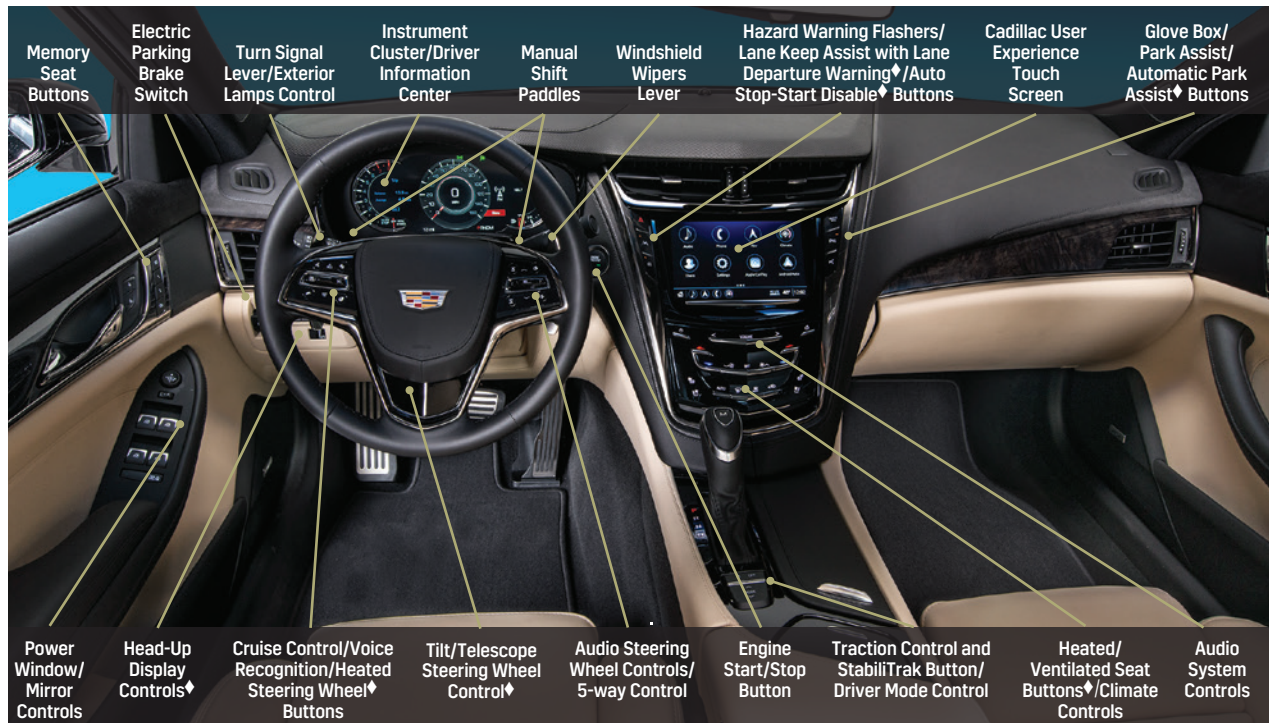

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door and fuel door. Press again to unlock all doors.

Press and hold to open all windows.

Note: To change the Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 17.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the button is pressed again or the vehicle is started.



Trunk Release

Press twice to open the trunk.

Door Key

Press the button (A) on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door, front passenger's door and rear folding seats.◆



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the trunk.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the Lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the Lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the Lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed. The fuel door will lock automatically after several minutes (press the Unlock button on the transmitter to unlock the fuel door).

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

See Keys, Doors and Windows in you Owner's Manual.

KEYLESS START

START

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket under the rubber mat on the top shelf of the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof[†] until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the vehicle in Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION (IF EQUIPPED)

A fuel-saving automatic engine stop/start system is included on vehicles equipped with the 2.0L I4 turbocharged engine or 3.6L V6 engine.

While driving, when the brake pedal is applied and the vehicle is at a complete stop, the auto engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than D (Drive).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time is greater than 2 minutes.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button left of the infotainment screen when the engine is running to disable the auto engine stop/start system.

When the system is disabled, the button indicator will not be illuminated and the **(A)** symbol on the instrument cluster will change from green to white with a slash through it.

STEERING WHEEL CONTROLS

CRUISE CONTROL/ADAPTIVE CRUISE CONTROL-ADVANCED♦

On/Off

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ - Adjust Speed

When active, press the control bar up (+) or down (-) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory. Press and hold to switch between regular Cruise Control and Adaptive Cruise Control♦.

Following Gap (Adaptive Cruise Control-Advanced♦ and Forward Collision Alert♦)

Press repeatedly to select a gap setting (the time between your vehicle and a detected vehicle) of Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.

HEATED STEERING WHEEL♦

On/Off

See Instruments and Controls in your Owner's Manual.

♦ Optional equipment



VOICE RECOGNITION

Push to Talk

Press to interact with the OnStar, Bluetooth or infotainment system.

End Call/Mute

Press to end/decline a call or mute/unmute the audio system.

See your Cadillac User Experience Manual.

DRIVER INFORMATION CENTER CONTROL

The 5-way control moves left/right, up/down, and in.

Left/Right

Press to view the left or right cluster display. Press the left < to exit a display menu.

Up/Down

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner's Manual.



AUDIO CONTROLS

Volume

Press  or  to increase or decrease the volume.

Next/Previous

Press  or  to select the next or previous favorite radio station, track or file.

See your Cadillac User Experience Manual.

INSTRUMENT CLUSTER



Balanced



Enhanced



Performance
(V-Sport Premium Luxury and V-Series models only)

CLUSTER DISPLAY ZONES



Use the 5-way control on the right side of the steering wheel to move between the different display zones and scroll through the various displays in each cluster configuration.

UPLEVEL CLUSTER CONFIGURATIONS♦

1. With the vehicle in Park, use the 5-way control on the steering wheel to view the Options page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Options menu.
3. Scroll **∨ down** to highlight Display Layout; press **SEL**.
4. Scroll **∧ up** or **∨ down** to highlight one of the cluster configurations; press **SEL**.
5. Press **<** to exit the menu.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information. The DIC Info Pages may include a digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average speed, timer, compass, turn arrow, estimated time to arrival, distance to destination, speed limit, best fuel economy, speed warning, cruise control set speed, following distance indicator, gap setting, battery voltage, engine boost, oil life, and odometer.

INFO PAGES MENU

1. Use the 5-way control on the steering wheel to view the Options page in one of the display zones on the cluster. Press **SEL (Select)** to enter the Options menu.
2. Scroll **down** to highlight Info Pages; press **SEL**.
3. Scroll **up** or **down** to move through the list of Info Pages.
4. Press **SEL** to select or deselect a display item.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

ROTATION OPTION

- ▶ To adjust the angle of the HUD, use the 5-way control to view the Options menu on the instrument cluster and select HUD Rotation. Press **up** or **down** to adjust the angle.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS



CADILLAC USER EXPERIENCE MENUS

Your CTS offers a variety of entertainment, communication and vehicle system options. You can use simple gestures on the touch screen just as you would on a smartphone, such as tap, drag, pinch and spread, to interact with the infotainment system. Touch an application icon on the touch screen to access the following items.



Audio

- Most Recent Audio Sources
- More Audio Sources
- Seek Up/Down
- Tune
- HD Radio
- Browse
- Sound
- Station Favorites



Navigation

- Search
- Favorite
- Recent
- Cancel
- Map Menu
- Zoom Out
- Zoom In
- Destination
- Vehicle Icon



Phone

- Favorites
- Keypad
- Recent
- Contacts
- Devices

Note: Press and hold the  **Push to Talk** steering wheel button to activate Bluetooth Speech Recognition. See page 11.



Climate

- Front/Rear Settings
- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Fan Speed
- Air Distribution Settings
- On/Off
- A/C Mode
- Automatic Setting
- Recirculation Setting
- Sync Temperature Settings



Settings

- System
- Apps
- Vehicle
- Personal

CADILLAC USER EXPERIENCE FEATURES

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Use a Bluetooth or USB connection to link a compatible smart-phone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.

SETTING THE TIME

1. Touch Settings on the Home page, and then touch System.
2. Touch Time/Date.
3. Touch Set Time.
4. Touch  or  to adjust the hours, minutes, and AM or PM.
5. Touch  to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Display the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite item.

APPS♦

Connected apps linking to music, news, weather, travel information, sports, entertainment and more are available for download to the infotainment system through the Apps icon on the Home page.

Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.



PORTABLE AUDIO DEVICES

Two USB ports and an auxiliary audio input jack are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch Audio, and then touch More and select the USB device. Search for music on-screen or by voice commands.

CADILLAC USER EXPERIENCE FEATURES

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smart-phone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO

Android Auto capability is available through a compatible smart-phone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

VOICE RECOGNITION

Control the music source and navigation destination♦, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
 2. The system will play a prompt followed by a beep.
 3. After the beep, say what you want it to do.
- **Hands-free calling** – Example command: “Call Amanda” or “Dial 555-1212”
 - **Connected music device search** – Example command: “Play artist [name]” or “Play song [name]”
 - **Radio control** – Example command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - **Help** – Say “Help” for voice recognition assistance

BLUETOOTH SPEECH RECOGNITION

Bluetooth Speech Recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri® Eyes Free or Voice Command.

- To activate Bluetooth Speech Recognition, press and hold the  **Push to Talk** steering wheel button.

See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone."
To use the infotainment screen, select Phone > Add Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Cadillac User Experience Manual.

VALET MODE

- To lock/unlock the infotainment screen and the glove box, go to Settings > Vehicle > Valet Mode and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

Note: For added security, the rear seat pass-through door can be locked by turning the knob on the pass-through door and the folding rear seatbacks can be locked using the door key.

See your Cadillac User Experience Manual and Seats and Restraints in your Owner's Manual.

WIRELESS CHARGING

The Wireless Charging system for mobile devices is located in the storage compartment behind the climate controls. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the mobile device, face up, on the symbol on the charging pad.
4. Move the device slowly until the battery charging symbol displays by the phone icon on the infotainment screen, indicating the device is charging.

See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.


- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See your Cadillac User Experience Manual.

REAR CAMERA MIRROR

The rear camera mirror provides a wide angle camera view of the area behind the vehicle.

- ▶ Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off.
- ▶ To adjust the brightness of the display, press and release the button (B) on the top back of the mirror without covering the light sensor. There are 5 brightness settings.

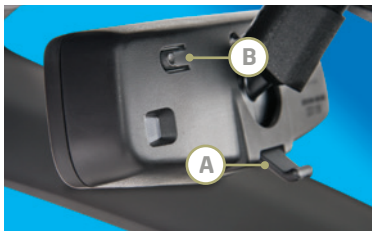

See Keys, Doors and Windows in your Owner's Manual.

SURROUND VISION

When the vehicle is in Reverse, the Surround Vision System displays a rear or front camera view along with a view of the area surrounding the vehicle on the infotainment screen.



- ▶ To switch to the front or rear camera view, touch the front or rear camera screen button at the bottom of the infotainment screen.
- ▶ To turn the guidelines on or off, touch the guidelines screen button at the bottom of the infotainment screen.

See Driving and Operating in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

ULTRAVIEW SUNROOF



OPEN/CLOSE THE SUNSHADE

- ▶ Press the front or rear of the  **Front Sunshade** switch (A) to express-open or express-close the front sunshade.
- ▶ Press the  **Rear Sunshade** switch (B) to express-open or express-close the rear sunshade.

OPEN/CLOSE THE SUNROOF

- ▶ Press the rear of the  **Sunroof** switch (C) to vent the sunroof. Press the  switch again to express-open the sunroof.
- ▶ Press the front of the  **Sunroof** switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.

POWER CUPHOLDERS COVER

- ▶ Push or pull and then release the chrome tab to open/close the power retractable cover. The power cover will operate when the vehicle is On, or in Accessory or Retained Accessory Power mode.
- ▶ Open/close the cover manually when power is not provided to the cupholder cover by slowly pushing or pulling the chrome tab.

See Storage in your Owner's Manual.

MEMORY SEATS



SET MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and power steering column♦ to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound. Repeat these steps using button **2** for a second driver.

To store driver's seat and power steering column♦ positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the  **Exit** button.

RECALL POSITIONS

- ▶ Press button **1**, **2** or  **Exit**. The button must be held down until the seat, mirrors and power steering column♦ reach the set position.

Note: To change the Auto Memory Recall settings, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

EXTERIOR LIGHTING



 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 **Parking Lamps**

 **Headlamps**

ADAPTIVE FORWARD LIGHTING (INCLUDED WITH HID HEADLAMPS)♦

The Adaptive Forward Lighting (AFL) system pivots the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner's Manual.

♦ Optional equipment

WINDSHIELD WIPERS



Wipers with Rear Camera Mirror Washer♦ shown

HI Fast Wipes

LO Slow Wipes

INT Intermittent (Rainsense™ Sensitivity)

When in Rainsense mode, rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

Note: When entering an automatic car wash, turn off the Rainsense windshield wipers.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

 **Rear Camera Mirror Washer♦**

Push the lever away from you to spray washer fluid on the rear camera mirror lens.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS◆

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT◆

The driver's seat pulses — left side, right side, or simultaneously — to alert the driver of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT◆

The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To set the alert timing, press the  **Following Gap** button on the left side of the steering wheel.

FOLLOWING DISTANCE INDICATOR◆

The following distance to the vehicle ahead is indicated in seconds on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

ADAPTIVE CRUISE CONTROL—ADVANCED◆

The system maintains the set speed and a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ To set a following gap, press the  **Following Gap** button on the left side of the steering wheel.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING◆

The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the left side of the infotainment screen.

FORWARD/REVERSE AUTOMATIC BRAKING◆

In potential front- and rear-end imminent collision situations with vehicles directly ahead or behind, and with some objects behind your vehicle, the brakes may be applied, if you have not already done so, to help reduce the collision's severity or help avoid collisions at very low speeds.

- ▶ To set Forward Automatic Braking to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ To set Reverse Automatic Braking to on or off, press the  **Park Assist** button on the left side of the instrument panel. This will also turn on/off the Park Assist and Rear Cross Traffic Alert systems.

AUTOMATIC SAFETY BELT TIGHTENING◆

The front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

DRIVER ASSISTANCE SYSTEMS◆

REAR CROSS TRAFFIC ALERT◆

With the vehicle in Reverse, the system warns of cross traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, press the  **Park Assist** button on the right side of the infotainment screen. This will also turn the Park Assist and Rear Automatic Braking systems on/off.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT◆

While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

See Driving and Operating in your Owner's Manual.

AUTO HEATED SEATS/STEERING WHEEL◆ AND VENTILATED SEATS◆

When the vehicle is on, the automatic heated seats and automatic heated steering wheel or automatic ventilated seats will be activated based on the vehicle's interior temperature. Turn off the heated or ventilated seats using the seat controls. Turn off the heated steering wheel using the steering wheel control.

- ▶ To turn the features on or off, go to Settings > Vehicle > Climate and Air Quality.

See Seats and Restraints in your Owner's Manual.

ADAPTIVE REMOTE START

STARTING THE VEHICLE

1. Press and release the  **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the  **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the doors remain locked, and the parking lamps will light and remain on while the vehicle is running. The engine will continue running for 15 minutes. Repeat these steps for a 15-minute time extension. Remote start can be extended only once.

3. Before driving, simultaneously press the brake pedal and the **ENGINE START/STOP** button to turn on the ignition.

CANCELING A REMOTE START

- ▶ Press and hold the  **Remote Start** button until the parking lamps turn off.

CLIMATE CONTROL OPERATION


During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

HEATED/VENTILATED SEAT OPERATION

Select the Remote Start Auto Heat Seats or Remote Start Auto Cool Seats option in the Settings menu to have the heated seats or ventilated seats turn on during a remote start. The temperature performance of an unoccupied seat may be reduced. The heated/ventilated seats turn off when the ignition is turned on.

See Keys, Doors and Windows in your Owner's Manual.

PADDLE SHIFT AUTOMATIC TRANSMISSION

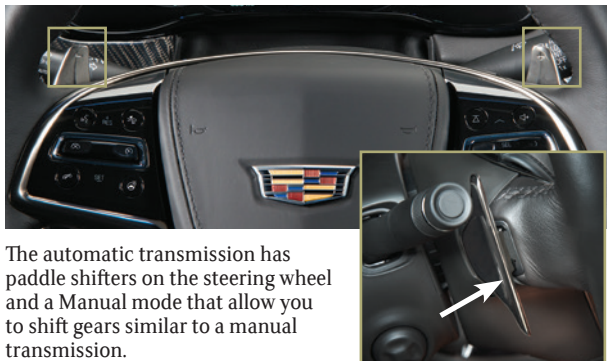

The automatic transmission has paddle shifters on the steering wheel and a Manual mode that allow you to shift gears similar to a manual transmission.

TEMPORARY TAP MODE

- ▶ While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection. Automatic shifting returns if no manual shifts have been made after 10 seconds.
- ▶ Pull the right paddle to upshift or the left paddle to downshift. The current gear will be displayed on the instrument cluster.

PERMANENT TAP MODE

- ▶ Press the M (Manual) button on top of the shift lever to enable the Manual mode. Use the paddles to manually shift the transmission.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.

See Driving and Operating in your Owner's Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center console. The  Traction Control Off light will illuminate on the instrument cluster.
- ▶ Press the button again to turn on traction control.



See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL SYSTEM

The Driver Mode Control System automatically adjusts steering, automatic transmission and Magnetic Ride Control (if equipped) settings in real time.

- ▶ Press the **MODE** button on the center console to select the Tour (default at each ignition cycle), Sport, Snow/Ice, or Track  mode.

See Driving and Operating in your Owner's Manual.

AUTOMATIC PARKING ASSIST◆

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces while you follow commands and control the gear selection, acceleration and braking.

1. Press the **Parking Assist** button on the right side of the infotainment touch screen. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button during the search process.
3. The system searches for parking spaces to the right of the vehicle. To search for a parking space to the left, touch the Select Side screen button.
4. Once a space is found, shift the vehicle into Reverse or Drive as directed.
5. Follow the commands on the infotainment screen and apply the accelerator or brake as needed. The steering wheel will briefly vibrate as a reminder to remove your hands.
6. Parking Complete is displayed and a beep sounds when the parking maneuver is complete.



See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the **(P) Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive away.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The **(!) Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar Roadside Assistance: If you have a current OnStar Safety & Security plan, push the blue OnStar button or red Emergency button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit **onstar.com** or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

MYCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CADILLAC ONLINE OWNER CENTER

Create an account at **my.cadillac.com** to access an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 by General Motors. All rights reserved.

