

2019



XT4 Convenience & Personalization Guide


cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac XT4. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

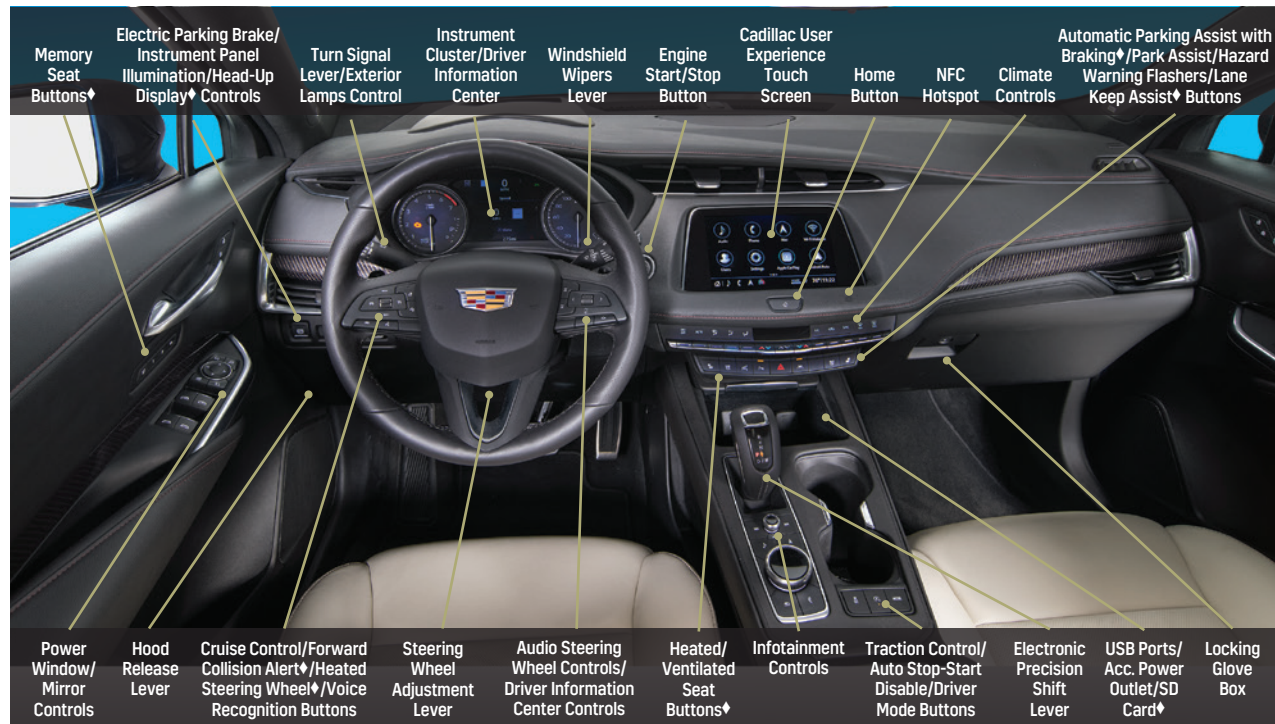

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.

Press and hold for 1 second to fold the power mirrors♦.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Press and hold for 1 second to unfold the power mirrors♦.

Press and hold to open all windows. To enable operation, go to Settings > Vehicle > Remote Lock, Unlock, Start > Remote Window Operation.



Remote Start

Press and release the  Lock button and then immediately press and hold the  button to start the engine.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold for 3 seconds to activate the alarm.

Press again to cancel the alarm.



Power Liftgate

Press twice to open or close the power liftgate.

Press once to stop power operation♦.

Door/Glove Box Key

Press the button (A) on the side of the transmitter to pull out the door/glove box key. Refer to your Owner's Manual for instructions to remove the key cylinder cap on the driver's door handle.

Note: To change the Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the liftgate.



Note: To change the Keyless Unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the Keyless Locking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the RKE transmitter battery is weak, place the transmitter in the forward cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

A fuel-saving stop/start system has been integrated with the 2.0L Turbo engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button on the center console when the engine is running to turn off the stop/start system. The button indicator is not illuminated when the system is off.

The system automatically turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on top of the shift lever. The selected gear position illuminates in red on the shift lever. The shift lever always starts in the center position and, after shifting, returns to the center position.



Park – Press the button (A) on top of the lever to shift into Park.

Reverse – Press and hold the shift lock button (B) on the side of the lever and move the lever forward completely (past the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for more than 5 minutes. It may automatically shift into Park. See Automated Car Wash Mode.

Drive – Move the lever rearward to shift into Drive. If the vehicle is in Park, press and hold the shift lock button (B) while moving the lever rearward.

TAP SHIFT MODE

- ▶ With the transmission in Drive, pull back on the lever to activate Manual Mode. Press the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull back on the lever again to return to Drive.

AUTOMATED CAR WASH MODE

There are different procedures for placing the transmission in Neutral with the engine on or off and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

◆ Optional equipment

DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the steering, chassis controls, and powertrain tuning in real time.

ALL-WHEEL DRIVE (AWD) OPERATION◆

On all-wheel drive models, the vehicle can operate in front-wheel drive or all-wheel drive.

- ▶ Press the **MODE** button on the center console to select Tour (front-wheel drive), AWD, or Sport mode.



If the vehicle is turned off while in Sport mode, the vehicle defaults to Tour mode the next time the vehicle is started.

FRONT-WHEEL DRIVE (FWD) OPERATION

- ▶ Press the **MODE** button on the center console to select Tour, Snow/Ice, or Sport mode.

The vehicle defaults to Tour mode each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ ADAPTIVE CRUISE CONTROL-ADVANCED

 **On/Off**

SET- Set Speed

With Cruise Control on, rotate the thumbwheel down to set a speed.

RES+ Resume Speed

With Cruise Control on, rotate the thumbwheel up to resume the set speed.

Adjust Speed

With a cruise speed set, rotate the thumbwheel up or down to the first detent to increase or decrease the set speed by 1-mph increments; rotate to the second detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between Cruise Control and Adaptive Cruise Control-Advanced.

Follow Distance Gap (Adaptive Cruise Control-Advanced)

Press to select a gap setting of Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.



B. HEATED STEERING WHEEL

 **On/Off**

See Instruments and Controls in your Owner's Manual.

C. VOICE RECOGNITION

 **Push to Talk**

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

 **End Call/Mute**

Press to end/decline a call or mute/unmute the audio system.

See your Cadillac User Experience Manual.



D. AUDIO CONTROLS

 **Volume**

Press  or  to increase or decrease the volume.

 **Next/Previous**

Press  or  to go to the next or previous favorite radio station or track.

See your Cadillac User Experience Manual.

E. DRIVER INFORMATION CENTER CONTROLS

 **Left/Right**

Press the  or  to move between the display zones. Press the  to exit a display menu.

 **Up/Down**

Rotate the thumbwheel up or down to move through the menus.

 **Select**

Press the  thumbwheel to open a menu, or to select or reset an item.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information.

DIC MENUS

Use the controls on the right side of the steering wheel to view the DIC menus.

Info – display trip and fuel information

Audio – browse music and change the audio source

Navigation ♦ – view active route and change prompts

Phone – view active call and scroll through contacts

Options – change display information

SELECT INFO PAGES

1. Use the controls to open the Options menu.
2. Scroll to Info Pages. Press the > button to enter the menu.
3. Use the thumbwheel to scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display on the Info menu.



See Instruments and Controls in your Owner's Manual.

MULTI-COLOR HEAD-UP DISPLAY ♦



The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation ♦ maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

Brightness

Lift up or press down to brighten or dim the display. Hold down to turn off the display.

ROTATION OPTION

- To adjust the angle of the HUD, use the DIC controls to view Options > Head-Up Display and select Adjust Rotation. Rotate the DIC thumbwheel up or down to adjust the angle. Select OK to save the setting.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Your XT4 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen or use the rotary infotainment controller and buttons to access an item. You can use simple gestures on the touch screen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone, USB flash drive or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.



Applications:
Touch a screen icon to access an application

Applications Tray:
Shortcuts to applications



Additional Pages:
Swipe to view additional pages of applications (if available)



Seek:
Press to seek the previous or next radio station or track

Volume:
Rotate to adjust the volume

Audio menu

Return to previous menu

Phone menu or Home page

Controller:
Rotate to move left/right or up/down on the screen/ Press to select an item

Navigation menu or Phone menu

See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

SETTING THE TIME

1. Touch Settings on the Home page, and then touch System.
2. Touch Time/Date.
3. Touch Set Time.
4. Touch  or  to adjust the hours, minutes, and AM or PM.
5. Touch  to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Display the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite item.



APPS[♦]

Connected apps linking to music, news, weather, travel information, sports, entertainment and more are available for download to the infotainment system through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot. For more information, visit my.cadillac.com/learn.

PORTABLE AUDIO DEVICES

USB A and USB C ports for data and charging and an accessory power outlet are located in the forward center console storage compartment.

- ▶ Connect an iPod[®], iPhone[®], MP3 player, a USB flash drive or a USB mass storage device to a USB port.
- ▶ Touch Audio, and then touch More and select the USB device. Search for music on-screen or by voice commands.

2 charge-only USB ports are located on the rear of the center console for the convenience of rear seat passengers.



See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smart-phone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO

Android Auto capability is available through a compatible smart-phone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

VOICE RECOGNITION

Control the music source and navigation♦ destination, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The system will play a prompt followed by a beep.
3. After the beep, say what you want it to do.
 - Example hands-free calling command: "Call Amanda" or "Dial 555-1212"
 - Example connected music device search command: "Play artist [name]" or "Play song [name]"
 - Example radio control command: "Tune FM 104.3"
 - Help: Say "Help" for voice recognition assistance.



BLUETOOTH SPEECH RECOGNITION

Bluetooth Speech Recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri® Eyes Free or Voice Command.

- To activate Bluetooth Speech Recognition, press and hold the  **Push to Talk** steering wheel button.

See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE USING VOICE/INFOTAINMENT SCREEN

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phones > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

NFC PAIRING

1. To use Near Field Communication (NFC) smartphone pairing, hold your NFC-compatible smartphone up to the NFC icon near the Home button on the instrument panel. Check your smartphone owner's information for NFC compatibility.
2. After pairing is initiated, confirm that the codes that appear on the infotainment screen and the phone match each other.
3. When pairing is complete, a chime will sound.



BLUETOOTH® SYSTEM

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, go to Settings > System > Phones and select the Information icon by the phone name.

See your Cadillac User Experience Manual.

WIRELESS CHARGING◆

The wireless charging system for smartphones is located under the center console armrest. To check smartphone compatibility, visit my.cadillac.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the smartphone face up on the symbol on the pad. Adjust the holder at the back of the pad to align the smartphone for charging.
4. The battery charging symbol will display on the infotainment screen. If not charging, remove the smartphone for 3 seconds, and rotate it 180 degrees. Readjust the holder to align the smartphone if needed.



VEHICLE PERSONALIZATION

Many vehicle features can be customized using the Settings menus on the infotainment system. The Settings menus may include System, Apps, and Vehicle.

1. Touch **Settings** on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch <Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

ULTRAVIEW SUNROOF

OPEN/CLOSE THE SUNSHADE

- Press the rear or front of the  **Sunshade** switch to open or close the sunshade.



OPEN/CLOSE THE SUNROOF

- Press the rear of the  **Sunroof** switch to vent the sunroof. Press the switch again to express-open the sunroof.
- Press the front of the  **Sunroof** switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.


UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or select Climate on the Home page of the infotainment system.

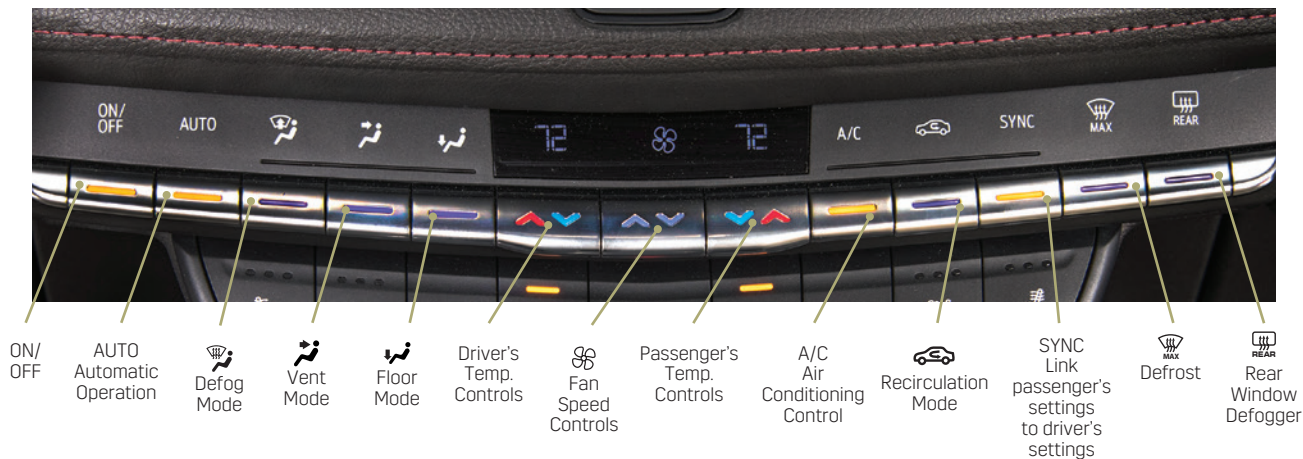

AUTOMATIC OPERATION

- Press AUTO. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If a function is manually adjusted, the auto indicator turns off and automatic operation for that function is disabled. Functions that have not been adjusted remain in auto mode.

SYNC TEMPERATURE SETTINGS

- Press SYNC to link all climate zone settings to the driver's settings.

CABIN AIR IONIZER♦

The ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system. The ionizer status is shown on the climate control display on the infotainment screen.

- To turn on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

SEAT FEATURES

SET FRONT SEAT MEMORY POSITIONS

With the ignition on or in Accessory mode:

1. Adjust the driver's seat, power steering column and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- To store seat and power steering column positions for more clearance when exiting the vehicle, repeat the steps using the **Exit** button.



RECALL FRONT SEAT MEMORY POSITIONS

- Press and hold button **1** or **2** or **Exit** until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- To set the automatic recall options, go to Settings > Vehicle > Seating Position > Set Entry Memory and Set Exit Memory.

FRONT SEATS MASSAGE

- With the ignition on, press the **Massage** button (A) on the side of the seat to select the massage setting.
- Use the Feature Select knob (B) to display seat adjustment features on the infotainment screen and adjust the massage type and intensity.



AUTOMATIC HEATED/VENTILATED FRONT SEATS

Anytime the vehicle is on, the heated or ventilated front seats will automatically activate based on the vehicle's interior temperature. The seat button indicators will illuminate when the heated or ventilated seats are on. You may manually turn off the heated or ventilated seats using the heated or ventilated seat control.

- To turn the automatic heated or ventilated front seats feature on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats or Auto Cooled Seats.

FOLDING THE REAR SEATBACK

1. Press the button (A) on the side of the head restraint. It will fold rearward automatically.
2. Pull the lever (B) on top of the seatback and fold the seatback forward.



See Seats and Restraints in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the control to activate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **IntelliBeam System♦**

With the lamp control in the AUTO or  Headlamps position, press the button on the end of the lever to turn the automatic high-beam system on or off.

A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

♦ Optional equipment

WINDSHIELD WIPERS



Move the lever up or down to activate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes/AUTO Rainsense™ Sensitivity♦

Rotate the band up for more frequent wipes or down for less frequent wipes. To turn Rainsense♦ on/off, go to Settings > Vehicle > Comfort and Convenience > Rainsense Wipers.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to spray washer fluid on the windshield.

REAR WIPER

 **REAR OFF-INT-ON**

Turn the end of the lever to activate the rear wiper.

 **Rear Washer Fluid**

Push the lever to spray washer fluid on the rear window and the rear camera lens♦, if equipped.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT♦ – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards.

- ▶ Audible alerts may be selected instead of seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT♦ – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING♦ – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ Press the  **Lane Keep Assist** button (A) on the center of the instrument panel to turn the system on or off.

FORWARD COLLISION ALERT♦ – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control-Advanced♦ Follow Distance Gap setting.

FORWARD/REVERSE AUTOMATIC BRAKING♦ – In potential front- and rear-end imminent collision situations with vehicles directly ahead or behind, and with some objects behind your vehicle, the brakes may be applied, if you have not already done so, to help reduce the collision's severity or help avoid collisions at very low speeds.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ Press the  **Park Assist** button on the center of the instrument panel to turn Reverse Automatic Braking and Park Assist on or off.

FRONT PEDESTRIAN BRAKING♦ – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle, if you have not already done so.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

FOLLOWING DISTANCE INDICATOR♦ – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center (DIC). If no vehicle is detected ahead, dashes are displayed. To display the Following Distance Indicator, go to Options > Info Pages on the DIC.

FRONT♦ AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the **P** **Park Assist** button (B) on the center of the instrument panel to turn the system on or off.

REAR CROSS TRAFFIC ALERT♦ – When in Reverse, the system warns of cross traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/ Detection Systems > Rear Cross Traffic Alert.

REAR VISION CAMERA – When the vehicle is in Reverse below 8 mph, a view of the area behind the vehicle displays on the infotainment screen.

SURROUND VISION♦ – The Surround Vision system displays the area surrounding the vehicle along with rear or front camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph. Camera view buttons are at the bottom of the screen.

See Driving and Operating in your Owner's Manual.

AUTOMATIC PARKING ASSIST WITH BRAKING♦

The Automatic Parking Assist with Braking system steers the vehicle and applies the brakes at idle speed to help you park the vehicle while you follow commands and control the gear selection.

1. While in Drive, press the **P** **Parking Assist** button (C) on the center of the instrument panel. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button. To search for a parking space to the right or left, touch the Parking Side screen button.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.



See Driving and Operating in your Owner's Manual.

TRACTION CONTROL

The traction control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control** button on the center console to turn traction control off or on again. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the  **Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the  switch.

Note: The parking brake will automatically release if the vehicle is running, placed into gear, and an attempt is made to drive away.

See Driving and Operating in your Owner's Manual.



REAR CAMERA MIRROR

The rear camera mirror provides a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, tilt or zoom feature.

C. + / -

Press and release either button to adjust the selected feature.

See Keys, Doors and Windows in your Owner's Manual.



TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

Refer to your Owner's Manual for information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

POWER LIFTGATE◆

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the Power Liftgate knob on the driver's door.
- ▶ Press the touchpad under the liftgate handle to open the liftgate.
- ▶ Press the button next to the pull handle to close the liftgate.

PROGRAMMING THE LIFTGATE HEIGHT


1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the pull handle for 3 seconds. The turn signals flash and a beep sounds when the setting is saved.



HANDS-FREE OPERATION◆

To open or close the liftgate hands-free, stand facing the vehicle behind the left rear wheel. Kick your foot straight under the left corner of the rear bumper (A).

The RKE transmitter must be within 3 feet of the liftgate.

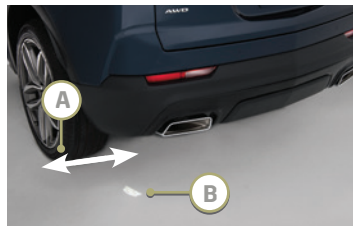

PROJECTED LOGO◆

The vehicle logo is projected on the ground (B) near the rear bumper, indicating the kicking motion location for hands-free operation, when an RKE transmitter is detected within 6 feet of the liftgate. The logo is shown for 1 minute, depending on operating conditions.

See Keys, Doors and Windows in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue OnStar button or red Emergency button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CADILLAC ONLINE OWNER CENTER

Create an account at **my.cadillac.com** to access personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 by General Motors. All rights reserved.

