

2019



XT5 Convenience & Personalization Guide

 
cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac XT5. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

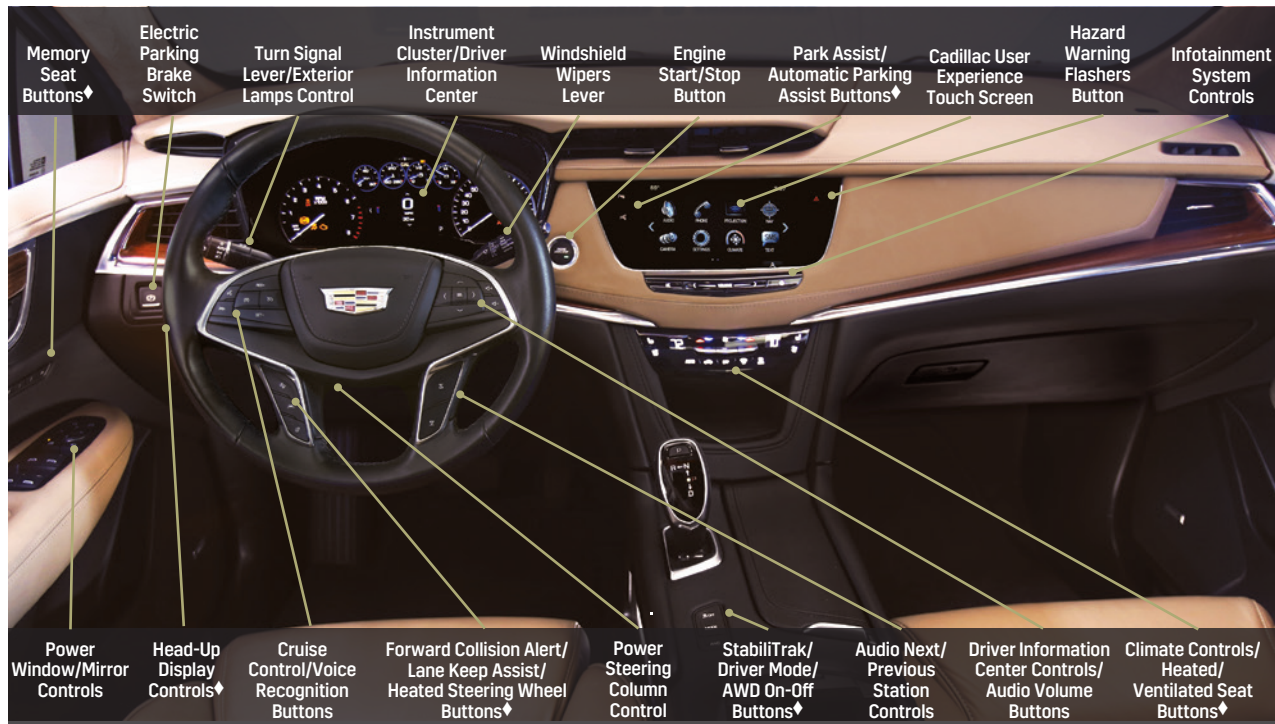

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.

Press and hold for 1 second to fold the power mirrors.



Unlock

Press to unlock the driver's door only or all doors.

Press and hold for 1 second to unfold the power mirrors.

Press and hold to open all windows.



Remote Start

Press and release the **Lock** button and then immediately press and hold the button to start the engine.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold for 3 seconds to activate the alarm. Press it again to cancel the alarm.



Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

Door Key

Press the button on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door.

Note: To change the Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad under the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the Keyless Locking and Unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the pocket in the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

A fuel-saving stop/start system is integrated with the engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.



The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time is greater than 2 minutes.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT



The automatic transmission shift pattern is displayed on top of the shift lever. The selected gear position illuminates in red on the shift lever. The shift lever always starts in the center position, represented by a dot on the shift pattern. After shifting, it returns to the center position.

Park – Press the button (A) on top of the lever to shift into Park. To shift out of Park, with the ignition on and the brake pedal applied, press and hold the shift lock button (B) on the left side of the lever and select the desired gear.

Reverse – Press and hold the shift lock button (B) on the side of the lever and move the lever forward and then left to shift into Reverse.

Neutral – Move the lever forward to shift into Neutral.

Note: The transmission will not stay in Neutral for an extended period. It will automatically shift into Park. See Automated Car Wash Mode.

Drive – Move the lever rearward to shift into Drive.

Tap Shift Mode – With the transmission in Drive, pull back on the lever to activate Manual Mode. Press the left steering wheel paddle to downshift and the right paddle to upshift. Pull back on the lever again to return to Drive.

See Driving and Operating in your Owner's Manual.

◆ Optional equipment

AUTOMATED CAR WASH MODE

To place the transmission in Neutral with the engine running for an extended period of time:

1. While pressing the brake pedal, open the driver's door and then shift to N (Neutral). If the door is opened after shifting to Neutral, the transmission may shift to Park.
2. The indicator should show N. If it does not, select Neutral again.
3. Upon returning to the vehicle, shift into Park.

See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL ◆

Driver Mode Control automatically adjusts the steering, suspension, and powertrain tuning in real time.

- ▶ Press the **MODE** button on the center console to select the Tour, Sport, Snow/Ice (front-wheel drive models only), or AWD (all-wheel drive) mode.

The AWD indicator below the Mode button will illuminate when the **Sport** or **AWD** mode is selected.



See Driving and Operating in your Owner's Manual.

STEERING WHEEL CONTROLS

A. VOICE RECOGNITION

Push to Talk

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or Cadillac User Experience system.

End Call/Mute

Press to end/decline a call or mute/unmute the audio system.

See your Cadillac User Experience Manual.

B. CRUISE CONTROL/ ADAPTIVE CRUISE CONTROL

On/Off

SET– Set Speed

 
With Cruise Control on, press the **SET–** button to set the cruise speed.

RES+ Resume Speed

With Cruise Control on, press the **RES+** button to resume the previous set speed.

Adjust Speed

With a cruise speed set, press the **RES+** or **SET–** button to the first detent to increase or decrease the set speed by 1-mph increments; press to the second detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

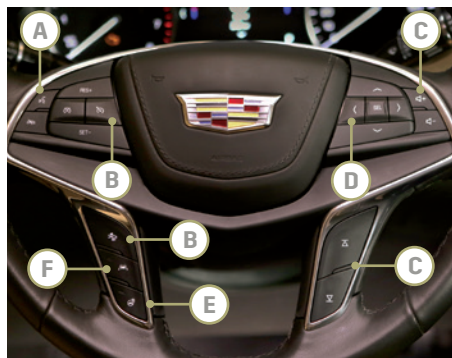

Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between regular Cruise Control and Adaptive Cruise Control.

When Adaptive Cruise Control is active, a green  indicator illuminates and the following gap is displayed.

Follow Distance Gap (Adaptive Cruise Control)

Press to select a gap setting (the time between your vehicle and a vehicle detected directly ahead) of Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.

C. AUDIO CONTROLS

Volume

Press  or  to adjust the volume.

Next/Previous

Press  or  to go to the next or previous favorite radio station or track.

See your Cadillac User Experience Manual.

D. DRIVER INFORMATION CENTER CONTROLS

Left/Right

Press to move between the display zones.

Up/Down

Press to scroll up or down through a menu.

SEL Select

Press to select a highlighted menu item.

E. HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner's Manual.

F. LANE KEEP ASSIST

On/Off

Press to turn Lane Keep Assist on or off.

See Driving and Operating in your Owner's Manual.

INSTRUMENT CLUSTER

CLUSTER DISPLAYS

Use the controls on the right side of the steering wheel to move through the different cluster display zones.

- ▶ Press the < or > button to move between the display zones. Press the < button to exit a display menu.
- ▶ Press the ^ or v button to move through the menus.
- ▶ Press the **SEL** (Select) button to open a menu or select a setting.



RECONFIGURABLE INSTRUMENT CLUSTER♦

The uplevel cluster display layout can be changed.

1. Use the controls to view the Settings menu in one of the display zones on the cluster. Press **SEL** (Select).
2. Scroll to highlight Display Themes. Press the > button to view the themes.
3. Use the controls to highlight the Technology or Standard display configuration. Press **SEL**.
4. Press the < button to exit the menu.

See Instruments and Controls in your Owner's Manual.



Technology Theme



Standard Theme

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information.



Uplevel DIC ♦ shown

DIC MENUS

Use the DIC controls on the steering wheel to view the menus:

-  **Info** – display trip and fuel information
-  **Audio** – browse music and change the audio source
-  **Phone** – view active call and scroll through contacts
-  **Navigation** – view active route and change prompts
-  **Settings** – change display information

INFO PAGES

1. Use the DIC controls on the steering wheel to view the Settings menu in one of the display zones on the cluster. Press the **SEL** (Select) button.
2. Scroll to Info Pages. Press the **>** button to view the pages.
3. Scroll through the list of possible info items.
4. Press the **SEL** button to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY ♦

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed.



The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.
Hold down to turn off the display.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Your XT5 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access an item. You can use simple gestures on the touch screen just as you would on a tablet, such as tap, drag, pinch and spread, to interact with the system. Link a smartphone, cell phone, USB flash drive or portable audio player/iPod® to the infotainment display using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.



Applications:
Touch a screen icon to access an application

Power/Mute:
Press and hold to turn system On/Off; press to mute audio

VOLUME
Touch the arrows or press momentarily and then swipe your finger to adjust the volume

Home Page

Interaction Selector:
Touch to display the favorite screen buttons

Additional Pages:
Touch to view additional pages of applications

See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

SETTING THE TIME

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch **< Back** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING STATION FAVORITES

Mixed-audio favorites, including all radio station bands (AM, FM and SiriusXM[®]), navigation, applications, and contacts, can be stored in any order.

1. Display the desired radio station, navigation destination or contact.
2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button.
4. Repeat the steps to store another favorite item.

CADILLAC APPS

In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the APPS icon on the Home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot. For more information, visit my.cadillac.com/learn.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free (after pairing your Bluetooth-enabled phone), using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
 2. The radio will play a prompt followed by a beep.
 3. After the beep, say what you want it to do.
- **Phone (using your paired phone)** – Example command: “Call Amanda” or “Call 555-1212”
 - **Media Music Device Search (when connected to USB only)** – Example command: “Play artist [name]” or “Play song [name]”
 - **Radio control** – Example command: “Tune FM 104.3”
 - **Help** – Say “Help” for voice recognition assistance.

BLUETOOTH SPEECH RECOGNITION

Bluetooth Speech Recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri[®] Eyes Free or Voice Command.

- ▶ To activate Bluetooth Speech Recognition, press and hold the  **Push to Talk** steering wheel button.

TEXT MESSAGE ALERTS

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the touch screen only when the vehicle is not moving.

- ▶ Touch  **Text Inbox** to view the text message inbox.
- ▶ Touch the  speaker icon to listen to a message.

See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

APPLE CARPLAY™

Apple CarPlay capability is available through a compatible smartphone using the Projection icon on the home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
2. The Projection icon will change to Apple CarPlay. Apple CarPlay may launch automatically upon USB connection. If not, touch the Apple CarPlay icon.

For more information, visit my.cadillac.com/learn.

ANDROID AUTO™

Android Auto capability is available through a compatible smartphone using the Projection icon on the home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Projection icon will change to Android Auto. Android Auto may launch automatically upon USB connection. If not, touch the Android Auto icon.

For more information, visit my.cadillac.com/learn.

◆ Optional equipment



PORTABLE AUDIO DEVICES

Several USB ports and auxiliary input jacks are located in the vehicle. Use the USB ports in the center console to connect mobile devices.

- ▶ Connect an iPod®, iPhone®, MP3 player, or a USB flash drive to a USB data port or auxiliary input jack.
- ▶ From the Audio screen, touch  **Media** until the connected device is shown. Search for music on-screen or by voice commands.



VALET MODE

- ▶ To lock/unlock the Cadillac User Experience screen and the glove box, go to Settings > Valet Mode and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair Phone."
To use the infotainment screen, select Phone > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Cadillac User Experience Manual.

VEHICLE PERSONALIZATION

Many vehicle features can be customized using the Settings menus on the Cadillac User Experience system. The Settings menus may include Time and Date, Language, Valet Mode, Radio, Vehicle, Bluetooth, Voice, Display, Rear Camera, Return to Factory Settings and others.

1. Touch Settings on the Home page.
2. Touch the desired menu item.
3. Touch the desired feature and setting.
5. Touch  **Back** to exit each menu.

See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's built-in Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet using the 4G LTE signal.

- To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks.

Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

WIRELESS CHARGING

The wireless charging pocket for charging smartphones is located in front of the center console armrest. To check smartphone compatibility, visit my.cadillac.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the smartphone face up in the pocket.
4. The battery charging symbol will display on the infotainment screen when charging. If not charging, remove the smartphone for 3 seconds and rotate it 180 degrees.

 


See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

FRONT CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or the touch screen.

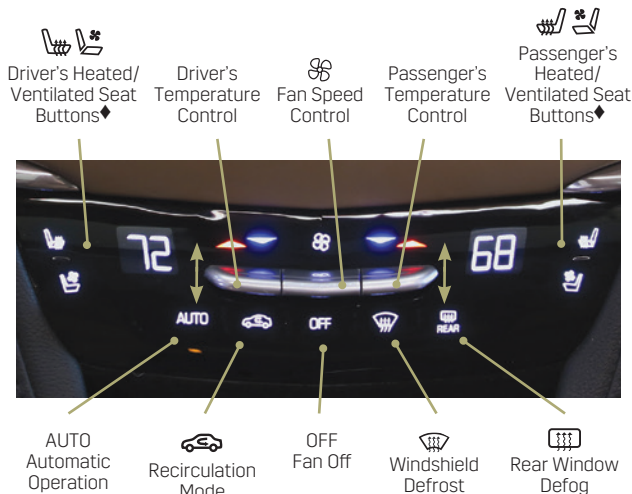

AUTOMATIC OPERATION

- Press **AUTO**. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If the functions are manually adjusted, full automatic operation is turned off.

SYNC TEMPERATURE SETTINGS

- Touch **Climate Controls**, and then **SYNC**, on the touch screen to link all climate zone settings to the driver's settings.

 
REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the touch screen.

- Touch the **Rear Climate Controls** screen button on the touch screen and then touch **Rear Control Lockout** to lock/unlock the rear seat controls.



EXTERIOR LIGHTING

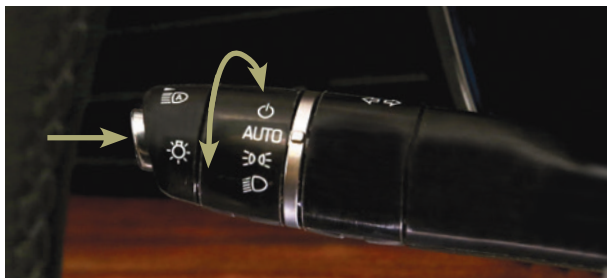

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **IntelliBeam System♦**

Press the button on the end of the lever with the lamp control in the AUTO or  Headlamps position to turn the automatic high-beam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS



HI Fast Wipes

LO Slow Wipes

INT or AUTO Rainsense™ Sensitivity♦

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

REAR WIPER AND WASHER

 **REAR OFF-INT-ON**

Turn the end of the lever to activate the rear wiper.

 **Rear Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window and rear camera lens.♦

See Instruments and Controls in your Owner's Manual.

MEMORY SEATS ♦

SET MEMORY POSITIONS

With the ignition on or in Accessory mode:

1. Adjust the seat, power steering column and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound.

Repeat these steps using button **2** for a second driver.



- ▶ To store seat and power steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 and then press and hold the  **Exit** button until two beeps sound.

RECALL POSITIONS

- ▶ Press and hold button **1**, **2** or  **Exit** until the seat, mirrors and power steering column reach the set position.

The memory/exit positions can be programmed to be recalled automatically.

- ▶ To set the Auto Memory Recall or Easy Exit options, go to the Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

REAR SEAT ADJUSTMENT

- ▶ To slide the rear seat forward or rearward, lift the bar (A) under the seat cushion and slide the seat.



RECLINING THE SEATBACK

- ▶ To recline the seatback, pull the lever (B) on top of the seatback and move the seatback to the desired position. Release the lever.



FOLDING THE SEATBACK

1. Press the button (C) on the side of the head restraint. It will fold rearward automatically.
2. Pull the lever (B) on top of the seatback and fold the seatback forward or pull the lever (D) located on either side of the rear cargo area.



See Seats and Restraints in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

 
Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

Safety Alert Seat ♦ – The driver's seat pulses (left side, right side, or simultaneously) to alert you of the direction of potential hazards.

- ▶ Audible alerts may be selected instead of seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Forward Collision Alert ♦ – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button (A) on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control♦ Follow Distance Gap setting.

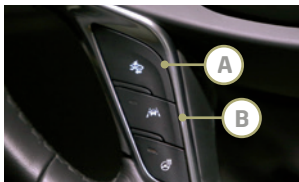

Front Pedestrian Braking♦

– During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle, if you have not already done so.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

Lane Keep Assist with Lane Departure Warning ♦ – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected), on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ Press the  **Lane Keep Assist** button (B) on the steering wheel to turn the system on or off.

Lane Change Alert with Side Blind Zone Alert ♦ – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Forward/Reverse Automatic Braking ♦ – In potential front- and rear-end imminent collision situations with vehicles directly ahead or behind, and with some objects behind your vehicle, the brakes may be applied, if you have not already done so, to help reduce the collision's severity or help avoid collisions at very low speeds.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ To turn Reverse Automatic Braking, Park Assist, and Rear Cross Traffic Alert on or off, press the  **Park Assist** button on the left side of the infotainment screen.

DRIVER ASSISTANCE SYSTEMS

Front♦ and Rear Park Assist – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

Rear Cross Traffic Alert♦ – When the vehicle is in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the Park Assist and Rear Cross Traffic Alert systems on or off, press the **P**  **Park Assist** button (A) on the left side of the infotainment screen.



Front♦ and Rear Vision Camera

– When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. After shifting from Reverse to Drive, a view of the area in front of the vehicle displays. Vehicle speed must be below 5 mph.

- ▶ Touch  **Camera** (B) on the infotainment screen to activate the front camera when the vehicle is in Drive.

Surround Vision♦ – The Surround Vision system displays a rear or front camera view along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

See Driving and Operating in your Owner's Manual.

TRACTION CONTROL/ STABILITRAK® SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak OFF** button on the center console to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

AUTOMATIC PARKING ASSIST♦

Automatic Parking Assist steers the vehicle to help you park in parallel or perpendicular spaces while you follow commands and control the gear selection, acceleration and braking. The system is available when vehicle speed is below 18 mph.

 
1. Press the **P**  **Automatic Parking Assist** button on the left side of the infotainment screen. A parking assist display is shown on the Driver Information Center (DIC). The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, press and hold the **P**  button during the search process.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed, follow the commands on the DIC and apply the accelerator or brake as needed. The steering wheel will briefly vibrate as a reminder to remove your hands. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the **Power Liftgate** knob on the driver's door.
- ▶ Press the touchpad (A) under the liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the pull handle to close the liftgate.

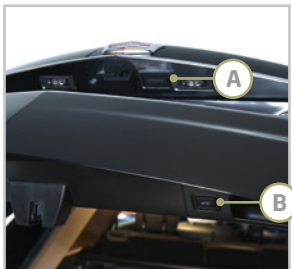

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the pull handle (B) for 3 seconds. The turn signals flash and a beep sounds when the setting is saved.



HANDS-FREE OPERATION◆

- ▶ To open or close the liftgate hands-free, kick your foot straight in and out under the left corner of the rear bumper. Do not swing your foot side-to-side.

The RKE transmitter must be within 3 feet of the liftgate.

See Keys, Doors and Windows in your Owner's Manual.

CARGO MANAGEMENT SYSTEM◆

The cargo management system features a rail system and cargo fence that divides the cargo area for smaller items.

ADJUST THE FENCE POSITION

1. Turn each knob on the fence posts to align the  Unlock symbol with the button arrow.
2. Slide the fence to the desired position along each rail until it clicks into place.
3. Turn each knob to the  Lock position.



REMOVE THE FENCE

 
1. Turn each knob on the fence posts to align the  Unlock symbol with the button arrow.
2. Press the buttons on the rail sliders and pull up the fence posts to remove the fence. Store the fence under the cargo floor at the front of the compartment. Secure it with the straps.
3. Move the rail sliders to an open slot on the rail to remove the sliders. Store the sliders under the cargo floor.



See Storage in your Owner's Manual.

REAR CAMERA MIRROR◆

The rear camera mirror provides a wide angle camera view of the area behind the vehicle.

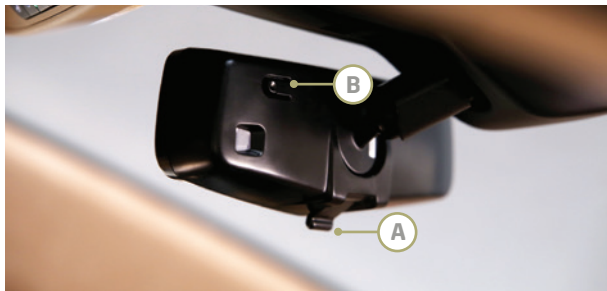

- Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off.
- To adjust the brightness of the display, press and release the button (B) on the top back of the mirror without covering the light sensor. There are 5 brightness settings.

See Keys, Doors and Windows in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM◆

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

◆ Optional equipment

ELECTRIC PARKING BRAKE

- To apply the parking brake, press the **(P) Parking Brake** switch on the left side of the instrument panel.
- To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The **(!) Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

Refer to your Owner's Manual for information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar service plan, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

MYCADILLAC AND XT5 OWNER GUIDE APPS

The myCadillac app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, OnStar Vehicle Diagnostic information, Roadside Assistance and more. The app also enables you to send remote commands, manage your Wi-Fi hotspot and data, and send destinations to the navigation system (vehicles must be properly equipped).

The XT5 Owner Guide app covers the operation of many of the features on your XT5, such as setting driver preferences, using the infotainment system and understanding how various safety systems work. It also provides access to many online resources and Cadillac's comprehensive owner benefits.

Visit my.cadillac.com/learn for more information. Download the mobile apps from your compatible mobile device's app store.



CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com for access to an online Owner's Manual, helpful how-to videos, your service history and warranty status, OnStar reports (active OnStar account required), and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 by General Motors. All rights reserved.

