

2019



XTS Convenience & Personalization Guide


cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac XTS. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

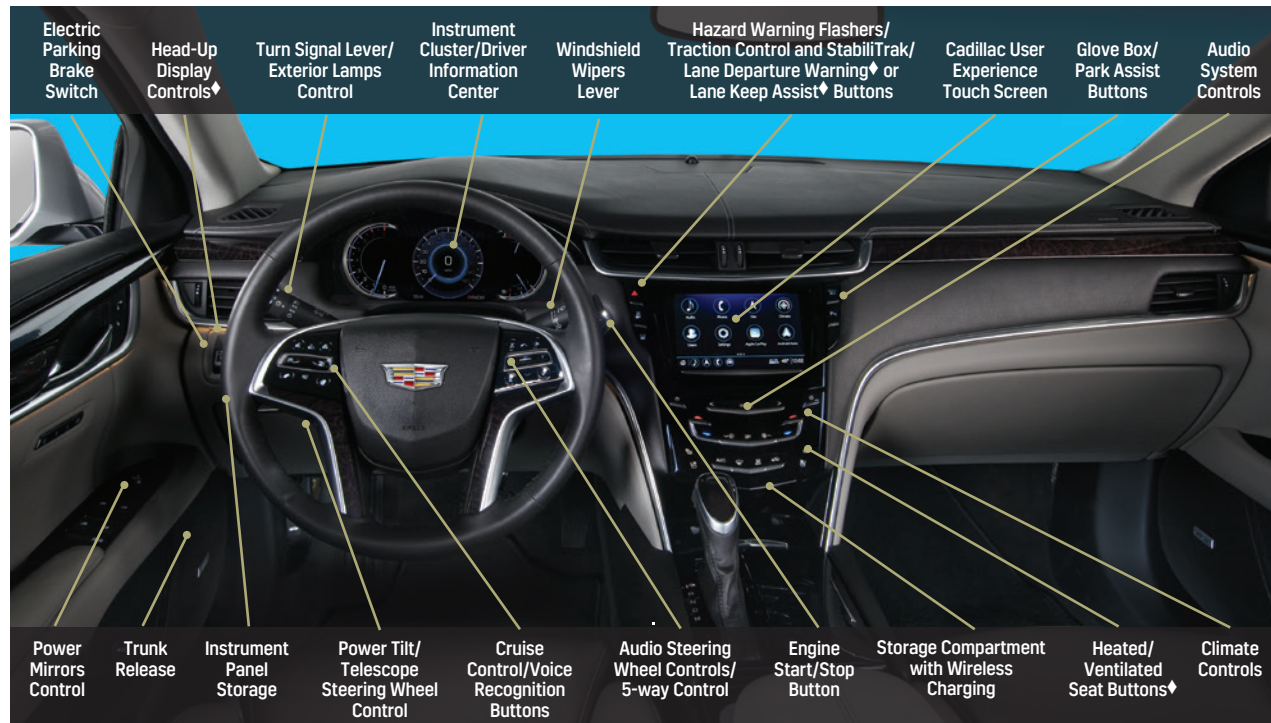

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors.

Press and hold to lower all windows.

Note: To change the remote lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 4.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the  button is pressed again or the vehicle is started.



Trunk Release

Press twice to open the trunk.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from your pocket or purse. The transmitter must be within 3 feet of the door to be unlocked or within 3 feet of the trunk.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the Cadillac emblem to open the trunk.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.


See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

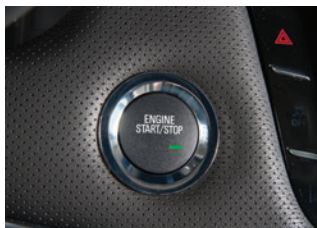

Note: If the transmitter battery is weak, place the transmitter in the depression below the accessory power outlet in the center console lower storage area to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof[†] until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

ADAPTIVE REMOTE START

STARTING THE VEHICLE

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 15 minutes. Repeat these steps for a 15-minute time extension. Remote start can be extended only once.

3. Before driving, press the brake pedal and then press the **ENGINE START/STOP** button to turn on all vehicle controls.

CANCELING A REMOTE START

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

CLIMATE CONTROL OPERATION

During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

HEATED SEATS/STEERING WHEEL AND VENTILATED SEATS OPERATION

If the remote start heated seat and steering wheel option or ventilated seat option is selected in the Vehicle Settings, the heated seats and steering wheel or ventilated seats will be activated during a remote start. The button indicators do not illuminate and the temperature performance of the unoccupied seat may be reduced during the remote start. The heated seats/steering wheel or ventilated seats turn off when the vehicle is turned on. Turn on/off the heated or ventilated seats using the seat controls. Turn on/off the heated steering wheel using the steering wheel control.

See Keys, Doors and Windows in your Owner's Manual.

STEERING WHEEL CONTROLS

CRUISE CONTROL/ADAPTIVE CRUISE CONTROL♦

 **On/Off**

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel Cruise Control without erasing the set speed from memory. Press and hold to switch between regular Cruise Control and Adaptive Cruise Control♦.

Following Gap (Adaptive Cruise Control♦ and Forward Collision Alert♦)

Press to select a gap setting (the time between your vehicle and a vehicle detected directly ahead) of Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.

HEATED STEERING WHEEL♦

 **On/Off**

See Instruments and Controls in your Owner's Manual.

♦ Optional equipment



VOICE RECOGNITION

 **Push to Talk**

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

 **End Call/Mute**

Press to end/decline a call or mute/unmute the audio system.

See your Cadillac User Experience Manual.

DRIVER INFORMATION CENTER CONTROL

The 5-way control moves left/right, up/down, and in.

 **Left/Right**

Press to view the left or right cluster display. Press the < to exit a display menu.

 **Up/Down**

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner's Manual.

AUDIO CONTROLS

 **Volume**

Press  or  to increase or decrease the volume.

 **Next/Previous**

Press  or  to select the next or previous favorite station or track.

See your Cadillac User Experience Manual.



INSTRUMENT CLUSTER



Uplevel reconfigurable cluster shown

CLUSTER DISPLAY ZONES



Use the 5-way control on the right side of the steering wheel to move between the different display zones and scroll through the various displays in each cluster configuration.

UPLEVEL CLUSTER CONFIGURATIONS♦

If equipped with the 12.3-inch reconfigurable cluster, an alternative cluster display can be selected. V-Sport models also feature an available V-Sport-specific configuration.

1. Use the 5-way control on the steering wheel to view the Options page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Options menu.
3. Scroll  down to highlight Display Layout; press **SEL**.
4. Scroll  up or  down to highlight the desired display; press **SEL**.
5. Press  to exit the menu.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER



Uplevel reconfigurable cluster shown

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information. The default DIC Info Displays include a digital speedometer, trip odometers, fuel range, average fuel economy, compass, oil life, and tire pressure. Additional Info Displays are available.

INFO PAGES MENU

1. Use the 5-way control on the steering wheel to view the Options page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Options menu.
3. Scroll  down to highlight Info Pages; press **SEL**.
4. Scroll  up or  down to move through the list of info displays.
5. Press **SEL** to select or deselect an item to display in the Info Displays.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY ♦

The Head-Up Display (HUD) projects select vehicle operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.



Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.
Hold down to turn off the display.

ROTATION OPTION

- To adjust the angle of the HUD image, use the 5-way control to view the Options page on the instrument cluster and select HUD Rotation. Press  up or  down to adjust the angle.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS



CADILLAC USER EXPERIENCE MENUS

Your XTS offers a variety of entertainment, communication and vehicle system options. You can use simple gestures on the touch screen just as you would on a smartphone, such as tap, drag, pinch and spread, to interact with the infotainment system. Touch an application icon on the touch screen to access the following items.



Audio

- Most Recent Audio Sources
- More Audio Sources
- Seek Up/Down
- Tune
- HD Radio
- Browse
- Sound
- Station Favorites



Navigation

- Search
- Favorite
- Recent
- Cancel
- Map Menu
- Zoom Out
- Zoom In
- Destination
- Vehicle Icon



Phone

- Favorites
- Keypad
- Recent
- Contacts
- Devices

Note: Press and hold the  **Push to Talk** steering wheel button to activate Bluetooth Speech Recognition. See page 11.



Climate

- Front/Rear Settings
- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Fan Speed
- Air Distribution Settings
- On/Off
- A/C Mode
- Automatic Setting
- Recirculation Setting
- Sync Temperature Settings



Settings

- System
- Apps
- Vehicle
- Personal

CADILLAC USER EXPERIENCE FEATURES

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Use a Bluetooth or USB connection to link a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the internet, and features enhanced hands-free voice control. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.

SETTING THE TIME

1. Touch Settings on the Home page, and then touch System.
2. Touch Time/Date.
3. Touch Set Time.
4. Touch  or  to adjust the hours, minutes, and AM or PM.
5. Touch  to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as time information is obtained from the cellular network.

STORING FAVORITES

Radio stations from all bands (AM, FM or XM♦) can be stored in any order.

1. Display the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite item.

PORTABLE AUDIO DEVICES

USB ports are located at the front of the center console and in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch **Audio**, and then touch More and select the USB device. Search for music on-screen or by voice commands.

APPLE CARPLAY™

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO™

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

CADILLAC USER EXPERIENCE FEATURES

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
 2. The system will play a prompt followed by a beep.
 3. After the beep, say what you want it to do.
- **Hands-free calling** – Example command: “Call Amanda” or “Dial 555-1212”
 - **Connected music device search** – Example command: “Play artist [name]” or “Play song [name]”
 - **Radio control** – Example command: “Tune FM 104.3”
 - **Navigation control**  – Example command: “Destination Address” or “Destination Contact”
 - **Help** – Say “Help” for voice recognition assistance

CADILLAC APPS

In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the Apps icon on the Home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.cadillac.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say “Pair Phone,” or
Use the infotainment screen to select Phone > Add Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

BLUETOOTH SPEECH RECOGNITION

Bluetooth Speech Recognition pass-thru allows access to the voice recognition commands on a compatible, paired cell phone; e.g., Siri® Eyes Free or Voice Command.

- ▶ To activate Bluetooth Speech Recognition, press and hold the  **Push to Talk** steering wheel button.

See your Cadillac User Experience Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's built-in Wi-Fi hotspot, up to 7 devices (smart-phones, tablets and laptops) can be connected to high-speed internet using the 4G LTE signal.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

WIRELESS CHARGING

The Wireless Charging system for mobile devices is located in the storage compartment behind the climate controls. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be On.
2. Remove all objects from the charging pad.
3. Place the mobile device, face up, on the symbol on the charging pad.
4. Move the device slowly until the battery charging symbol displays by the phone icon on the infotainment screen, indicating the device is charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

NAVIGATION



Enter a destination using the Single Line Destination feature. Approximate your desired destination and the auto-fill function will enter the necessary information.

1. Touch Navigation on the Home page.
2. Touch Search.
3. Type the address, intersection or road, or select a source.
4. Touch Go.
5. Select the desired name from the generated list.
6. Touch Go.

See your Cadillac User Experience Manual.

VEHICLE PERSONALIZATION



Some vehicle features can be customized using the infotainment system. The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; Remote Locking, Unlocking and Starting, and others.

1. Touch Settings on the Home page.
2. Touch Vehicle.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch < BACK to exit each menu.

See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See your Cadillac User Experience Manual.

VALET MODE

- ▶ To lock/unlock various features of the vehicle, go to Settings > Vehicle > Valet Mode and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

See Instruments and Controls in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the band to operate the exterior lights.

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 **Parking Lamps**

 **Headlamps**


INTELLIBEAM SYSTEM♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions when the lamp control is in the AUTO position and the system is activated, as shown by a green  indicator on the instrument cluster. A blue  indicator appears when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS

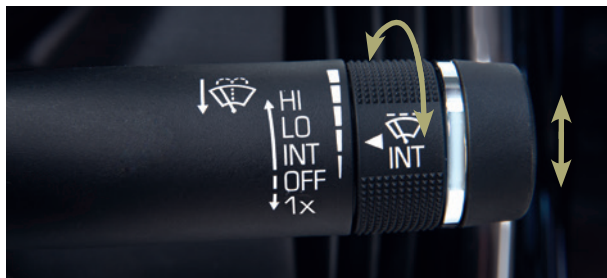

Move the lever to operate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent (Rainsense™ Sensitivity)♦

Move the lever to INT to turn on the Rainsense wipers. Rotate the INT band to adjust the automatic wiper cycling based on the amount of moisture on the windshield. The wipers activate more often as the band is rotated upward.

Note: When entering an automatic car wash, it is recommended to turn off the Rainsense wipers.

OFF

1x Single Wipe

 **Washer Fluid**


Pull the lever toward you to spray washer fluid on the windshield.

See Instruments and Controls in your Owner's Manual.

POWER MIRRORS

POWER MIRROR ADJUSTMENT

- ▶ Move the selector switch (A) to the Left (L) or Right (R) position to select the driver's or passenger's mirror; use the four-way control (B) to adjust the mirror.

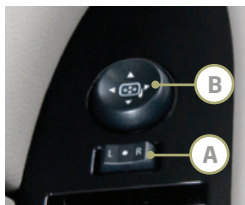

POWER FOLDING MIRRORS♦

- ▶ Move the selector switch to the neutral position. Press the  **Power Folding Mirrors** control (not shown) down to fold/unfold the exterior mirrors.

REVERSE TILT MIRROR♦

The Reverse Tilt Mirror will tilt down the driver and/or passenger mirrors to improve visibility near the rear wheels when the vehicle is shifted into Reverse.

Note: To change the Reverse Tilt Mirror settings, go to Settings > Vehicle > Comfort and Convenience > Reverse Tilt Mirror.

See Keys, Doors and Windows in your Owner's Manual.


POWER DOOR LOCKS/ SAFETY LOCKS

- ▶ Press the power door  **Lock**/ **Unlock** button on the driver's door to lock or unlock all doors.
- ▶ Pull the inside door handle to unlock a door; pull the handle again to open the door.
- ▶ Press the  **Safety Locks** button on the driver's door to prevent the rear doors from opening from the inside and to disable the rear power windows.

See Keys, Doors and Windows in your Owner's Manual.

♦ Optional equipment

AUTOMATIC TRANSMISSION TAP SHIFT

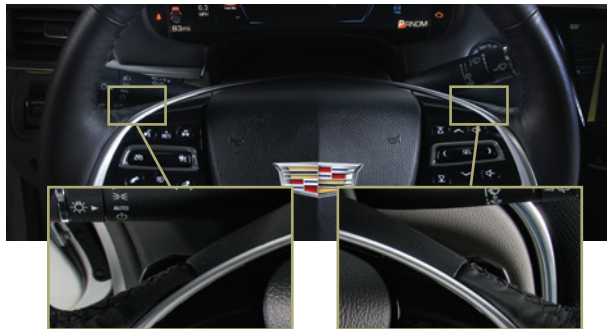

The automatic transmission has a Tap Shift mode that allows you to shift gears similar to a manual transmission.

USING TAP SHIFT

1. Move the shift lever to the **M** (Manual Mode) position.
2. Using the buttons on the back of the steering wheel, tap the left (–) button to downshift and the right (+) button to upshift. The current gear selection will be shown on the Driver Information Center and Head-Up Display♦.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically shift to 1st gear.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

DRIVER AWARENESS PACKAGE

Low-Speed Forward Automatic Braking – In potential front-end imminent collision situations with detected vehicles, the brakes may be applied, if you have not already done so, to help reduce damage or avoid collisions at very low speeds.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

Lane Departure Warning (All-Wheel Drive models) – When crossing a detected lane marking without using a turn signal in that direction, the system flashes an amber  on the instrument cluster and the Safety Alert Seat pulses or beeps sound (if selected) on the side of the lane departure direction.

- ▶ To turn on or off, press the  Lane Departure Warning button.

Lane Keep Assist with Lane Departure Warning (Front-Wheel Drive models) – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  Lane Keep Assist button.

Lane Change Alert with Side Blind Zone Alert – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Forward Collision Alert – The  Vehicle Ahead Indicator is green on the instrument cluster when a vehicle is detected and is amber

when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).



- ▶ Press the  Collision Alert button on the steering wheel to set the alert timing to Far, Medium, or Near.

Following Distance Indicator – The following distance to the vehicle ahead is indicated in seconds on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

Surround Vision – The Surround Vision system displays a rear or front camera view along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

- ▶ To switch views, touch the front or rear camera screen button at the bottom of the screen.
- ▶ To turn the guidelines on or off, touch the guidelines screen button at the bottom of the screen.

DRIVER ASSISTANCE SYSTEMS ♦

Rear Cross Traffic Alert – With the vehicle in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn on or off, press the  **Park Assist** button.

Safety Alert Seat – The driver's seat pulses (left side, right side, or simultaneously) to alert you of the direction of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

DRIVER ASSIST PACKAGE

Forward/Reverse Automatic Braking – In potential front- and rear-end imminent collision situations with vehicles directly ahead or behind, and with some objects behind your vehicle, the brakes may be applied, if you have not already done so, to help reduce the collision's severity or help avoid collisions at very low speeds.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ To turn Reverse Automatic Braking on or off, press the  **Park Assist** button.

Adaptive Cruise Control – The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button on the steering wheel to select a following gap of Far, Medium, or Near. (Also the Forward Collision Alert setting.)

See Driving and Operating in your Owner's Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center of the instrument panel to turn traction control off or back on. The  Traction Control Off light on the instrument cluster will illuminate when the system is off.

See Driving and Operating in your Owner's Manual.

AUTOMATIC PARKING ASSIST ♦

Automatic Parking Assist steers the vehicle to help you park in parallel or perpendicular spaces while you follow commands and control the gear selection, acceleration and braking. The system is available when vehicle speed is below 18 mph.

1. Press the  **Automatic Parking Assist** button on the center of the instrument panel. A parking assist display is shown on the Driver Information Center (DIC). The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, press and hold the  button during the search process.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed, follow the commands on the DIC and apply the accelerator or brake as needed. The steering wheel will briefly vibrate as a reminder to remove your hands. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

MEMORY SEATS ♦



SET MEMORY POSITIONS

With the ignition on or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound. Repeat the steps using button **2** for a second driver.

SET EXIT POSITION

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and release the **SET** button. A beep will sound.
3. Immediately press and hold the  Exit button until two beeps sound.

RECALL POSITIONS

Press and hold button **1**, **2** or  Exit until the set position is reached.

MEMORY SEATS ♦

PASSENGER MEMORY SEAT ♦

The front passenger memory seat operates the same as the driver's seat. Use the memory seat controls, located on the passenger's door, to save and recall settings for the front passenger's seat.

ADDITIONAL DRIVER'S SEAT ADJUSTMENTS ♦

Feature Selection

- ▶ Press and release the tab on the Feature Select control knob, located on the driver's seat, to display seat adjustment features on the infotainment screen. Press and hold the tab to scroll through the adjustments.
- ▶ Use the 4-way control pad on the control knob to make adjustments up, down, forward, or rearward to the selected feature.

Massage

- ▶ With the ignition on, press the massage control on the driver's seat to recall the last massage type and intensity.

See Seats and Restraints in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the  **Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the  switch.



See Driving and Operating in your Owner's Manual.

ULTRAVIEW SUNROOF



OPEN/CLOSE THE SUNSHADE

- ▶ Press the rear or front of the  **Sunshade** switch (A) to express-open or express-close the sunshade.

OPEN/CLOSE THE SUNROOF

- ▶ Press and hold the front of the  **Sunroof** switch (B) to vent the sunroof.
- ▶ Press the rear of the  switch to express-open the sunroof to the comfort position.
- ▶ Press the front of the  switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.

TRUNK RELEASE

- ▶ To open the trunk from inside the vehicle, press the  **Trunk Release** button on the driver's door.
- ▶ To open the trunk from outside the vehicle, press the Cadillac emblem. The vehicle must be unlocked or the Remote Keyless Entry transmitter must be within range of the trunk.

See Keys, Doors and Windows in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

TIRES

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

TIRE SEALANT AND COMPRESSOR KIT

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the kit instructions for complete operating information.

See Vehicle Care in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar service plan, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit **onstar.com** or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

MYCADILLAC MOBILE APP

The myCadillac mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.



The myCadillac mobile app also enables users to send remote commands to the vehicle — including remotely starting the vehicle and locking/unlocking the doors — as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CADILLAC ONLINE OWNER CENTER

Create an account at **my.cadillac.com** for access to an online Owner's Manual, helpful how-to videos, your service history and warranty status, OnStar reports (active OnStar account required), and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 by General Motors. All rights reserved.

