



GETTING TO KNOW YOUR ***2019 CORVETTE***



chevrolet.com


Review this Quick Reference Guide for an overview of some important features in your Chevrolet Corvette. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at **my.chevrolet.com/learn**.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

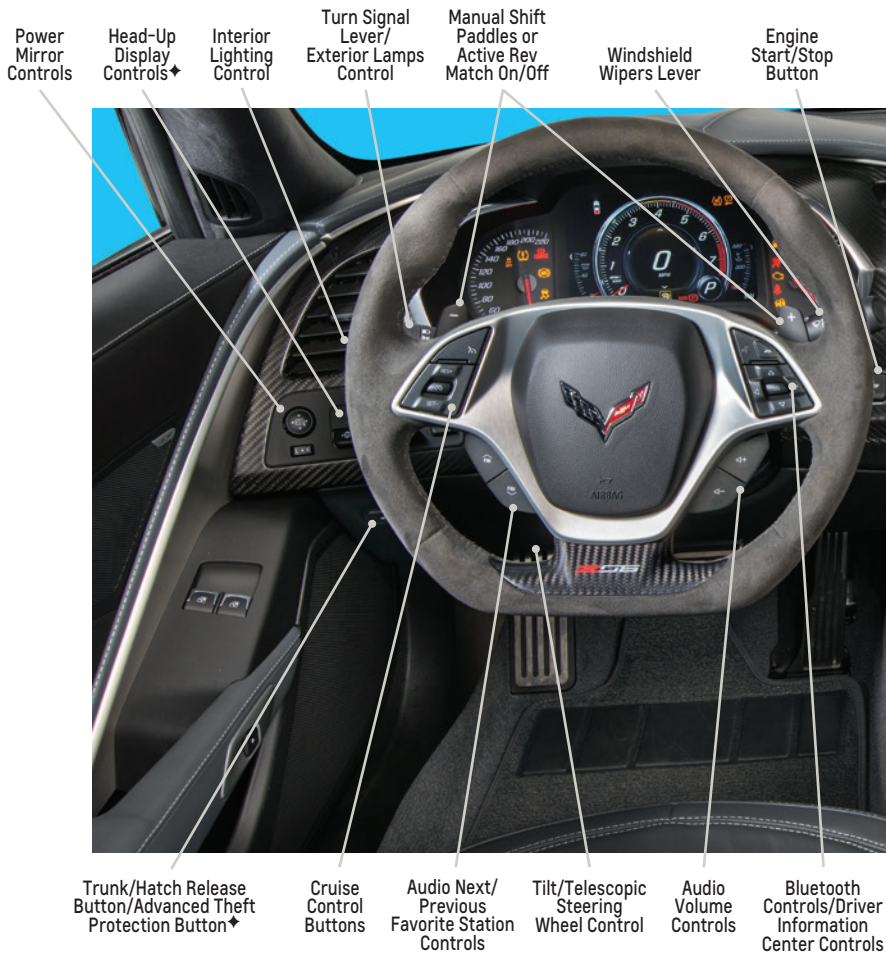

SYMBOLS



Stability Control Off



Low Tire Pressure

BRAKE

Brake System



Antilock Brake System



Stability Control Active



Door Ajar



Cruise Control Set



Electric Parking Brake Set



Charging System



Oil Pressure



Engine Coolant Temperature



Service Electric
Parking Brake



Traction Control Off



Low Fuel



Airbag Readiness



Check Engine



Safety Belt Reminder



Security

*Refer to your Owner's Manual
to learn about the information
being relayed by the lights
and gauges of the instrument
cluster.*

See In Brief in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk/hatch without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door to be unlocked or the trunk/hatch.

ENTERING THE VEHICLE

- ▶ With the transmitter within range of the vehicle, press the door touch pad (A) at the rear edge of the door to unlock and open the door.

EXITING THE VEHICLE

- ▶ Press the door latch button on the pull handle to open the door.

TRUNK/HATCH ACCESS

The vehicle must be in Park (automatic transmission) or the vehicle must be off with the parking brake set (manual transmission) to open the trunk/hatch. There are 4 ways to open the trunk/hatch:

- ▶ With the transmitter within range of the vehicle, press the release touch pad (C).
- ▶ Press and hold the  **Trunk/Hatch** button on the transmitter.
- ▶ Insert the master key from the transmitter into the lock cylinder (D).
- ▶ From inside the vehicle, press the  **Trunk/Hatch** button on the left side of the instrument panel.

TRANSMITTER BATTERY


If the transmitter battery is weak and the No Remote Detected message is displayed:

- ▶ Insert the transmitter into the steering column pocket with the buttons facing up and the base facing outward. This will enable the engine to start.

Replace the transmitter battery as soon as possible. Refer to the Owner's Manual for battery replacement information.

Note: Do not twist the master key inside the transmitter to open the case.

See Keys, Doors and Windows in your Owner's Manual.

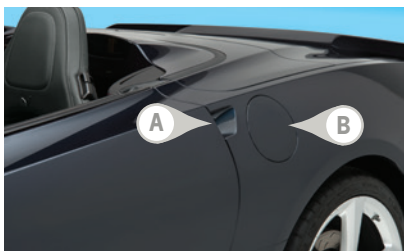

Fuel Door: The vehicle must be unlocked to open the fuel door. With Passive Locking active, the driver's door must be opened first before the fuel door will unlock. Press and release the center rear edge of the fuel door (B) to open it.



AUXILIARY RELEASES

If the vehicle battery is weak or disconnected, the driver's door can be opened manually.

OUTSIDE THE VEHICLE

1. Insert the master key from the transmitter into the lock cylinder above the license plate and turn it to open the hatch/trunk.
2. Pull the  **Door Release** handle on the driver's side of the hatch/trunk.



INSIDE THE VEHICLE

- Pull the  **Door Release** handle on the floor next to the driver's or passenger's seat.



See *Keys, Doors and Windows* in your Owner's Manual.

BATTERY CARE TIPS

BATTERY CHARGER♦

If the vehicle is not driven weekly or the battery is disconnected or drained, use the optional battery maintainer to charge the battery. To operate the battery maintainer, plug it into a standard electrical outlet and into the vehicle's rear accessory power outlet.

See *Vehicle Care* in your Owner's Manual.

WINDOW INDEXING

To provide a tight seal, window indexing automatically lowers the window slightly when the door is opened and then automatically raises the window when the door is closed.

If battery power is disconnected, reset the indexing feature:

1. Close the doors.
2. Start the vehicle.
3. Hold up the window switch to the fully closed position.

Note: The power windows' express-up feature and the power convertible top♦ will not operate until the window indexing feature is reset.

See *Keys, Doors and Windows* in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, press the brake pedal (automatic transmission) or the clutch pedal (manual transmission) and then press the **ENGINE START/STOP** button.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park (automatic transmission only) and press the **ENGINE START/STOP** button.



See Driving and Operating in your Owner's Manual.

POWER SEATS

SEAT CONTROLS

A. Seat Adjustment

Move the front control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the top of the vertical control to recline or raise the seatback.

C. Lumbar/Side Bolster Adjustment♦

Move the rear control forward or rearward to adjust the lumbar support and up or down to adjust the side bolsters.



MEMORY SEATS♦

- ▶ To set the memory position, adjust the driver's seat, outside mirrors and steering wheel to the desired positions. Press and release the **SET** button. A beep will sound. Immediately press and hold button **1** or **2** until two beeps sound.
- ▶ To set the exit position, adjust the driver's seat and steering wheel to the desired positions. Press and release the **SET** button. A beep will sound. Immediately press and hold the  **EXIT** button until two beeps sound.
- ▶ To recall the setting at any time, press and hold button **1** or **2** or the  **EXIT** button until the stored position is reached.
- ▶ To set the Auto Memory Recall (Driver Door Open or At Ignition On) or Easy Exit Recall (Vehicle Off and Driver Door Open), go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

Note: On vehicles with a manual transmission, the parking brake must be applied in order for the memory seats to be recalled automatically.

If the stored position is not recalled, move the seat forward and press button **1** or **2** or the  **EXIT** button again.

INSTRUMENT CLUSTER/DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle messages and system information. Use the control pad on the right side of the steering wheel to view the main menus: **Info** (includes trip odometers, fuel information and tire pressures), **Performance** (includes G-force, friction bubble, timers, and operating temperatures), **Audio**, **Phone**, **Navigation**♦, and **Settings**.

DIC CONTROLS

- ▶ Press the ◀ button to view the main menu or the ▶ button to view a selected submenu.
- ▶ Press the △ or ▽ button to move through the menus.
- ▶ Press **SEL** to open a menu or select/deselect a setting.



RESET AN ITEM

1. Use the control pad to display the item.
2. Press and hold **SEL** to reset the item.

RECONFIGURABLE INSTRUMENT CLUSTER

The instrument cluster also features four display themes: **Link to Drive Mode** (matches the Driver Mode Control setting), **Tour**, **Sport**, and **Track**. The style of the center of the instrument cluster will change depending on the selected theme.

1. Use the control pad to display the Settings menu.
2. Select Display Theme.
3. Select the desired cluster theme.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY♦ (HUD)

The HUD projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also will be displayed.

HUD

Press down or lift up to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from the display views of Tour, Sport, and Track. Also displays Link to Drive Mode when selected in the DIC.



Press down or lift up to dim or brighten the display.

Press down and hold to turn off the HUD.



INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.

The infotainment system uses a Bluetooth or USB connection to link to a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod®. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.



PORTABLE AUDIO DEVICES – MEDIA

An accessory power outlet, two USB ports and a 3.5-mm auxiliary input jack are located in the center console.

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.



INFOTAINMENT SYSTEM

SETTING THE TIME

1. Touch **Settings** on the Home page.
2. Touch **Time** and **Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **<BACK** to exit the menu.

STORING FAVORITE STATIONS

Radio stations from all bands (AM, FM or SiriusXM[®]), media (song, artist, album, and genre), phone contacts and navigation destinations[♦] can be stored in any order.

1. Display the desired radio station, media favorite, navigation destination or contact.
2. Touch the  **Favorite Pages** button on the bottom of the screen if the favorite buttons are not displayed.
3. Touch and hold one of the favorite buttons until a beep is heard.
4. Repeat the steps to store another favorite item. Swipe up at the bottom of the screen to display additional favorite buttons.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
 - Example Radio command: "Tune FM 104.3"
2. The radio will play a prompt followed by a beep.
 - Example Phone command (using your paired phone): "Call Amanda" or "Dial 555-1212"
3. After the beep, say what you want it to do.
 - Example Media Music Device Search command (when connected to USB only): "Play artist [name]"

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the Home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the Home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See your Infotainment System Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the audio, Bluetooth, navigation⁺ or OnStar[®] system.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Volume

Press the + or – button to adjust the volume.

FAV Favorites

Press either button to view the favorites list. Press the  or  button to go to the next or previous favorite station or track.

See your Infotainment System Manual.



BLUETOOTH[®] SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.chevrolet.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say “Pair.” To use the screen buttons, touch the Phone icon > Pair Device.
2. Start the pairing process on the phone. From your phone’s Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed.

See your Infotainment System Manual.

ONSTAR[®] WITH 4G LTE WI-FI[®] HOTSPOT

With the vehicle’s built-in Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet using OnStar’s 4G LTE signal.

- ▶ To retrieve the SSID and password for the hotspot, press the **OnStar Voice Command** button; after the prompt, say “Wi-Fi settings.” They will be displayed on the screen.

Note: See onstar.com for a detailed instruction guide, vehicle availability, and system limitations.

See your Infotainment System Manual.

LIGHTING

EXTERIOR LAMPS

Rotate the band to operate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**



INTERIOR LIGHTING

Instrument Brightness Control

Rotate the knob to brighten or dim the instrument panel lighting.

Turn the knob completely clockwise to turn on the interior lights.



See Lighting in your Owner's Manual.

WINDSHIELD WIPERS

Move the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

 **INT Intermittent**

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe


 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.



See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS

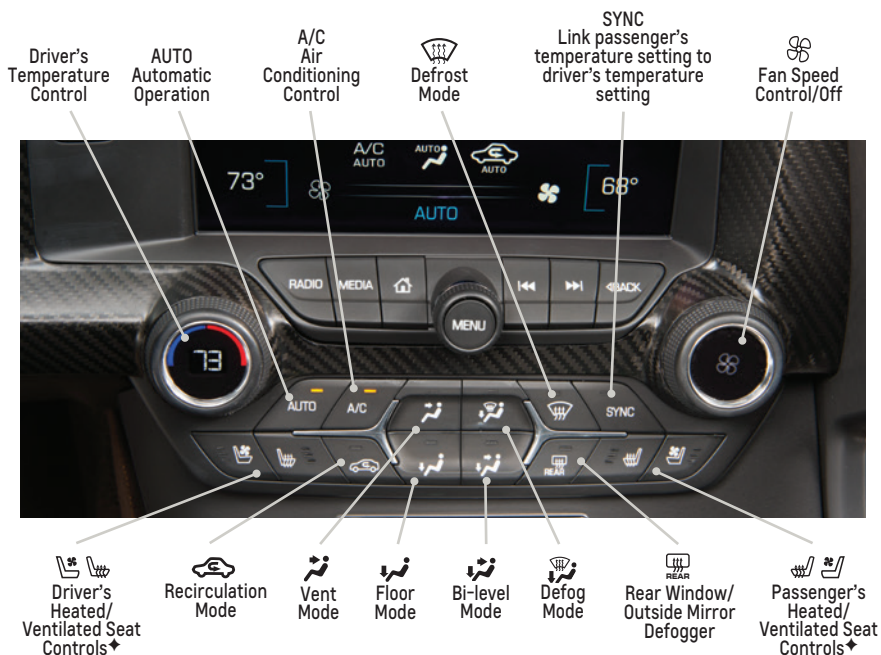

PASSENGER CONTROLS



SYNC TEMPERATURE SETTINGS

- Press **SYNC** to link the passenger's temperature setting to the driver's setting.

Sync is canceled when the passenger's setting is adjusted.

AUTOMATIC OPERATION

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the functions are manually adjusted, automatic operation is turned off.

HIGH-PERFORMANCE DRIVING FEATURES

TRACTION CONTROL AND STABILITY CONTROL SYSTEMS

The Traction Control system limits wheelspin and the Stability Control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. The  **Traction Control/Stability Control** button is located on the center console.

- ▶ Press the  button once to turn off Traction Control.
- ▶ Press and hold the  button to turn off both Traction Control and Stability Control.
- ▶ Press the button again to turn on Traction Control and Stability Control.

DRIVER MODE SELECTOR

The 5 driver modes provide enhanced performance for different driving conditions by changing the throttle progression, shift mode, steering, limited slip differential, ride control, traction control, exhaust sound, instrument cluster theme and other calibrations (if equipped).

- ▶ Rotate the Driver Mode Selector, located on the center console, to scroll through the modes of Weather, Eco, Tour, Sport, and Track on the instrument cluster.

Note: Allow a few seconds for the changes to be activated before the current mode is displayed. ZR1 does not have Weather and Eco modes.

COMPETITIVE DRIVING MODE AND PERFORMANCE TRACTION MANAGEMENT⁺

Competitive Driving Mode allows full engine power while Stability Control helps maintain directional control of the vehicle.

Performance Traction Management⁺ offers 5 modes of operation, all designed to provide consistent performance when cornering in a variety of track conditions.

- ▶ When in Track mode, press the  **Traction Control/Stability Control** button twice to activate Competitive Driving Mode or Performance Traction Management.
- ▶ Rotate the Driver Mode Selector to scroll through each Performance Traction Management mode on the instrument cluster.

8-SPEED PADDLE SHIFT AUTOMATIC TRANSMISSION

- ▶ While in Drive (D), use either paddle on the steering wheel to temporarily take control of gear selection. Automatic shifting returns after 10 seconds of cruising at steady speeds and no manual shifts, or when the vehicle stops.
- ▶ Move the shift lever to the Manual Mode (M) position and use the paddles to manually upshift or downshift the transmission. In this mode, the transmission will hold the current gear until a change is requested.
- ▶ Pull the right paddle to upshift and the left paddle to downshift. The current gear will be displayed on the instrument cluster and HUD⁺.



If vehicle speed is too fast or too slow for the requested gear, the shift will not occur.

Note: It is normal for shift feel to be firm for the first 100 miles as the transmission controls learn and adapt.

HIGH-PERFORMANCE DRIVING FEATURES

7-SPEED MANUAL TRANSMISSION

1-to-4 Shift Feature – To help achieve the best possible fuel economy, the Driver Information Center will display 1-4 SHIFT when, from a standstill, acceleration and vehicle qualifications are met. When the shift message is displayed, the transmission can be shifted only from 1st to 4th gear. Forcing the shift lever into any other gear may damage the transmission.

Active Rev Match – The system aids in smoother shifting by matching the engine speed to the next selected gear.

- Press either **REV MATCH** paddle on the steering wheel to activate or deactivate the system. When active, the current gear is displayed in amber on the instrument cluster.

See Driving and Operating in your Owner's Manual.

RUN-FLAT TIRES

The run-flat tires eliminate the need for a spare tire. The tire design enables safe function during and after loss of pressure for some distance at a moderate speed. Driving only a short distance with a loss of pressure increases the chance that the tire can be repaired. Contact Roadside Assistance for the nearest run-flat tire servicing facility.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures as listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

GROOVE TRACKING

The wide tires on the Corvette provide sure-footed grip and excellent road feel; however, the wider design may be more susceptible to grooves or wear patterns on some roads.

TIRE CHATTER

During hard, slow turns, such as parking, the difference in steering angle of the tires may cause one tire to slide or hop lightly to keep up. This hop of the wide tires may cause a chatter sound. The sound will stop as the wheels are straightened.

BRAKE DUST

The high-performance brake materials and large size of the brakes may result in a fine dust coating the outer surface of the wheels. Wash the wheels with regular soap and water to remove the dust. Automatic car washes are not recommended.

DRY SUMP OIL LEVEL INSPECTION (ZR1, Z06, GRAND SPORT, STINGRAY WITH Z51)

- To check the oil level, run the engine to operating temperature. Turn off the engine and wait 5-10 minutes. Check the oil level on the dipstick located on top of the external oil tank.

Note: *Overfilling the oil tank may lead to an oil leak or engine failure. The initial oil change should be performed at 500 miles for proper dry sump engine break-in. Mobil 1 SAE 0W-40 engine oil is recommended for Corvette oil changes.*

See Vehicle Care in your Owner's Manual.

LOW GROUND CLEARANCE/FRONT CURBVIEW CAMERA◆

The low ground clearance of the Corvette aids its aerodynamic efficiency. As a result, the lower part of the front fascia (bumper) may contact a parking block or curb if the vehicle is parked too closely. Use care when parking to avoid damage.

At speeds slower than 5 mph, the Front CurbView Camera◆ displays a front, top-down view and left- and right-front view images of the area in front of the vehicle.

- ▶ Press the **Camera** icon on the infotainment screen to activate the front cameras.

See Driving and Operating in your Owner's Manual.

COUPE ROOF PANEL

The removable roof panel is secured with two front levers and one rear lever. It may be necessary to have two people remove the roof panel. When removed, secure the roof panel facing forward in the receivers in the rear storage compartment. During installation, the rear edge of the panel should be installed first. Refer to your Owner's Manual for instructions.

See Keys, Doors and Windows in your Owner's Manual.

CONVERTIBLE TOP OPERATION◆

Before operating the convertible top, park the vehicle and check that the trunk partition is in the fastened, upright position, and that the trunk is closed.

OPERATE THE POWER CONVERTIBLE TOP

1. Start the engine, shift to Park or Neutral, and set the parking brake. (If necessary, the top can be operated at vehicle speeds up to 30 mph.)
2. Press and hold the bottom of the  **Convertible Top** button on the left side of the instrument panel to open the top; press and hold the top of the button to close the top.
3. A chime will sound when the top is opened or closed completely.

The top also may be opened using the Remote Keyless Entry transmitter.

- ▶ Press the  **Unlock** button and then press and hold the  **Convertible Top** button.

Note: After a loss of battery power, reset the window indexing to operate the convertible top.

See Keys, Doors and Windows in your Owner's Manual.



CAR WASH GUIDELINES

Automatic car washes are not recommended. They may cause damage to the vehicle, wheels or convertible top◆. To avoid possible damage, use a touchless car wash.

To avoid damaging the clear coat on visible exterior carbon fiber, never polish any exposed carbon fiber body parts with polish compound.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP



The myChevrolet mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myChevrolet mobile app also enables users to send remote commands to the vehicle – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



* 8 4 1 4 9 5 0 2 A *

GENERAL MOTORS

84149502 A