



GETTING TO KNOW YOUR ***2019 CRUZE***



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Cruze. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at **my.chevrolet.com/learn**. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Power Mirror Control➤

Heated Steering Wheel➤/
Cruise Control➤/Forward
Collision Alert➤/Lane Keep
Assist➤ Buttons

Turn
Signal
Lever

Driver
Information
Center➤

Voice Recognition
Buttons➤/Driver
Information
Center Controls➤

Windshield
Wipers
Lever



Exterior Lamp
Control/
Instrument Panel
Illumination
Control

Trunk
Release
(Sedan
Only)

Hood
Release
(pull 2x to
open)

Audio Next/
Previous Favorite
Station Controls➤
(behind steering
wheel)

Steering
Wheel
Adjustment
Lever

Audio Volume
Controls➤
(behind
steering
wheel)

Engine
Start/
Stop
Button➤

SYMBOLS



Low Fuel



Traction Control Off



Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine

Infotainment
System Touch
Screen◆

Infotainment
System
Controls

Hazard Warning
Flashers Button

Climate
Controls



Driver's
Heated Seat
Button◆

Driver Shift
Control

USB Port/
Accessory Power
Outlets

Passenger's
Heated Seat
Button◆



Lane Keep Assist



Vehicle Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Charging System



Driver Seat Belt Reminder



Passenger Seat Belt
Reminder

*Refer to your Owner's Manual
to learn about the information
being relayed by the lights,
gauges and indicators of the
instrument cluster.*

See In Brief in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door.

Press again to unlock all doors.

Trunk/Liftgate⁺

Press twice quickly to open the trunk/liftgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
Press and hold to activate the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Keyless Access System
with Remote Start shown

Remote Vehicle Start⁺

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Key Release⁺ (Keyless Access transmitter)

In case of loss of vehicle power, press the button on the side of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.


KEYED IGNITION SYSTEM (IF EQUIPPED)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

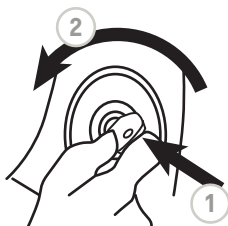

See Driving and Operating in your Owner's Manual.

KEYLESS ACCESS SYSTEM ♦

The Keyless Access System enables operation of the doors and trunk/liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of a door or the trunk/liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on the front passenger's door handle to unlock all doors.
- ▶ Press the touchpad either above the license plate or at the base of the liftgate to open the trunk/liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START ♦

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.

Note: If the RKE transmitter battery is weak, place the transmitter in the front cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button. The button indicator will be amber.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION (IF EQUIPPED)

An automatic stop/start system has been integrated with the engine to help conserve fuel. While driving, when the brake is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking and turning off the vehicle, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery state of charge is low.
- The climate control setting requires the engine to run. Select the Eco air conditioning setting (green A/C indicator) to maximize the frequency and duration of Auto Stops.
- The Auto Stop time is greater than 2 minutes.

DISABLING AUTO ENGINE STOP/START

- ▶ Press the  button on the center console, when the engine is running, to disable the system. The system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

FRONT SEATS

MANUAL DRIVER'S SEAT

A. Seat Adjustment

Lift the handle under the front of the seat near the console to slide the seat.

B. Seat Height Adjustment

Ratchet the lever to raise or lower the seat.

C. Seatback Recline Adjustment

Lift the lever to recline or raise the seatback.



POWER DRIVER'S SEAT♦

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.



See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever on the left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.



DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle messages and system information.

DIC CONTROLS

Use the turn signal lever controls or the steering wheel controls (if equipped) to select the Trip/Fuel, Vehicle, and Eco menus.

Turn Signal Lever Controls

A. MENU

Press the **MENU** button to display the Trip/Fuel, Vehicle Information or Eco menu.

B.

Rotate the  switch to move through the menus.

C. SET/CLR

Press the **SET/CLR** button on the end of the lever to set or clear an item.



Steering Wheel Controls (If equipped)

- ▶ Press the  or  button to select the Trip/Fuel, Vehicle Information or Eco menu.
- ▶ Press the  or  button to move through the menus.
- ▶ Press the  button to open a menu, or select or reset a setting.



INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®, and offers hands-free voice control. You can tap, drag, swipe and use other simple gestures on the touch screen to interact with the system. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

INFOTAINMENT SYSTEM

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. To enter edit mode, touch and hold the Home page icon to move.
2. Drag the icon to the desired position and release. Drag the icon to the edge of the screen to move to another page.

SETTING THE TIME

1. Select Settings on the Home page.
2. Select System > Time/Date.
3. Select Set Time.
4. Touch the arrows to adjust the time.
5. Touch < to exit the menu.

Turn on Automatic Time and Date to have the time updated automatically.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Select Audio on the Home page.
2. Tune in the desired radio station.
3. Select the desired page of favorite screen buttons.
4. Touch and hold one of the favorite screen buttons until a beep is heard. Favorites also can be saved by touching the ★ in a station or channel list.
5. Repeat the steps to store another favorite item.



PORTABLE AUDIO DEVICES

USB ports and an auxiliary jack are located at the front of the center console to connect portable audio devices.

- ▶ Touch Audio, and then touch More to select USB or AUX for the connected device.
- ▶ Two USB Charge Only ports[♦] may be located at the rear of the center console. These ports do not connect to the infotainment system.



See your Infotainment System Manual.

INFOTAINMENT SYSTEM

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

See your Infotainment System Manual.


BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or use the Phone button or touch the Phone icon and then select Connect Phones > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed on the infotainment system. Depending on the phone, the phone book is downloaded automatically.

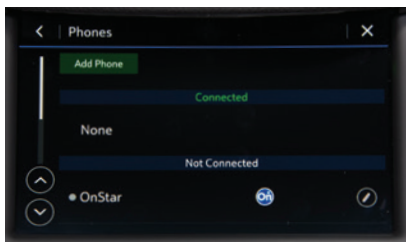

See your Infotainment System Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Voice Pass-Thru* (Siri® Eyes Free or Voice Command) on a paired, compatible cell phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite station or track.



See your Infotainment System Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smart-phones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.chevrolet.com/learn.



See your Infotainment System Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system mutes the audio of the radio or any device paired with the vehicle if front seat occupants aren't wearing their safety belts. It also provides audible and visual warnings when the vehicle is traveling over predetermined speeds. An in-vehicle Report Card is produced at the end of every driving cycle with data about driving behavior.

When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See your Infotainment System Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home screen.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press < to exit each menu.



See Instruments and Controls in your Owner's Manual.

SUNROOF ♦

The sunroof controls are located on the overhead console.

A. Open/ Close

To express-open the sunroof, fully press and release the rear of the switch. To express-close the sunroof, fully press and release the front of the switch.

To open the sunroof, press and hold the rear of the switch. To close the sunroof, press and hold the front of the switch.



B. Vent/ Close

To vent the sunroof from the closed position, press the rear of the switch. To close the sunroof, press the front of the switch.

See Keys, Doors and Windows in your Owner's Manual.

LIGHTING

EXTERIOR LAMPS

Rotate the knob to activate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Front Fog Lamps***

Press to turn the fog lamps on or off.



INSTRUMENT PANEL LIGHTING

 **Instrument Panel Brightness**

Rotate and hold the thumbwheel to adjust the instrument panel lighting.

INTELLIBEAM® SYSTEM♦

The IntelliBeam system turns the high-beam headlamps on or off automatically according to surrounding traffic conditions. The exterior lamps control must be in the AUTO or Headlamps position to activate the system.


- ▶ Press the  **IntelliBeam** button on the turn signal lever to turn the system on or off.



Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

CLIMATE CONTROLS

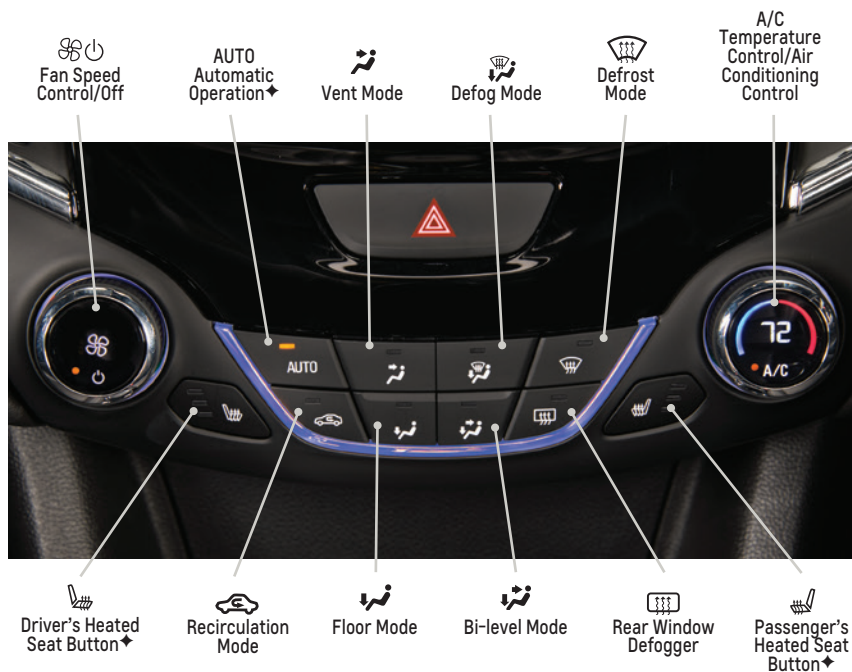

ECO MODE (MODELS WITH AUTO ENGINE STOP/START)

- Press the **A/C** control until the indicator is green to select the Eco air conditioning setting. This setting will maximize the frequency and duration of Auto Stops.
- Press the **A/C** control until the indicator is amber to select the Comfort air conditioning setting. Auto Stops will be reduced in both frequency and duration.

See Climate Controls in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the lever to activate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes


Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

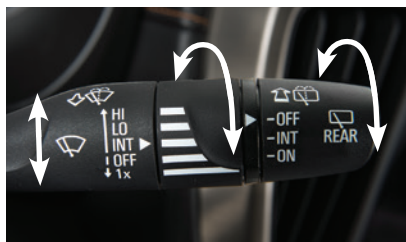

Windshield wiper/rear wiper lever shown

REAR WIPER (IF EQUIPPED)

Turn the end of the lever to activate the rear wiper.

OFF

INT Intermittent Wipes

ON

 **Washer Fluid**
Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

CRUISE CONTROL ♦

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white in the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When the system is active, press to decrease speed.

 **Cancel**

Press to cancel the Cruise Control without erasing the set speed from memory. Pressing the brake pedal also will cancel the Cruise Control.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

REAR VISION CAMERA – When the vehicle is in Reverse, a view directly behind the vehicle is displayed on the infotainment screen. Vehicle speed must be below 8 mph.

REAR CROSS TRAFFIC ALERT ♦ – When the vehicle is in Reverse, the system warns of cross traffic coming from either direction by displaying a red alert on the infotainment screen and sounding beeps.


REAR PARK ASSIST ♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center. A beep sounds when an object is detected and 5 beeps sound when an object is very close.

- ▶ To turn the Rear Park Assist and Rear Cross Traffic Alert systems on or off, press the  **Rear Park Assist** button on the center console.



LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT ♦ – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

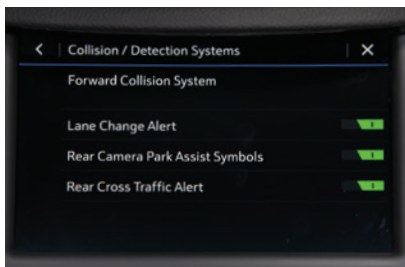

DRIVER ASSISTANCE SYSTEMS

FORWARD COLLISION ALERT ♦ – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, Near or Off. The setting is displayed on the Driver Information Center.

FOLLOWING DISTANCE INDICATOR ♦ –

The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.



LOW-SPEED FORWARD AUTOMATIC BRAKING ♦ –

In potential front-end imminent collision situations with detected vehicles, the brakes may be applied, if you have not already done so, to help reduce damage or help avoid collisions at very low speeds with vehicles directly ahead.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING ♦ – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and 3 beeps may sound on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the steering wheel.

See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the center console to turn traction control on or off.



See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

DRIVER SHIFT CONTROL

Driver Shift Control is a manual mode that allows the driver to select the range of gear positions. This feature can be used when driving on a downhill grade to provide engine braking or to limit the top gear.

1. Move the shift lever left to the Low (L) position.
2. Press the **plus (+)** button or **minus (-)** button on top of the shift lever to increase or decrease the available gear range.




The current gear will be displayed on the Driver Information Center. All gears below the selected gear will be available. If vehicle speed is too high or too low for the requested gear, the shift will not occur.

See Driving and Operating in your Owner's Manual.

REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

Note: When using a portable gas can, insert the funnel adapter, stored under the spare tire, into the capless fuel fill.

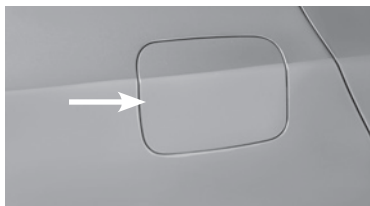

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

See Vehicle Care in your Owner's Manual.

HOOD RELEASE

- ▶ With the driver's door open, pull and release the hood release handle on the lower-left side of the instrument panel. Pull and release the handle again to fully open the hood. There is not a secondary latch under the hood.

See Vehicle Care in your Owner's Manual.

BATTERY LOCATION

The battery is located behind the rear seat on the passenger's side of the vehicle and can be accessed through the trunk/rear hatch. Remote jump-start positive and negative terminals are located under the hood on the driver's side of the vehicle.

See Vehicle Care in your Owner's Manual.

DIESEL FEATURES (IF EQUIPPED)

DIESEL EXHAUST FLUID (DEF)

DEF reduces the amount of regulated emissions produced. The DEF level must be maintained for the vehicle to run properly. As the DEF level becomes low, warnings begin with approximately 1,000 miles (1,600 km) of remaining range. These warnings will increase in intensity as the DEF level is reduced. Once the tank is empty, vehicle speed will be limited. The DEF fill port is located behind the fuel fill door.

DIESEL PARTICULATE FILTER (DPF)

The DPF filters the diesel exhaust gas. Occasionally, the DPF needs to be cleaned. When needed, the engine computer will automatically initiate a cleaning action.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service required) and more. Create an account today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



* 8 4 1 6 9 5 1 6 A *

GENERAL MOTORS

84169516 A