

2019



Express/Savana Infotainment System



Contents

Introduction	2
Radio	13
Audio Players	25
OnStar System	35
Navigation	36
Voice Recognition	52
Settings	59
Bluetooth Phone/Devices	68
Trademarks and License Agreements	83
Index	86

Introduction

Infotainment



The names, logos, emblems, slogans, vehicle model names, and vehicle body designs appearing in this manual including but not limited to GM, the GM logo, GMC, the GMC Truck Emblem, CHEVROLET, the CHEVROLET Emblem, and the names EXPRESS, SAVANA, and InTouch are trademarks and/or

service marks of General Motors Corporation LLC, its subsidiaries, affiliates, or licensors.

For vehicles first sold in Canada, substitute the name “General Motors of Canada Company” for GMC and Chevrolet Motor Divisions wherever it appears in this manual.

The information in this manual supplements the owner’s manual.

This manual describes features that may or may not be on the vehicle because of optional equipment that was not purchased on the vehicle, model variants, country specifications, features/applications that may not be available in your region, or changes subsequent to the printing of this manual.

Keep this manual with the owner’s manual in the vehicle, so it will be there if it is needed. If the vehicle is sold, leave this manual in the vehicle.

Read the following pages to become familiar with the infotainment system features.

Warning

Taking your eyes off the road for too long or too often while using any infotainment feature can cause a crash. You or others could be injured or killed. Do not give extended attention to infotainment tasks while driving. Limit your glances at the vehicle displays and focus your attention on driving. Use voice commands whenever possible.

The infotainment system has built-in features intended to help avoid distraction by disabling some functions when driving. These functions may gray out when they are unavailable. Many infotainment features are also available through the instrument cluster and steering wheel controls.

Before driving:

- Become familiar with the system operation, controls on the center stack, and infotainment display.
- Set up the audio by presetting favorite stations, setting the tone, and adjusting the speakers.
- Set up cell phone numbers in advance so they can be called easily by pressing a single control or by using a single voice command.


See “Distracted Driving” in the owner’s manual.

To play the infotainment system with the ignition off, see “Retained Accessory Power (RAP)” in the owner’s manual.

Overview

The infotainment system is controlled by using the controls, infotainment display, steering wheel controls, and voice recognition.

See *Using the System* ⇨ 7.

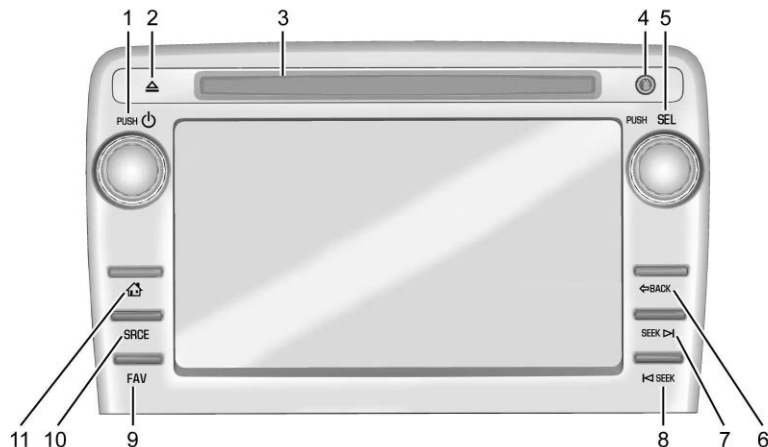


CD Radio Shown, CD/DVD Radio Similar

1. PUSH/⏻ (Volume/Power)
2. ⏏ (Eject)
3. CD/DVD (if equipped) Slot
4. AUX Port
5. PUSH/SEL (Select)
6. ↩ BACK

7. SEEK ⏩ (Next/Forward)
8. ⏮ SEEK (Previous/Reverse)
9. FAV (Favorites Menu)
10. SRCE (Source)
11. 🏠 (Home Page)

4 Introduction

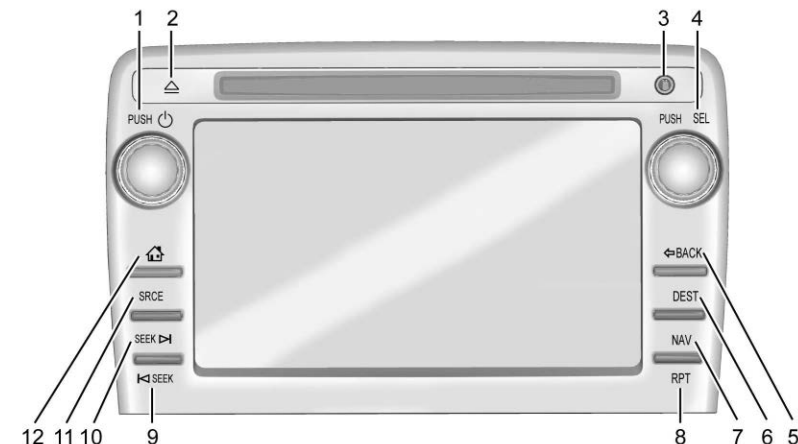

CD Radio with Navigation Shown, CD/DVD Radio with Navigation Similar

- | | |
|--------------------------|------------------------------|
| 1. PUSH/⏻ (Volume/Power) | 7. NAV (Navigation) |
| 2. △ (Eject) | 8. RPT (Repeat) |
| 3. AUX Port | 9. ⏮ SEEK (Previous/Reverse) |
| 4. PUSH/SEL (Select) | 10. SEEK ▷ (Next/Forward) |
| 5. ⏪ BACK | 11. SRCE (Source) |
| 6. DEST (Destination) | 12. 🏠 (Home Page) |

Infotainment Controls

PUSH/⏻:

- Press to turn the system on and off.
- Turn to adjust the volume.

△ : Press to eject a disc from the CD or DVD player (if equipped). See *CD/DVD Player* ⇨ 25.

AUX Port : 3.5 mm (1/8 in) connection for external audio devices.

PUSH/SEL:


1. Turn to manually find a station or highlight a menu selection.
2. Press to select a highlighted selection.

🏠 : Press to go to the Home Page. See "Home Page" in this section.

SRCE : Press to change the audio source to AM, FM, SiriusXM, if equipped, Pandora, Stitcher, CD/DVD, if equipped, USB, iPod, AUX, or Bluetooth Audio.

FAV : For radios without navigation, in AM, FM, or XM, press FAV to scroll through the favorites banner near the bottom of the display. The favorites banner stores your favorite radio and SiriusXM stations. To store a favorite station, press and hold FAV in the area of the banner until a beep is heard.

Favorite Pages

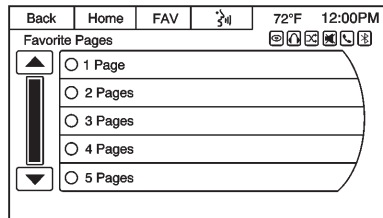

On the Home Page, touch the Settings icon. Then touch the Favorite Pages infotainment display to select the number of favorite pages displayed. The choice is 1–6 pages.

DEST:

- Press to enter a destination.

- If a destination has already been entered, press to access the Destination Menu. See *Destination* ⇨ 40.

NAV:

- Press to view the vehicle's current position on the map.
- Continue pressing to cycle through the full map and split display views.

RPT : Press to repeat the last voice guidance prompt.

⏮ SEEK:

- AM, FM, or SiriusXM, if equipped: Press to seek to the previous strong station. Press and hold to scan. Press ⏮ SEEK again to stop the scan.
- CD, USB, Pandora, Stitcher, or Bluetooth Audio: Press to seek to the beginning of the current or previous track.
- CD, USB, or Bluetooth Audio: Press and hold to quickly reverse through a track. Release return to playing speed.

See *CD/DVD Player* ⇨ 25, *USB Port* ⇨ 29, or *Bluetooth Audio* ⇨ 34.

SEEK ⇨:

- AM, FM, or SiriusXM, if equipped: Press to seek to the next strong station. Press and hold to scan. Press SEEK ⇨ again to stop the scan.
- CD, USB, Pandora, Stitcher, or Bluetooth Audio: Press to seek or skip the next track or program.
- CD, USB, or Bluetooth Audio: Press and hold to fast forward through a track. Release to return to playing speed. See *CD/DVD Player* ⇨ 25, *USB Port* ⇨ 29, or *Bluetooth Audio* ⇨ 34.

⏮ **BACK** : Press to return to the previous display in a menu or Home Page.

6 Introduction


Language

To change the language of the navigation displays, see “Vehicle Personalization” in the owner’s manual.

English or Metric Units

To change the navigation displays from English or metric, see “Driver Information Center (DIC)” in the owner’s manual.

Steering Wheel Controls

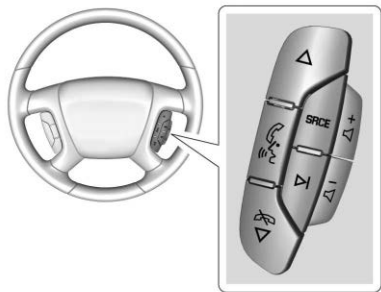

Vehicles with audio steering wheel controls could differ depending on the vehicle’s options. Some audio controls can be adjusted at the steering wheel.

or : Press to select preset radio stations or SiriusXM channels from the favorites banner or select tracks from a source such as CD/DVD, iPod, or USB.

To select tracks on an iPod or USB:

1. Press and hold or while listening to a song listed in the main audio page to quickly move forward or in reverse through the tracks. Track information is shown on the display.
2. Release or when the desired track is reached.

: Press to accept a call.

- Press to accept a call.
- Press and hold to start voice recognition.

See *Voice Recognition* ⇨ 52.

: Press to reject an incoming call or end a current call.

SRCE : Press to switch between the radio, CD, and for equipped vehicles, DVD, front auxiliary, rear auxiliary, Pandora, Stitcher, and iPod/USB.

Press and hold to pause the currently playing track or mute the speakers if the source is radio or SiriusXM.

Press and hold again to resume the current track or to unmute the speakers.

: Press to go to the next AM or FM radio station, or next XM channel.

Press to go to the next track or chapter while sourced to the CD or DVD slot.

When connected, press  to select a track on an iPod or USB device.

1. Press and hold  until a beep is heard to place the radio into scan mode. A station will play for five seconds before moving to the next station.
2. To stop the scan function, press  again.
3. For CD/DVD, iPod, or USB, press and hold to quickly move forward through the tracks. Release to stop on the desired track.

+  or -  : Use to increase or to decrease the volume.


Using the System

The infotainment system is controlled by touching the infotainment display and by using the controls on the center stack.

Voice recognition could also be used to control certain infotainment features.

Press  on the steering wheel controls to begin voice recognition. See *Voice Recognition* ⇨ 52.

Home Page

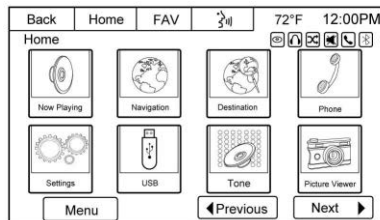

The infotainment system displays a Home Page to access all of the applications.

Back : Touch to go back to the previous page or Home Page.

Home : From any page, touch to cycle through the Home Page icons to start a different application. The Home Page can have up to three pages with eight icons per page. Each of these pages can be customized to contain your choice

of icons. They may also be re-ordered on each infotainment display according to preference.

FAV : In AM, FM, or XM, touch to scroll through the favorites banner near the bottom of the display. The favorites banner stores your favorite radio stations and SiriusXM channels. To store a favorite station or channel, touch and hold the desired position on the banner until a beep is heard.

 : Touch to begin voice recognition. See *Voice Recognition* ⇨ 52. Touch and hold to mute the radio.


Menu : Touch to enter the Home Page menu.

◀ : Touch to go to the previous Home Page.

▶ : Touch to go to the next Home Page.

8 Introduction

Home Page Customization

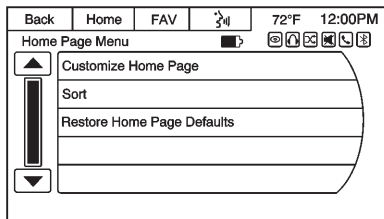

All three Home Pages can be individually customized.

To change icons on the current Home Page:

1. Touch Menu.
2. Touch Customize Home Page.
3. Touch an icon to add or remove it from the Home Page. A checkmark indicates it will be displayed. The maximum number of icons on any Home Page is eight.
4. Touch Done.

To re-order icons on the current Home Page:

1. Touch Menu.

2. Touch Sort.
3. Touch an icon to move it.
4. Touch another icon to swap the position with the icon touched in Step 3.
5. Touch Done.

To restore Home Page defaults:

1. Touch Menu.
2. Touch Restore Home Page Defaults.

Home Page Features

Some features are disabled when the vehicle is moving and some icons may not be active.


Touch icons are highlighted in color when available or grayed out when not available.

Various functions are disabled when the vehicle is moving.



Touch the Now Playing icon to display the active source page. The sources available are AM, FM, SiriusXM, if equipped, CD, DVD, if equipped, Bluetooth Audio, USB/iPod, Pandora, if equipped, Stitcher, if equipped, and AUX.


See *AM-FM Radio* ⇨ 13, *Satellite Radio* ⇨ 16, *CD/DVD Player* ⇨ 25, *USB Port* ⇨ 29, *Pandora Internet Radio* ⇨ 16, *Stitcher Internet Radio* ⇨ 20, and *Auxiliary Devices* ⇨ 33.

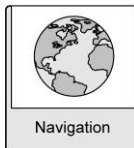

Touch the Navigation icon to display a map of your current vehicle position. See *Using the Navigation System* ⇨ 36, *Maps* ⇨ 38, *Navigation Symbols* ⇨ 39, *Destination* ⇨ 40, and *Settings* ⇨ 59.




Touch the Destination icon to display the Destination Entry main page or the Destination Menu. The available options provide a variety of ways to enter a destination. See *Destination* ⇨ 40.

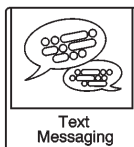


Touch the Text Messaging icon to display a pop-up message display stating, "Retrieving Messages."


Once messages are retrieved, select a message for viewing, or touch Sent to view a list of sent or received messages. See *Text Messaging* ⇨ 80.

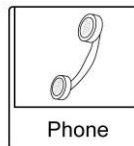


Touch the Phone icon to display the Phone main page. See *Bluetooth* ⇨ 68.

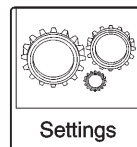


Touch the Settings icon to display the Settings main page. From this display, adjust features such as time and date, radio, phone, navigation, audio prompts, and display. See *Settings* ⇨ 59.

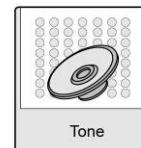


Touch the Tone icon to display the Tone main page. Adjust the tone and speaker balance by touching the display options. There are options such as EQ (equalizer), Bass, Middle, Treble, and Balance. See *AM-FM Radio* ⇨ 13.

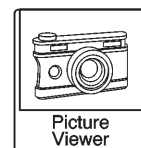


Touch the Picture Viewer icon to view pictures on your USB device or SD card. Pictures on the SD card can only be viewed through a USB adapter. See *Pictures* ⇨ 23.

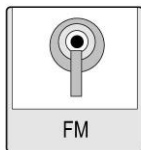

Touch the FM icon to display the FM main page and play the current or last tuned FM station. See *AM-FM Radio* ⇨ 13.

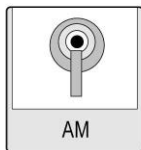

Touch the AM icon to display the AM main page and play the current or last tuned AM station. See *AM-FM Radio* ⇨ 13.

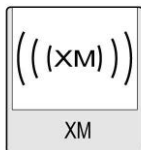

Touch the XM icon (if equipped) to display the XM main page and play the current or last tuned SiriusXM channel. See *Satellite Radio* ⇨ 16.




Touch the Pandora icon (if equipped) to display the Pandora main page and stream personalized radio stations based on artists, songs, genres, and comedians. See *Pandora Internet Radio* ⇨ 16.



Touch the Stitcher icon (if equipped) to display the Stitcher main page and stream news, sports, and

entertainment shows through the audio system. See *Stitcher Internet Radio* ⇨ 20.

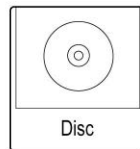


Touch the Disc icon to display the CD main page and play the current or last CD track selected. See *CD/DVD Player* ⇨ 25.




Touch the Bluetooth Audio icon to display the Bluetooth Audio main page and play music through a Bluetooth device. See *Bluetooth Audio* ⇨ 34.




Touch the iPod icon to display the iPod main page and play the current or last track selected. See *USB Port* ⇨ 29.

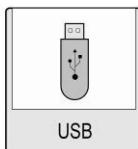


Touch the USB icon to display the USB main page and play the current or last track selected. See *USB Port* ⇨ 29.

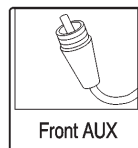

Touch the Front AUX icon to access any connected auxiliary device. See *Auxiliary Devices* ⇨ 33.

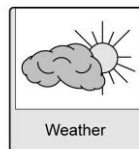

Touch the Weather icon (if equipped) to display the Weather main page. Select other weather-related options from that list. See “Weather (If Equipped)” under *Settings* ⇨ 59.

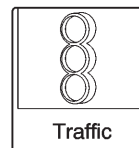

Touch the Traffic icon (if equipped) to display the Traffic main page. Select other traffic-related options from that list. See “SiriusXM NavTraffic (If Equipped)” under *Settings* ⇨ 59.

Cleaning High Gloss Surfaces and Vehicle Information and Radio Displays

For vehicles with high gloss surfaces or vehicle displays, use a microfiber cloth to wipe surfaces. Before wiping the surface with the microfiber cloth, use a soft bristle brush to remove dirt that could scratch the surface. Then use the microfiber cloth by gently rubbing to clean. Never use window cleaners or solvents. Periodically hand wash the microfiber cloth separately, using mild soap. Do not use bleach or fabric softener. Rinse thoroughly and air dry before next use.

Caution

Do not attach a device with a suction cup to the display. This may cause damage and would not be covered by the vehicle warranty.

Software Updates

Website Information

GMC

In the U.S., see www.gmc.com.

In Canada, see your dealer.

Chevrolet

In the U.S., see www.chevrolet.com.

In Canada, see your dealer.

Customer Assistance Offices

See the owner's manual for
Customer Assistance Office phone
numbers.

Radio

AM-FM Radio

Playing the Radio

PUSH/⏻:

- Press to turn the radio on or off.
- Turn to increase or decrease the volume of the active source.

The steering wheel controls can also be used to adjust the volume. See *Steering Wheel Controls* ⇨ 6.

Audio Source

To access AM, FM, or SiriusXM, if equipped, do one of the following:

- On one of the Home Pages, touch the AM, FM, or XM, if equipped, icons.
- Press SRCE on the center stack or steering wheel or touch the Source menu on the infotainment display to scroll through the options. A source ribbon will appear near the bottom of the display allowing you to select the one you want.

- Use voice recognition by pressing one of the voice recognition icons. After the voice prompt and the beep, say one of the following: "Tune AM," "Tune FM," "Tune XM," "AM," "FM," or "XM."

Infotainment System Settings

Tone Settings

To access the tone settings, touch the Tone icon on the Home Page, or press the PUSH/SEL knob while in an audio source.

To adjust the settings:

- Bass: Touch + or – to change the level.
- Middle: Touch + or – to change the level.
- Treble: Touch + or – to change the level.
- EQ (Equalizer) (If Equipped): Touch ◀ or ▶ to scroll through the preset EQ options.

- Stereo/Surround/DSP Mode (If Equipped): Touch ◀ or ▶ to scroll through the preset Digital Signal Processing (DSP) or to toggle between Stereo and Surround (5.1 DVD only) modes.
- Fade: Touch F to fade the audio to the front speakers. Touch R to fade the audio to the rear speakers. The middle position balances the sound between the front and rear speakers.
- Balance: Touch L to balance the audio to the left speakers. Touch R to balance the audio to the right speakers. The middle position balances the sound between the left and right speakers.

Finding a Station

Press SRCE on the center stack to go to the currently playing source. Press it again to select a different source.

14 Radio


Turn the PUSH/SEL knob to find a radio station or channel. To select a preset station, touch FAV to scroll through the favorites banner. Touch the desired station on the banner.

Seeking a Station


Press $\leftarrow$ SEEK or SEEK $\rightarrow$ to search for a station, or use $\rightarrow$ on the steering wheel controls.

Press and hold $\leftarrow$ SEEK or SEEK $\rightarrow$ to scan up or down the band, pausing on each station for five seconds. Press $\leftarrow$ SEEK or SEEK $\rightarrow$ again to cancel the scan.

AM

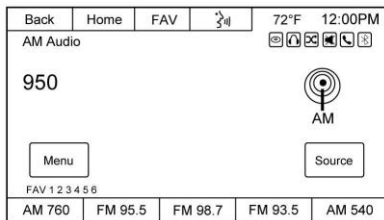

To access the AM menu, touch Menu from the AM source display:

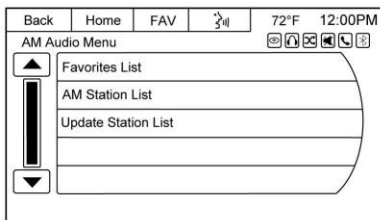


Favorites List : Touch to display the favorites list.


AM Station List : The station list may need to be updated before touching to display a list of AM stations.

Update Station List : Touch to update and then display the list of AM stations.

FM

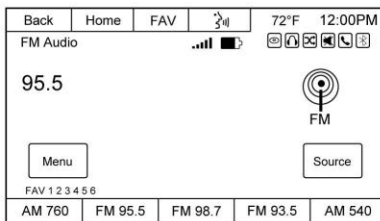

To access the FM menu, touch Menu from the FM source display.

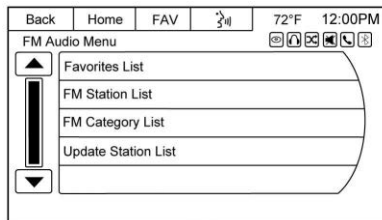


Favorites List : Touch to display the favorites list.

FM Station List : The station list may need to be updated before touching to display a list of FM stations.


FM Category List : Touch to select the desired genre.

Update Station List : Touch to update and then display the list of FM stations. An FM station list update may take several minutes.

SiriusXM (If Equipped)

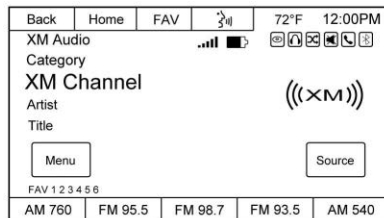

To access the SiriusXM Menu, touch Menu from the XM source display.

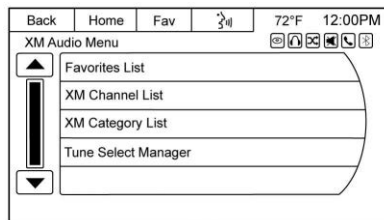

Favorites List : Touch to display the favorites list.

XM Channel List : Touch to display a list of SiriusXM channels.

XM Category List : Touch to display a list of SiriusXM categories.

Tune Select Manager

For vehicles with navigation, if equipped with SiriusXM, touch and the following may display:

- **Artist**: Touch to set an audio alert when the current artist is playing on a SiriusXM channel.
- **Song**: Touch to set an audio alert when the current song is playing on a SiriusXM channel.
- **Tune Select Manager**: Touch Disable/Enable All Alerts to enable or disable all alerts. A checkmark next to the alert means it is turned on. Touch an alert to turn it off. Touch Delete to delete an alert.
- **Audible Alert**: This feature will give an audio alert when certain artists or songs are available on a specific station. Touch to turn on or off.

Storing Radio Station Presets

Up to 30 preset stations can be stored into the favorites banner. AM, FM, and XM, if equipped can be mixed. To store:

1. From the AM, FM, or XM main page, touch and hold one of the presets at the bottom of the infotainment display. After a few seconds, a beep is heard and the new preset information displays for that preset at the bottom of the infotainment display.
2. Repeat for each preset.

Mixed-Band Presets

Each favorite page can store five preset stations. The presets within a page can be from different radio bands.

To scroll through the pages, press FAV or touch FAV on the top bar. The current page number displays above the preset.

16 Radio

To change the number of favorite pages displayed:

1. Touch Settings on the Home Page.
2. Touch Favorite Pages.
3. Select the number of pages to display.

Recalling a Preset Station

To recall a preset station from a favorites page, do one the following:

- Touch FAV on the top bar to display the preset pop-up. Touch one of the presets to go to the selected preset station.
- In the AM, FM, or XM (if equipped) main page, touch one of the presets to go to the selected preset station.

Satellite Radio

Vehicles with a valid SiriusXM satellite radio subscription can receive SiriusXM programming.

SiriusXM satellite radio has a wide variety of programming and commercial-free music, coast to

coast, and in digital-quality sound. For more information, see www.siriusxm.com or call 1-888-601-6296 in the U.S. In Canada, see www.siriusxm.ca or call 1-877-438-9677.

When SiriusXM is active, the station name, number, category name, song title, and artist display on the infotainment display. SiriusXM may update the background picture at any time.

SiriusXM Categories

SiriusXM stations are organized in categories.

Adding or Removing SiriusXM Categories

Using the Home Page:

1. Touch the Settings icon on the Home Page.
2. Select XM Categories.
3. Select or deselect a category. A checkmark will indicate that the category is selected.

Touch Restore All to restore all SiriusXM categories.

Pandora Internet Radio

Pandora

Pandora is a free Internet radio service that streams personalized radio stations based on artists, songs, genres, and comedians. Create stations with the Pandora application downloaded on a phone or device, then use  (thumbs up) or  (thumbs down) to personalize stations. To set up an account, or for more information, go to www.pandora.com.

A phone or tablet with Internet connection is required for this application. Personal cell phone data plans are used. Make sure the latest version is installed on the device and the volume is turned up.

To install Pandora:

- On an Android phone or Android Tablet, go to the Google Play Store and search for Pandora. Install to the phone, not to the SD card.

- On a BlackBerry phone, go to the BlackBerry World and search for Pandora.
- On an iPhone, iPad, or iPod touch, go to the iTunes Store and search for Pandora.

Launching Pandora



Connect the iPhone, iPad, or iPod touch to the USB port, or connect an Android or BlackBerry through Bluetooth. For first-time use, set up the stations before connecting to the vehicle. The Pandora icon will be available on the Home Page.

The USB jack will charge Apple devices drawing up to 1 amp of current. The two charging only, 2.1 amp USB ports in the rear of the center console can charge the iPad.

The signal strength and battery level meters indicate the conditions of the paired phone. There may be performance issues with this feature when signal or battery levels are low.

Launch Using an iPhone, iPod touch, or iPad

1. Plug the device into the USB port. The phone display must be unlocked.
2. To launch, do one of the following:
 - Make sure the device is unlocked so the Allow option can be pressed on the device.
 - Touch Pandora on the Home Page.
 - Press  and say "Pandora" or "Play Pandora."

- Press SRCE on the center stack or steering wheel. Touch Source and select Pandora from the Source banner.

If nothing happens when the available Pandora icon is touched, download the latest Pandora application to the device and retry. Also, verify you are in a good signal area.

Pandora will always be highlighted on the Home Page when an iPhone, iPad, or iPod touch having the application capability is connected using the USB port. To use, log in to your account.

Launch Using an Android Phone

1. Pair the Android phone using Bluetooth.
2. Use one of the following to launch:
 - Touch Pandora on the Home Page.
 - Press  and say "Pandora" or "Play Pandora."

18 Radio

- Press SRCE on the center stack or steering wheel. Touch Source and select Pandora from the Source banner.

If nothing happens when the available Pandora icon is touched, download the latest Pandora application to the device and retry. Also, verify you are in a good signal area.

Launch Using a BlackBerry Phone

The phone must be unlocked. To launch Pandora service:


1. Pair the BlackBerry phone using Bluetooth.
2. Use one of the following to launch:
 - Touch Pandora on the Home Page.
 - Press  and say "Pandora" or "Tune Pandora."

- Press SRCE on the center stack or steering wheel or touch Source and select Pandora from the Source banner.

If nothing happens when the available Pandora icon is touched, download the latest Pandora application to the device and retry. Also, verify you are in a good signal area.

If the "Please See Device" message is shown, the login display may appear on the device.

Pandora Menu

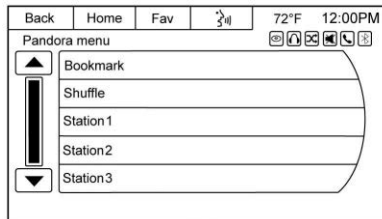

Touch Menu on the Pandora main page.

Bookmark : When touched during a song, a choice displays to bookmark the artist or song. This sends the bookmark to the Pandora account.

Shuffle : Touch to play the stations in random order.

User-Created Stations : Touch to play a user-created station.

Pandora Features

Pandora service has features to rate songs, skip songs, or change stations.



 : When touched, Pandora stores this information, changes to the next song, and does not play this song on this station again. This helps Pandora choose which songs

should not play on this station. This feature is only available on user-created stations.

 : When touched, Pandora stores this information and  is checkmarked for the remainder of the song. This helps Pandora choose which songs should play on this station.

 : When touched, Pandora changes to the next song.

 or  : Touch to play or pause playback.

Free Pandora App Limit on How Many Songs Can be Skipped

Pandora limits the total number of skips allowed. If the skip limit has been reached, thumbs down feedback is recorded but the current song will continue to play.

Pandora Advertisements While Using the Free Version

Pandora may play advertisements. Ads normally displayed on the phones will not be seen while connected to the vehicle. Artist

name and song title will not be displayed, and the skip track option is not available.

Pandora Troubleshooting

Unable to Connect Device to Vehicle

If the device is unable to connect to the USB or Bluetooth:

1. Turn the vehicle off.
2. Remove the key from the ignition.
3. Open and close the driver door, wait about one minute, and try to connect the device again.

Unable to Start Pandora

If the device is unable to launch Pandora:

- Check that the latest version of Pandora is installed.
- Check that there is an active account logged into Pandora.
- Check that there is good signal strength. The signal strength and phone battery level can be checked on the radio display.

- Have at least one station created.
- For Android and BlackBerry devices, check that the device is paired with the vehicle, and the Bluetooth icon on the display is highlighted.
- For iPhone, iPod touch, or iPad devices, check that the USB cable is connected to the USB port and the infotainment display is unlocked.
- Close Pandora on the device and launch again. Devices that allow multitasking may require an extra step to quit the Pandora application. See the cell phone manufacturer's user guide.

Thumbs Up or Thumbs Down Error

If there is an error trying to rate a song with the  or  icons, the message "Thumbs Down Error" or "Thumbs Up Error" may display. Touch OK to retry.

Loss of Audio

Loss of Pandora audio can happen in different ways:

- Weak or lost data connection. The signal strength and phone battery level can be checked on the radio display.
- Device needs to be charged.
- Application needs to be relaunched.
- Connection between phone and radio lost.
- If any iPhone, iPod touch, or iPad is connected to Bluetooth and the dock connector, unplug the dock connector and plug it in again.
- Volume is too low. Turn up the volume on the device.

If the connection is lost between the application and device, a message "Please unlock your phone or restart the phone app and try again" may display. Touch OK to retry.

Common Pandora Messages

Messages that may show on the Infotainment display are:

Paused or Audio Paused :

Playback is paused on the radio or device. Touch ► in the middle of the time bar near the bottom of the display to play or touch || to pause.

No Stations Found : Logged in but no stations have been created.

Communication Failure or Application Unexpectedly Quit or Network Connection Could Not Be Established :

Communication failure between the radio and the phone application, or between the phone and data connection, or the device is locked.

See www.pandora.com/help for more information. If the service will not work, see your dealer for assistance.

Stitcher Internet Radio

Stitcher

Stitcher SmartRadio is an Internet radio service that streams news, sports, and entertainment shows through the audio system. Create personalized, on-demand stations or discover new shows through Stitcher's preset stations. To set up an account, or for more information, go to www.stitcher.com. Stitcher may be available as a worldwide Internet service.


A phone or tablet with Internet connection is required for this application. Personal cell phone data plans are used. Make sure the latest version is installed on the device and the volume is turned up.

To install Stitcher:

- On an Android phone or Android Tablet, go to the Google Play Store and search for Stitcher. Install to the phone, not to the SD card.

- On an iPhone, iPad, or iPod touch, go to the iTunes Store and search for Stitcher.

Launching Stitcher

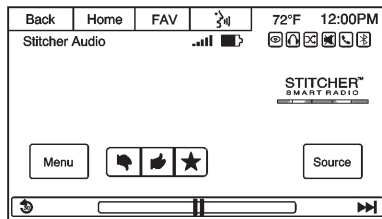

Connect the iPhone, iPad, or iPod touch to the USB port, or connect an Android through Bluetooth. For first time use, set up the stations before connecting to the vehicle. The Stitcher icon will be available on the Home Page.

The signal strength and battery level meters indicate the conditions of the paired phone. There may be performance issues with this feature when signal or battery levels are low.

Launch Using an iPhone, iPod touch, or iPad

- Plug the device into the USB port. The phone screen must be unlocked.
- To launch, do one of the following:
 - Make sure the device is unlocked so the Allow option can be pressed on the device.
 - Touch Stitcher on the Home Page.
 - Press SRCE on the center stack or touch Source and select Stitcher from the Source banner.
 - Press  and say "Stitcher" or "Play Stitcher."

If nothing happens when the available Stitcher icon is touched, download the latest Stitcher application to the device and retry. Also, verify you are in a good signal area.

Stitcher will always be highlighted on the Home Page when an iPhone, iPad, or iPod touch is connected using the USB port. To use, log in to your account.

If the "Please See Device" message is shown, the login display may appear on the device.

Launch Using an Android Phone


- Pair the Android phone using Bluetooth.
- Use one of the following to launch:
 - Touch Stitcher on the Home Page.
 - Press SRCE on the center stack or touch Source and select Stitcher from the Source banner.
 - Press  and say "Stitcher" or "Play Stitcher."

If nothing happens when the available Stitcher icon is touched, download the latest Stitcher

application to the device and retry. Also, verify you are in a good signal area.

If the “Please See Device” message is shown, the login display may appear on the device.

Stitcher Menu

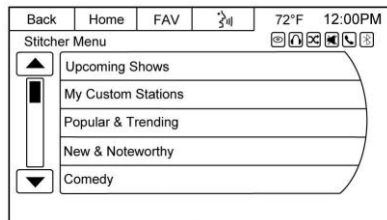

To access the Stitcher Menu, press the Menu icon on the main Stitcher display.

Favorites Playlist : If favorite stations are stored on your device, they can be accessed through “My On Demand Stations/My Custom Stations” in the Menu list.

Stitcher Station Categories : This displays categories by topic. When a category then subcategory is

selected, the radio will start playing the first program in that subcategory.

Turn the PUSH/SEL knob to bring up the first 24 stations of that subcategory.

Current Station Playlist : While listening to a show, turn the PUSH/SEL knob to display the menu list of shows available for the current station.

Stitcher Features

If available, Stitcher has a thumbs up or down method of rating programs.

★ : Touch to mark the program as a favorite.

Stitcher Troubleshooting

Unable to Connect Device to Vehicle

If the device is unable to connect to the USB or Bluetooth:

1. Turn the vehicle off.
2. Remove the key from the ignition.

3. Open and close the driver door, wait about one minute, and try to connect the device again.

Unable to Start Stitcher

If the device is unable to launch Stitcher:

- Check that the latest version of Stitcher is installed.
- Check that there is an active account logged into Stitcher.
- Check that you have good signal strength.
- Have at least one station created.
- For Android devices, check that the device is paired with the vehicle and the Bluetooth icon on the display is highlighted.
- For iPhone, iPod touch, or iPad devices, check that the USB cable is connected to the USB port and the screen is unlocked.
- Close Stitcher on the device and launch again. Devices that allow multitasking may require an

extra step to quit the Stitcher application. See the cell phone manufacturer's user guide.

Thumbs Up or Thumbs Down Error

If there is an error trying to rate a song with the  or  icons, the message "Thumbs Down Error" or "Thumbs Up Error" may display. Touch OK to retry.

Loss of Audio

Loss of Stitcher audio can happen in different ways:

- Weak or lost data connection.
- Device needs to be charged.
- Application needs to be relaunched.
- Connection between phone and radio lost.
- If any iPhone, iPod touch, or iPad is connected to Bluetooth and the dock connector, unplug the dock connector and plug it in again.

- Volume is too low. Turn up the volume on the device.

If the connection is lost between the application and device, a message "Please unlock your phone or restart the phone app and try again" may display. Touch OK to retry.

Common Stitcher Messages

Messages that may show on the Infotainment display are:

Paused or Audio Paused :

Playback is paused on the radio or device. Touch  in the middle of the time bar near the bottom of the display to play or press  to pause.

No Stations Found : Logged in but no stations have been created. Touch OK to continue.

Communication Failure or Application Unexpectedly Quit or Network Connection Could Not Be Established : Communication failure between the radio and the phone application, or between the phone and data connection, or the device is locked.


See www.stitcher.com/help for more information. If the service will not work, see your dealer for assistance.

Pictures


Pictures can only be viewed using USB devices. If pictures are on an SD card, transfer to a USB device or use a USB-SD adapter. A maximum 5Mb uncompressed photo size is supported, however to achieve this, use a 4 Megapixel or lower resolution camera setting. Only jpeg, bmp, gif, and png files are supported.

1. Touch the Picture Viewer display icon on the Home Page.
2. The system does a search to find the picture folders. A "Please wait" message may display until the search is finished.

24 Radio

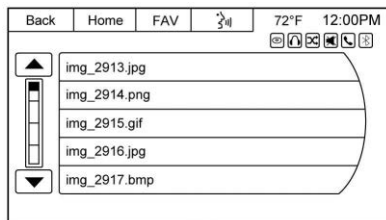

3. A list displays. Select a picture to view.

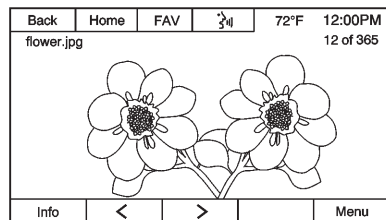

4. Once a picture displays, the following options are available:

Info : Touch to turn file name information on or off.

< : Touch to display the previous picture.

> : Touch to display the next picture.

Menu : Touch to open the Picture Viewer Settings display.

Select Picture Viewer Main to display a list of all the pictures. Select a picture to view.

If the displayed picture is not used within six seconds, the upper and lower bar options will disappear. Touch-tap the display to re-show the upper and lower bar.

Audio Players

Avoiding Untrusted Media Devices

When using media devices such as CDs, DVDs, Blu-ray Discs, SD cards, USB devices, and mobile devices, consider the source. Untrusted media devices could contain files that affect system operation or performance. Avoid use if the content or origin cannot be trusted.

CD/DVD Player

The player can be used to play both CDs and DVDs containing audio and video content. Different file types such as MP3 are supported.

With the radio on, insert a disc into the slot, label side up. The player pulls it in and begins playing.

The system is capable of playing:

- Most audio CDs
- CD-R
- CD-RW

- MP3 or unprotected WMA formats
- DVD-Video
- DVD-R/RW
- DVD+R/RW

When playing any compatible recordable disc, the sound quality can be reduced due to disc quality, the method of recording, the quality of the music that has been recorded, or the way the disc has been handled.

There can be increased skipping, difficulty in recording tracks, difficulty in finding tracks, and/or difficulty in loading and ejecting. If these problems occur, check the disc for damage or try a known good disc.

To avoid damage to the CD/DVD player:

- Do not use scratched or damaged discs.
- Do not apply labels to discs. The labels could get caught in the player.

- Insert only one disc at a time.
- Keep the loading slot free of foreign materials, liquids, and debris.
- Use a marking pen to label the top of the disc.

DVD-A is not a supported media. Although sound may be heard, full function is not available.

Loading and Ejecting Discs

To load a disc:

1. Turn the radio on.
2. Insert a disc into the slot, label side up. The player pulls it in the rest of the way. If the disc is damaged or improperly loaded, a "Disc error" message displays. The disc ejects.

The disc automatically plays once loaded.

Press  to eject a disc from the CD/DVD player. If the disc is not removed within a short period of time, it is automatically pulled back into the player.

Error Messages

If Disc error displays and/or the disc comes out, it could be for one of the following reasons:

- The disc has an invalid or unknown format.
- The disc is very hot. Try the disc again when the temperature returns to normal.
- The road is very rough. Try the disc again when the road is smoother.
- The disc is dirty, scratched, wet, or upside down.
- The air is very humid. Try the disc again later.
- There was a problem while burning the disc.
- The label is caught in the DVD player.

If the CD/DVD is not playing correctly, for any other reason, try a known good CD/DVD.

If any error continues, contact your dealer.

Playing an Audio CD

Make sure the disc is inserted in the player.

1. Touch the Disc display icon from the Home Page or from the SRCE/Source banner.
2. From the CD Audio display, touch Menu to display the list of Tracks/Songs.
3. Touch on the desired track to play.

On the CD main page, a track number displays at the beginning of each track. Song, Artist, elapsed time, and Album information displays when available.

Use the following controls to select or manipulate the desired track:

⏮ SEEK:

- Press to seek to the beginning of the current or previous track. If the track has been playing for less than eight seconds, it seeks to the previous track. If longer than eight seconds, the current track starts from the beginning.

⏭ SEEK:


- Press to seek to the next track.

To fast forward or reverse through a track, touch ⏭ or ⏮ near the bottom of the display. Touch ▶ in the middle of the time bar near the bottom of the display to play or touch || to pause the displayed track.

PUSH/SEL : Turn to the right or left to select the next or previous track. When turning to the left by one click, if the track has been playing for more than eight seconds, it will go to the beginning of the current song.

Shuffle : Touch to play tracks in random order.

Playing a DVD Video

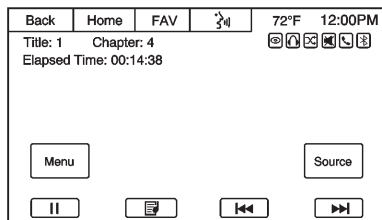


Make sure the disc is inserted in the player.

Touch the Disc icon from the Home Page or from the SRCE/Source banner to display the DVD main page.

Play/Pause : Touch ► near the bottom of the display to play or touch || to pause.

Fast Forward : Touch ►► near the bottom of the display to quickly move forward through the video. Continuing to touch ►► will increase the fast forward speed up to 32x. Touch Play to resume play mode.

Fast Reverse : Touch ◀◀ near the bottom of the display to quickly move in reverse through the video. Keep touching ◀◀ to continue to increase the fast reverse speed up to 32x. Touch Play to resume play mode.

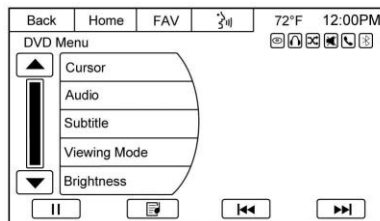

From the DVD main page, touch Menu to display the DVD Menu options.

Cursor : Touch to access the Cursor menu. The arrows and other cursor options allow navigation of the DVD menu options. The Cursor menu options are only available if a DVD has a menu and the vehicle is in P (Park).

Audio : Keep touching to cycle through the audio options if available on disc.

Subtitle : Keep touching to cycle through the available subtitle options if available on disc.

Viewing Mode : Touch to change the viewing mode of the video display. The options are Wide Screen, Full Screen, and Zoom.

Brightness : Touch – or + to adjust the brightness of a video, if it is active.

Search : Touch to perform a numbered title or chapter search.

Angle : Keep touching to cycle through the different viewing angles while the DVD is playing. This option is disc specific and is not available on all disks.

MP3

Playing an MP3 CD


To play an MP3 CD, follow the same instructions as “Playing an Audio CD.”

28 Audio Players


The following guidelines must be met when creating an MP3 disc, otherwise the CD might not play:

- Sampling rate: 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, and 48 kHz.
- Bit rates supported: 8, 16, 24, 32, 40, 48, 56, 64, 80, 96, 112, 128, 144, 160, 192, 224, 256, and 320 kbps.
- Maximum number of folders: eight folders with 255 files per folder.
- Maximum of 1,000 files on a disc.
- Recorded on a CD-R or CD-RW with a maximum capacity of 700 MB.
- The Artist/Album/Song Titles/Genre information requires a CD to be fully scanned before the music navigator works with these menus.

MP3 Audio

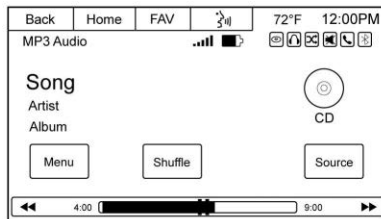

Touch Menu while that source is active to access the MP3 Audio Menu. There may be a delay before all the information is available.

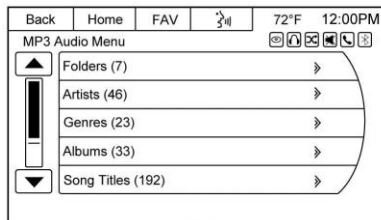

Touch any of the following options on the MP3 Audio Menu display:

Folders : Touch to view the folders stored on the disc. Select a folder to view the list of songs or sub-folders in that folder. Select a song from the list to begin playback.

Artists : Touch to view the list of artists stored on the disc. Select an artist name to view a list of albums by the artist. The All Songs option can be selected to view a list of all songs by the same artist. Select a song from the list to begin playback.

Genres : Touch to view the genres. Select a genre to view a list of artists of that genre or all songs of the same genre. Select a song from the list to begin playback.

Albums : Touch to view the albums on the disc. Select the album to view a list of all songs on the album. Select a song from the list to begin playback.

Composers : Touch to view the list of composers stored on the disc. The Composers menu displays. Select a composer to display a list

of albums from the composer, or select All Songs to display all of the composer's songs on the disk.

Song Titles : Touch to display a list of all songs on the disc. Songs are displayed as stored on the disc. To begin playback, select a song from the list.

Shuffle : Touch to play the tracks randomly. Touch again to stop shuffle. Look for the shuffle icon to turn on in the radio display.

Empty Folders

If a folder is empty or contains only folders, the player advances to the next folder in the file structure that contains a compressed audio file. The empty folder(s) are not displayed or numbered.

File System and Naming

The song titles, artists, albums, and genres are taken from the file's ID3 tag and are only displayed if present in the tag. If a song title is not present in the ID3 tag, the radio displays the file name as the track name.

Preprogrammed Playlists (CD Models Only, DVD Models Do Not Support Playlists)

The radio recognizes preprogrammed playlists; however, there is no editing capability. These playlists are treated as special folders containing compressed audio song files.

USB Port

Playing from a USB


A USB mass storage device can be connected to the USB port.

The USB port is in the storage area located in the lower portion of the center stack.

DC power of 5 volts is limited to 1 amp from this port. Devices such as iPads that require greater current will not charge from this port.

Two additional ports, capable of charging an iPad and used for charging only, are in the rear of the center console.

USB MP3 Player and USB Devices

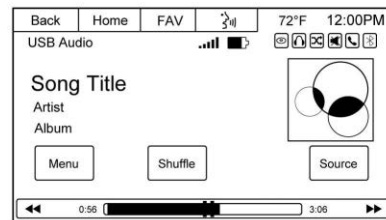

- The USB MP3 players and USB devices connected must comply with the USB Mass Storage Class specification (USB MSC) and support formats of FAT32, FAT16, and HFS+.
- Hard disk drives are not supported.
- The radio will not be able to play back write-protected music.
- The following restrictions apply for the data stored on a USB MP3 player or USB device:
 - Maximum folder structure depth: eight levels.

30 Audio Players

- Maximum number of MP3/WMA files that can be displayed: 10,000.
- Playlist entries must be in the form of relative paths.
- The system attribute for folders/files that contain audio data must not be set.

To play a USB device, do one of the following:

- Connect the USB and it begins to play.
- Touch the USB icon on the Home Page.
- Press SRCE to scroll until the USB source display is available.
- Press   on the steering wheel controls and say "Play USB" after the beep. See *Voice Recognition* ⇨ 52.

The following playlist formats are supported:

- M3U (Standard and Extended)
- iTunes
- PLS (Standard)

While the USB source is active, use the following to operate:


PUSH/SEL Knob : Turn to scroll through the list. Turn quickly to fast scroll alphabetically through large lists.

 **SEEK** : Press to seek to the beginning of the current or previous track. If the track has been playing for less than eight seconds, the previous track plays. If playing longer than eight seconds, the current track restarts.

SEEK  : Press to seek to the next track.

Shuffle : Touch to play the tracks randomly. Touch again to stop shuffle. Look for the shuffle icon to turn on in the radio display.

USB Audio Menu

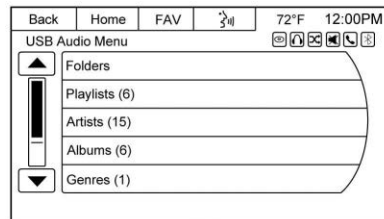

Press Menu to access the USB Audio Menu display.

Folders : Touch to open a folder list to access the files within the folder structure.

Playlists:

1. Touch to view the playlists on the USB.
2. Touch a playlist to view the list of all songs in that playlist.
3. Touch a song from the list to begin playback.

Artists:

1. Touch to view the list of artists on the USB.

2. Touch an artist name to view a list of all albums by the artist.
3. To select a song, touch All Songs or touch an album and then select a song from the list.

Albums

1. Touch to view the albums on the USB.
2. Touch the album to view a list of all songs on the album.
3. Touch a song from the list to begin playback.

Genres

1. Touch to view the genres on the USB.
2. Touch a genre to view a list of all songs of that genre.
3. Touch a song from the list to begin playback.

Song Titles

1. Touch to display a list of all songs on the USB.

2. Songs are displayed as they are stored on the device. To begin playback, touch a song from the list.


Composers

1. Touch to view the list of composers on the USB.
2. Touch a composer name to view a list of all compositions by the artist.
3. To select a song, touch All Songs or touch an album and then touch a song from the list.

File System and Naming

The songs, artists, albums, and genres are taken from the file's song information and are only displayed if present. The radio displays the file name as the track name if the song information is not available.

Playing from an iPod

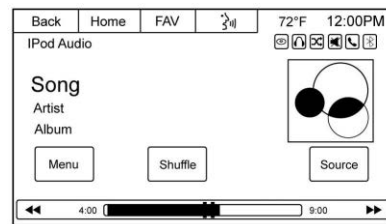

For the list of supported iPod models, see my.gmc.com/learn for GMC and mychevrolet.com/learn for Chevrolet.

The USB jack in the front storage bin will charge Apple devices drawing up to 1 amp of current. The two charging only, 2.1 amp USB ports at the rear of the center console can charge the iPad.

32 Audio Players


There may be problems with the operation and function in the following situations:

- When connecting an iPod on which a more recent version of the firmware is installed than is supported by the infotainment system.
- When connecting an iPod on which firmware from other providers is installed.

iPod music information displays on the radio's display and begins playing through the vehicle's audio system.

If the iPod is an unsupported model, it can still be listened to in the vehicle by connecting to the auxiliary input jack using a standard 3.5 mm (1/8 in) stereo cable.

iPod Menu

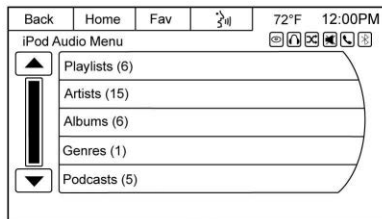

Use the iPod Audio Menu to select:

Shuffle : Touch to play the tracks randomly. The shuffle icon should display. Touch again to stop shuffle.

Playlists:

1. Touch to view the playlists on the iPod.
2. Touch a playlist name to view a list of all songs in the playlist.
3. Touch the song from the list to begin playback.

Artists:

1. Touch to view the artists on the iPod.

2. Touch an artist name to view a list of all albums with songs by the artist.
3. Touch an album.
4. Touch the song from the list to begin playback.

Albums:

1. Touch to view the albums on the iPod.
2. Touch an album name to view a list of all songs on the album.
3. Touch the song from the list to begin playback.

Genres:

1. Touch to view the genres on the iPod.
2. Touch a genre name to view a list of artists of that genre.
3. Touch an artist to view albums or All Songs to view all songs of that genre.
4. Touch the song from the list to begin playback.

Podcasts:

1. Touch to view the podcasts on the iPod.
2. Touch a podcast name to begin playback.

Song Titles:

1. Touch to view a list of all songs on the iPod.
2. Touch the song from the list to begin playback.

Composers:

1. Touch to view the composers on the iPod.
2. Touch the composer to view a list of songs by that composer.
3. Touch a song from the list to begin playback.

Audio Books:

1. Touch to view the audio books on the iPod.
2. Touch the audio book from the list to begin playback.

Playing from an iPhone or iPad

For the list of supported iPhone and iPad models, see www.my.gmc.com/learn for GMC and www.mychevrolet.com/learn for Chevrolet.

If music is available on the iPhone, it could be heard through the radio.

Follow the same instructions as stated earlier for using an iPod.

When an iPhone and iPod touch are connected through USB and Bluetooth, the audio may not be heard when iPod source on the radio is selected. Select either dock connector on the phone or disconnect and reconnect the device.

The USB jack in the front storage bin will charge Apple devices drawing up to 1 amp of current. The two charging only, 2.1 amp USB ports at the rear of the center console can charge the iPad.

Bluetooth Audio and Voice Recognition

See *Bluetooth Audio* ⇨ 34 and *Voice Recognition* ⇨ 52 for information on using voice recognition with Bluetooth Audio.

Make sure all devices have the latest software download.

Auxiliary Devices

This vehicle has an auxiliary input jack in the front of the radio and an optional auxiliary input jack in the rear.

The auxiliary jack is not an audio output. Do not plug headphones into the auxiliary input jack. Set up any auxiliary device while the vehicle is in P (Park).

The device volume may need adjusting for good sound.

Connect a 3.5 mm (1/8 in) cable from the auxiliary device to the auxiliary input jack. When a device is connected, the system

34 Audio Players


automatically begins playing audio from the device over the vehicle speakers.

If an auxiliary device has already been connected, but a different source is currently active, do one of the following:

- Press SRCE on the center stack or steering wheel, or touch the Source display to scroll through the Source banner. Select Front AUX or Rear AUX depending on where the device is connected.
- Touch Front AUX or Rear AUX on the Home Page.

Bluetooth Audio

If equipped, music may be played from a paired Bluetooth device. See “Pairing a Phone” under *Bluetooth* ➔ 68.

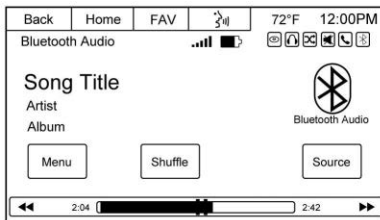

To play music through a Bluetooth device:

1. Make sure your mobile device is paired to the radio.
2. Launch music by doing one of the following:
 - Touch  on the Home Page.
 - Press SRCE until Bluetooth Audio is selected.

- Press  and say “Play Bluetooth Audio”

To play the tracks randomly, touch Shuffle. Touch again to stop shuffle.

Touch Menu to bring up the Bluetooth Audio menu display. Touch the Bluetooth Device List option to select or switch a paired device. See “Pairing a New Bluetooth Device” under *Bluetooth* ➔ 68.

Some phones support sending Bluetooth music information like Artist and/or Song Title to display on the radio.

When listening to Bluetooth audio, the audio that will play through the radio will be what is active or open on the phone.

OnStar System

4G LTE


If equipped with 4G LTE, up to seven devices, such as smartphones, tablets, and laptops, can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

Call 1-888-4ONSTAR (1-888-466-7827) to connect to an OnStar Advisor for assistance. See www.onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations. Services and apps vary by make, model, year, carrier, availability, and conditions. 4G LTE service is available in select markets. 4G LTE performance is based on industry averages and vehicle systems design. Some services require a data plan.


Navigation

Using the Navigation System


Press NAV on the center stack or touch the Navigation icon on the Home Page to access the navigation map.

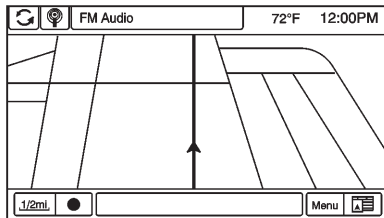

Press NAV on the center stack again to change between alternative views of the split and full map views.

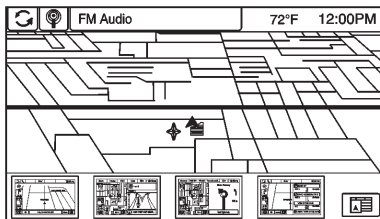

Touch the Map Mode option near the bottom right side of the map to display a list of map views. See *Navigation Symbols* ⇨ 39 for examples of a few icons. Touch the desired map view.

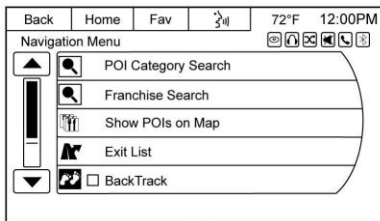


The Menu option at the bottom right side of the display accesses the Navigation Menu.

The touch-sensitive options available are:

POI Category Search

Back	Home	FAV	Signal	72°F	12:00PM
Select POI Category				Icons	
Category: All					
Location: Nearby					
Sort Method: By Distance					
				Search	

1. Touch to access the Select POI Category display and select the Category that you wish to search for. The POI Category displays with the selection options. Location and Sort Method filters are also available.
2. Touch the Search option to display POI Search Result display with a list of POIs.

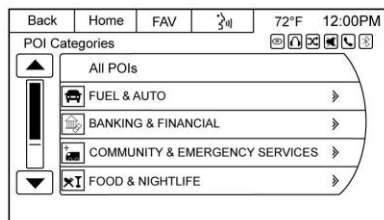

3. Select the desired POI.
A Destination Confirmation displays with the option to start the guidance.

Not all listed Categories may be selectable while the vehicle is in motion. The All POIs category is always selectable.

Franchise Search

Touch to access POI Franchise Search to choose a method for searching POI franchises. The method of search can be narrowed by entering specific ways for searching the POI franchises.

Searching for POI franchises will display the same menus as if searching for POI categories. Follow the instructions as stated earlier when searching for POI categories.

Show POIs on Map

Touch to access the Show POIs on Map display. Select Icons On or Off to display or remove icons on the map.

Press NAV on the center stack to display the map along with the selected icons.

Exit List

Touch to display a list of POI exits while on the highway.

Back Track


Touch to initiate the Back Track feature.

Current Position

1. Touch to display a split display showing detailed information about the vehicle position.

2. When on route, touch Save to Address Book to save the selected destination displayed on the map.

Traffic

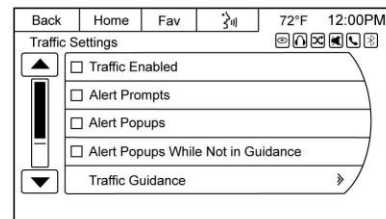


Touch to display traffic options for listing all traffic events in specific order. The Traffic Settings menu is also available.

Map Adjustments

The system lets you adjust the scale of view on the map. Also, as you drive, the map scrolls automatically based on the direction of travel.

Map Scales

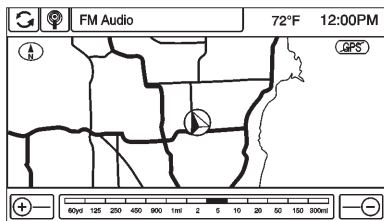

There are two methods to change the map scale. Touch the number icon in the bottom left corner to access the map scale and do one of the following:

- Touch + or – next to the map scale option on the bottom corner of the map display to change the zoom level.
- Touch the actual scale bar at the bottom of the map to the desired increment of zoom.

The map scale bar times out if the zoom level is not changed within a few seconds.

The scale can be configured for metric or English units. To change from metric to English or vice versa, see “Driver Information Center (DIC)” in the owner’s manual.

Scroll Features



- To scroll within the map, touch anywhere on the map display and the scroll symbol displays.
- Touch the map to center at the desired location.
- Touch and hold the display in any direction outside the scroll symbol to scroll the map in that direction.
- Scroll speed increases when touching closer to the edge of the display.

- Press NAV on the center stack to exit map scrolling and return to the current vehicle location on the map.



Press the cycling arrows at the top left of the map display to toggle between different menu options at the top of the display.

Maps

This section includes basic information about the map database.

The maps are stored in the navigation system.

Detailed Areas

Road network attributes are contained in the map database for detailed areas. Attributes include information such as street names,

 
street addresses, and turn restrictions. A detailed area includes all major highways, service roads, and residential roads. The detailed areas include points of interest (POIs) such as restaurants, airports, banks, hospitals, police stations, gas stations, tourist attractions, and historical monuments. The map database may not include data for newly constructed areas or map database corrections that are completed after production of the system. The navigation system provides full route guidance in the detailed map areas.

Navigation Symbols

Following are the most common symbols that appear on a map display.



The vehicle symbol indicates the current position and heading direction of the vehicle on the map.



The destination symbol marks the final destination after a route has been planned.



The waypoint symbol marks one or more set waypoints.

A waypoint is a stopover destination point added to the planned route.

The estimated time and distance to the destination are displayed.

If waypoints have been added to the current route, each waypoint destination displays estimated time and distance.



This symbol indicates that the map view is North up: North up displays North at the top of the map display regardless of the direction the vehicle is traveling. Select this display symbol to change the view to Heading up.



This symbol indicates that the map view is Heading up.

Heading up view displays the direction the vehicle is traveling at the top of the map display. The shaded triangle indicates North.

Touch this display symbol to change to 3D mode.

The 3D symbol is the same as the Heading up symbol, but the map is in 3D.

Touch this again to change back to the North up symbol.




The No GPS symbol appears when there is no Global Positioning System (GPS) satellite signal.



The Map Mode icon at the bottom right of a map display brings up the map modes pop-up display. Touch on one of the map modes to change the map view.

Destination

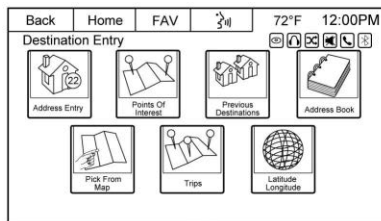

If route guidance is not active, touch Destination on the Home Page or press DEST on the center stack to access the Destination Entry display. Several options can be selected to plan a route by entering destinations. Some destination entry items such as Previous Destinations and Address Book may be grayed out if no destination was previously entered or saved.

If route guidance is active, press DEST on the center stack or touch the Destination icon on the Home Page to access other destination options on the route.

Alpha-Numeric Keyboard

Letters of the alphabet, symbols, punctuation, and numbers, when available, display on the navigation display as alpha/numeric keyboards. The alpha keyboard displays when data needs to be entered.

The following are some of the keys while in the keypad view.

QWERTY or ABCDEF : Touch to toggle between QWERTY or ABCDEF keyboard character layouts.

Symbols : Use to select symbols.

Space : Use to enter a space between characters or the words of a name.

Delete : Touch to delete an incorrect character that has been selected. Touch and hold to erase all of the text entered on the selected line.

Address Entry

Back	Home	FAV		72°F	12:00PM
Address Entry					
City:		MI			
Street:					
House #:					
Junction:	Enter Junction				
Done					

Touch the Address Entry option to enter the address manually using the keyboard. Set a route by entering the state name first.

If no state or province has been entered previously, the city and street fields are grayed out. Touch the option at the top right to select a state or province.

Enter the City and Street name. Then enter House # or Junction. House # or Junction will be grayed out if no Street name is entered.

The system has a preloaded list of all cities and streets in a selected state. To make name selection

easier, characters that match the ones in the preloaded list will be displayed.

A list displays if five or fewer names are available. If there are more than five, there will be a match counter to the right of the input field with the number of available matches. Touch the List option to view the list and select the entry.

After entering the destination information and selecting Done, the Destination Confirmation display lists preference options. Start guidance or select any of the other options.

Touch Done at any time while not grayed out and the system resolves a destination based on the entered information.

Points Of Interest (POI)

Touch the Points Of Interest option on the Destination Entry page. The POI Entry page displays a list with several options to search for the destination point:

Category : Touch the POI category, Location, and Sort method. Touch Search and the POI Search Result list will display. Touch your POI and follow the instructions on the display to start guidance.

Name : Enter the POI Name manually using the keyboard on the infotainment display. Touch Location and Sort Method. A preloaded list displays if five or fewer names are available. If there are more than five, there is a match counter to the right of the input field with a number of available matches. Touch the List option to view the list and select the entry. Follow the instructions on the display to start guidance.

Phone Number : Enter the phone number of the desired POI through keyboard on the infotainment display. The phone number has to match one of the preloaded numbers in the system in order to find the desired POI. Touch Search and follow the instructions on the display to start guidance.

42 Navigation

Franchise Search : Touch All POI Franchises or the Custom Franchise List. Touch Location and Sort Method. Touch Search and the POI Search Result list will display. Touch the desired POI and follow the instructions on the display to start guidance.

Emergency : Select from the list of all emergency services. Follow the instructions on the display to start guidance.

Previous Destinations

Touch a destination from the Previous Destinations List. Up to 15 points that have been previously entered can be recalled. If the list is full, the oldest destinations are automatically deleted once the newest destinations are added.

Delete Stored Destinations

1. Touch the Settings icon on the Home Page.
2. Touch the Navigation Settings option.

3. Touch the Delete Stored Destinations option to erase all items under the checked list.

Address Book

If no destination is saved to the address book, save a destination:

1. Touch Destination on the Home Page or press DEST on the center stack .
2. Enter an address using any of the destination methods (Address Entry, POI Entry, etc.).
3. On the Destination Confirmation display, touch Save.
4. To customize the address book entry, touch Name, Number, or Icon.
5. Touch Save.

Touch Destination on the Home Page or press DEST on the center stack to display the Address Book option.

Choose a destination by selecting an address that has been stored in the address book:

1. Touch the Address Book option. A list displays the address book entries.
2. Touch the destination from the list.
3. Touch the Start Guidance option and the route calculates.

To edit address book entries:

1. Touch an item from the address book.
2. On the Destination Confirmation display, touch Edit.
3. The system displays the options Name, Phone Number, Icon, and Delete. Touch Delete to delete the destination from the address book.
4. To customize the address book entry, touch Name, Phone Number, or Icon.

Latitude/Longitude Coordinates




Choose a destination based on latitudinal and longitudinal coordinates:

1. Touch the Home Page Destination icon. Touch the Latitude Longitude option to display the entry display.
2. Touch Latitude and enter the values using the Up and Down arrows. Select N for North and S for South. Enter the values for degrees, minutes, and seconds. Touch Done when finished.
3. Touch Longitude and enter the values using Up and Down arrows. Touch W for West and E for East. Enter the values for degrees, minutes, and seconds. Touch Done when finished.

4. Touch Search and follow the instructions on the display to start guidance.
5. If invalid values are entered, a pop-up message displays "Destination not Found."

Trips

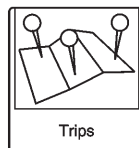

Trips are a way of entering multiple destinations along the route.

Current routes must be canceled before entering a new trip. To add a trip:

1. Touch the Home Page Destination icon or press DEST on the center stack to display the Trips option.
2. Touch the Trips option to display Trips List.
3. Touch New Trip to display instructions to add a waypoint.

4. Touch OK and the Add Waypoint screen displays.
5. Touch Add to display the Waypoint Entry display. Touch the preferred way of entry and then touch Save. See "Waypoints" later in this section.
6. The route must be started to have the option of saving up to three more waypoints as a trip. Press DEST on the center stack or touch the Home Page Destination icon to get to the Waypoints menu. In the Waypoints menu, touch the Save as Trip option.
7. Enter a name for the trip by using the keyboard and touch OK.

Current routes must be canceled before touching a new saved trip. To select a trip:

1. Touch the Home Page Destination icon or press DEST on the center stack to display the Trips option.

2. Touch the Trips option to display a list of available trips.
3. Touch a trip to show the Destination Confirmation display.
4. Touch the Start Trip option. The route calculates.

Current routes must be canceled before deleting a trip. To delete a trip:

1. Touch the Home Page Destination icon or press DEST on the center stack to display the Trips option.
2. Touch Trips to display the list of available trips.
3. Touch the trip to be deleted.
4. Touch Edit Trip.
5. Touch Delete Trip.

To change the trip name:

1. Press Destination on the Home Page or press DEST on the center stack to display the Trips option.

2. Press Trips to display the list of available trips and select the trip to edit.
3. Press Edit Trip.
4. Select Edit Name.
5. Using the keypad, enter the name.
6. Touch OK. The new name will be in the Trips List.

Pick From Map



1. Touch Destination on the Home Page or press DEST on the center stack to display the Pick From Map option. Touch this option to show the map display with a crosshair symbol centered on the map.
2. Touch the Map Scale icon on the display to scale the map size. The adjusted map

displays. Pick your destination from the map by touching the display at the desired spot. Touch and hold a finger on the map to activate fast scrolling.

3. Touch Go on the bottom of the display to show Destination Confirmation.
4. Touch the Start Guidance option. The route calculates.

Destination Confirmation

Multiple options are available on the Destination Confirmation display:

Start Guidance : Touch to start a route calculation to the displayed destination.

Show on Map : Touch to switch to the map view with the displayed destination centered on the map.

Route Options : Touch to modify route options. See "Navigation Settings" under *Using the Navigation System* ⇨ 36.


Call : Touch to initiate a phone call to the displayed phone number (if phone capability is available).

Save : Touch to save the displayed destination into the address book. If the displayed destination is already stored in the address book, you will be prompted to overwrite it.

Save as Home : Touch to save the displayed destination as your home destination. The home destination will be stored at the top of the list of destinations in the address book.

Route Preview : Touch to preview the selected route on the map.

Destination Menu with Route Guidance Active

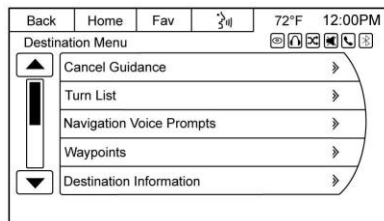


Several functions can be performed after a destination has been entered. Touch the Home Page

Destination icon or press DEST on the center stack to access the Destination Menu display.

Cancel Guidance


Touch Cancel Guidance to cancel the current route. A confirmation displays Yes or No. Touch the desired option.

Turn List

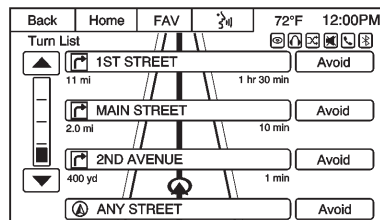


Touch Turn List to view a list of maneuvers for the entire route. Touch the Avoid option next to one of the turn maneuvers to avoid a segment of roads. A confirmation displays Avoid or Cancel. Touch the desired option. A maximum of eight avoided segments are allowed.

Navigation Voice Prompts

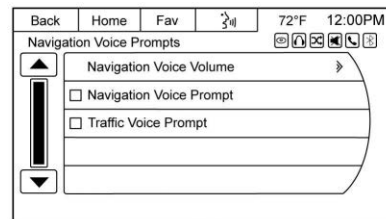

- Touch Navigation Voice Prompts to adjust Navigation Voice Volume, touch Navigation Voice Prompt, or touch Traffic Voice Prompt.
- Touch Navigation Voice Volume to display options for increasing or decreasing the Navigation Voice Prompt versus the Audio Volume during guidance prompts.

You can adjust Voice Prompt volume with the Volume knob while Voice Prompt guidance is in process.

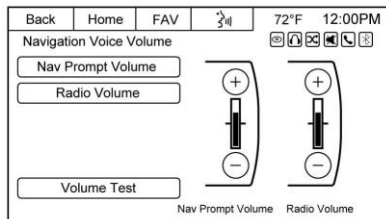


Touch the Volume Test option to test the volume setting.

Waypoints

Select Waypoints to view options for organizing, setting, or deleting waypoints.

Up to three waypoints can be added to the current route.

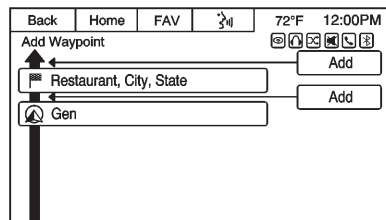

To add a waypoint:

1. From the Waypoints menu, touch Add Waypoint.
2. Continue by touching the appropriate Add key above or below an item on the list of waypoints.
3. Enter the waypoint by any of the Destination/Waypoint Entry methods. The system calculates and highlights the route.

To delete a waypoint:

1. Touch Delete on the Waypoints menu.
2. Touch Delete again next to the waypoint that you want to delete.

To rearrange waypoints:


1. Touch Sort Waypoints from the Waypoints menu.
2. Touch Move next to the waypoint that you want to rearrange.

3. Touch Add at the spot where you want to move it to. The route will be recalculated.
4. Press NAV on the center stack to return to the map view.

The guidance can be canceled from the Waypoints menu by touching Cancel Guidance.

After adding, deleting, or rearranging one or more waypoints, the newly acquired route can be saved as a new trip by touching Save as Trip from the Waypoints menu.


Destination Information

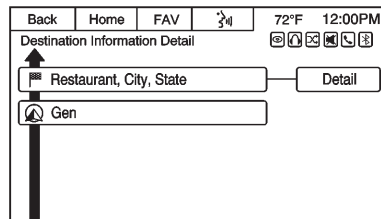

Touch to show the Destination Information Detail display. The details of the selected route show the start, any stops along the route, and the finish.


Touch the Detail option for additional information.

Avoid List

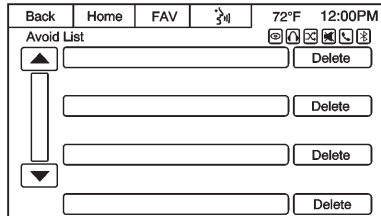

Touch to display a list of avoided road segments with the option to remove the avoided items from the list.

Detour

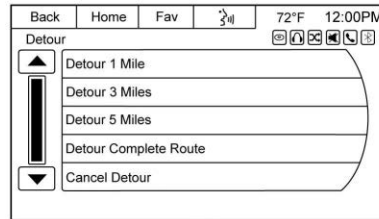

Touch to display the route detour options. Touch to detour the whole route or by a specific distance.

Route Options

Touch Route Options, then choose the desired route preference such as Fastest, Shortest, or Economical route. There is an option to choose a route with no Toll Roads, Freeways, Tunnels, Ferries, and Time Restricted Roads. Touch on the check box to make a selection. Avoiding one or more of the previous route scenarios may result in “a no route possible option” situation.

Current Route Overview

Touch to display the map with the overview of the route.


Suspend Guidance

Touch to suspend guidance of a current route. A confirmation is displayed and the guidance is suspended. To resume guidance, press DEST on the center stack, then touch Resume Guidance on the display.


Driving on a Route

Urgent Maneuver Alert

The system will give an indication that the next maneuver is close.

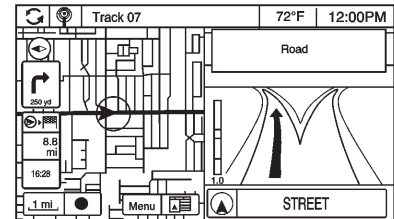

Driving on a Highway

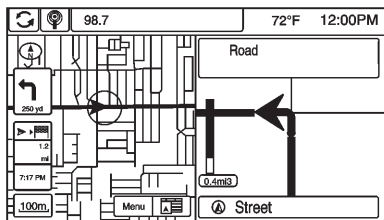

Driving on a Residential Road

OnStar System

OnStar Turn-by-Turn


An OnStar Subscriber has the ability to connect to the OnStar system and ask an OnStar Advisor to download a destination or provide Turn-by-Turn route guidance. OnStar will send address information and location coordinates of the destination into the navigation system.

No Active Route

- Press OnStar to initiate the OnStar Turn-by-Turn route guidance.

- If the system receives the indication that there is an active OnStar subscription, the help text is displayed with instructions on how to set up a route.
- Turn-by-Turn is available to both navigation and non-navigation radio systems. Only a navigation radio system will accept OnStar destination downloads on the map.

OnStar Non-Navigation Radio System

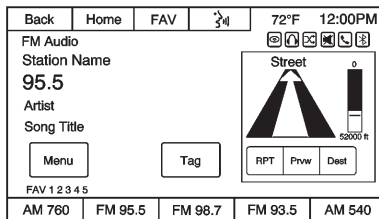

When OnStar Turn-by-Turn route guidance is activated, a display of the route appears on the right side of the display.

Options below the guidance map are:

RPT : Touch to repeat the audible maneuver prompt.

Prvw : Touch to begin route preview, which creates a maneuver and audio prompt with the corresponding icons.

Dest : Touch to show the destination address and distance to destination with corresponding audio prompt.

Previous Destinations

Previously downloaded OnStar destinations are saved under Previous Destinations in the OnStar system, where they can be accessed or saved to the address book in the OnStar system.

OnStar Destination Download

Navigation radios can use the OnStar destination download and enter a destination while underway through an OnStar Advisor.

For activated systems:

- Press OnStar to ask for an OnStar Advisor.
- State the destination and request it to be downloaded to the navigation system.
- The destination will then show in detail on the Destination Entry display where Start Guidance, Show On Map, Save, etc., can be used.

Global Positioning System (GPS)

The position of the vehicle is determined by using satellite signals, various vehicle signals, and map data.

At times, other interference such as the satellite condition, road configuration, condition of the vehicle, and/or other circumstances can affect the navigation system's ability to determine the accurate position of the vehicle.

The GPS shows the current position of the vehicle using signals sent by the GPS satellites. When the vehicle is not receiving signals from the satellites, a symbol appears on the map display. See *Navigation Symbols* ⇨ 39.

This system might not be available or interference can occur if any of the following are true:

- Signals are obstructed by tall buildings, trees, large trucks, or a tunnel.
- Satellites are being repaired or improved.

For more information if the GPS is not functioning properly, see *Problems with Route Guidance* ⇨ 50 and *If the System Needs Service* ⇨ 50.

Vehicle Positioning

At times, the position of the vehicle on the map could be inaccurate due to one or more of the following reasons:

- The road system has changed.

- The vehicle is driving on slippery road surfaces such as sand, gravel, or snow.
- The vehicle is traveling on winding roads or long straight roads.
- The vehicle is approaching a tall building or a large vehicle.
- The surface streets run parallel to a freeway.
- The vehicle has been transferred by a vehicle carrier or a ferry.
- The current position calibration is set incorrectly.
- The vehicle is traveling at high speed.
- The vehicle changes directions more than once, or the vehicle is turning on a turn table in a parking lot.
- The vehicle is entering and/or exiting a parking lot, garage, or a lot with a roof.
- The GPS signal is not received.
- A roof carrier is installed on the vehicle.

- Tire chains have been installed.
- The tires are replaced or worn.
- The tire pressure for the tires is incorrect.
- This is the first navigation use after the map data is updated.
- The 12-volt battery has been disconnected for several days.
- The vehicle is driving in heavy traffic at low speeds, and the vehicle is stopped and started repeatedly.

Problems with Route Guidance

Inappropriate route guidance can occur under one or more of the following conditions:

- The turn was not made on the road indicated.
- Route guidance might not be available when using automatic rerouting for the next right or left turn.
- The route might not be changed when using automatic rerouting.

- There is no route guidance when turning at an intersection.
- Plural names of places might be announced occasionally.
- It could take a long time to operate automatic rerouting during high-speed driving.
- Automatic rerouting might display a route returning to the set waypoint if heading for a destination without passing through a set waypoint.
- The route prohibits the entry of a vehicle due to a regulation by time or season or any other regulation that may be given.
- Some routes might not be searched.
- The route to the destination might not be shown if there are new roads, if roads have recently changed, or if certain roads are not listed in the map data. See *Maps* ⇨ 38.

To recalibrate the vehicle's position on the map, park with the vehicle running for two to five minutes, until the vehicle position updates.

If the System Needs Service

If the navigation system needs service and the steps listed here have been followed but there are still problems, see your dealer.

Map Data Updates

The map data in the vehicle is the most up-to-date information available when the vehicle was produced. The map data is updated periodically, provided that the map information has changed.

For questions about the operation of the navigation system or the update process, contact the GM Nav Disc Center toll-free phone number, 1-877-NAV-DISC (1-877-628-3472) or go to the center's website, www.gmnavdisc.com. If updates are needed, call the GM Nav Disc Center. To order map data, have the

vehicle's Vehicle Identification Number (VIN) available. See "Vehicle Identification Number (VIN)" in the owner's manual.

After receiving the updated map data, see *Maps* ⇨ 38.

Database Coverage Explanations

Coverage areas vary with respect to the level of map detail available for any given area. Some areas feature greater levels of detail than others. If this happens, it does not mean there is a problem with the system. As the map data is updated, more detail can become available for areas that previously had limited detail. See *Map Data Updates* ⇨ 50.

Voice Recognition

Voice recognition allows for hands-free operation within the audio and phone applications. This feature can be started by pressing  on the steering wheel or touching the voice recognition icon on the touchscreen display.

However, not all features within these areas are supported by voice commands. Generally, only complex tasks that require multiple manual interactions to complete are supported by voice commands.

For example, tasks that take more than one or two touches such as selecting a song or artist to play from a media device would be supported by voice commands. Other tasks, like adjusting the volume or seeking up or down are audio features that are easily performed by pressing one or two options, and are not supported by voice commands.

Most voice commands, except for voice keypad, can be completed in a single command. If the task takes

more than one command to complete, the first command would be to indicate the kind of task to be performed. The system will reply, prompting dialog to help speak the necessary information.

Voice recognition can be used when the ignition is on or when Retained Accessory Power (RAP) is active. See “Retained Accessory Power (RAP)” in the owner’s manual.

Using Voice Recognition

Voice recognition becomes available once the system has been initialized. Initialization takes place once the ignition is turned on. This may take a few moments.

1. Press  on the steering wheel controls to activate voice recognition, or touch the voice recognition icon on the infotainment display.
2. The audio system mutes and the system plays a prompt followed by a beep.

3. Wait until after the beep completes, then clearly speak one of the commands described in this section.

Press  to interrupt any voice recognition. This will terminate the prompt. The beep is heard immediately, and a command can be stated without having to wait.


There are two voice prompt modes supported:

- Long verbal prompts: The longer prompts provide more information regarding the supported actions for that voice recognition session.
- Short prompts: The short prompts provide simple setup and action commands.

The voice prompt modes can be changed in the Voice Recognition Menu from the Settings icon on the Home Page.

If a command is not heard during a short period of time, the voice recognition process times out.

Prompts and Screen Displays

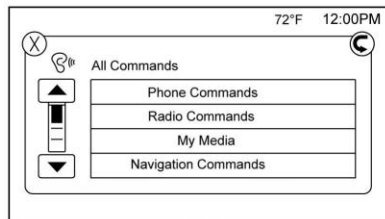

The system prompts and display screens will adjust to reflect the commands during the voice recognition session.

While voice recognition is active, there may be corresponding options and displays available to interact with the system so that some of the functions can be manually done.

Touching any of the options or displays to finish a function that was initiated through voice recognition will terminate the session. If the manual functions are only partially completed, the voice recognition will proceed until finished.

Canceling Voice Recognition

- Press  on the steering wheel controls. This will terminate the voice recognition session and show the display prior to when voice recognition was initiated.
- Touch the **X** or the circled arrow shown on the upper corners of the display to terminate or go back up the voice menu, respectively, during the voice recognition session.
- Say “Cancel” or “Back” to terminate or go back to the voice menu during the voice recognition session, and to show the display prior to when voice recognition was initiated.

Helpful Hints for Speaking Commands

The voice recognition application can usually understand direct commands of the application and task.

An example of a command would be, “Phone.” The system may answer with a prompt of, “Say Call followed by the number or contact name.” The direct command for this task would be, “Call <number>.”

If the phone number has been saved as a name or place, the direct command would be, “Call <number and place>.”

Directed Dialog

A directed dialog is an interaction between a person speaking the command and the system prompting for specific information necessary to complete the task. Many times the system may repeat what the person has stated as a command. This is done as a confirmation to make sure the command is understood.

Voice Recognition for the Radio

All audio displays have a voice recognition icon to launch an audio voice recognition session. If browsing the radio when the voice

icon is pressed, the voice recognition display for radio is shown.

The following list shows radio features that are controllable by voice recognition commands. A voice recognition command would have to include all necessary instructions for the system to carry out each command:

help : Voice recognition help for radio functionality.

tune FM : Most recently tuned FM station.

tune AM : Most recently tuned AM station.

tune XM : Most recently tuned SiriusXM channel.

tune XM <number> : Listen to a SiriusXM channel (by number).

tune XM <channel name> : Listen to a SiriusXM channel (by name).

Voice Recognition for My Media

All audio displays have a voice recognition icon to launch an audio voice recognition session. If browsing MyMedia when the voice icon is pressed, the voice recognition display for MyMedia is shown.

The following list shows MyMedia features that are controllable by voice recognition commands. A voice recognition command would have to include all necessary instructions for the system to carry out each command:

help : Voice recognition help for MyMedia functionality.

play <device name> : Play a specific device including disc, AUX, Bluetooth USB, and iPod.

play genre : Play music from a specific genre.

play artist : Play music by a specific artist.

play album : Play music from the specific album.

play song : Play track including CD and DVD.

play playlist : Play music in a pre-defined playlist.

play audio book : Play an audio book by Title.

play podcast : Listen to a Podcast.

Voice Recognition for Phone

((call / dial) [number] / phone) <phone_number> : Initiate a call to a standard phone number.

((call / dial) [phone] / contact) <ContactName> : Initiate a call to an entered contact.

The voice command must match how the contact is stored in the phone device. For example, "call <last name>, <first name>."

(call / dial) <ContactName> [at] home / 's (home [phone / number] / house) : Initiate a call to an entered contact and location at home, at work, on mobile device, or on another phone.

((pair [my / this] / add) [[a] new] / connect [new]) phone : Begin the Bluetooth pairing process. Follow instructions on the radio display.

((switch / change) [phone] to / use / select / connect)

<phone_device> : Select a different phone for outgoing calls.

(switch / to [my] other) / change) phone : Select to another owned phone.

redial [the] last (number / contact / number) : Initiate a call to the last dialed number.

(call / dial) [a] contact [open] (address / phone) book : Go to a sub-menu location for contact information.

[go to / start / use] [voice] keypad / international call : Go to a sub-menu location for international contact information.

Voice Pass-Thru

Voice pass-thru allows access to the voice recognition commands on the cell phone, for example, Siri or Voice Command. See the cell

phone manufacturer's user guide to see if the cell phone supports this feature. To activate the phone voice recognition system, press and hold  on the steering wheel for at least three seconds.

General Commands

cancel : Instructs the system to cancel the command.

cancel / stop / end / cancel request : Instructs the system to end the speech session.

[no] go back / back / previous screen : Instructs the system to go back to the Previous Menu / Selection.

yes / correct / that is correct / yeah / ya / yep / yup / sure / right / OK / positive / you got it / probably / you bet : Any of these commands will be accepted by the system as an answer of yes.

[no] [select / [it's] selection] [number] one / [[no] select] <linenumber> : Instructs the system to select the number one line on a menu.

[no] [select / [it's] selection] [number] two / [[no] select] <linenumber> : Instructs the system to select the number two line on a menu.

[no] [select / [it's] selection] [number] three / [[no] select] <linenumber> : Instructs the system to select the number three line on a menu.

[no] [select / [it's] selection] [number] four / [[no] select] <linenumber> : Instructs the system to select the number four line on a menu.

no / incorrect / wrong / negative / none are correct / none of these / not really / no I said / did not / nope / na / no way : Instructs the system to reject the result and switch the infotainment display.

Voice Recognition for Navigation

If the voice icon is pressed while on a map view, the system begins a voice recognition session.

Destination and Guidance Commands

destination (Available for English, Spanish, and French languages)

: Instructs the system that the user wants to enter a destination using voice recognition. After this command is stated, the system displays a menu for entering the destination by address or contacts stored in the address book. If address is selected, the system prompts for more information such as country, city, state/province, or house number. If entering the destination by contacts, the system will prompt for a contact name as stored.

Set the Destination by using voice recognition:

1. Press  on the steering wheel or touch the voice recognition icon on the infotainment display. The audio system mutes, and a beep is heard.

2. Say the command "Destination Address." The system replies with "say Cancel Guidance Route or say Destination" if there is a route entered already. Otherwise the system will reply with "Say the City and State/Province or Say Change Country." If the country is incorrect, go to Step 5. Otherwise, say the city and state/province for the destination.

During the session, the city and state/province matches to the spoken city and state/province name. The system asks the user to select an item from the candidate list either by touching the desired choice, or by saying the list number of the desired choice.

3. There will be another prompt asking about address or contact. The system replies "Say the House Number and Street Name." Say the house number and street name for the destination. The house and

street address as well as the closest match to the spoken number are similar to the city and state/province commands.

4. This address is now set as the destination. Select the Start Guidance option to begin destination route guidance. At that point there are additional options to review the destination location on the map, or to preview the route, detailed later in this manual.
5. After saying "Change Country," the system replies with "Say the Name of the Country or Territory for the address wanted." Say the correct country or territory. The system will return to the Destination Address menu and ask, "Say the City and State/Province or Say Change Country" as in Step 2.

Pandora Commands

For each voice recognition command, press  on the steering or touch on the

infotainment display to direct the stated commands. An example of a simple direct command is, "Play Pandora."

[please / I want [you] to / I would like to / I wanna / I'd like to] (tune [to] / play / go to / change to) ([station] / [favorite])

<pandora_station> : Instructs the system to call the Pandora application on the paired, connected phone device. The iPhone will need to be connected through the USB. Playback begins where it left off, unless the station called is instructed differently.

bookmark song : Instructs the system to save the selected song for later recall.

bookmark artist : Instructs the system to save the selected artist for later recall.

I like this / thumbs up : Rates the program material currently playing.

I don't like this / thumbs down : Rates the program material currently playing.

shuffle : Starts shuffle play of the Pandora stations on the device.

skip forward / skip / next : Instructs the system to skip forward to the next song.

[[entertainment] system] help / help with entertainment [system] / how do I use the entertainment system : Instructs the system to state instructions for using the entertainment system.

cancel / stop / end / cancel request : Instructs the system to end the speech session.

[no] go back / back / previous screen : Instructs the system to go back to the Previous Menu / Selection.

Stitcher Commands

For each voice recognition command, press  on the steering or touch on the infotainment display to direct the stated commands. An example of a simple direct command is, "Play Stitcher."

I like this / thumbs up : Rates the program material currently playing.

I don't like this / thumbs down : Rates the program material currently playing.

skip forward / skip / next : Instructs the system to skip forward to the next song.

add to favorites / favorite : Instructs the system to save the program material currently playing to favorites.

remove from favorites : Instructs the system to remove the program material saved in favorites.

[[entertainment] system] help / help with entertainment [system] / how do I use the entertainment system : Instructs the system to state instructions for using the entertainment system.

cancel / stop / end / cancel request : Instructs the system to end the speech session.

[no] go back / back / previous

screen : Instructs the system to go back to the Previous Menu / Selection.

yes / correct / that is correct / yeah / ya / yep / yup / sure / right / OK / positive / you got it / probably / you bet : Any of these commands will be accepted by the system as an answer of yes.

[no] [select / [it's] selection]

[number] one / [[no] select] <linenumber> : Instructs the system to select the number one line on a menu.

[no] [select / [it's] selection]

[number] two / [[no] select] <linenumber> : Instructs the system to select the number two line on a menu.

[no] [select / [it's] selection]

[number] three / [[no] select] <linenumber> : Instructs the system to select the number three line on a menu.

[no] [select / [it's] selection]

[number] four / [[no] select] <linenumber> : Instructs the system to select the number four line on a menu.

no / incorrect / wrong / negative / none are correct / none of these / not really / no I said / did not / nope / na / no way : Instructs the system to reject the result and switch the infotainment display.

Text Messaging Commands

play text : Plays a new text message through the radio.

text <contact name> : Sends a predefined text message to a phone contact.

text <phone number> : Sends a predefined text message to a phone number.

Weather Commands

weather : Starts the weather application.

local weather : Accesses the local weather.

forecast : Accesses the local forecast.

OnStar (if equipped) Command

OnStar : Instructs the system to connect to OnStar. Enter the OnStar voice recognition system. See "OnStar" in the owner's manual.

Help Commands


help : Instructs the system to state commands that can be used for accomplishing system functions.

[[entertainment] system] help / help with entertainment [system] / how do I use the entertainment system : Instructs the system to state instructions for using the entertainment system.

cancel / stop / end / cancel request : Instructs the system to end the speech session.

[no] go back / back / previous screen : Instructs the system to go back to the Previous Menu / Selection.

Settings

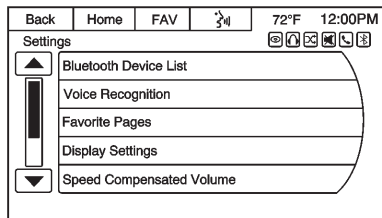


Touch Settings on the Home Page to adjust features and preferences, such as Time, Date, Bluetooth Device List, Voice Recognition, Favorite Pages, Display Settings, Navigation Settings, etc. Some of the options for Settings are explained in the owner's manual.

1. Touch the Settings icon on the Home Page.
2. Touch-tap the scroll bar or turn and press the PUSH/SEL knob until the desired option displays. Touch the desired settings to change.

A few of the setting options change the way the navigation system displays or reacts while in use.

Bluetooth Device List

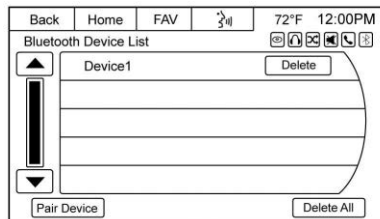

Touch to display paired Bluetooth devices. Touch any one of the options to complete a function, such as Pair Device, Delete, or Delete All.

See *Bluetooth Audio* ⇨ 34.


Text Message Options

Select Text Message Options from the Settings menu list.

- Select Incoming Text Alert from the Text Message Options menu list to enable/disable the new incoming message display pop-up and alert sound.

- Select Append Text Signature from the Text Message Options menu list to enable/disable the vehicle signature appended to messages sent from the radio ("Sent from my <Brand> <Model>").

Voice Recognition

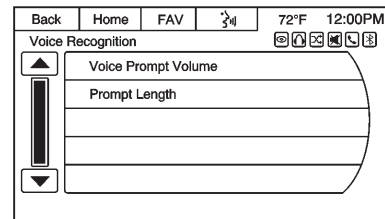

Voice recognition allows for hands-free operation within the navigation, audio, and phone applications.

See *Voice Recognition* ⇨ 52 and *Bluetooth* ⇨ 68.

Touch to display voice recognition options.

- Voice Prompt Volume: Touch to adjust the prompt volume.


60 Settings

- Prompt Length: Touch to select short or long prompts.

Favorite Pages

Select the number of favorite pages displayed.

Display

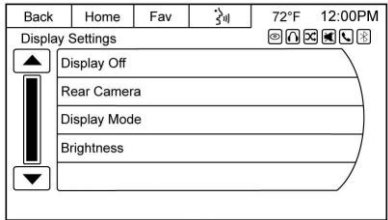


Touch to adjust the infotainment display settings.

- Touch Display Off to turn the display settings off.
- Touch Rear Camera to display two options that can be selected and turned on or off:
 - Symbols
 - Guidelines

- Touch Display Mode (navigation radio only) to adjust the infotainment display background.
 - Automatic setting will adjust the display background automatically depending on the exterior lighting conditions.
 - Day setting brightens the map background.
 - Night setting darkens the map background.
- Touch Brightness to adjust the image background.


Speed Compensated Volume

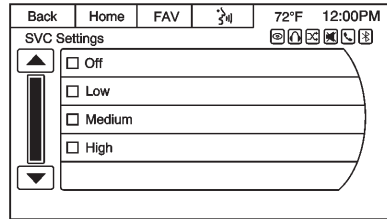

Touch Off, Low, Medium, or High sensitivity to automatically adjust the volume to minimize the effects of unwanted background noise that

can result from changing road surfaces, driving speeds, or open windows. This feature works best at lower volume settings where background noise is typically louder than the sound system volume.

Audible Touch Feedback

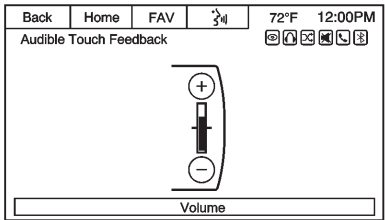

Touch + or – to increase or decrease the volume of touch feedback.

Ringtone Volume

Touch + or – to increase or decrease the volume of the ringtone while receiving an incoming call from a Bluetooth connected cell phone.

Notification Prompt Volume

Touch + or – to increase or decrease the voice recognition notification prompt.

Set Time

- Touch the up or down arrows to increase or decrease the Hours and Minutes, or change the setting between AM, PM, or 24 hr on the clock.
- Touch and hold to quickly increase or decrease the time settings.
- Touch OK to save or Cancel to disregard the changes.

Set Date


- Touch the up or down arrows to increase or decrease the Month, Day, and Year settings.
- Touch and hold to quickly increase or decrease the date settings.
- Touch OK to save or Cancel to disregard the changes.

XM Categories

Touch to display a list of XM categories. Touch Restore All if categories have been removed from the display.


Clear All Private Data

Touch to delete stored personal data such as saved destinations, phone contacts, and audio favorites.

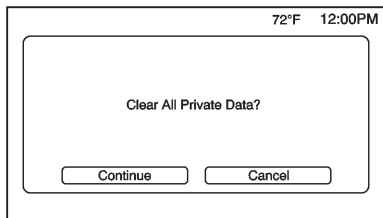


A pop-up message displays, Clear All Private Data? Touch the Continue option to delete the data, or the Cancel option to cancel the delete function.

Navigation Settings

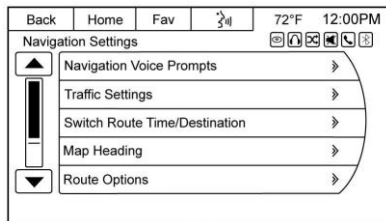


Select to make changes to the following options:

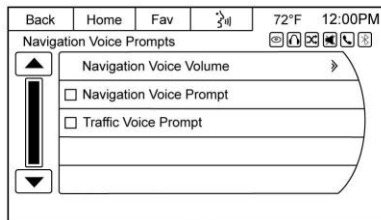

Navigation Voice Prompts : The Voice Prompt Menu allows changes to the voice prompt features.


Traffic Settings : Touch to enable or disable the traffic feature.

Switch Route Time/Destination : Select this option to switch the nav map display arrival time and mileage between waypoints and final destination.

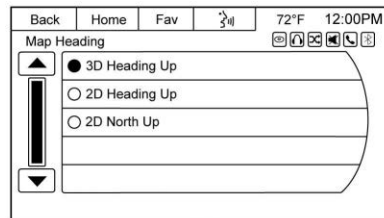


Map Heading : Select to choose between North up, Heading up, or 3D views while navigating.

Route Options : Touch to display the various route option preferences.

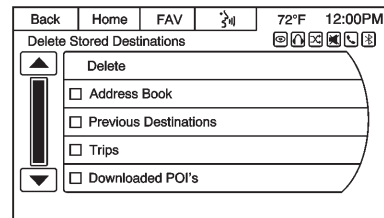

Delete Stored Destinations : Touch the Delete option to erase all items under the checked list.

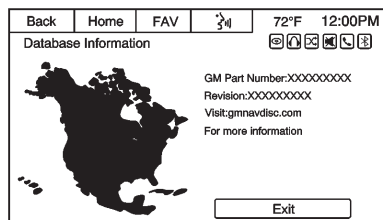

Database Information : Touch to display the information about the infotainment system installed on the vehicle.

SiriusXM NavTraffic (If Equipped)

The navigation system might have a NavTraffic receiver. It is a subscription service provided through SiriusXM Satellite Radio. A service fee is required to receive the NavTraffic service. Real-time traffic information is provided to fully integrate the navigation system to display current traffic conditions for the chosen route. See “Traffic Settings” following.

A display is shown to indicate if the SiriusXM NavTraffic subscription is not activated.

If activated, traffic information displays:

- Unscheduled traffic incident data, such as accidents and disabled vehicles.
- Scheduled traffic incident data, such as road construction and road closures.
- Traffic flow information (rate of speed data). Flow data might not be available in all markets.

Traffic information is delivered to the vehicle by the SiriusXM Radio satellites. NavTraffic provides continuously updated traffic information.

NavTraffic currently broadcasts the traffic information for many markets nationally. The service may be available in more cities in the future. See www.xmnavtraffic.com for details on local coverage.

Traffic Settings

Touch to display the Traffic menu.

Traffic Enabled : Touch to enable or disable the traffic feature.

Alert Prompts : Touch to enable or disable the traffic voice prompts.

Alert Popups : Touch to enable or disable pop-up messages about traffic.

Alert Popups While Not in Guidance : Touch to enable or disable while not in guidance mode.

Traffic Guidance : Touch to enable or disable Dynamic Guidance. If Dynamic Guidance is enabled, choose Automatic Recalculation or Recalculation After Confirmation.


Automatic Recalculation : If enabled and a route with fewer traffic delays is found, the system will automatically recalculate without user confirmation.

Recalculation After

Confirmation : If enabled, the system will provide a pop-up if a possible guidance route is available to detour around traffic events on

the route. Touch Yes from the pop-up and the new route will be calculated. SiriusXM NavTraffic information might not be provided for the alternate route, depending on what type of road the vehicle is traveling.

Show Icons On Map : Touch to display traffic icons on the map.

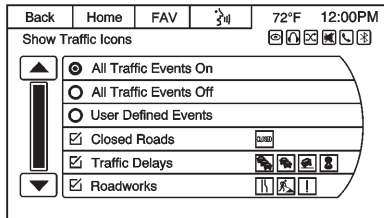

- All Traffic Events On: Touch to enable display of all traffic icons on the map.
- All Traffic Events Off: Touch to disable display of all traffic icons on the map.

- User Defined Events: Touch to define the individual types of icons displayed for traffic flow and traffic conditions such as Advisories, Closed Roads, Incidents, Traffic Delays, or Other.

Show Flow Status On Map

The traffic flow status will display in green, yellow, or red lines beside the road. You can select All Flows On, All Flows Off, or User Defined which allows you to pick any one of the flow lines to display.

- Red indicates significantly impaired traffic flow with average speed of less than 40 km/h (25 mph).
- Yellow indicates slightly impaired traffic flow with average speed between 40 km/h and 73 km/h (25 and 45 mph).
- Green indicates normal traffic flow with average speed above 73 km/h (45 mph).

Traffic Conditions

The following traffic condition icons may display:



Stopped Traffic



Traffic Jam



Accident



Road Closed



Lane Narrows



**Road Work,
Construction**



Alert



Road Condition




Road Visibility



Other

Phone Menu

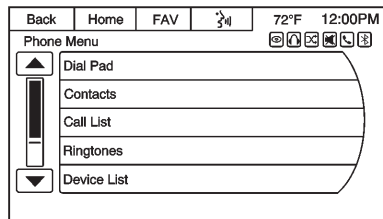

Touch to display options for setting the phone. If no phone is connected, this option will be grayed out. See *Bluetooth* ⇨ 68 for more information on phone settings.

Create “AS IS” information file


This feature is used by your dealer.

Open Source Software


Touch to display software information.

Rear Camera (If Equipped)

The Rear Vision Camera can assist when backing up by displaying a view of the area behind the vehicle.

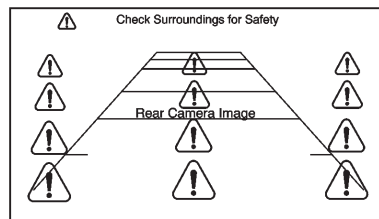

When the shift lever is placed in R (Reverse), an image appears on the system's infotainment display so that the driver can check the surroundings for safety.

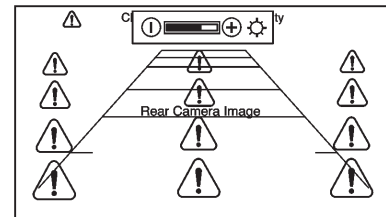

Touch the infotainment display to make the brightness controls appear. Adjust the brightness by touching the – or + icons. The vehicle needs to be in the night mode. See “Rear Vision Camera (RVC)” in the owner's manual.

Low Fuel Alert (If Equipped)

If the vehicle reaches a low fuel level, the system displays an alert about the low fuel condition. Touch the Nearby Gas Stations or Dismiss option to view nearby gas stations, and start guidance if desired.


66 Settings

If the remaining driving distance is available from the system, this is included in the alert.

SiriusXM Weather (If Equipped)


From the Home Page, touch the Weather icon. The system displays the current weather condition in the city of the vehicle's current location. Touch Menu for more options.

Current Weather

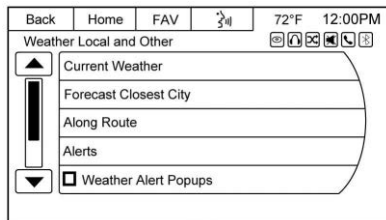


Touch to go back to the first page displaying current weather. It may take some time for current weather to update.

Forecast Closest City

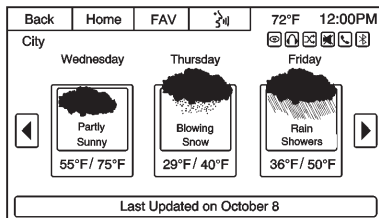

Touch to show the extended forecast for the next few days.

Along Route

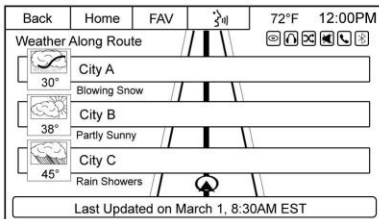

If a destination is set, there is the option to view weather conditions for up to three locations along the route:

- Current vehicle position.

- Midway point from current position to final destination.
- Current weather condition of the destination city.

Alerts

From the SiriusXM Weather Menu, touch the Alerts option to display any current weather advisory warnings in effect near the current position. If there are no warnings, this option will be grayed out.

Weather Alert Popups

Touch this option to display any weather advisory warning messages in the area.

Current Other

Touch to show the enter location display. Select a state/province and city and the current weather will be displayed for that location.

Forecast Other

Touch to show the enter location display. Select a state/province and city and the forecasted weather will be displayed for that location.

Change Other Location : Select state/province from the keyboard and city from the list.

Change Other From Map : Touch anywhere on the map to touch the weather of the nearest city/weather station.

Bluetooth Phone/Devices

Bluetooth

For vehicles equipped with Bluetooth capability, the system can interact with many cell phones, allowing:

- Placement and receipt of calls in a hands-free mode.
- Sharing of the address book or contact list with the vehicle. Not all phones are compatible for contacts list downloading.
- Control of and playback of Pandora and Stitcher applications.
- Audio streaming.
- Playback and viewing of text messages. Not all phones are compatible with text messaging from the radio.

To minimize driver distraction, before driving, and with the vehicle parked:

- Become familiar with the features of the cell phone. Organize the phone book and contact lists clearly and delete duplicate or rarely used entries. If possible, program speed dial or other shortcuts.
- Review the controls and operation of the infotainment system.
- Pair cell phone(s) to the vehicle. The system may not work with all cell phones. See "Pairing" in this section.
- See "Deleting a Paired Phone" in this section.



Warning

When using a cell phone, it can be distracting to look too long or too often at the screen of the phone or the infotainment system.

(Continued)

Warning (Continued)

Taking your eyes off the road too long or too often could cause a crash resulting in injury or death. Focus your attention on driving.

Vehicles with a Bluetooth system can use a Bluetooth-capable cell phone with a Hands-Free Profile to make and receive phone calls. The infotainment system and voice recognition are used to control the system. The system can be used while the ignition is on or in ACC/ACCESSORY. The range of the Bluetooth system can be up to 9.1 m (30 ft). Not all phones support all functions and not all phones work with the Bluetooth system. See www.gm.com/bluetooth for more information about compatible phones.

Bluetooth Controls

Use the controls on the infotainment system and the steering wheel to operate the Bluetooth system.

Steering Wheel Controls



- Press to answer incoming calls, confirm system information, and start voice recognition.
- Press and hold to start voice recognition.

Infotainment System Controls

For information about how to navigate the menu system using the infotainment controls, see *Using the System* ⇨ 7.

Using Voice Recognition

The voice recognition system uses commands to control the system and dial phone numbers.

To use voice recognition, press on the steering wheel.

If you know the command you would like to execute, say the command. If the command is not known, say “Help” while in any voice recognition menu.

See *Voice Recognition* ⇨ 52.

Noise : The system may not recognize voice commands if there is too much background noise.

When to Speak : A tone sounds to indicate that the system is ready for a voice command. Wait for the tone and then speak.

How to Speak : Speak clearly in a calm and natural voice.


Audio System

When using the Bluetooth system, sound comes through the vehicle's front audio system speakers and overrides the audio system. Use the volume bar during a call to change the volume level. The adjusted volume level remains in memory for later calls. The system maintains a minimum volume level.

Pairing a New Bluetooth Device


1. Touch the Settings icon on the Home Page to access the Settings menu. Touch Bluetooth Device List. If not grayed out, touching the Phone icon on the Home Page will

also access the Bluetooth Device List if no phone is connected. If another phone is connected, touching the Phone icon on the Home Page will access the main phone display.

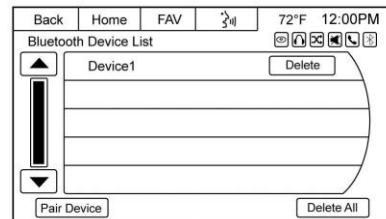


2. Touch the Pair Device option to start the process of adding a new Bluetooth device to the radio system.
3. Once Pair Device is touched, the radio becomes discoverable for three minutes. A four or six-digit Personal Identification Number (PIN) appears on the display.

4. Start the pairing process on the device to be paired to the vehicle. See the device manufacturer's user guide for information.
5. When the radio is discovered, the infotainment display changes to the pairing display. If the Bluetooth device does not connect to the radio within 60 seconds, the display times out, returns to the Bluetooth Device List, and cancels the discoverable process.

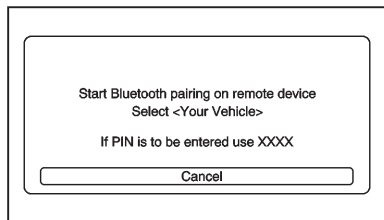


6. During the start of the pairing process, a pop-up display will show on the Bluetooth device asking to select <Your

Vehicle>. If a PIN is to be entered, use XXXX. Enter the PIN into the Bluetooth device.

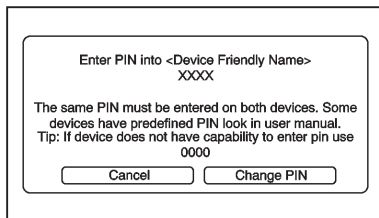

7. Once the radio is selected from the Bluetooth device, the same PIN must be entered to continue the pairing process. Touch the Change PIN option to enter a matching PIN. The keypad displays to complete this function.
8. An automatic six-digit PIN may appear on newer phones. Look for the same number to match on both the radio and the device being paired. Select YES on the radio and device if required to complete the pairing process.

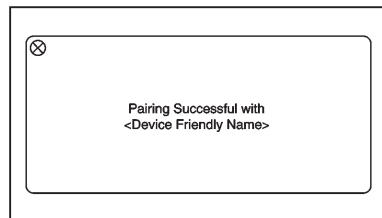

9. A pop-up displays to confirm the pairing was successful.
10. After initial pairing, a pop-up on the device may appear to accept and allow the radio permission to download the phone's address book for later use and to access text messaging. Press Always Accept, if offered on the device, for normal use. No other paired device can see this information on the other device. This information is also not accessible if the device from which this information originated is not currently paired, in range, and connected.

11. For BlackBerry devices, turn off the Automatic Echo control from within the Device menu in the phone. Leaving this feature on can cause noise problems during hands-free calls.

For information about how to navigate the menu system using the infotainment controls, see *Overview* ⇨ 3.

Pairing

A Bluetooth-enabled cell phone must be paired to the Bluetooth system and then connected to the vehicle before it can be used. See your cell phone manufacturer's user guide for Bluetooth functions before pairing the cell phone. If a Bluetooth phone is not connected, calls can be made using OnStar Hands-Free Calling, if available. See "OnStar" in the owner's manual.

Pairing Information

- Up to 10 cell phones can be paired to the Bluetooth system. Up to a total of 10,000 phone contacts and numbers can be stored across 10 paired phones.
- The system will attempt to connect to the last known connected device if multiple paired devices are in range of the system.
- The pairing process is disabled when the vehicle is moving.
- Pairing only needs to be completed once, unless the pairing information on the cell phone changes or the cell phone is deleted from the system.
- Only one paired cell phone can be connected to the Bluetooth system at a time.
- If multiple paired cell phones are within range of the system, the system connects to the first available paired cell phone in the order that they were last connected. The radio will

attempt to connect to the last connected device to the system. To link to a different paired phone, see "Connecting to a Different Phone" later in this section.

Pairing a Phone

Pairing is not allowed while the vehicle is in motion.

1. Touch the Settings icon from the Home Page or say "Pair Phone" after starting a voice recognition session to access the Settings menu.
2. Touch Bluetooth Device List. If not grayed out, touching the Phone icon on the Home Page will also access the Bluetooth Device List if no phone is connected. If another phone is connected, touching the Phone icon on the Home Page will access the main phone display.
3. Touch Pair Device (Phone). A four or six-digit Personal Identification Number (PIN) appears on the display.

4. Start the pairing process on the cell phone to be paired to the vehicle. See the cell phone manufacturer's user guide for information on this process.
5. Locate the vehicle named in the list on the cell phone. Follow the instructions on the cell phone to enter and confirm the PIN provided in Step 3. After the PIN is entered, the system prompts you to indicate whether pairing was successful. The name of the paired device depends on the device and how it is set up. The radio will automatically use the vehicle name. The system responds with "<Phone name> has been successfully paired" after the pairing process is complete.
6. If Yes is selected in Step 5, a message will pop up on the radio display saying, "Pairing successful with <phone name>." A pop-up message on the phone may display stating

the radio may need to be allowed to have access to your Contacts and Text Messages.

7. If No is selected in Step 5, a message will pop up on the radio display saying that the pairing was unsuccessful.
8. Repeat Steps 1–5 to pair additional phones.

While the phone is connected, the Bluetooth icon on the upper right corner of the radio will be highlighted and the signal strength and battery life of the phone will be displayed.

The current connected phone would have a checkmark in the box to the left of the device.

Listing All Paired and Connected Phones

1. Touch the Settings icon from the Home Page to access the Settings menu.
2. Touch Bluetooth Device List. If not grayed out, touching the Phone icon on the Home Page

will also access the Bluetooth Device List if no phone is connected.

Deleting a Paired Phone

1. Touch the Settings icon from the Home Page to access the Settings menu.
2. Touch Bluetooth Device List. If not grayed out, touching the Phone icon on the Home Page will also access the Bluetooth Device List if no phone is connected.
3. Touch the Delete option next to the listed device and follow the on-screen prompts.

It is recommended to delete the paired vehicle from the phone.

Connecting to a Different Phone

To link to a different phone, the new phone must be in the vehicle and available to be connected to the Bluetooth system before the process is started.

1. Touch the Settings icon from the Home Page to access the Settings menu.
2. Touch Bluetooth Device List. If not grayed out, touching the Phone icon on the Home Page will also access the Bluetooth Device List if no phone is connected.
3. Select the new phone to link to and follow the on-screen prompts.

Making a Call Using the Phone Book Contacts and Call List

For cell phones that support the phone book feature, the Bluetooth system can use the contacts stored on your cell phone to make calls. See your cell phone manufacturer's user guide or contact your wireless provider to find out if this feature is supported by your phone. Also see, "Pairing a New Bluetooth Device" earlier in this section.

When using voice recognition to call a contact, the voice command must match how the contact is stored in the phone.


When a cell phone supports the phone book feature, the Contacts and Call List menus are automatically available. There may be a delay for this information to appear, especially after first pairing of the device. This depends on how many contact entries are stored in the phone.

The Contacts menu allows you to access the contacts stored in the cell phone to make a call.

The Call List menu allows you to access the phone numbers from the Incoming Calls, Outgoing Calls, and Missed Calls menus on your cell phone to make a call.

To make a call using the Contacts menu:

1. Touch the Phone icon on the Home Page to display the Phone main menu.

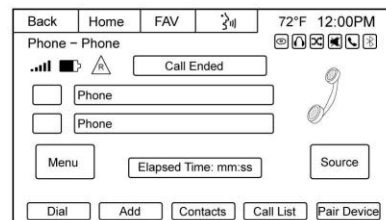


2. Touch Menu to select Contacts or touch the Contacts option on the lower bar of the Phone display.
3. Search through the Contacts list by selecting the letter group the contact entry begins with. The scroll bar or the PUSH/SEL knob can be used.
4. Select the name or number you want to call.
5. Depending on how the contact is stored in the phone, the radio may show multiple contact numbers. Select the desired number to call.


74 Bluetooth Phone/Devices

To make a call using the Call List menu:

1. Touch the Phone icon on the Home Page to display the Phone main menu.

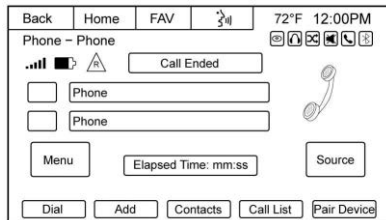


2. Touch Menu to select Call List or touch the Call List option on the lower bar of the Phone display.

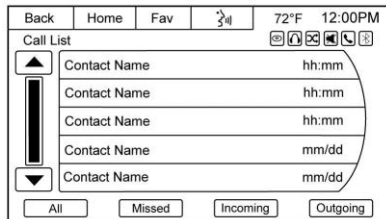

3. Select the All, Missed, Incoming, or Outgoing Calls list.
4. Select the name or number you want to call.

Making a Call

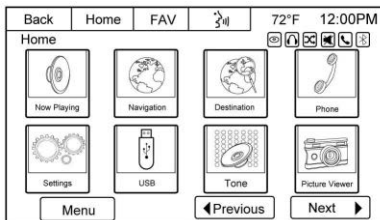


Touch the Phone icon on the Home Page to show the Phone menu.

Enter Number

Use this option to enter a phone number and make a call.


1. Touch Menu to select the Dial Pad or touch the Dial option on the lower bar of the Phone screen.

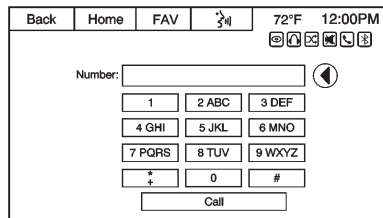


2. Enter the phone number by touching the numbers on the keypad.
3. Touch the Call option to make the call.

Phone Book


The Phone Book feature is only supported if it is available on the Bluetooth phone. See your cell phone manufacturer's user guide for more information.

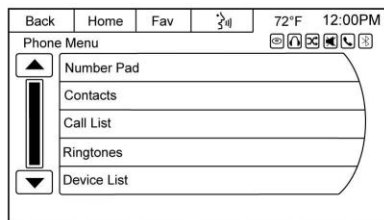

1. Select Contacts from the Phone Menu or touch the Contacts option on the lower bar of the Phone screen.

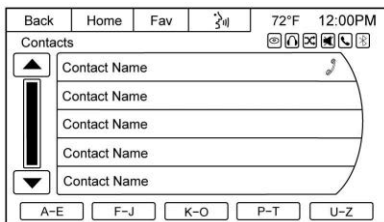


2. Turn the PUSH/SEL knob to scroll through the contacts list in the specified letter group.
3. Press the PUSH/SEL knob to select the desired contact.

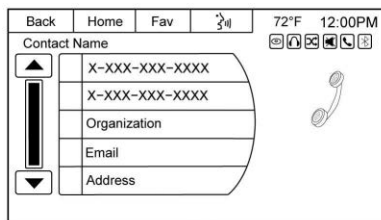


4. Select the person or place to call.
5. Press the PUSH/SEL knob or the number on the display to make the call.

Call Lists


The Call List selection from the Phone menu display can be used to show a list of incoming calls, outgoing calls, and missed calls.

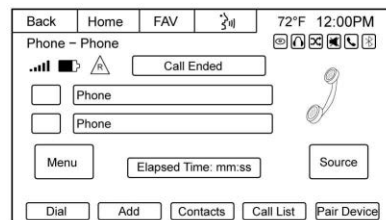


1. Touch Menu.

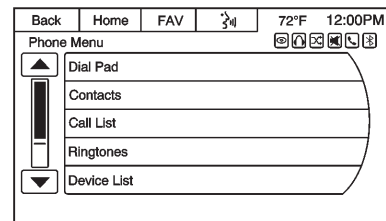

2. Select Call List or Call List option on the lower bar of the Phone screen.

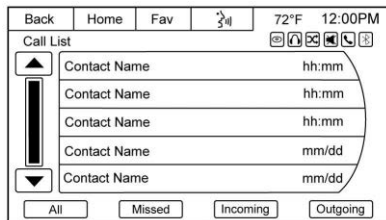

3. Select either All, Missed, Incoming, or Outgoing calls. The PUSH/SEL knob can be used to scroll through the call list.

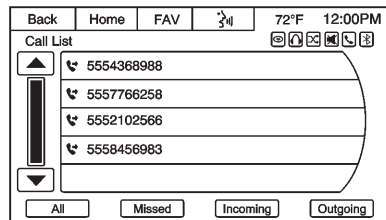


Once one of these options has been selected, a menu displays a list of contacts and numbers.


Turn the PUSH/SEL knob to scroll through the list. Press it to place a call.

Accepting or Declining an Incoming Call

When an incoming call is received, the audio is muted and a ring tone sounds.

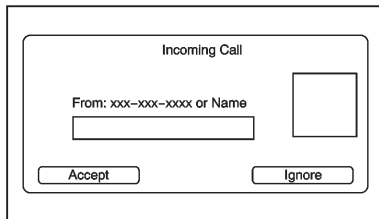


Touch Accept to answer the call or touch Ignore to disregard the incoming call.

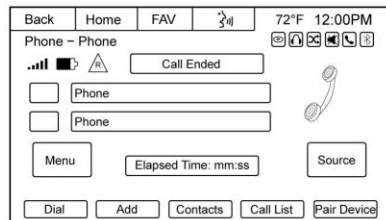

If the call is accepted, a Phone Information screen displays.

Call Waiting

Call waiting must be supported on the Bluetooth phone and enabled by the wireless service carrier to work.

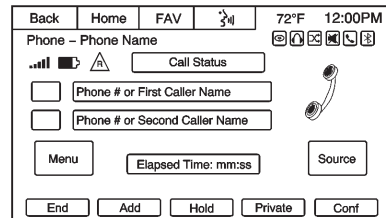

While a call is active, the options at the bottom change to make alternate functions available. Touch the Hold option to place the active call on hold.

Swapping Calls


This feature allows swapping between two active calls. This feature is grayed out during a conference call.

Conference Calling


Conference and three-way calling must be supported on the Bluetooth phone and enabled by the wireless service carrier to work.

To start a conference while in a current call:

1. Touch the Phone icon on the Home Page until the Phone main display is shown with the current active call.

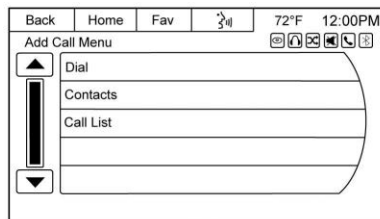

2. Touch Add at the bottom of the display to enter the Add Call Menu.
3. Make another call. The first call will be placed on hold while the second call is dialing and connected.

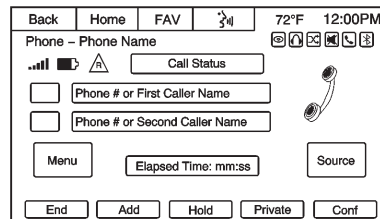


4. To make a conference call, select the Conf option on the Phone main display and both calls merge into one conference call.

Ending a Call

To end a call:

1. Touch the Phone icon on the Home Page to show the Phone display.
2. While a call is active, the Dial option at the bottom of the Phone changes to End.

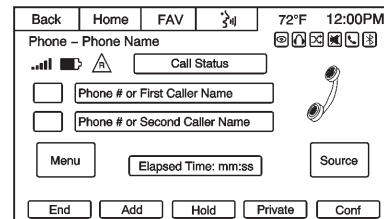


3. Touch End or press  /  on the steering wheel controls to end the call.

Dual Tone Multi-Frequency (DTMF) Tones

The in-vehicle Bluetooth system can send numbers during a call. This is used when calling a menu-driven phone system.

1. While in a call and on the phone screen, touch the Dial Pad option.

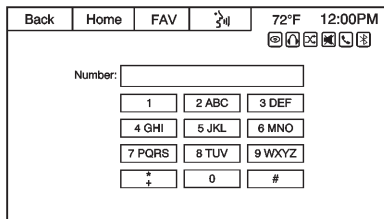


2. Touch digits corresponding to the DTMF tones to be sent.


The DTMF tones will be generated on the network as you enter each number.

Ringtones


The phone must support in-band ringtones for this feature to work. In-band ringtone is the phone's internal ringtone. Three radio ringtones are available for phones that do not support in-band ringtones.

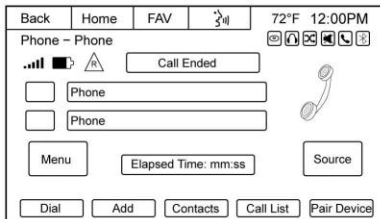

1. Touch the Phone icon on the Home Page to display the Phone screen.

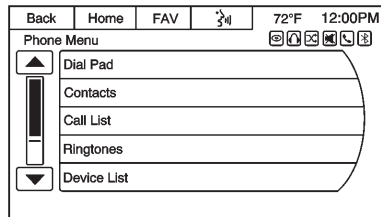


2. Touch Menu to display the Phone Menu.

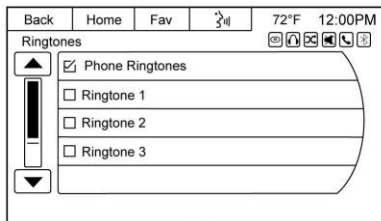


3. Touch Ringtones to display the Ringtones menu. This line item is only available for phones that support in-band ringtones.


Device List

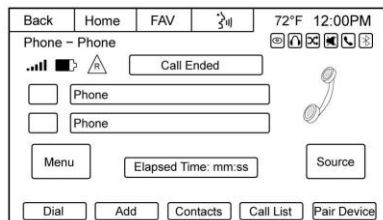

1. Touch the Phone icon on the Home Page to show the Phone options.

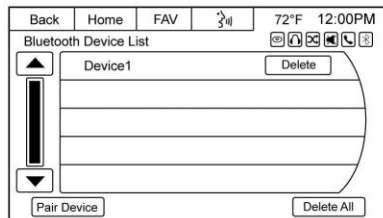


2. Touch Pair Device from the main Phone display or touch Menu and select Device List. Bluetooth Device List displays all the devices connected to the vehicle.

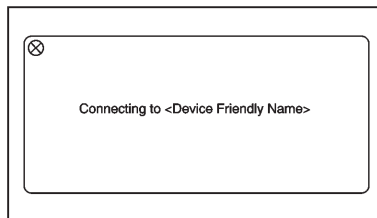


3. Touch the desired device to connect. The pop-up display should show until the device is connected. The Contact and Call history is downloaded in the background while the device is connecting.


Deleting a Bluetooth Device

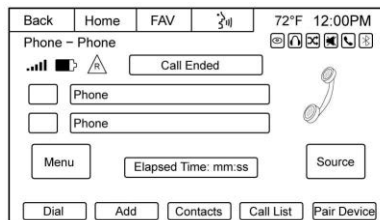

1. Touch Menu from the Phone main menu to display the Phone Menu options.

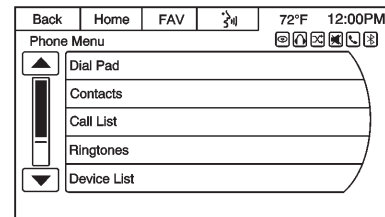

2. Touch the Device List option to display the Bluetooth Device List.

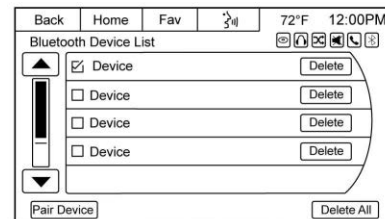

3. Select the device, then touch Delete associated with the selected device.

4. To delete all devices, touch the Delete All option at the bottom of the display.


Text Messaging

For vehicles equipped with Bluetooth capability (Message Access Protocol), the system can display text messages, play back a message over the audio system, and send a predefined message. Not all phones support all functions and work with Bluetooth. The radio only supports the receipt of SMS text messages. A request may need to be accepted on the phone or some phone settings may need to be changed to allow for text messaging to function. See the cell phone manufacturer's user guide. Text messaging features can also be initiated via voice recognition. Users can play, reply, and forward a message through voice recognition.


Using Text Messaging

1. Touch the Text Messaging icon on the Home Page or touch Menu on the Phone main


display to go to the Phone Menu and select Text Messaging. The Text Messaging icon on the Home Page and Phone Menu item are grayed out if not supported by the Bluetooth connected device.

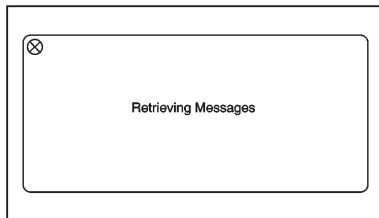

2. A pop-up message displays stating, "Retrieving Messages."

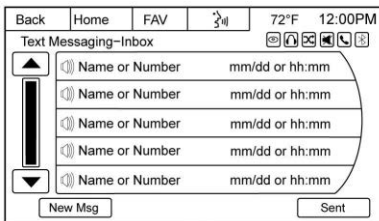


3. Once all messages are retrieved, the Text Messaging-Inbox displays. Select a message for viewing or touch the speaker icon to the left of the Name or Number to play back the message through the audio system. Viewing messages is only available while the vehicle is not in motion. Touch Sent to view a list of sent messages. Not all phones allow access to previous messages.

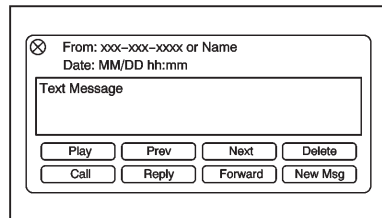


4. View the message or touch the Play option to hear the message through the vehicle's speakers. The message view display is locked while the vehicle is in motion.


- Touch Call to dial or call the contact or number who sent the text. Not all phones allow calling of the message sender.
- Touch the Prev or Next option to display the previous or next message from the message list.

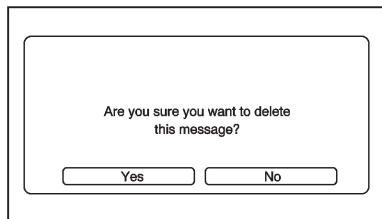


- Touch the Delete option and a pop-up message displays. Touch Yes to delete the message or No to return to the previous display. Not all phones allow message deletion.
- Touch the Reply option to reply to a text message that was received as an incoming message. Not all phones allow message sending.

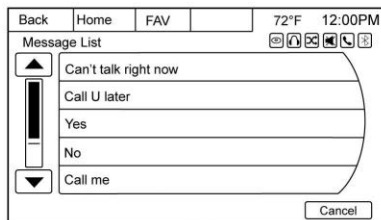


- Select the desired message from the display of predefined messages to send as the reply message.

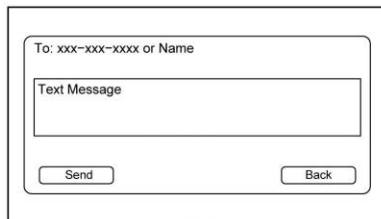

- Touch Send to send that message.

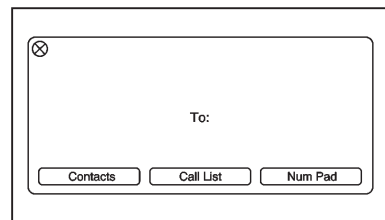


- Touch the Forward option to forward the message. The addressee screen is displayed, giving the option to forward the message by touching either the Contacts, Call List, or Num Pad option.

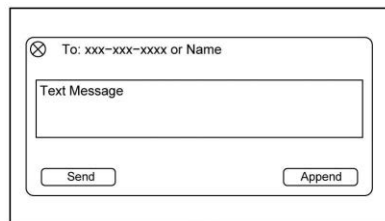

- Touch the Send option from the forwarding confirmation send display or touch Append to add a predefined message to the forwarded message.
- Touch the New Msg option to create and send a new message. A screen displays a choice of selecting Contacts, Call List, or Num Pad to help you choose the desired number.
- Select the number to send a predefined message. From the predefined message list, select the message you want.
- Touch Send.

Incoming Text Messages

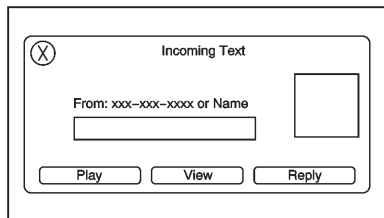

A pop-up display is shown when there is an incoming text. The pop-up will remain on the display for three minutes without interaction.

- Touch Play to hear the message through voice recognition.
- Touch View to view the message. Viewing is not available while the vehicle is in motion.
- Touch Reply to reply to the message.
- Touch X to close the Incoming Text pop-up display.

Text Messaging Settings

Text Messaging settings are available from the Settings Home Page icon.

- Select Text Message Options from the Settings menu list.
- Select Incoming Text Alert from the Text Message Options menu list to enable/disable the new incoming message display pop-up and alert sound.

- Select Append Text Signature from the Text Message Options menu list to enable/disable the vehicle signature appended to messages sent from the radio ("Sent from my <Brand> <Model>").

Trademarks and License Agreements

FCC Information

See "Radio Frequency Statement" in the owner's manual.

Made for



iPod



iPhone

"Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and

iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



Fees and Taxes: Subscription fee, taxes, one time activation fee, and other fees may apply. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions subject to Customer Agreement available at www.siriusxm.com. SiriusXM service only available in the 48 contiguous United States and Canada.

In Canada: Some deterioration of service may occur in extreme northern latitudes. This is beyond the control of SiriusXM Satellite Radio.

Explicit Language Notice: Channels with frequent explicit language are indicated with an "XL" preceding the channel name. Channel blocking is available for SiriusXM Satellite Radio receivers by notifying SiriusXM:

- USA Customers: See www.siriusxm.com or call 1-888-601-6296.
- Canadian Customers: See www.siriusxm.ca or call 1-877-438-9677.

It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the SiriusXM Satellite Radio System or that support the SiriusXM website, the Online Service or any of its content. Furthermore, the AMBER voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.

General Requirements:

1. A License Agreement from SiriusXM is required for any product that incorporates SiriusXM Technology and/or for use of any of the SiriusXM marks to be manufactured, distributed, or marketed in the SiriusXM Service Area.
2. For products to be distributed, marketed, and/or sold in Canada, a separate agreement is required with Canadian Satellite Radio Inc. (operating as XM Canada).



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Bluetooth

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by General Motors is under license. Other trademarks and trade names are those of their respective owners.

Pandora (If Equipped)

Pandora is a registered trademark of Pandora Media, Inc., used under license.

Map End User License Agreement

TERMS AND CONDITIONS

Please read the terms and conditions at www.telenav.com carefully before you use the TeleNav Software. Your use of the TeleNav Software indicates that you accept these terms and conditions. In brief, you use this service at your own choice and risk. TeleNav and its suppliers assume no responsibility for any damage or loss to you or a third party resulting from such use. Please drive responsibly, obey all traffic laws,

and enter destinations, POIs or other data only while your vehicle is parked.

Disclaimer of Warranty

TELENNAV EXPRESSLY DISCLAIMS AND EXCLUDES ALL WARRANTIES IN CONNECTION WITH THE TELENNAV SOFTWARE, WHETHER STATUTORY, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES WHICH MAY ARISE FROM COURSE OF DEALING, CUSTOM OR TRADE AND INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS WITH RESPECT TO THE TELENNAV SOFTWARE.

Disclaimer of Liability

UNDER NO CIRCUMSTANCES SHALL TELENNAV OR ITS suppliers BE LIABLE TO YOU OR TO ANYONE ELSE FOR ANY INDIRECT, INCIDENTAL,

CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES arising out of or in connection with the use by you or anyone else of the TeleNav Software, EVEN IF TELENV HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE ENTIRE LIABILITY OF TELENV AND OF ALL OF its suppliers SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE TELENV SOFTWARE. SOME STATES AND/OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Index

4	
4G LTE	35
A	
Accepting or Declining an Incoming Call	76
Adding or Removing SiriusXM Categories	16
Agreements	
Trademarks and License	83
AM-FM Radio	13
Audio	
Bluetooth	34
Audio Players	
CD/DVD	25
MP3	27
Audio System	69
Auxiliary	
Devices	33
Avoiding Untrusted Media	
Devices	25
B	
Bluetooth	68, 84
Bluetooth Audio	34
Bluetooth Audio and Voice Recognition	33
Bluetooth Controls	68

C	
Call Waiting	76
Canceling Voice Recognition	53
CD/DVD Player	25
Cleaning High Gloss Surfaces and Vehicle Information and Radio Displays	11
Conference Calling	77
Controls	
Steering Wheel	6
Coverage Explanations	51
Customer Assistance Offices	12
D	
Database Coverage	
Explanations	51
Destination	40
Destination and Guidance	
Commands	56
Destination Menu with Route	
Guidance Active	45
Detailed Areas	38
Device List	79
Devices	
Auxiliary	33
Driving on a Route	47
Dual Tone Multi-Frequency (DTMF) Tones	78

Playing the Radio	13
Port	
USB.....	29
Positioning	
Vehicle.....	49
Problems with Route	
Guidance	50

R

Radios	
AM-FM Radio	13
Satellite	16
Rear Camera (If Equipped)	65
Recognition	
Voice.....	52
Ringtones	78

S

Satellite Radio	16
Scroll Features	38
Servicing System	50
Settings	59
SiriusXM Categories	16
SiriusXM NavTraffic (If Equipped)	63
SiriusXM Weather (If Equipped)	66
Software Updates	12
Steering Wheel Controls	6

Stitcher	20
Stitcher Commands	57
Stitcher Internet Radio	20
Stitcher Troubleshooting	22
Storing Radio Station Presets ...	15
Symbols	
Navigation.....	39
System	
Global Positioning.....	49
Infotainment.....	2
OnStar.....	48

T

Text Messaging	80
Text Messaging Commands	58
Trademarks and License	
Agreements	83

U

Updates	
Map Data	50
Software	12
USB MP3 Player and USB	
Devices	29
USB Port	29
Using the Navigation System	36
Using the System	7
Using Voice Recognition	52, 69

V

Vehicle Positioning	49
Viewing	
Pictures.....	23
Voice Pass-Thru	55
Voice Recognition	52
Voice Recognition for My	
Media	54
Voice Recognition for	
Navigation	55
Voice Recognition for Phone	54
Voice Recognition for the	
Radio	53

W

Weather Commands	58
Website Information	12



U.S. Only



84144871 A

