



GETTING TO KNOW YOUR ***2019 TRAX***



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Trax. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at **my.chevrolet.com/learn**. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Cruise Control/
Forward Collision
Alert Buttons

Turn Signal Lever/
Driver Information
Center Controls

Driver
Information
Center

Audio
Steering Wheel
Controls

Windshield
Wipers/Rear
Wiper Lever



Power
Window/Mirror
Controls

Exterior/
Interior Lamp
Controls

Hood
Release
Lever

Storage
Compartment

Tilt/Telescope
Steering Wheel
Lever

Engine Start/
Stop Button

SYMBOLS



Low Fuel



Door Ajar



Traction Control Off



Engine Coolant
Temperature



Brake System



Cruise Control Set



StabiliTrak Active



StabiliTrak Off



Low Tire Pressure



Reduced Engine Power



Antilock Brake System



Passenger Seat Belt
Reminder



- | | | | |
|--|--------------------|--|-------------------|
| | Check Engine | | Airbag Readiness |
| | Oil Pressure | | Security |
| | Charging System | | Power Steering |
| | Seat Belt Reminder | | Lamps On Reminder |

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Unlock

Press to unlock the driver's door. Press again to unlock all doors and liftgate.

Lock

Press to lock all doors and liftgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound 3 times.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound for 30 seconds, or until the button is pressed again or the ignition is turned on.



Remote Vehicle Start*

Press and release the  Lock button and then press and hold the  button to start the engine from outside the vehicle. After entering the vehicle, turn the ignition to the On position.

- The engine will run for 15 minutes. Repeat these steps for a 15-minute time extension.
- Only 2 remote starts are allowed between ignition cycles.
- Press and hold the  button to cancel a remote start.

Note: To change the remote lock, unlock and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start. See Vehicle Personalization on page 11.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM*

Keyless Access enables operation of the doors, liftgate and ignition without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and the liftgate.
- ▶ Press the lock button on the passenger's door handle to unlock all doors and the liftgate.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on, all doors and the liftgate will lock automatically after a short delay once all doors and the liftgate are closed.

Note: To change the door lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYED IGNITION SYSTEM (IF EQUIPPED)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).



See Driving and Operating in your Owner's Manual.

KEYLESS (PUSHBUTTON) START◆

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press and hold the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the vehicle in accessory mode. The amber button indicator will illuminate.



See Driving and Operating in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever on the lower-left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.



See Instruments and Controls in your Owner's Manual.

SEATS

MANUAL DRIVER'S SEAT

A. Seat Fore/Aft Adjustment

Lift the handle under the front of the seat to slide the seat forward or rearward.

B. Seat Height Adjustment

Ratchet the lever up or down repeatedly to raise or lower the seat.

C. Seatback Recline Adjustment

Lift the lever to recline or raise the seatback.

D. Power Lumbar Adjustment

Press the control to adjust the support.



POWER DRIVER'S SEAT*

E. Power Lumbar Adjustment

Press the control to adjust the support.

F. 6-way Seat Adjustment

Move the control to move the seat forward/rearward and to tilt or raise/lower the seat.

G. Seatback Recline Adjustment

Lift the lever to recline or raise the seatback.



FOLDING FRONT PASSENGER SEAT

- With the head restraint lowered and the seat moved as far back as possible, pull the recline lever on the outboard side of the front passenger seat to fold the seat flat.

FOLDING REAR SEATS

1. Unbuckle the seat belts and return them to their normal stowed position.
2. Lower the head restraints.
3. Pull up the tab (H) located at the center front of each seat cushion.
4. Pull up the rear edge of the seat cushion and tilt it forward.
5. Press the lever (I) in the cup on top of the seatback. When the red marking is visible, the seatback is unlatched.
6. Fold down the seatback.
7. When unfolding the seats, make sure the seat belt buckles are accessible above the seat cushions.



DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC CONTROLS

A. MENU

Press to display the Trip menu (may include digital speedometer, trip odometers, fuel range, instantaneous fuel economy, average fuel economy, average vehicle speed, and navigation) or the Vehicle Information menu (may include remaining oil life, tire pressure, and units).




B.

Rotate the switch to scroll through the items of each menu.

C. SET/CLR

Press the button on the end of the lever to set a menu item or clear a message. Press and hold the button to reset a menu item.

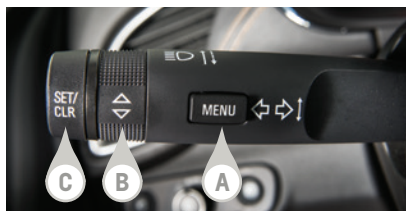

See Instruments and Controls in your Owner's Manual.

LIGHTING

EXTERIOR LAMPS

Rotate the knob to activate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps***

Press to turn the fog lamps on or off.

INSTRUMENT PANEL LIGHTING

 **Instrument Brightness Control**

Press the knob to extend it. Rotate it to adjust the instrument panel lighting.



DOME LAMP

The dome lamp controls are on the front overhead console.

 **Dome Lamp Override – Lamp Off**

 **Door Open – Lamp On**

 **Lamp On**

See Lighting in your Owner's Manual.

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touch screen, such as tap, drag, and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-478-7767 or go to my.chevrolet.com/learn.

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. To enter edit mode, touch and hold the Home page icon to move.
2. Drag the icon to the desired position and release. Drag the icon to the edge of the screen to move to another page.

INFOTAINMENT SYSTEM

SETTING THE TIME

1. Select Settings on the home page.
 2. Select System > Time/Date.
 3. Select Set Time.
 4. Touch the arrows to adjust the time.
 5. Touch < to exit the menu.
- Turn on Automatic Time and Date to have the time updated automatically as the system obtains information from the cellular network.



STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Select Audio on the Home page.
2. Tune in the desired radio station.
3. Select the desired page of favorite screen buttons.
4. Touch and hold one of the favorite screen buttons until a beep is heard. Favorites also can be saved by touching the ★ in a station or channel list.
5. Repeat the steps to store another favorite item.

PORTABLE AUDIO DEVICES

A USB port and an auxiliary jack are located at the front of the center console to connect portable audio devices.

- Connect an iPod[®], iPhone[®], MP3 Player, a USB flash drive or a USB mass storage device to the USB port.
- Touch Audio, and then touch More to select USB or AUX for the connected device.

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone."
To use the infotainment screen, select Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT♦

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 8 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.chevrolet.com/learn.

See Infotainment System in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

 Press to answer an incoming call or interact with the Bluetooth or OnStar® system.

End Call/Mute

 Press to end or decline a call.
Press to mute/unmute the speakers.

Next/Previous

Rotate the thumbwheel up or down to go to the next or previous favorite radio station or track.



► **Volume**

Press + or - to adjust the volume.

SRC Source


Press to select an audio source.

See Instruments and Controls in your Owner's Manual.

VEHICLE PERSONALIZATION


Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Select < to exit each menu.

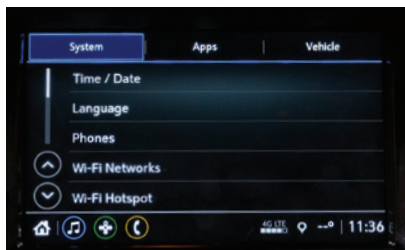

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

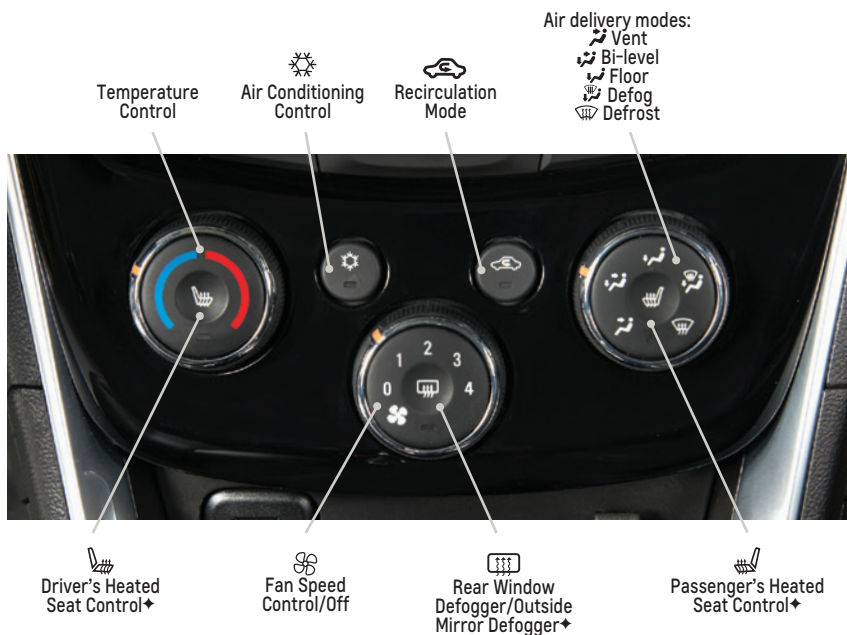

RECIRCULATION MODE

The  Recirculation Mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner's Manual.

WINDSHIELD WIPERS

WINDSHIELD WIPERS AND WASHER

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes


Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

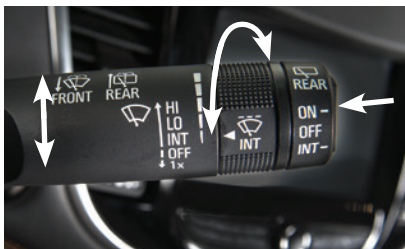

REAR WIPER AND WASHER

Press the switch on the end of the lever to operate the rear wiper.

ON

OFF

INT Intermittent Wipes

 **Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

CRUISE CONTROL ♦

SETTING CRUISE CONTROL

1. Press the  On/Off button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, rotate the thumbwheel down to the SET position to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES/+ Resume/Accelerate

Rotate the thumbwheel up to resume a set speed. When the system is active, rotate the thumbwheel up to increase speed.

SET/- Set/Coast

When the system is active, rotate the thumbwheel down to decrease speed.



 **Cancel**

Press to cancel the Cruise Control but retain the set speed in memory.

Pressing the brake pedal also will cancel the Cruise Control.

Turn off Cruise Control or the vehicle ignition to erase the set speed.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

LANE DEPARTURE WARNING⁺

The  Lane Departure Warning Indicator on the instrument cluster is green when a lane marking is detected. If a detected lane marking is crossed without using a turn signal in that direction, the system flashes an amber  indicator and 3 beeps sound on the side of the departure direction.

- ▶ To turn on or off, press the  Lane Departure Warning button on the center of the instrument panel.

FORWARD COLLISION ALERT⁺

The  Vehicle Ahead Indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the  **Forward Collision Alert** button on the left side of the steering wheel to set the alert timing to Far, Medium, Near, or Off.

SIDE BLIND ZONE ALERT⁺

While driving, the system displays a warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Side Blind Zone Alert.

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area behind the vehicle is displayed on the infotainment screen.

- ▶ To turn the Rear Camera Park Assist Symbols on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Camera Park Assist Symbols or touch the screen button.

Note: Clean the camera lens, located above the license plate, with water and a soft cloth.

REAR CROSS TRAFFIC ALERT⁺

When the vehicle is in Reverse, the system warns of cross traffic coming in either direction by displaying a red alert on the infotainment screen and sounding 3 beeps.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

REAR PARK ASSIST⁺

During low-speed parking maneuvers, detected objects are indicated by audible beeps. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30 cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.

See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

Driver Shift Control is a manual mode that allows the driver to manually select the range of gear positions. This feature can be used to drive the vehicle in a sportier manner or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever to the Manual (M) position.
2. Press the **+** (plus) or **-** (minus) button on the side of the shift lever to upshift or downshift. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur.



See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK® SYSTEMS

The traction control system limits wheel-spin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- Press the  **Traction Control/ StabiliTrak** button on the center of the instrument panel to turn traction control off or on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.



See Driving and Operating in your Owner's Manual.

HILL START ASSIST

When stopped on a steep hill, Hill Start Assist prevents the vehicle from rolling before driving off, whether facing uphill or downhill. During the transition between when the driver releases the brake pedal and starts to accelerate, Hill Start Assist holds the brake pressure (for up to 2 seconds) to ensure the vehicle doesn't roll.

Note: Hill Start Assist will not operate if StabiliTrak is disabled.

See Driving and Operating in your Owner's Manual.

EXPRESS POWER WINDOWS

- ▶ The driver's window has an express-down/express-up feature. Fully press or pull the window switch momentarily to lower or raise the window completely. Momentarily press or pull the window switch again to stop window travel. All passenger windows have the express-down feature.

See Keys, Doors and Windows in your Owner's Manual.

STORAGE FEATURES

CARGO SHADE

Remove the Shade

1. Unhook the cords (A) from the liftgate.
2. Lift the shade out of the rear hinges (B).
3. Slide the shade along the channels (C) to store it behind the rear seats.



Install the Shade

1. Insert the shade into the rear hinges.
2. Hook the cords to the liftgate.



See Storage in your Owner's Manual.

TIRE PRESSURE MONITOR

The **(i) Low Tire Pressure** warning light on the instrument cluster illuminates and a message is displayed on the Driver Information Center when a significant reduction in pressure occurs in one or more of the vehicle's tires. The warning light will remain on until the tire pressure is corrected. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label located below the driver's door latch.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

ENGINE OIL LIFE SYSTEM

The Oil Life System calculates engine oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center (DIC) when it's necessary to change the engine oil and filter. The system should be reset to 100% only following an oil change.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



GENERAL MOTORS

8418041A