



GETTING TO KNOW YOUR **2019 ACADIA**



gmc.com

Review this Quick Reference Guide for an overview of some important features in your GMC Acadia. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.gmc.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Memory Seat Buttons Electric Parking Brake Switch Instrument Panel Illumination Control Turn Signal Lever/Exterior Lamp Controls/IntelliBeam Button Driver Information Center Windshield Wipers Lever Engine Start-Stop Button



Power Mirror/Window Controls Power Liftgate Control Cruise Control/Forward Collision Alert/Heated Steering Wheel Buttons Audio Next-Previous Favorite Station Controls (behind steering wheel) Steering Wheel Adjustment Lever Audio Volume Controls (behind steering wheel) Driver Information Center Controls/Voice Recognition Buttons

Symbols



Check Engine



Engine Oil Pressure



Lane Keep Assist



Airbag Readiness



Cruise Control Set



Service Electric Parking Brake



Traction Control/StabiliTrak Active



Charging System



Security



Seat Belt Reminder



Brake System Warning



Electric Parking Brake

Infotainment System
Touch Screen

Infotainment
System Controls

Climate
Controls



Driver's Heated/
Ventilated Seat
Buttons◆

Traction Control
and StabiliTrak
Button

Hazard
Warning
Flashers
Button

USB Ports/
Accessory
Power Outlet

Passenger's
Heated/Ventilated
Seat Buttons◆



IntelliBeam Lighting



Lights On Reminder



Antilock Brake System
Warning



Low Tire Pressure



Power Steering Warning



Vehicle Ahead



StabiliTrak Off



Passenger Seat Belt
Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.



Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps will flash and the horn will sound.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start

Press and release the  Lock button and then immediately press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat these steps to run the engine for an additional 15 minutes. A remote start can be extended once.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Remote Start and Heated/Ventilated Seats[†]: Select the remote start heated and ventilated seat options in the Vehicle Settings to have the heated or ventilated seats turn on during a remote start. The seat button indicators do not illuminate and the temperature of the unoccupied seat may be reduced during a remote start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the Lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the Lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.

KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the Lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the keyless locking and unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the pocket in the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof* until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

A fuel-saving stop/start system has been integrated with the 2.5L engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

See Driving and Operating in your Owner's Manual.

FRONT SEATS

POWER SEAT ADJUSTMENTS♦

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press the rear control to adjust the amount of lumbar support.



SET MEMORY SEAT POSITIONS♦

With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound.

Repeat these steps using button **2** for a second driver.

- ▶ To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  Exit button instead of button **1** or **2**.



RECALL MEMORY SEAT POSITIONS♦

- ▶ Press and hold button **1**, **2** or  Exit until the seat and mirrors reach the set position. The memory/exit positions can be programmed to be recalled automatically.
- ▶ To set the Auto Memory Recall or Easy Exit options, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever or use the power control♦ on the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

REAR SEATS

ENTER OR EXIT THE 3RD-ROW SEATS

1. Remove anything on the 2nd-row seat or the floor in front of or behind the seat.
2. Pull the lever on top of the seatback (A) and pull the seat forward. The driver's side seat will tip and slide forward; the passenger's side seat will tip, pitch and slide forward.
3. After entering/exiting, push or pull the seatback rearward until the seat locks in place.



SLIDE THE 2ND-ROW SEAT

- Lift the bar under the seat cushion to slide the seat forward or rearward.



RECLINE THE 2ND-ROW SEAT

- Pull the lever on the side of the seat cushion (B) and move the seatback to the desired position. Release the lever.

FOLD THE 2ND-ROW SEATBACK

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever on the side of the seat cushion (B) and fold the seatback forward or, from the cargo area, pull the top lever (driver's side seat) or bottom lever (passenger's side seat) located on the driver's side of the cargo area (C).



FOLD THE 3RD-ROW SEATBACK

1. Remove anything on the 3rd-row seat or the floor in front of or under the seat.
2. Pull the strap on the seatback and push the seatback forward.
3. To raise the seatback, pull the strap on the seatback or push up the seatback from inside the vehicle until it locks in place.

Note: The 3rd-row seat can be reclined. It does not slide.

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed during a trip, indicating that there may be something in the rear seat.



See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter twice.
- ▶ Press the  **Power Liftgate** knob on the driver's door (A).
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the liftgate latch to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch (C) for 3 seconds. The turn signals will flash when the setting is saved.



HANDS-FREE OPERATION♦

- ▶ To open or close the liftgate hands-free, kick your foot straight under the left corner of the rear bumper. The Remote Keyless Entry transmitter must be within 3 feet of the liftgate.



See Keys, Doors and Windows in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the  **Parking Brake** switch.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the  switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

LIGHTING

EXTERIOR LAMPS

Rotate the outer band on the turn signal lever to activate the exterior lamps.

 Off/On

AUTO Automatic Headlamp System


Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 Parking Lamps

 Headlamps

 Fog Lamps

Rotate the inner band down to turn the fog lamps on or off.

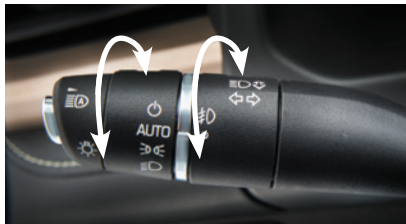

INTELLIBEAM SYSTEM♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Press the  button on the end of the lever with the lamp control in the AUTO or  Headlamps position to turn the automatic high-beam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The system is turned off if the fog lamps are turned on.

See Lighting in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

 Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

REAR WIPER

Turn the end of the lever to activate the rear wiper.



OFF

INT Intermittent Wipes

ON


 Rear Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

♦ Optional equipment

AUTOMATIC CLIMATE CONTROLS

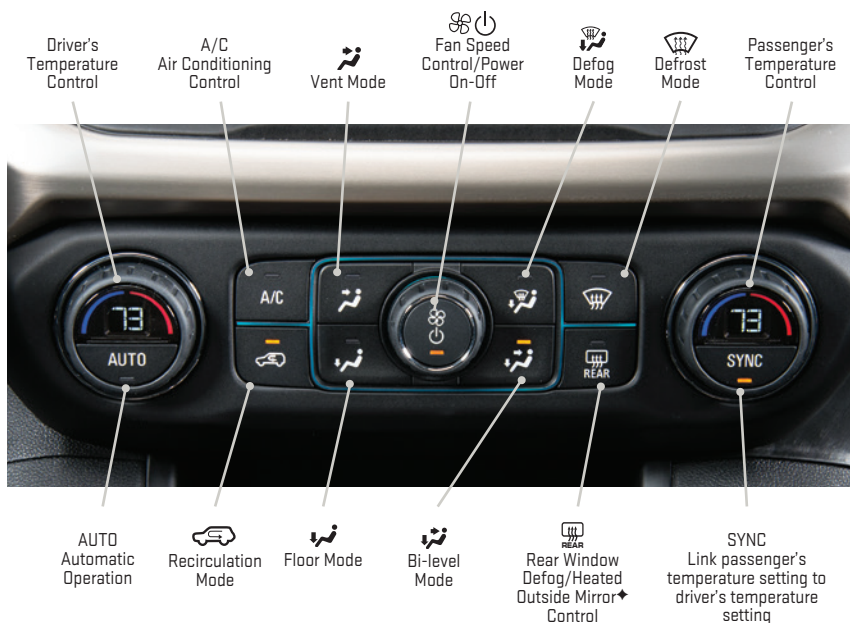

AUTOMATIC OPERATION

- Press **AUTO**.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, full automatic operation is canceled.

REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the infotainment screen. The front climate controls must be on to use the rear controls.

See Climate Controls in your Owner's Manual.

AUTO HEATED/VENTILATED SEATS◆

When the vehicle is on, the automatic heated seats and automatic heated steering wheel or automatic ventilated seats will activate based on the vehicle's interior temperature. Manually turn off the heated or ventilated seats using the seat controls. Manually turn off the heated steering wheel using the steering wheel control.

- To turn the auto heated seats and auto ventilated seats on or off, go to **Settings > Vehicle > Climate and Air Quality > Auto Heated Seats or Auto Cooled Seats**.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle system information and warning messages. Three different displays[◆] are available.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view and move through the DIC menus.

- ▶ Press the ◀ or ▶ button to move between the display zones. Press the ◀ button to go back to the previous menu.
- ▶ Press the △ or ▽ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.



Up-level display[◆] shown

SELECT INFO PAGES

1. Use the controls to display the Options menu.
2. Scroll to display Info Pages. Press ▶ to view the pages.
3. Scroll through the list of items.
4. Press ✓ to select or deselect an item to display in the Info menu.



See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.



See your Infotainment System Manual.

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



8-inch diagonal screen ♦ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

INFOTAINMENT SYSTEM

SETTING THE TIME

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours and minutes.
5. Press the **BACK** button to exit the menu.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[♦]), media (song, artist, etc.), phone contacts and navigation destinations[♦] can be stored in any order on the favorites list.

1. Display the desired radio station, media favorite, contact or destination.
2. Touch the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to Settings > Radio.

NATURAL VOICE RECOGNITION[♦]

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
 - Example Phone command (using your paired phone): "Call Amanda" or "Call 555-1212"
 - Example Media Music Device Search command (when connected to USB only): "Play artist [name]" or "Play song [name]"
 - Example Radio command: "Tune FM 104.3" or "Tune XM Classic Vinyl"
 - Help: Say "Help" for voice recognition assistance

VOICE PASS-THRU

Voice Pass-Thru allows access to the voice recognition commands on a compatible cell phone; i.e. Siri or Voice Command. Visit my.gmc.com/learn for more information.

- ▶ To activate phone voice recognition, press and hold the **Push to Talk** button on the steering wheel for 2 seconds.

PORTABLE AUDIO DEVICES

USB ports and accessory power outlets are located in the vehicle to connect portable audio devices. Use the USB ports to connect and charge mobile devices.

- ▶ Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands. Some USB ports are for charging only.
- ▶ Touch the **Audio** icon or press the **MEDIA** button[♦] to select a portable device as the audio source.


See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Projection icon will change to Apple CarPlay. Touch the Apple CarPlay icon to have your apps displayed.

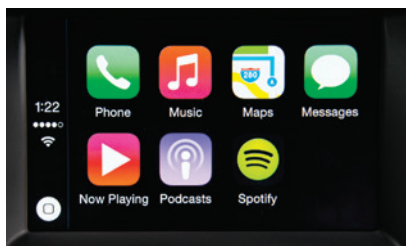

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Projection icon will change to Android Auto. Touch the Android Auto icon to have your apps displayed.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.gmc.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  Push to Talk button on the steering wheel; after the beep, say "Pair Phone"; or use the infotainment screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's built-in Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet using the 4G LTE signal.

- To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks.

Note: For more information on use and system limitations, visit my.gmc.com/learn.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

VEHICLE PERSONALIZATION

Some features can be customized using the Settings menus and the infotainment screen buttons. The Settings menus may include Time and Date, Language, Radio, Vehicle, Bluetooth, Rear Camera, Return to Factory Settings and others.

1. Press the **MENU** knob or touch Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **◀BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

SUNROOF/SUNSHADE ♦

- ▶ Press and release the  **SLIDE** switch to express-open the sunroof.
- ▶ Press and release the  **Close** switch to express-close the sunroof.
- ▶ To open the sunshade, press the latch button on the handle while pushing up to unlatch it.
- ▶ To close the sunshade, pull the handle forward until it latches.

See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

See Vehicle Care in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT♦ – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT♦ – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection > Lane Change Alert.

FORWARD COLLISION ALERT♦ – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  Collision Alert button on the steering wheel to set the alert timing to Far, Medium, or Near.

FORWARD AUTOMATIC BRAKING♦ –

In potential front-end imminent collision situations with detected vehicles, the brakes may be applied, if you have not already done so, to help reduce damage or avoid collisions at very low speeds with vehicles directly ahead.

- ▶ To set the Forward Collision Alert and Forward Automatic Braking systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection > Forward Collision System.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING♦ – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  Lane Keep Assist button on the center console.



DRIVER ASSISTANCE SYSTEMS

TRACTION CONTROL AND STABILITRAK SYSTEMS – The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the center console to turn traction control on or off.

FRONT PEDESTRIAN BRAKING♦ – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 feet and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle, if you have not already done so.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection > Front Pedestrian Detection.

FRONT♦ AND REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. After shifting from Reverse to Drive, a view of the area in front of the vehicle displays. Vehicle speed must be below 8 mph.

SURROUND VISION♦ – The Surround Vision system displays a rear or front camera view along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

- ▶ Touch **Front** or **Rear Camera** on the camera screen to display the front or rear view.
- ▶ Touch the **Guidance Lines** button on the camera screen to turn the guidelines on or off.

FRONT♦ AND REAR♦ PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

REAR CROSS TRAFFIC ALERT♦ – When the vehicle is in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the Park Assist and Rear Cross Traffic Alert systems on or off, press the  **Park Assist** button on the center console.



See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When the system is active, press to decrease speed.

Cancel

Press to cancel the Cruise Control without erasing the set speed from memory. Pressing the brake pedal will also cancel the Cruise Control.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL

The system maintains the Cruise Control set speed and a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

Following Gap

Press to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert  setting.

See Driving and Operating in your Owner's Manual.



AUTOMATIC TRANSMISSION

ELECTRONIC RANGE SELECT MODE

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. Move the shift lever to L (Manual Mode).
2. Press the + (plus) or – (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur.

See Driving and Operating in your Owner's Manual.



TRACTION SELECT

The Traction Select system automatically adjusts various vehicle controls based on driving preferences, weather and road conditions.

- Rotate the Traction Select knob on the center console to select:
 - /\ Tour
 - /x4 All-Wheel Drive (AWD models only)
 - ❧ Sport
 - ❄ Snow/Ice (front-wheel drive models only)
 - ⚡ Off-Road (AWD models only)
 - 🚚 Tow/Haul



The AWD indicator will illuminate when an AWD mode is selected.

If the vehicle is in Tour or AWD mode, it will stay in that mode through future ignition cycles.

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL ♦

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a very steep incline in a forward or reverse gear.

- Press the  **Hill Descent Control** button on the center console. Vehicle speed must be below 31 mph to turn on the system.
- Increase or decrease speed by applying the accelerator or brake pedal, or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes on the instrument cluster when the system is actively applying the brakes to maintain vehicle speed.


See Driving and Operating in your Owner's Manual.

ACTIVE TOW ♦

REAR VISION CAMERA CENTER GUIDELINE

Active Tow displays a center guideline on the Rear Vision Camera display to help align the vehicle's hitch bar ♦ with a trailer coupler.

1. Touch the **Camera** button on the infotainment screen.
2. On the Rear Vision Camera display screen, select the trailer guidance line button to view the center guideline.

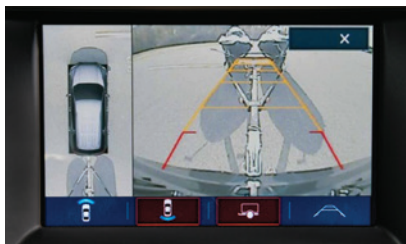

TRAILER VIEW

- To check the trailer when driving above 5 mph, touch the **Camera** button on the infotainment screen. The Rear View Camera displays the rear view of the vehicle. Press X to exit the view. The view is exited automatically after 8 seconds.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP



The myGMC mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myGMC mobile app also enables users to send remote commands to the vehicle — including remotely starting the vehicle and locking/unlocking the doors — as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



* 8 4 1 3 9 7 3 2 A *

GENERAL MOTORS

84139732 A