



GETTING TO KNOW YOUR **2019 SIERRA LIMITED 1500 & SIERRA 2500/3500**



gmc.com

Review this Quick Reference Guide for an overview of some important features in your GMC Sierra. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.gmc.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Memory
Seat
Controls♦

4WD
Control♦

Integrated
Trailer Brake
Control♦

Instrument Panel
Illumination Control/
Exterior Lamp Control

Turn Signal/
Windshield
Wipers Lever

Driver
Information
Center

Tow/Haul
Button



Power Mirror
Control♦/Door
Lock Switch/
Window Buttons

Cruise Control/
Collision Alert♦/
Heated Steering
Wheel♦ Buttons

Audio Next/
Previous Favorite
Station Controls
(behind steering
wheel)

Telescoping
Steering
Wheel
Control♦

Tilt
Steering
Wheel
Lever

Audio
Volume
Controls
(behind
steering
wheel)

Driver
Information
Center
Controls/Voice
Recognition
Buttons

Symbols



Low Fuel



Traction Control Off

BRAKE Brake System



Cruise Control Set



StabiliTrak Active



StabiliTrak Off



Security



Tow/Haul Mode



Hill Descent Control



Diesel Exhaust Brake
(diesel models only)



Lights On Reminder



Airbag Readiness

Driver's Heated/
Ventilated Seat
Buttons◆

Infotainment
System (8-inch*
screen shown◆)

Climate
Controls◆

Passenger's Heated/
Ventilated Seat
Buttons◆

USB Port◆
(in glove box;
SLE and SLT bench
seat models only)



Adjustable Pedals
Switch◆/Traction Control and
StabiliTrak Button/Cargo Box
Lamp Button

USB
Ports◆

Accessory
Power
Outlets◆

110V
Outlet◆

Front and Rear Park Assist◆/
Lane Departure Warning◆ (HD models)/
Hill Descent Control◆/ Diesel Exhaust
Brake (if equipped) Buttons

Note: Gasoline model shown.



Check Engine



Antilock Brake System



Low Tire Pressure
(single rear wheel
models only)



Door Ajar



Oil Pressure



Charging System



Seat Belt Reminder

Refer to your Owner's Manual to
learn about the information being
relayed by the lights, gauges and
indicators on the instrument cluster.

See In Brief in your Owner's Manual.

◆ Optional equipment

*Screen measured diagonally


KEYED IGNITION SYSTEM (IF EQUIPPED)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

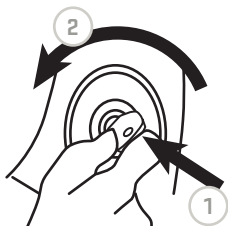

See Driving and Operating in your Owner's Manual.

REMOTE VEHICLE START◆

Use Remote Vehicle Start to start the engine from outside the vehicle. During a remote start, the engine will run for 10 minutes.

- ▶ Press and release the **Lock** button on the Remote Keyless Entry transmitter (key fob) and then press and hold the **Remote Start** button until the turn signal lamps flash to start the engine. After entering the vehicle, turn on the ignition.
- ▶ Press and hold the button until the parking lamps turn off to cancel a remote start.

Note: If the remote start heated/ventilated seat option is selected, the heated/ventilated seat button indicators do not illuminate and the temperature performance of the unoccupied seat may be reduced during the remote start. The heated/ventilated seat turns off when the ignition is turned on. To change the remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

DOOR LOCKS

DOOR LOCKS

- ▶ To lock or unlock all doors, press the power door **Lock**/ **Unlock** button, located on the front doors.

Note: To change the lock and unlock settings, go to Settings > Vehicle > Power Door Locks.

- ▶ To open a locked door from inside, pull the inside door handle to unlock the door and then pull the door handle again to open the door.
- ▶ To prevent passengers from opening a rear door (if equipped) from the inside or opening a rear window, press the **Rear Door Security Lock/Rear Window Lockout** button located on the driver's door. The button indicator will illuminate.

LOCKING TAILGATE

- ▶ To lock or unlock the tailgate, use the door key or the Remote Keyless Entry transmitter (key fob)◆.

See Keys, Doors and Windows in your Owner's Manual.

POWER SEATS◆

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control to adjust the lumbar support.



SET MEMORY POSITIONS

1. With the vehicle in Park, adjust the driver's seat, power outside mirrors and adjustable pedals◆ to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until two beeps sound.
3. Repeat the steps using button **2** for a second driver.



SET EXIT POSITION

1. Adjust the driver's seat and adjustable pedals◆ to the desired positions.
2. Press and release the **SET** button and then press and hold the  **Exit** button on the driver's door until two beeps sound.

RECALL POSITIONS

- ▶ Press and hold button **1** or **2** or the  **Exit** button on the driver's door until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner's Manual.


HEAD RESTRAINTS

- ▶ To raise the head restraint, pull the head restraint up.
- ▶ To lower the head restraint, press the button on top of the seatback and push the head restraint down.

See Seats and Restraints in your Owner's Manual.

TILT/TELESCOPING ♦ STEERING WHEEL

- ▶ With the vehicle in Park, pull the lever (A) on the left side of the steering column to adjust the tilt position of the steering wheel. The steering wheel can then be moved up or down. Release the lever to lock the steering wheel in place.
- ▶ With the vehicle in Park, push down the lever ♦ (B) closer to the instrument panel on the left side of the steering column to move the steering wheel in or out. Pull up the lever to lock the steering wheel in place.

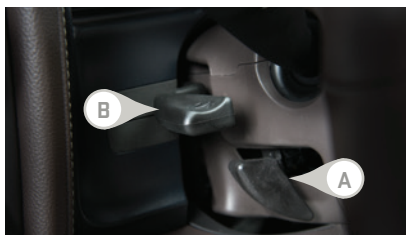

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

3.5-INCH* DRIVER INFORMATION CENTER

Menu Items

- ▶ Turn the reset stem on the instrument cluster to scroll through the following menu items: Digital Speedometer, Trip Odometer, Fuel Range, Average Fuel Economy, Tire Pressure, Remaining Oil Life, Transmission Fluid Temperature, Trailer Brake, Hourmeter, and Units.



Reset an Item

- ▶ Press the reset stem to set a menu item or clear a message. Press and hold the stem to reset a menu item.

4.2-INCH* DRIVER INFORMATION CENTER ♦

Use the control pad on the right side of the steering wheel to view the Info (includes the trip odometers and fuel information), Audio, Phone, Navigation, and Settings menus.

Menu Items

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the △ or ▽ button to move through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.



See Instruments and Controls in your Owner's Manual.

LIGHTING

EXTERIOR LIGHTING

Rotate the knob to activate the exterior lights.

 Off/On

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 Parking Lamps

 Headlamps

 Fog Lamps♦

Press to turn the fog lamps on or off.

INSTRUMENT PANEL LIGHTING

 Instrument Panel Brightness

Rotate the thumbwheel to adjust the instrument panel lighting.

CARGO LAMP

 Cargo Box Lamp

With the vehicle in Park, press to turn the cargo lamp and under-rail pickup box lights♦ on or off. The button indicator will illuminate when the lights are on.



See Lighting in your Owner's Manual.

POWER MIRRORS♦

POWER MIRROR ADJUSTMENT

- ▶ Press the  Power Mirror Selector switch to select the driver's or passenger's mirror; use the  four-way control to adjust the mirror.

POWER FOLDING MIRROR

- ▶ Press the  Power Folding Mirror button to fold or unfold the mirrors.



See Keys, Doors and Windows in your Owner's Manual.

CLIMATE CONTROLS



RECIRCULATION MODE

- Press  **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

Note: When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS♦



AUTOMATIC OPERATION

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, full automatic operation is turned off.

RECIRCULATION MODE

- Press **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

Note: When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

SYNC TEMPERATURE SETTINGS

- Press **SYNC** to link the passenger's temperature setting to the driver's setting. If the passenger's setting is adjusted, the different passenger's temperature setting is displayed.

See Climate Controls in your Owner's Manual.

WINDSHIELD WIPERS

Rotate the band on the lever to activate the wipers.

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**


Adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

 **Single Wipe**

 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.

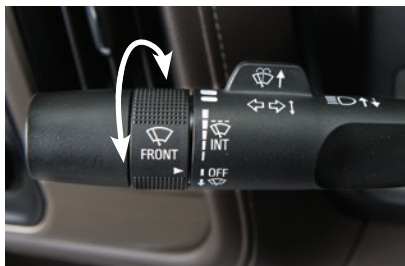

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

 **Push to Talk**

Press to answer an incoming call or to use natural voice recognition[◆] with the audio, Bluetooth[◆], navigation[◆] or OnStar^{®◆} system.

Press and hold to activate Voice Pass-Thru (Siri[®] Eyes Free or Voice Command) on a paired, compatible cell phone.

 **End Call/Mute**

Press to end or decline a call.

Press to mute/unmute the speakers.

Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station

(behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station buttons shown. Volume buttons are located behind the right side of the steering wheel.

See your Infotainment System Manual.

INFOTAINMENT SYSTEM WITH 7-INCH* COLOR SCREEN

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications:
Touch a screen
icon to access an
application



Home
page



SEEK
Previous radio
station or track



Power/
Volume



SEEK
Next radio
station or
track



Press to view Phone screen
or answer a call/Press
and hold to access
Push to Talk

SETTING THE TIME

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch ◀BACK to exit the menu.

STORING FAVORITES

Up to 25 AM, FM and SiriusXM[♦] radio stations can be stored, in any order, on up to five pages.

1. Tune in the desired radio station.
2. Touch the < or > button to display where the station is to be stored.
3. Touch and hold one of the preset screen buttons until a beep is heard.
4. Repeat the steps for each desired station.

For assistance with the infotainment system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM WITH 8-INCH* COLOR SCREEN

Refer to your Owner's Manual for important information about using the infotainment system while driving.



MANAGING HOME PAGE ICONS

1. Press the Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the Home button to exit edit mode.

For assistance with the infotainment system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.



INFOTAINMENT SYSTEM WITH 8-INCH* COLOR SCREEN

SETTING THE TIME

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.



STORING FAVORITES

Up to 60 radio stations from all bands (AM, FM or SiriusXM[®]), media (song, artist, album, and genre with device connected to a USB port), phone contacts and navigation destinations[♦] can be stored in any order.

1. Select the desired radio station, media favorite, navigation destination or contact.
 2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
 3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
 4. Repeat the steps to store another favorite item.
- To change the number of favorites displayed, go to Settings > Radio.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
(Examples: "Call Amanda" or "Tune FM 104.3." Say "Help" for assistance.)

GMC SHOP

In-vehicle apps, connecting to music, news, weather, travel information and more, are available for download to the radio through the SHOP icon on the Home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

PORTABLE AUDIO DEVICES

An accessory power outlet, dual USB ports and auxiliary jack are located in the center seat console (bench seat) or center console storage compartment (bucket seats).

- An iPod[®], iPhone[®], MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Search for music on-screen or by voice commands.
- Press the **MEDIA** button to select a portable device as the audio source.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM ♦

Refer to your Owner Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. For more information, visit my.gmc.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or

Use the **MENU** knob or the touch screen to select the **Phone** icon > **Phones** > **Pair Device**.

2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device.

See your Infotainment System Manual.

4G LTE WI-FI® HOTSPOT ♦

With the vehicle's built-in 4G Wi-Fi® hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet using the 4G LTE signal.

- ▶ To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks.

For more information on use and system limitations, visit my.gmc.com/learn.

See your Infotainment System Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

APPLE CARPLAY™

Apple CarPlay capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Projection icon will change to Apple CarPlay. Touch the Apple CarPlay icon to have your apps displayed.

For more information, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

See your Infotainment System Manual.

ANDROID AUTO™

Android Auto capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Projection icon will change to Android Auto. Touch the Android Auto icon to have your apps displayed.

For more information, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

See your Infotainment System Manual.

WIRELESS CHARGING♦ (HD MODELS ONLY)

The Wireless Charging system for mobile devices is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.gmc.com/learn. See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the charging symbol displays on the infotainment screen. If not charging, remove the device for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

♦ Optional equipment

See your Infotainment System Manual. 15

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons♦.

CHANGING VEHICLE SETTINGS

The Vehicle Settings menu may include Climate and Air Quality, Collision/Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, and Remote Lock/Unlock/Start.

Use the **MENU** knob or the touch screen to:

1. Select Settings on the Home page.
2. Select Vehicle.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **◀BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the **On/Off** button. The **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The **Cruise Control** symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing the speed.

SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing the speed.

Cancel

Press to cancel the Cruise Control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the Cruise Control.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

AUTOMATIC TRANSMISSION

RANGE SELECTION MODE

Range Selection Mode allows the driver to select the range of gears desired for the current driving conditions.

1. Move the shift lever to the L (Manual) position.
2. Press the + (plus) or – (minus) button (A) on the shift lever to select a lower or higher gear. The current gear is displayed next to the L on the Driver Information Center.

The transmission will be limited to the gear selected and lower gears. If vehicle speed is too high or too low for the requested gear, the shift will not occur.



TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- Press the  Tow/Haul Mode button (B) on the end of the shift lever to turn the system on or off.

See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- Press the  Traction Control/StabiliTrak Off button on the center of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

INTEGRATED TRAILER BRAKE CONTROL (ITBC) ♦

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.

- Adjust the Trailer Gain by pressing the +/– adjustment buttons on the control panel.
- Squeeze the levers together on the control panel (left lever does not move) to manually apply the trailer brakes.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT[◆] (HD MODELS ONLY)

The driver's seat pulses — left side, right side, or simultaneously — to alert the driver of the direction of potential hazards.

- Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT[◆] (HD MODELS ONLY)

The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- Press the  Collision Alert button on the left side of the steering wheel to set the alert timing to Far, Medium, Near, or Off.



LANE DEPARTURE WARNING[◆] (HD MODELS ONLY)

When crossing a detected lane marking without using a turn signal in that direction, the system flashes an amber  indicator on the instrument cluster and the Safety Alert Seat pulses or beeps sound (if selected) on the side of the lane departure direction.

- Press the  Lane Departure Warning button on the center of the instrument panel to turn the system on or off.

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment system. Vehicle speed must be below 8 mph.

- To turn the Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

FRONT AND/OR REAR PARK ASSIST[◆]

During low-speed parking maneuvers, the system provides "distance to closest object" information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or a continuous beep sounds (if selected).

- To turn the system on or off, press the  Park Assist button on the center of the instrument panel.

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL ♦ (Z71)

Hill Descent Control sets and maintains vehicle speed from 1–19 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button on the center of the instrument panel. Vehicle speed must be below 31 mph to enable the system. The Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

DIESEL EXHAUST BRAKE (DIESEL MODELS ONLY)

The engine exhaust brake enhances the vehicle brake system by using engine braking and automatically downshifting the transmission, depending on the length of time the brakes are applied, to help slow the vehicle on downhill grades.

- Press the  **Diesel Exhaust Brake** button on the center of the instrument panel to turn the system on or off.



See your Duramax Diesel Owner's Manual.

TIRE PRESSURE MONITOR (SINGLE REAR WHEEL MODELS ONLY)

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

Refer to your Owner's Manual for information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP



The myGMC mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myGMC mobile app also enables users to send remote commands to the vehicle — including remotely starting the vehicle and locking/unlocking the doors — as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



GENERAL MOTORS

84161721 A