



GETTING TO KNOW YOUR 2019 TERRAIN

Instrument Panel	2	Rear Seats	8	Vehicle Personalization.....	15
Remote Keyless Entry		Wipers and Washers.....	8	Teen Driver	15
Transmitter	4	Lighting	9	Driver Assistance Systems	16
Keyless Access System	4	Universal Remote System.....	9	Cruise Control	18
Keyless (Pushbutton) Start.....	5	Climate Controls	10	Traction Select System.....	18
Auto Engine Stop/Start		Driver Information Center	11	Hill Descent Control	19
Operation	5	Audio Steering Wheel Controls	11	Tire Pressure Monitor	19
Electronic Precision Shift		Infotainment System.....	12	Power Programmable Liftgate ..	19
Transmission.....	6	Bluetooth System	14	Roadside Assistance	20
Electric Parking Brake.....	6	4G LTE Wi-Fi Hotspot	15	myGMC Mobile App	20
Steering Wheel Adjustment	7	Wireless Charging	15	GMC Owner Center.....	20
Front Seats.....	7				



gmc.com

Review this Quick Reference Guide for an overview of some important features in your GMC Terrain. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.gmc.com/learn. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

- Power Mirror/Window Controls
- Memory Seat Buttons
- Exterior-Interior Lamp Controls/Electric Parking Brake Switch
- Turn Signal Lever/IntelliBeam Button
- Driver Information Center
- Windshield Wipers Lever
- Driver Information Center Controls/Voice Recognition Buttons



- Power Liftgate Control
- Cruise Control/Forward Collision Alert/Heated Steering Wheel Buttons
- Audio Next-Previous Favorite Station Controls (behind steering wheel)
- Steering Wheel Adjustment Lever
- Audio Volume Controls (behind steering wheel)
- Engine Start-Stop Button

Symbols



Check Engine



Engine Oil Pressure



Lane Keep Assist Warning



Airbag Readiness



Cruise Control Set



Service Electric Parking Brake



Traction Control/StabiliTrak Active



Charging System



Security



Seat Belt Reminder



BRAKE Brake System Warning



Electric Parking Brake



IntelliBeam Lighting



Lights On Reminder



Antilock Brake System Warning



Low Tire Pressure



Power Steering Warning



Vehicle Ahead



StabiliTrak Off



Passenger Seat Belt Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See In Brief in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.



Power Liftgate*

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps will flash and the horn will sound.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start*

Press and release the Lock button and then immediately press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat these steps to run the engine for an additional 15 minutes. A remote start can be extended once.
- Press and hold the button until the parking lamps turn off to cancel a remote start.

Remote Start Auto Heated/Ventilated Seats*:

Select the Remote Start Auto Heat Seats or Remote Start Auto Cool Seats option in the Vehicle Settings to have the heated or ventilated seats turn on during a remote start. The seat button indicators do not illuminate and the temperature performance of the unoccupied seats may be reduced during a remote start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the keyless locking and unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the driver-side cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine. Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof* until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

An automatic stop/start system has been integrated with the engine to help conserve fuel. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The transmission is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time is greater than 2 minutes.



See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The Electronic Precision Shift transmission control switches are located on the front console. The selected gear position illuminates in red on the switch. Bring the vehicle to a complete stop before shifting the transmission.

Park – Press the **P** button to shift to Park.

Reverse – Pull the **R** switch to shift to Reverse.

Neutral – Press the **N** button to shift to Neutral.

Drive – Pull the **D** switch to shift to Drive.



ELECTRONIC RANGE SELECT (MANUAL) MODE

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. Press the **L (Low)** button.
2. Press the **+** (plus) or **-** (minus) button to increase or decrease the gear range available.

The current gear is displayed on the Driver Information Center.

If vehicle speed is too high or low for the requested gear, the shift will not occur.

CAR WASH MODE

The Car Wash Mode enables the vehicle to remain in Neutral when using automatic car washes. There are different procedures for when the driver remains in or exits the vehicle and for vehicles equipped with a gasoline or diesel engine. Refer to your Owner's Manual for more information.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the **(P) Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** button.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

FRONT SEATS

POWER SEAT ADJUSTMENTS♦

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the top of the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the rear control to adjust the lumbar support.



SET MEMORY SEAT POSITIONS♦

With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound.

To store a seat position for when exiting the vehicle, repeat these steps using the  Exit button.



RECALL MEMORY SEAT POSITIONS♦

- ▶ Press and hold button 1, 2 or  Exit until the seat and mirrors reach the set position.

The memory/exit positions can be programmed to be recalled automatically.

- ▶ To set Seat Entry Memory and Seat Exit Memory, go to Settings > Vehicle > Seating Position.



FOLD-FLAT FRONT PASSENGER SEATBACK

1. Lower the head restraint and move the seat as far back as possible.
 2. Lift the recline lever (D) and fold the seatback forward.
- ▶ To raise the seatback, lift the recline lever and fully raise the seatback.


REAR SEATS

RECLINE THE REAR SEAT

- Pull the lever (A) on the top of the seatback and move the seatback to the desired position. Release the lever.

FOLD THE REAR SEATBACK

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever (A) on the top of the seatback and fold the seatback forward. A tab near the lever is visible when the seatback is unlatched.
3. To fold the seatback from the cargo area, pull the top lever♦ (B) (passenger's side seat) or bottom lever♦ (C) (driver's side seat) located on the passenger's side of the rear cargo area.

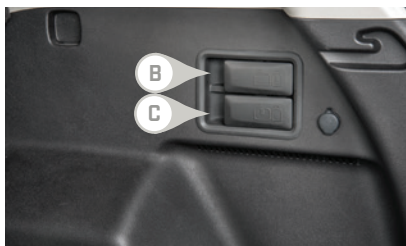

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed during a trip, indicating that there may be something in the rear seat.

See Seats and Restraints in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes


Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

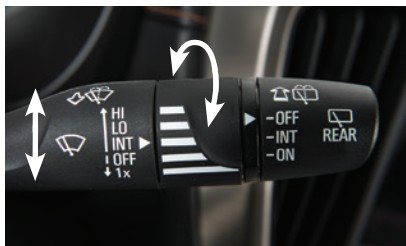

REAR WIPER

Turn the end of the lever.

OFF

INT Intermittent Wipes

ON

 **Rear Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

LIGHTING

EXTERIOR LAMP CONTROL

Rotate the knob on the left side of the instrument panel to activate the exterior lamps.

 Off/On

AUTO

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 Parking Lamps

 Headlamps

 Fog Lamps♦

Press the button to turn the fog lamps on or off.



INSTRUMENT PANEL LIGHTING

 Instrument Panel Illumination

Press and release the knob to extend it. Turn the knob to adjust the instrument panel lighting.



INTELLIBEAM SYSTEM♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Press the  button on the turn signal lever with the exterior lamp control in the AUTO or  Headlamps position to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The IntelliBeam system is turned off if the fog lamps are on.

See Lighting in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting.

Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS



Dual Automatic Climate Controls ♦ shown

AUTOMATIC OPERATION ♦

- Press AUTO.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions to maintain the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, full automatic operation is canceled.

AUTO DEFOG ♦ AND AUTO REAR WINDOW DEFOG ♦

Auto Defog and Auto Rear Defog automatically turn on when the engine is started.

- Go to Settings > Vehicle > Climate and Air Quality to turn the Auto Defog and Auto Rear Defog settings on or off.

See Climate Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

Use the controls on the right side of the steering wheel to view the Trip, Vehicle and Eco menus (base DIC) or the Home, Info (includes trip and fuel information), Audio, Navigation, Phone and Options menus (midlevel and uplevel DIC[◆]).

DIC CONTROLS

- ▶ Press the ◀ or ▶ button to move between the display zones. Press the ◀ button to go back to the previous menu.
- ▶ Press the △ or ▽ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or select or reset an item.



Uplevel DIC[◆] shown

SELECT INFO PAGES[◆]

1. Use the controls to display the Options menu. Press ✓.
2. Scroll to display Info Pages. Press ▶ (midlevel DIC) or ✓ (uplevel DIC) to view the items.
3. Press △ or ▽ to scroll through the list of items.
4. Press ✓ to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar[®] system.

Press and hold to activate phone voice recognition (Voice Pass-Thru/Siri[®] Eyes Free) with a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station

(behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Uplevel radio with 8-inch diagonal screen ♦ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. For assistance with the infotainment system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or go to my.gmc.com/learn.

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. To enter edit mode, touch and hold the Home page icon to move.
2. Drag the icon to the desired position and release. Drag the icon to the edge of the screen to move to another page.
3. Press the  Home button to exit edit mode.

INFOTAINMENT SYSTEM

SETTING THE TIME

1. Select Settings on the Home page.
 2. Select System tab > Time/Date.
 3. Select Set Time.
 4. Touch the arrows to adjust the hours and minutes.
 5. Press the <BACK button to exit the menu.
- Turn on Automatic Time and Date to have the time updated automatically as the system obtains information from the cellular network.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to Settings > System > Favorites.



NATURAL VOICE RECOGNITION♦

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
 - Example Phone command (using your paired phone): "Call Amanda" or "Call 555-1212"
 - Example Media Music Device Search command (when connected to USB only): "Play artist [name]" or "Play song [name]"
 - Example Radio command: "Tune FM 104.3" or "Tune XM Classic Vinyl"
 - Help: Say "Help" for voice recognition assistance

PORTABLE AUDIO DEVICES

The front USB ports are for data and charging. Other USB ports are for charging only.

- Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands.
- With a portable device connected, touch Audio and then touch USB from the sources list or touch More to view other options.



See your Infotainment System Manual.

INFOTAINMENT SYSTEM

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

APPS+

In-vehicle apps — connecting to music, news, weather, travel information, sports, entertainment and more — are available for download to the radio through the APPS icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot. For more information, visit my.gmc.com/learn.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.gmc.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  Push to Talk button on the steering wheel; after the beep, say "Pair Phone."
To use the infotainment screen, select the Phone icon > Connect Phones > Add Phone.
2. Start the pairing process on your phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

STREAMING AUDIO

With a paired device connected via Bluetooth, touch Audio and then touch Bluetooth from the sources list or touch More to view the Bluetooth option. Control audio operation using the device controls or infotainment controls.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 8 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.gmc.com/learn.

See your Infotainment System Manual.

WIRELESS CHARGING ♦

The wireless charging pocket for charging smartphones is located in front of the center console armrest. To check smartphone compatibility, visit my.gmc.com/learn. See your phone retailer for required phone accessories or charging adapters.



1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the smartphone facing rearward in the pocket.
4. The battery charging symbol will display on the infotainment screen when charging.

See Instruments and Controls in your Owner's Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home screen.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press <BACK to exit each menu.



See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle tab > Teen Driver.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT[◆] – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT[◆] – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

FORWARD COLLISION ALERT[◆] – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  Collision Alert button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control[◆] following gap setting.

FOLLOWING DISTANCE INDICATOR[◆] – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

FORWARD AUTOMATIC BRAKING[◆] – In potential front-end imminent collision situations with detected vehicles, the brakes may be applied, if you haven't already done so, to help reduce damage or avoid collisions at very low speeds with vehicles directly ahead.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING[◆] – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  Lane Keep Assist button on the center console.

FRONT PEDESTRIAN BRAKING[◆] – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

DRIVER ASSISTANCE SYSTEMS

FRONT* AND REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. After shifting from Reverse to Drive, a view of the area in front of the vehicle displays. Vehicle speed must be below 8 mph.

SURROUND VISION* – The Surround Vision system displays several front or rear camera views along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

- ▶ Touch one of the **Camera** buttons on the infotainment screen to change the camera view.
- ▶ Touch the **Guidance Lines** button on the infotainment screen to turn the guidelines on or off.
- ▶ Touch the **Hitch** button to view the area directly behind the vehicle to help align the vehicle's hitch ball* with a trailer coupler.



FRONT* AND REAR* PARK ASSIST –

During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

REAR CROSS TRAFFIC ALERT* – When the vehicle is in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn only Rear Cross Traffic Alert on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.
- ▶ To turn Front and Rear Park Assist and Rear Cross Traffic Alert on or off, press the **P** **Park Assist** button on the center console.



AUTOMATIC PARKING ASSIST* – Automatic Parking Assist steers the vehicle to help you park in parallel or perpendicular spaces while you follow commands and control the gear selection, acceleration and braking. The system is available when vehicle speed is below 18 mph.

1. Press the **P** **Automatic Parking Assist** button on the center console. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. Once a space is found, shift the vehicle into Reverse or Drive as directed, follow the commands on the infotainment screen and apply the accelerator or brake as needed. The steering wheel will briefly vibrate as a reminder to remove your hands. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When the system is active, press to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.



ADAPTIVE CRUISE CONTROL*

The system maintains the set speed and a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert* setting.
- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

TRACTION SELECT SYSTEM

The Traction Select system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions.

- ▶ Rotate the Driver Mode Control knob on the center console to the desired mode.

FWD Models:

-  Tour
-  Snow
-  Tow/Haul*

AWD Models:

-  Tour
-  All-Wheel Drive
-  Off-Road
-  Tow/Haul*



The AWD indicator will illuminate when an all-wheel drive mode is selected.

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a very steep incline in a forward or reverse gear.

- ▶ Press the  **Hill Descent Control** button on the center console. Vehicle speed must be below 31 mph to turn on the system.
- ▶ Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes on the instrument cluster when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

See Vehicle Care in your Owner's Manual.

POWER PROGRAMMABLE LIFTGATE ♦

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button twice on the Remote Keyless Entry (RKE) transmitter.
- ▶ Press the Liftgate knob (A) on the driver's door.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the pull handle to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Liftgate knob to the 3/4 mode position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button (C) next to the pull handle until a beep sounds.
4. In the 3/4 mode position, the power liftgate will open to the programmed height.



HANDS-FREE OPERATION ♦

- ▶ To open or close the liftgate hands-free, kick your foot straight under the rear bumper, just left of the license plate. The RKE transmitter must be within 3 feet of the liftgate.

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, push the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



GENERAL MOTORS

84134734 A