

Q60

2019 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to
www.infinitiownersinfo.mobi/2019/q60
or snap this barcode with an
appropriate barcode reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

- **VEHICLE OWNER'S MANUAL**

- **INFINITI CLIENT SUPPORT 1-800-662-6200**

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

- **INFINITI ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)**

As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

- **INFINITI ELITE® EXTENDED PROTECTION PROGRAM
1-800-662-6200**

Infiniti Elite® Assurance Products provide you with quality, long-term protection and enhanced peace of mind.

- **INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437**

For client support with your Infiniti Financial Services loan or lease.

- **INFINITI FINANCIAL SERVICES www.infinitifinance.com**

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

- **OWNER PORTAL 1-855-444-7244 www.owners.infinitiUSA.com/iowners**

Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

- **INFINITI INTOUCH™ 1-855-444-7244 usa.infinitiintouch.com**

The suite of services that is your direct link to personal security, convenience and confidence.

- **SiriusXM® RADIO 1-877-447-0011**

For support with your SiriusXM® subscription.

- **INFINITIUSA.COM www.infinitiUSA.com/bluetooth**

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

- **INFINITI ELECTRONIC QUICK REFERENCE GUIDE**

(Use the Quick Response (QR) code or URL on this page or on the back cover.)

Table of Contents

Cockpit Overview	1
Instrument Panel	3
Meters and Gauges	5
Fuel-filler Door	7
Lower Display Menu Buttons	7
Passenger Rear Seat Entry/Exit	7
Wiper and Washer Switch	8
Automatic Power Windows	9
User Registration.....	9
Connecting your Cellular Phone or Device via Bluetooth®	10

Bluetooth® Streaming Audio	10
FM/AM/HD Radio®/SiriusXM® Satellite Radio	11
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped) ...	11
Cruise Control	12
Idle Stop/Start (ISS) (if so equipped)	13
Navigation System (if so equipped)	14
Upper Display	15
HomeLink® Universal Transceiver (if so equipped)	16
Infiniti Intelligent Key System	16
INFINITI InTouch™ Services (if so equipped)	17

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch™ Owner's Manual and at www.InfinityUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)", the "Display screen, heater and air conditioner, and audio system (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

Cockpit Overview

 


For more information, refer to your Owner's Manuals.

Cockpit Overview

- ➊ Trip computer switches
- ➋ Cruise control switches
- ➌ Wiper and washer switch
- ➍ Paddle shifters (if so equipped)
- ➎ Combined turn signal/Headlight control switch
- ➏ Vehicle information display control switches
- ➐ Audio and Bluetooth® control switches
- ➑ Instrument brightness control switches and Trip Reset switch (behind steering wheel)

Instrument Panel

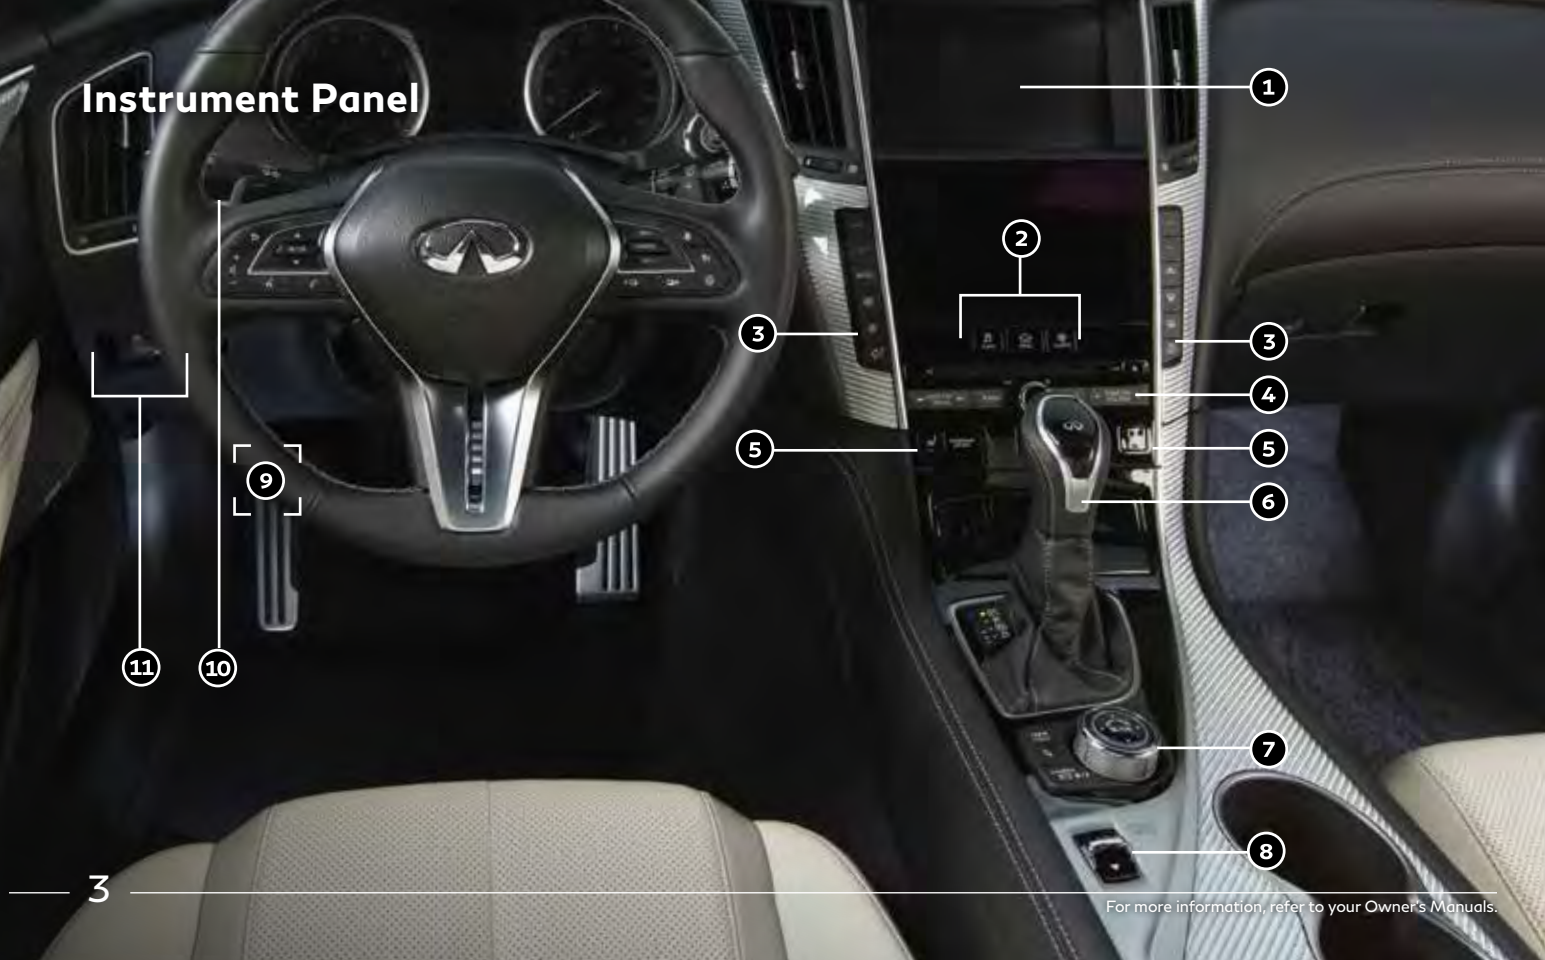

For more information, refer to your Owner's Manuals.

Instrument Panel

- ❶ Multi-function control touch-screen/RearView Monitor display/Around View® Monitor display (if so equipped)
- ❷ Lower display menu buttons
- ❸ Climate control panel
 - Heater and air conditioning (automatic)
 - Front/Rear window defroster
- ❹ Audio controls
- ❺ Seat heating (if so equipped)
- ❻ Shift lever
- ❼ Infiniti multi-function controller
- ❽ Drive mode switch
- ❾ Parking brake (behind steering wheel)
- ❿ External light switches
- ⓫ Lower switch bank
 - Idle Stop/Start (ISS) OFF switch (if so equipped)
 - Vehicle Dynamic Control (VDC) OFF Switch
 - Trunk release switch

Meters and Gauges



Meters and Gauges

- 
- 1 Engine coolant temperature gauge
 - 2 Tachometer
 - 3 Shift lever indicator
 - 4 Vehicle information display
 - 5 Fuel gauge
 - 6 Speedometer

 
Fuel-filler Door

To open the fuel-filler door, unlock the vehicle and gently push the middle left side of the fuel-filler door.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Lower Display Menu Buttons

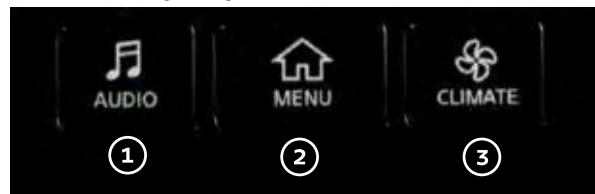

The lower display menu buttons are located below the lower display on the instrument panel.

- 1 Press to display the main audio screen.
- 2 Press to display the main menu screen.
- 3 Press to display the main climate screen.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Passenger Rear Seat Entry/Exit



To access the rear seat:

1. Pull the lever ① upward to fold the seatback forward.
2. Press the button ② to slide the front seat forward and press the button ② again to stop the seat.

To return the front seat to its original position:

1. Pull the lever ① upward and push the seatback to the locked, upright position.
2. Press the button ② to slide the front seat backward.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Wiper and Washer Switch



Move the lever ① up or down to one of the following positions to operate the windshield wipers:

- MIST** One sweep operation
- OFF** Wipers are OFF
- AUTO** Speed-sensing and rain-sensing (if so equipped) automatic wipe
- LO** Continuous wipe, slow
- HI** Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring ②.

Pull the lever ① toward you to operate the windshield washer.

To turn the rain sensor function on and off:

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key and then the "Vehicle" key ③ on the display.
3. Touch the "Rain Sensor" key ④ to toggle the feature ON and OFF.

When the rain-sensing function is disabled, the **AUTO** position on the wiper stalk will work in conventional intermittent mode.

WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position:

- When the ignition switch is in the ON position or within 60 seconds of placing the ignition switch in the OFF position, lift the windshield wiper and washer lever upwards twice in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Place the wiper arm in the down position and lift the wiper and washer lever up for more than 1 second, or lower the lever down to operate at any wiper speed.



Automatic Power Windows

 
Your power windows have an automatic adjusting function to ensure windows close completely to help seal against wind noise and weather leaks.

- When the front doors are opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.

If your vehicle's battery is discharged or disconnected, your power window automatic function will not operate.

- Refer to your Owner's Manual for information to initialize your power window system.
- If the power window functions do not operate properly after initializing the system, it is recommended that you have your vehicle checked by an Infiniti retailer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

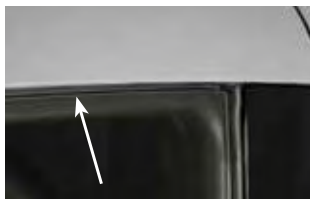



User Registration

Up to three users can have their driving positions, navigation, climate controls, etc., memorized.

To register a new user:

1. Press the **MENU** button ① below the lower display.
2. Touch the right arrow key ">" on the lower display until "Infiniti InTuition" ② is displayed. Then touch the "Infiniti InTuition" key ②.
3. Touch "User List".
4. Touch "Add New". From here, you can edit Name ③ and Icon ④.
5. Touch "OK" ⑤ when finished.

  Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

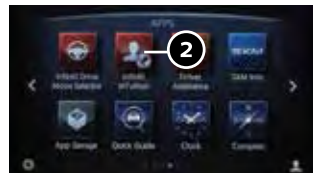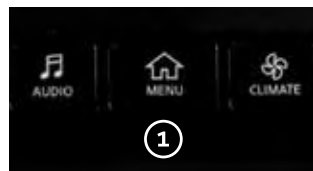

Connecting your Cellular Phone or Device via Bluetooth®*



Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **MENU** button on the Infiniti controller.
2. Touch the "Settings" key on the center display.
3. Touch the "Phone/Mail" key.
4. Touch "Connect Device".
5. Touch "Add New (X/5 Free)".
6. When a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.



For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Streaming Audio*



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the **DISC-AUX** button ① on the control panel to switch to Bluetooth® Streaming Audio.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

FM/AM/HD Radio®/SiriusXM® Satellite Radio



- 1 The **AUDIO** button displays the audio screen.
- 2 The power button turns the system on or off. Turning the knob adjusts the volume.
- 3 Change stations with the ◀◀ or ▶▶ buttons. This applies to satellite, HD Radio® and CDs.
- 4 Manually tune the radio through the ◀ or ▶ buttons.
- 5 The **RADIO** button changes the radio in the order of AM, FM and satellite radio.
- 6 The **DISC • AUX** button changes the audio source.
- 7 Touch and hold the desired station to store a preset. This applies to AM, FM, or satellite radio stations.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped)

Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.

SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.

SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Cruise Control

SETTING A CRUISING SPEED

- Push the cruise control MAIN (ON-OFF) switch ① to turn on the system.
- With the vehicle at the desired speed, push down the control switch ② to **SET -** to enable cruise control.
- The cruising speed can be adjusted to a higher or lower speed by toggling the control switch ② up or down.

CANCELING THE PRESET SPEED

- Push the **CANCEL** switch ② or tap the brake pedal.

INTELLIGENT CRUISE CONTROL (ICC) (IF SO EQUIPPED)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.

- To increase the distance to the vehicle ahead to be maintained by the ICC system, push the distance switch ③ until the display shows the desired set distance, which is shown by the number of lines on the set distance indicator ④.
- When a vehicle is detected ahead, a vehicle ahead detection indicator ⑤ will illuminate and your vehicle will reduce the speed to match the slower vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



 
CONVENTIONAL CRUISE CONTROL (if so equipped)



INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)



Idle Stop/Start (ISS) (if so equipped)

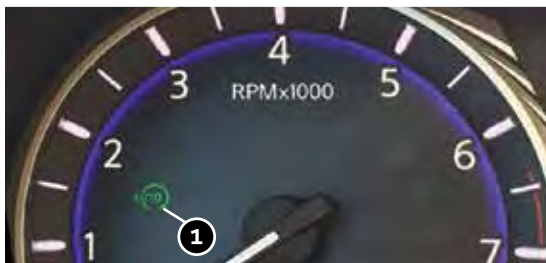


The ISS activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

- When the brake pedal is depressed and the vehicle is stopped, the engine will stop automatically.
- When you release your foot from the brake pedal, the engine will restart automatically.
- The ISS indicator light ① will inform you of the ISS status.
- The system can be temporarily deactivated by pushing the Idle Stop OFF  switch ②.
- There are certain conditions in which the ISS will not activate, including:
 - When the brake pedal is not firmly depressed.
 - When the steering wheel is operated or wheels are not pointed straight ahead.
 - When the engine is warming up.
 - When the cabin temperature is below 68°F (20°C) or above 86° F (30°C).
 - When the front/rear defroster is on or fan speed is at maximum.
- Please refer to the "Starting and driving (section 5)" of your Owner's Manual for the additional conditions in which the ISS will not activate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 Navigation System (if so equipped)

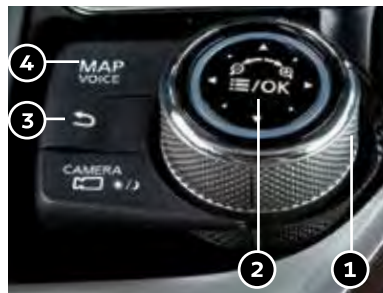

Use the Infiniti controller ① and **OK** button ② to navigate through the upper display screens.

- Press the **MAP** button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the upper display.

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Destination" key ⑥ on the lower display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.

CANCELING A ROUTE

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Cancel Route" key ⑦ on the lower display.

GUIDANCE VOLUME

- While guidance is being announced, the guidance volume can be adjusted by turning the audio system volume knob.
 - The guidance volume can also be adjusted in the "Settings" menu.
1. Press the **MENU** button ⑤ below the lower display.
 2. Touch the "Settings" key and then the "Navigation" key ⑧ on the display.
 3. Next, touch the "Guidance Preferences" key. Use the "-" and "+" keys ⑨ to adjust the volume.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Upper Display

To control the upper display, use one of the following:

- The touch-screen ①.
- The Infiniti controller ②.
- Press the **OK** button ③ to select an item.
- The steering wheel switches ④.
- Press the back button ⑤ to return to the previous page.
- Press the **MAP/VOICE** button ⑥ to display the map.
- Press the **CAMERA** button ⑦ to change the brightness of both the upper and lower displays.

MAP AND DISPLAY VIEW (WITH NAVIGATION)

- There are different variations of split-screen views that can be displayed on the upper display. The map is always displayed on the right-hand side of the screen.
- To customize the split-screen views on the upper display:
 1. Press the **MENU** button while the current location map screen is displayed and the display view bar will appear at the bottom of the screen.
 2. Touch the desired icon on the display view bar or use the Infiniti controller ② to scroll through the possible options. Press the **OK** button ③ to select the desired option.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



HomeLink® Universal Transceiver (if so equipped)



To program the HomeLink® Universal Transceiver:

1. Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
2. Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
3. Both buttons may now be released.
4. Press and hold the HomeLink button, and a blinking light that turns to a solid, continuous light after 2 seconds will display.
5. At the receiver of the device press and release the program button (this button can typically be found near the hanging antenna wire of the device you are programing into HomeLink).
6. Press and hold the programed HomeLink button for 2 seconds and release.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Infiniti Intelligent Key System

REMOTE ENGINE START (if so equipped)

The remote engine start system must be enabled in the vehicle settings within the lower display. To start your vehicle remotely:

1. Press the lock button ① to lock the vehicle.
2. Press and hold the remote start button ② within 5 seconds of pressing the lock button ① and the engine will start.

To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.

State laws may apply, review local laws before using.

ROLL DOWN FEATURE

The windows can be opened remotely using your Infiniti Intelligent Key.

- With the vehicle unlocked, press and hold the unlock button ③ to open the windows and moonroof (if so equipped) remotely.
- If the unlock button ③ is released, the windows will stop. To resume the roll down feature, press and hold the unlock button ③ again.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



INFINITI InTouch™ Services (if so equipped)

 
 
INFINITI InTouch™ Services combine personalized convenience settings and personal security features to complement the Total Ownership Experience®. For more details on INFINITI InTouch Services or to enroll your vehicle, please visit usa.infinitiintouch.com or call **1-855-444-7244**.

To access INFINITI InTouch Services:

1. Press the **MENU** button ① under the lower display.
2. Select the "InTouch Services" key ② on the lower display.
 - Press in-vehicle telematics **SOS** button ③ in case of an emergency, located above and in front of the rearview mirror.

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an Infiniti Owner Portal account. (<https://owners.infinitiusa.com/iowners/>)
2. From your Infiniti Owner Portal account, enroll in INFINITI InTouch Services.
3. Download the INFINITI InTouch Services companion app from the App store and log in using your Infiniti Owner Portal ID and password.

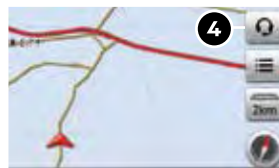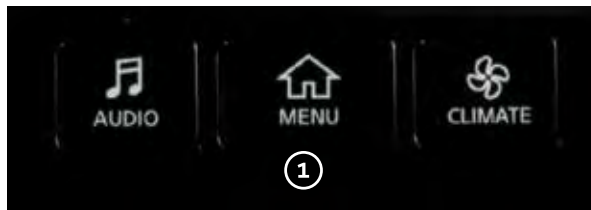

Available services include, but are not limited to:

- Automatic Collision Notification
- Emergency Calling
- Report Stolen Vehicle
- Alarm Notification
- Maintenance Alert
- Vehicle Health Report
- Scheduled Maintenance Notification
- Remote Door Lock/Unlock
- Remote Light and Horn
- Remote Engine Start/Stop (if so equipped)
- Maximum Speed Alert
- Valet Alert
- Curfew Alert
- Destination Send-to-Vehicle
- Connected Search

The following services can also be accessed by touching the

headset icon ④

- Infiniti Personal Assistant
- Enhanced Roadside Assistance

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Memo



Printing September 2018
QR19EA CV37UO
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to **www.infinitiownersinfo.mobi/2019/q60** or snap this barcode with an appropriate barcode reader.



I N F I N I T I .