

QX30

2019 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to
www.infinitiownersinfo.mobi/2019/qx30
or snap this barcode with an
appropriate barcode reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

- **VEHICLE OWNER'S MANUAL**

- **INFINITI CLIENT SUPPORT 1-800-662-6200**

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

- **INFINITI ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)**

As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

- **INFINITI ELITE® EXTENDED PROTECTION PROGRAM
1-800-662-6200**

Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.

- **INFINITI FINANCIAL SERVICES CLIENT SUPPORT
1-800-627-4437**

For client support with your Infiniti Financial Services loan or lease.

- **INFINITI FINANCIAL SERVICES www.infinitifinance.com**

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

- **OWNER PORTAL 1-855-444-7244**

www.owners.infinitiUSA.com/iowners

Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

- **INFINITI INTOUCH™ 1-855-444-7244**

usa.infinitiintouch.com

The suite of services that is your direct link to personal security, convenience and confidence.

- **SiriusXM RADIO 1-877-447-0011**

For support with your SiriusXM subscription.

- **INFINITIUSA.COM www.infinitiUSA.com/bluetooth**

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

- **INFINITI ELECTRONIC QUICK REFERENCE GUIDE**

(use the Quick Response (QR) code or URL on this page or on the back cover)

Table of Contents

Cockpit Overview.....	1	Fuel-filler Door.....	12
Instrument Panel.....	3	Opening the Liftgate.....	12
Meters and Gauges.....	5	Electronic Shift Lever.....	12
Hood Latch.....	7	Windows.....	13
Sun Visors.....	7	Idle Stop/Start (ISS).....	13
Parking Brake.....	7	Intelligent Park Assist (IPA) (if so equipped).....	14
Seat Adjustments.....	8	Voice Recognition.....	14
Head Restraint Adjustment (if so equipped).....	9	Connecting your Cellular Phone or Device via Bluetooth®.....	15
Lane Departure Warning (LDW) (if so equipped).....	9	Bluetooth® Streaming Audio.....	15
Exterior Light Operation.....	10	INFINITI InTouch™ Services (if so equipped).....	16
Wiper and Washer Switch.....	10	Navigation System (if so equipped).....	17
USB Connection Port.....	11	Cruise Control.....	18
Clock Set/Adjustment.....	11		

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch™ Owner's Manual and at www.InfinityUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)", the "Display screen, heater and air conditioner, and audio system (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

Cockpit Overview



Cockpit Overview

- ❶ Cruise control switch
- ❷ Vehicle information display and menu control switches
- ❸ Combined turn signal/Low-High beam/wiper and washer switch
- ❹ Shift paddles
- ❺ Audio and Bluetooth® control switches
- ❻ Instrument brightness control (behind steering wheel)

Instrument Panel



1

2

3

4

5

7

6

8

10

9

3

Instrument Panel

- ❶ Multi-function control touch-screen / RearView Monitor display / Around View® Monitor display (if so equipped)
- ❷ Audio system
- ❸ Control panel switches
 - Seat heating (if so equipped)
 - Hazard light switch
 - Idle Stop/Start (ISS) OFF switch
 - Parking Sensor system OFF switch
- ❹ Climate control panel
 - Heater and air conditioning (automatic)
 - Front/Rear window defroster
- ❺ Electronic shift lever
- ❻ P (Park) button
- ❼ Drive mode switch
- ❽ Infiniti controller
- ❾ Parking brake
- ❿ External light switches

 
Meters and Gauges



Meters and Gauges

- 
- 1 Speedometer
 - 2 Fuel gauge
 - 3 Vehicle information display
 - 4 Shift lever indicator
 - 5 Tachometer
 - 6 Engine coolant temperature gauge

Hood Latch

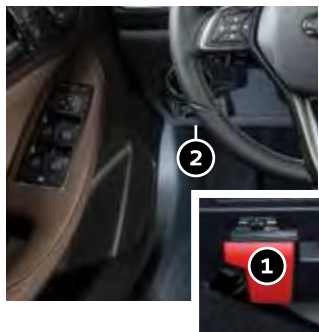

To open the hood, pull the hood release handle ① located below the instrument panel ②. Slightly lift the hood upward and pull the lever to the left to unlock the hood. Then insert the support rod into the slot.

To close the hood, drop it from a height of 8-12 inches (20-30 cm). If the hood sensor detects the hood is not completely latched shut, the wipers will not function.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Sun Visors

- 1 Pull down the sun visor to block glare from the front.
- 2 Remove the sun visor from the center mount by lifting it slightly and swing it to the side to block glare from the side window.
- 3 Slide the sun visor out from the mount to further extend the visor location.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Parking Brake

 


To apply the parking brake, press the electric parking brake handle ① located below the instrument panel, regardless of the ignition switch position.

To release the parking brake, pull the electric parking brake handle ① toward you while the ignition is on. The parking brake will be automatically released when you depress the accelerator pedal as long as certain conditions are met, such as having your seatbelt fastened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Seat Adjustments

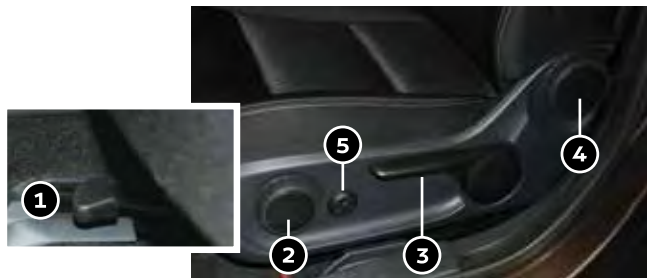

MANUAL SEAT ADJUSTMENTS (IF SO EQUIPPED)

Forward and backward adjustment:

Pull the lever ①, located under the seat, up and hold it while sliding the seat forward or backward and release it to lock the seat in the preferred position. When returning the seatback to the upright position, always be certain it is completely secured in the latched position.

Seat angle adjustment:

 
Turn the hand-wheel ② forward or backward to adjust the angles so that your thighs are lightly supported.

Seat lifter:

Repeatedly pull up or push down the adjusting lever ③ to adjust the seat height to the desired position.

Seatback angle:

Relieve the pressure on the seatback and turn the hand-wheel ④ forward or backward to adjust the seatback angle.

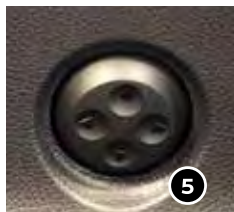

LUMBAR SUPPORT

Push each side of the adjusting switch ⑤ to adjust the seat lumbar area until the desired position is achieved.



POWER SEAT ADJUSTMENTS (IF SO EQUIPPED)

Forward and backward adjustment:

Move the adjusting switch ⑥, located on the door, forward or backward to the desired position.

Reclining:

Move the adjusting switch ⑦ forward or backward to the desired position.

Seat lifter (if so equipped):

1. Pull up or push down the adjusting switch ⑥ to adjust the seat height until the desired position is achieved.
2. Tilt up or down the adjusting switch ⑦ to adjust the front angle of the seat until the desired position is achieved.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Head Restraint Adjustment (if so equipped)



To raise the head restraint:
Pull the head restraint up.

To lower the head restraint:
Push and hold the lock knob ① and push the head restraint down.

To move the head restraint forward:
Pull the head restraint toward the front of the vehicle until it engages in one of the detents.

 
To move the head restraint backward:
Press and hold the button ② and push the head restraint backward until it is in the desired position, then release the button.

Make sure the head restraint is fully engaged in position after any adjustment.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Lane Departure Warning (LDW) (if so equipped)

LDW warns you if the vehicle is beginning to leave the traveling lane. If a front wheel passes over a lane marking, LDW will warn you through a visual alert and an intermittent vibration in the steering wheel for up to 1.5 seconds.

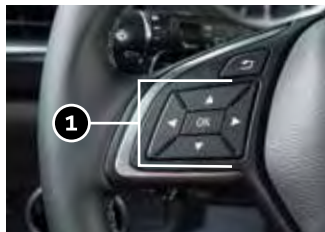

To enable or disable LDW:
Press the ◀ or ▶ button ① on the steering wheel to select the **DriveAssist** menu ② in the vehicle information display.

Press the ▲ or ▼ button ① on the steering wheel to select **Lane Departure Warning** and press the **OK** button ① on the steering wheel.

Press the **OK** button ① on the steering wheel to change the selection to **Off**, **Adaptive** or **Standard** ③.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Exterior Light Operation



- ① Left-hand parking lights switched on.
- ② Right-hand parking lights switched on.
- ③ Side lights, license plate lights and combination meter lighting switched on.
- ④ Automatic headlight mode (headlights switch on/off automatically depending on ambient light conditions/daytime light system) switched on.
- ⑤ Low beam/high beam headlights. Select dipped beam or high beam headlights using the combination switch (see hereafter).
- ⑥ Rear fog light switch
- ⑦ Front fog light switch (if so equipped)

For normal headlight operation, leave the exterior light switch in the **AUTO** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Wiper and Washer Switch



Turn the switch ① to one of the following positions to operate the windshield wipers:

- ▬ Continuous wipe, fast.
- ▬ Continuous wipe, slow.
- ▬ Intermittent wipe, high rain sensor (if so equipped) or speed sensor sensitivity.
- ▬ Intermittent wipe, low rain sensor (if so equipped) or speed sensor sensitivity.
- Wipers are OFF.

Press button ② in to the first detent for a single wipe, or in to the second detent to operate the windshield washer and wipers.

REAR WIPER AND WASHER

Turn the rear wiper switch ③ to one of the following positions to operate the rear wiper (shown in the order they appear on the wiper switch):

- ⤴ Wipes with washer fluid, then returns to intermittent wiping.
- ▬ Intermittent wiping.
- Wiper is OFF.
- ⤵ Wipes with washer fluid, then returns to off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

USB Connection Port



Your vehicle is equipped with two USB ports, located under the control panel, to which you can connect compatible devices (cellular phones, iPod® devices, other compatible audio devices, USB memory sticks, etc.).

After connecting your device through one of the USB ports, press the **MEDIA** button on the control panel to select audio playback from the device connected through the USB ports.

A second device can be connected for charging. In order to switch to the second device for audio playback, both devices will need to be removed and the second device reconnected first.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Clock Set/Adjustment



To adjust the time and the appearance of the clock on the display:

Press the **MENU** button ① on the Infiniti controller. Then, touch the "Settings" key on the display.

Locate and touch the "Clock" key to adjust "On-Screen Clock", "Daylight Savings Time", "Clock Format (24h)" and "Time Zone".

The time can be adjusted through "Offset Adjustment" ② by adjusting the minutes and/or hours forward or backward. The current clock time can be set up to a difference of 12 hours and 59 minutes.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Fuel-filler Door

To open the fuel-filler door, unlock the vehicle and gently push the front side of the fuel-filler door.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Opening the Liftgate

To open the liftgate, press the  button on the Intelligent Key and then push the liftgate release . The liftgate also automatically unlocks if you are carrying the Intelligent Key and push the liftgate request switch .

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Electronic Shift Lever



To put the vehicle in **N (Neutral)**: Push the electronic shift lever forward until you feel resistance and release the shift lever, or pull the electronic shift lever back until you feel resistance and release the shift lever.

To put the vehicle in **R (Reverse)**: Push the electronic shift lever forward past the point of resistance and release the shift lever.

To put the vehicle in **D (Drive)**: Pull the electronic shift lever back past the point of resistance and release the shift lever.

 
To put the vehicle in **P (Park)**: Make sure the vehicle is completely stopped and press the **P (Park)** button .

If you switch the ignition off with the transmission in **D (Drive)** or **R (Reverse)**, the transmission automatically shifts into **N (Neutral)**.

If you open the driver's door while the vehicle is stationary or moving at a very low-speed, the vehicle automatically switches into the **P (Park)** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Windows

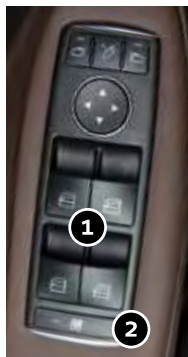

All power windows can be operated through the main switch on the driver's door.

- 1 Power windows open/close.
- 2 Disable rear passenger window operation by rear passengers.

POWER WINDOW CONVENIENCE OPENING/CLOSING FEATURE

The vehicle can be locked/unlocked and the power windows can be closed/opened simultaneously from outside the vehicle using the Intelligent Key as follows:

 
 


To lock the vehicle and close the power windows simultaneously, touch the sensor surface ③ on the door handle until the windows are fully closed.

To unlock the vehicle and open the windows simultaneously, press and hold the  button on the Intelligent Key until the windows have reached the desired position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Idle Stop/Start (ISS)

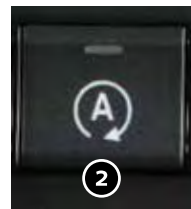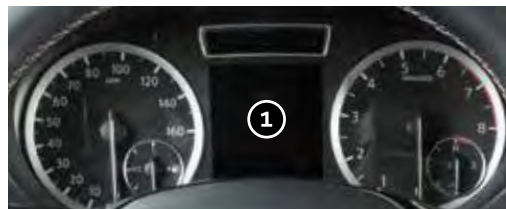

The ISS activates when certain conditions are met to prevent unnecessary fuel consumption, exhaust emissions and noise.

To activate the ISS system:

- Bring the vehicle to a complete stop.

To restart the engine when the ISS system is active:

- When the ISS system is active, the engine will restart as soon as you take your foot off the brake pedal.

An ISS indicator light in the vehicle information display ① will inform you of the ISS status. The system can be temporarily deactivated by pushing the Idle Stop/Start system on/off switch ② on the instrument panel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Intelligent Park Assist (IPA) (if so equipped)

The Intelligent Park Assist (IPA) is an electronic parking aid. On straight and even roads, IPA can be used to park in parallel spaces and to reverse into perpendicular spaces.

To park using IPA:

- When the IPA detects a parking space, the parking symbol ① will appear in the vehicle information display. To park in that space, stop the vehicle and shift into the **(R) Reverse** position.
- A "Start Park Assist" message will appear in the vehicle information display. Press the **OK** button on the steering wheel to enable the IPA, or press the  button to cancel the operation.
- Release the steering wheel and continue to control the accelerator, brake and gear shift to maneuver into the parking space.
- Stop as soon as the sonar function sounds the continuous warning tone, if not before. A message will appear in the vehicle information display if you need to change gears.
- When the procedure is complete, a "ParkAssist switched off" message will appear in the vehicle information display. Shift into the **(P) Park** position, and apply the electric parking brake to secure the vehicle.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Voice Recognition

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- Press the  button ① on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button ① on the steering wheel.



Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Connecting your Cellular Phone or Device via Bluetooth®*



Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **MENU** button on the Infiniti controller.
2. Touch the "Settings" key on the center display.
3. Touch the "Phone/Mail" key.
4. Touch "Connect Device".
5. Touch "Add New (X/5 Free)".
6. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Streaming Audio*



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the **MEDIA** button ① on the control panel to switch to Bluetooth® Streaming Audio.

 
For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

INFINITI InTouch™ Services (if so equipped)

INFINITI InTouch Services combine personalized convenience settings and personal security features to complement the Total Ownership Experience®. For more details on INFINITI InTouch Services or to enroll your vehicle, please visit usa.infinitiintouch.com or call **1-855-444-7244**.

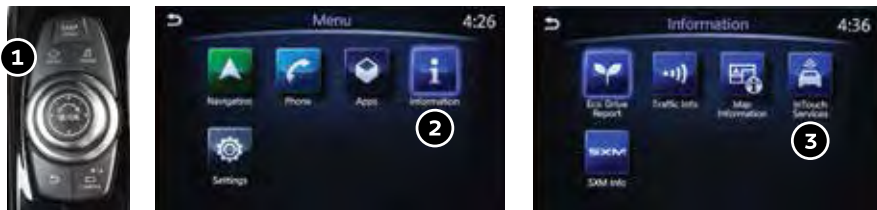

To access INFINITI InTouch Services:

- 1** Press the **MENU** button on the Infiniti controller.
- 2** Select the "Information" key on the display.
- 3** Select the "InTouch Services" key on the display.

In case of an emergency, press and release the **SOS** button lid **④**, located above the rearview mirror, and press the in-vehicle telematics **SOS** button **⑤**.



Available services include, but are not limited to:

- Automatic Collision Notification
- Alarm Notification
- Maintenance Alert
- Scheduled Maintenance Notification
- Stolen Vehicle Locator
- Emergency Call
- Roadside Assistance
- My Schedule (Google Calendar™)
- Infiniti Personal Assistance
- Destination Send-to-Vehicle
- Connected Search
- Drive Zone
- Maximum Speed Alert
- Mobile Information Service
- Valet Alert

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account.
(<https://owners.infiniti.com/iowners/>)
2. From within your INFINITI Owner Portal account, enroll in INFINITI InTouch Services.
3. Download the INFINITI InTouch Services companion app from the App store and login using your INFINITI Owner Portal ID and Password.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Navigation System (if so equipped)



Use the Infiniti controller ① and **OK** button ② to navigate through the center display screens.

- Press the **Return** button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the touch-screen.

1. Press the **MENU** button ⑤ on the Infiniti controller.
2. Touch the "Navigation" key on the display.
3. Touch the "Destination Menu" key ⑥ on the display.
4. Select the preferred destination setting method.
5. Enter the address number, street name and city as prompted by the screen.

CANCELING A ROUTE

1. Press the **MENU** button ⑤ on the Infiniti controller.
2. Touch the "Navigation" key on the display.
3. Touch the "Cancel Route" key ⑦.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Cruise Control

CONVENTIONAL CRUISE CONTROL (IF SO EQUIPPED)

Cruise control maintains a constant set speed for you. The system is operational only at speeds above 20 mph (30 km/h).

- 1 Pull the lever toward you to recall the previous speed.
- 2 Lift the lever up to the pressure point and release the lever to increase the speed by 1 mph (1.6 km/h).
- 3 Push the lever down to the pressure point and release the lever to decrease the speed by 1 mph (1.6 km/h).
- 4 Lift the lever upward beyond the pressure point and release the lever to increase the speed to the nearest multiple of 5 mph (8 km/h).
- 5 Push the lever downward beyond the pressure point and release the lever to decrease the speed to the nearest multiple of 5 mph (8 km/h).

To override the current stored speed with your current real speed, quickly move the stalk up ④ or down ⑤.

 
To deactivate cruise control, push the lever ⑥ away from you or push the brake pedal.

INTELLIGENT CRUISE CONTROL (ICC) (IF SO EQUIPPED)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.

To increase the distance to the vehicle ahead to be maintained by the ICC system, turn the knob ⑦ clockwise. To reduce the distance, turn the knob ⑦ counterclockwise.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

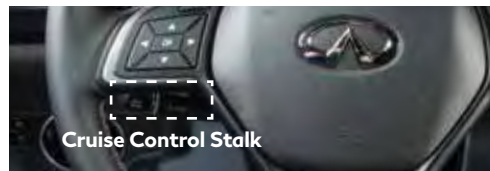

Memo



Printing October 2018
QR19EA 0H15U0
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to **www.infinitiownersinfo.mobi/2019/qx30** or snap this barcode with an appropriate barcode reader.



I N F I N I T I .