 


2019 **TITAN**

QUICK REFERENCE GUIDE



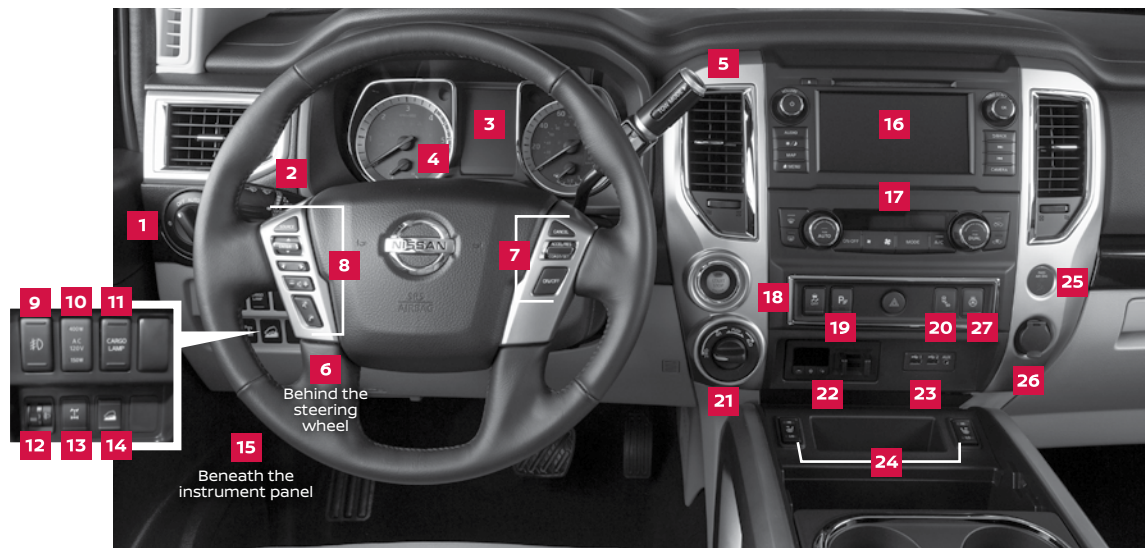

- | | | | |
|--|--|---|---|
| 1 Headlight Control Switch | 8 Steering Wheel Switches for Audio*/Bluetooth*/Siri® Eyes Free/Vehicle Information Display | 14 Hill Descent Control Switch | 20 Warning Systems Switch |
| 2 Turn Signal/Wiper and Washer Switch | 9 Fog Light Switch | 15 Hood Release | 21 4WD Switch* |
| 3 Vehicle Information Display | 10 Power Inverter Switch | 16 Audio and Navigation System | 22 Trailer Brake Controller Unit |
| 4 Low Tire Pressure Warning Light/DEF Warning Light | 11 Cargo Lamp Switch* | 17 Heater and Air Conditioner (automatic) | 23 USB Ports/AUX Jack |
| 5 Tow Mode Switch* | 12 Headlight Aiming Control* | 18 Vehicle Dynamic Control (VDC) OFF Switch* | 24 Heated Seat Switches* |
| 6 Tilt/Telescopic Steering Column* | 13 Electronic Locking Rear Differential (E-Lock) System Switch* | 19 Parking Sensor System Off Switch* | 25 Front Passenger Air Bag Status Light* |
| 7 Cruise Control | | | 26 12V Power Outlet |
| | | | 27 Heated Steering Wheel Switch |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

NissanConnect® Services Powered by SiriusXM® (if so equipped).....	2
Intelligent Around View Monitor (I-AVM) (if so equipped).....	4
Hill Start Assist and Hill Descent Control (if so equipped).....	6
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped).....	6
Towing.....	7
Diesel Exhaust Fluid (DEF) (diesel models only).....	9
Diesel Particulate Filter (DPF) (diesel models only).....	9
Siri® Eyes Free.....	10
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped).....	10
Apple CarPlay™.....	11
Android Auto™.....	12

ESSENTIAL INFORMATION

Passenger Seat Belt Warning (if so equipped).....	14
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert.....	14
Clock Set/Adjustment.....	15
Wide Open Door (King Cab® models only).....	16
Loose Fuel Cap (gas engine models only).....	16
Fuel-filler Door and Diesel Exhaust Fluid (DEF) Cap.....	17

FIRST DRIVE FEATURES

Nissan Intelligent Key® System.....	18
Opening the Tailgate.....	19
Power Seat Adjustments (if so equipped) and Rear Seats (if so equipped).....	19
Outside Mirror Control Switch (if so equipped).....	20
Automatic Drive Positioner (if so equipped).....	21
Headlight Control Switch.....	22
Wiper and Washer Switch.....	23
Starting/Stopping the Engine.....	23
Heater and Air Conditioner (automatic) (if so equipped).....	24
USB (Universal Serial Bus) Connection Ports/AUX Jack and iPod® Interface.....	25
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped).....	26
Cruise Control.....	27
Power Outlets.....	28

SYSTEM GUIDE

Vehicle Information Display.....	29
Bluetooth® Hands-free Phone System.....	30
• System Operating Tips.....	30
Hands-free Text Messaging Assistant.....	32
Navigation System (if so equipped).....	33
Rear Seat Infotainment (RSI) System (if so equipped).....	34
HomeLink® Universal Transceiver (if so equipped).....	36



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

 
NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call, which connects you to a NissanConnect Services Specialist who will assist in the dispatch of emergency services to the vehicle's location. To use this feature, press the **SOS** button **1** on the overhead console. The **SOS** button **1** should only be used in emergency situations.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the headset icon **2** on the map screen, via NissanConnect Services Companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock, for use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start, start your engine remotely using the NissanConnect Services companion app or website.

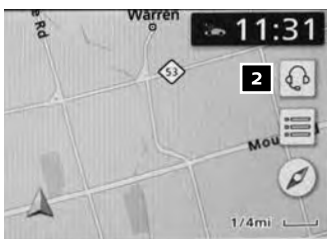


- Assisted Search, a feature that allows you to verbally request point-of-interest or destination data from a live operator by touching the  headset icon **2** on the map screen.
- Journey Planner, with which you can send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification, this system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert, receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search, select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle's location.
- Valet Alert, use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert, specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Press the **MENU** button **3** on the control panel.
- Touch the "Info" key
- Touch the "NissanConnect Services" key **4**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Information (section 5)**" of your NissanConnect® Owner's Manual.

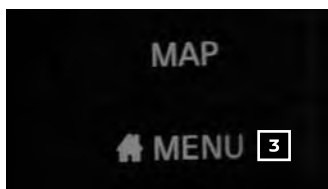


NEW SYSTEM FEATURES

INTELLIGENT AROUND VIEW MONITOR (I-AVM) (if so equipped)

 - With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

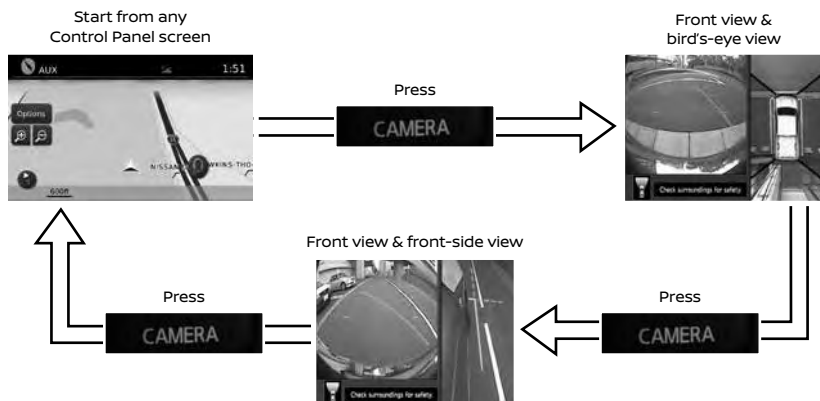

 - When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

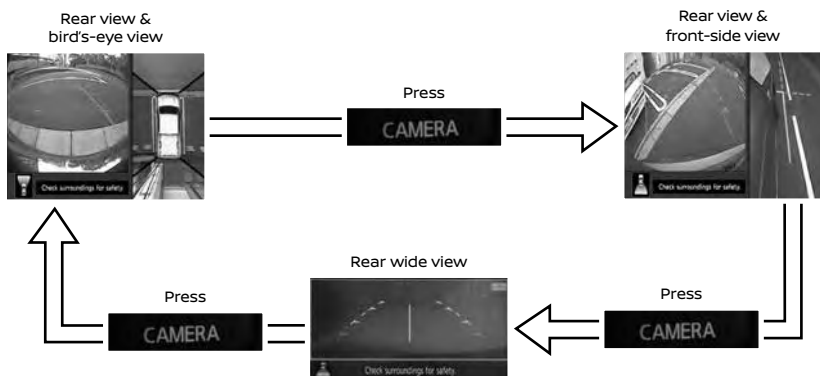

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.

- Red 1.5 ft (0.5 m)
- Yellow 3 ft (1 m)
- Green 7 ft (2 m)
- Green 10 ft (3 m) (if so equipped)

 
- When the vehicle's outside mirrors are extended for towing, you may see the mirrors in the bird's-eye view or the front-side view.

- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

- There are some areas where the system will not detect objects.

- When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
- When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
- The distance between objects viewed on the Intelligent Around View Monitor differs from the actual distance.

- Objects in the bird's-eye view will appear farther than the actual distance.

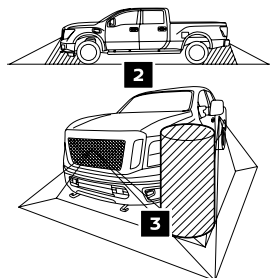

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (DRIVE)**, **N (NEUTRAL)**, **R (REVERSE)** or **P (PARK)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.

- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.

- When the following is displayed:

- Blue **MOD** icon **4**; the system is active.
- Gray **MOD** icon; the system is not active.
- No **MOD** icon; the system is off. The indicator will be off if the system is deactivated using the "Settings" menu.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

NEW SYSTEM FEATURES

HILL START ASSIST AND HILL DESCENT CONTROL (if so equipped)

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- Hill Start Assist will not operate when the shift lever is in the **N (NEUTRAL)** or **P (PARK)** position or when the vehicle is on a flat and level road.

HILL DESCENT CONTROL (if so equipped)

- Hill Descent Control is designed to apply the brakes to help control the speed of the vehicle and reduce the workload of the driver while descending steep hills.

To activate the system:

- Push the Hill Descent Control switch **1**.
The system must be on.
- The vehicle must be in 4H or 4LO (4WD) mode.
- The shift lever must be in a forward or a reverse gear.
- Hill Descent Control operates at speeds of 15 mph (25 km/h) or less.



To deactivate Hill Descent Control, push the Hill Descent Control switch **1** to the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located on the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.



- Push the Warning Systems switch **2** to temporarily turn off the system. When the system is off, the indicator light **3** on the switch and the indicator light **4** in the vehicle information display will extinguish.



- The indicator light **3** on the switch will also be off if all of the warning systems are deactivated using the "Settings" menu.
- The indicator lights **3** and **4** will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.



- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- Push the Front and Rear Sonar system OFF switch **5** to temporarily turn the RCTA system off. When the system is off, the indicator light **6** on the switch will extinguish.
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides of the vehicle near the rear and front bumpers. The system gives visual and audible warnings if an approaching vehicle is detected.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Instrument panel (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

TOWING

TRAILER BRAKE CONTROLLER UNIT (if so equipped)

The Trailer Brake Controller Unit will assist with effective and smooth braking while towing a trailer.

- Operating Modes:
 - Automatic: Automatic operation of trailer brake pressure based on gain and boost settings.
 - Manual: Manually applies trailer brake pressure without pressing the vehicle's brake pedal.
- In automatic mode, the gain controls the amount of trailer braking pressure. To set the gain:
 - Press the **-** or **+** button **1** to decrease or increase the braking force supplied to the trailer brakes. For example, a gain setting of 6.0 is a typical starting point for heavy loads.

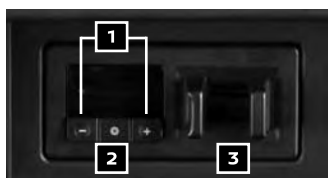

NEW SYSTEM FEATURES

- In automatic mode, the boost can be set to change the feel of the trailer brake when the vehicle's brake pedal is pressed. To set the boost:
 - Press the  button **2** once to display the current boost setting.
 - Press the  button **2** again to increase the boost level or continue to press the  button **2** to return boost to the off position.
- To manually apply brake pressure to the trailer without pushing the vehicle's brake pedal, pinch the manual control levers **3** together. The amount of pinch pressure applied to the levers **3** will correlate to the amount of brake pressure applied.

TRAILER LIGHT CHECKING (if so equipped)

Your Nissan Intelligent Key® can be used to check the trailer lights from outside the vehicle. If your vehicle is equipped with a three-button key fob, this feature operates in the same manner.

1. Aim the Intelligent Key at the vehicle.
2. Press and release the  button **4**.
3. Within 2 seconds, press the  button **4** again and hold it until the horn beeps once and the parking lights turn on.

 


The trailer light check will follow the following sequence:

- The left turn light on the vehicle and trailer will flash for 5 seconds.
- The right turn light on the vehicle and trailer will flash for 5 seconds.
- The brake lights on the vehicle and trailer will turn on for 5 seconds.

GOOSENECK HITCH (if so equipped)

- The integrated gooseneck hitch is located in the center of the vehicle bed **5**.
- For installation instructions and towing information, refer to the "Starting and driving (section 5)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

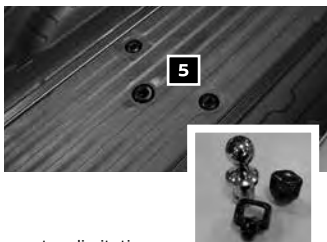

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"**, the **"Pre-driving checks and adjustments (section 3)"** and the **"Technical and consumer information (section 10)"** of your Owner's Manual.

DIESEL EXHAUST FLUID (DEF) (diesel models only)

- A **DEF Low** message will appear in the vehicle information display **1** and the  warning light **2** will illuminate if the DEF is low and needs to be topped off.
- If the fluid is contaminated, it will need to be replaced.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instrument panel (section 2)**" and the "**Fuel and refueling (section 4)**" of your Titan Diesel Owner's Manual.



DIESEL PARTICULATE FILTER (DPF) (diesel models only)

- An **Exhaust Filter Overloaded** message will appear in the vehicle information display **1** and the  warning light **2** will illuminate if the particulate matter has accumulated in the DPF to the specified limit.
- As soon as safely possible, drive the vehicle at a speed greater than 55 mph (89 km/h) for at least 45 minutes.
- If the  warning light **2** is blinking, refer to the "Do-it-yourself (section 6)" of your Titan Diesel Owner's Manual.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instrument panel (section 2)**" and the "**Do-it-yourself (section 6)**" of your Titan Diesel Owner's Manual.



NEW SYSTEM FEATURES

SIRI® EYES FREE

- If you have a compatible iPhone® with Siri, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone connected to the system, press and hold the  button **1** on the steering wheel for more than 1.5 seconds and Siri will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.



APPLE CARPLAY™

- The in-vehicle system can be used as a controller for some of the iPhone® functions through Apple CarPlay™.
- If your iPhone is compatible, Apple CarPlay can be used.
 - Select the MENU key **1** on the screen.
 - Select the “CarPlay” key **2** on the lower left corner of the screen.
- To connect your compatible iPhone to the system, you must connect the iPhone cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear.
 - Touch “OK” to use Apple CarPlay.
 - Touch the “CarPlay” key **2** on the lower left corner of the screen to enter the Apple CarPlay screen.
 - After the iPhone is connected to the system, the Apple Carplay top menu screen will appear. The iPhone functions displayed on the screen can be operated by the in-vehicle system.
 - To return to the Apple CarPlay top menu screen after operation, touch the key **4** on the lower left corner of the Apple CarPlay screen.
 - To exit the Apple CarPlay screen and display the other screens, press the MENU button or touch the “NISSAN” key **5** on the Apple Carplay Menu.
- To return to the Apple CarPlay screen:
 - Select the “CarPlay” key **2** on the lower left corner of the screen;
 - Select the Info key **3** on the launch bar and touch the “Apps” key, then select “Apple Carplay” key **2**.

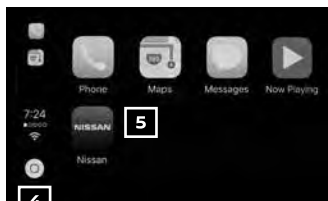

NEW SYSTEM FEATURES

- When connected to Apple CarPlay, Siri® operation can also be accessed.
- There are three ways to start a Siri session.
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  key **4** at the lower left corner of the Apple CarPlay screen.
 3. Say "Hey Siri" (requires appropriate permissions enabled via phone.)
- Press the  button on the steering wheel or touch the  key **4** at the lower left corner of the Apple CarPlay screen to end Siri.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** and the **"Information (section 5)"** of your NissanConnect® Owner's Manual.



ANDROID AUTO™

- The in-vehicle system can be used as a controller for some of the Android® functions through Android Auto™.

INITIAL SETUP

 
 
- Download the Android Auto app from the Google Play™ store to your compatible Android phone.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- Launch the app from your Android phone and follow the directions for setting up the application.
- Complete the initial set-up as prompted on your Android phone. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android Auto capable phone to the system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "OK" then "Yes" to use Android Auto.
 - The Android Auto menu screen will appear, and the Android Auto functions displayed on the screen can be operated by the in-vehicle system.
- When connected to Android Auto, voice operation can be accessed. There are three ways to start voice operation:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the upper right corner of the Android Auto screen.
 3. Say "OK Google" (requires appropriate permissions enabled via phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the bottom of the Android Auto screen.
- To exit the Android Auto screen and display the other screens, press the  **MENU** button, or touch the  key **3** and select the "Return To Nissan" key on the Android Auto Menu.
- To return to the Android Auto home screen:
 - Select the Android Auto icon **5** on the lower left corner of the screen;
 - Touch the  Info key **4** on the Launch Bar, touch the "Apps" key and touch the "Android Auto" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.

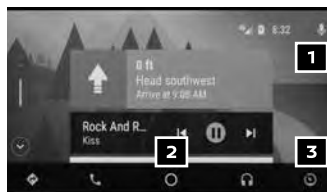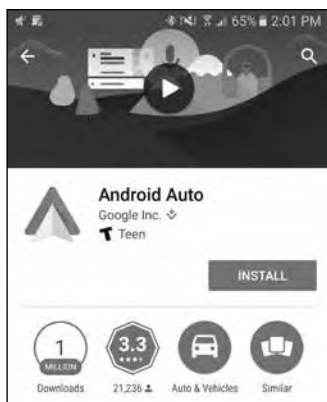

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** and the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

ESSENTIAL INFORMATION

PASSENGER SEAT BELT WARNING (if so equipped)

- The  warning light **2** will be displayed in the instrument panel **1** for a period of time after shifting into drive or until the passenger's seat belt is fastened. This does not indicate a malfunction.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety—Seats, seat belts and supplemental restraint system (section 1)", and the "Instruments and controls (section 2)" of your Owner's Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low - Add Air** warning message and low tire pressure warning light **2** will extinguish.
- In addition to the **Tire Pressure Low - Add Air** warning message, you can view the individual tire's pressure in the vehicle information display as well as the recommended pressure, denoted by blue lettering, for each tire.
- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.

To use the Easy-Fill Tire Alert:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the ignition switch in the ON position. Do not start the engine.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
5. Repeat this procedure for any additional under-inflated tires.



- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In Case of Emergency (section 6)", and the "Do-it-yourself (section 8)" of your Owner's Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Touch "Settings" on the Launch Bar **1**.
2. Touch the "Clock" key.

- The following settings can be adjusted:

- **On-Screen Clock:** Sets the clock display on/off. When this item is on, the clock display appears.

 
- **Clock Mode:** From here, the clock mode options are:

- **Auto:** Adjust clock time automatically using GPS.
- **Time Zone:** Adjust clock time reflecting selected Time Zone **2**.
- **Manual:** Reflects "Set Clock Manually" settings.

- **Clock Format:** The clock can be set to 12 hours or 24 hours.

- **Date Format:** The display format of the day, month, and year display can be selected.

- **Offset (Hour):** Adjusts the offset value (hour). "Clock Mode" must be set to "Auto" or "Time Zone" for this option.

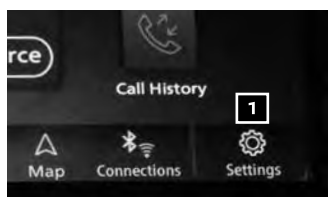

ESSENTIAL INFORMATION

- **Offset (min.):** Adjusts the offset value (minutes). "Clock Mode" must be set to "Auto" or "Time Zone" for this option to be available.
 - **Daylight Savings Time:** Turns on/off the daylight saving time setting.
 - **Time Zone:** Select an appropriate time zone from the list. "Clock Mode" must be set to "Time Zone" for this option.
 - **Set Clock Manually:** Adjust the clock manually. Touch "+" or "-" to adjust the hours, minutes, day, month and year up or down. "Clock Mode" must be set to "Manual" for this option.
- Press the  button **3** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" of your NissanConnect® Owner's Manual.

WIDE OPEN DOOR (King Cab® models only)

- Do not open the driver's side Wide Open Door to the fully open position while the fuel-filler door is open; only open it as far as the first detent.
- Opening the door to the fully open position may damage the fuel-filler door and the Wide Open Door.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

LOOSE FUEL CAP (gas engine models only)

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display/odometer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- If the cap is not properly tightened, the  Malfunction Indicator Light **2** may also illuminate in the instrument panel.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

FUEL-FILLER DOOR AND DIESEL EXHAUST FLUID (DEF) CAP

- The fuel-filler door **1** is located on the driver's side of the vehicle.
- To open the fuel-filler door **1**, pull the lid open.

DEF CAP (diesel models only)

- The DEF cap **2** is located next to the fuel cap behind the fuel-filler door **1**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual and the "**Fuel and refueling (section 4)**" of your Titan Diesel Owner's Manual.



FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock the vehicle and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) of the corresponding request switch.
- To lock the vehicle, push either door handle request switch **1** (if so equipped) or press the **1** button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** (if so equipped) once and the corresponding door will unlock. Push the request switch **1** (if so equipped) again within 5 seconds; all other doors will unlock, or
 - Press the **1** button **3** on the key fob to unlock the driver's side door. Press the **1** button **3** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **4** button **4** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch to the ON position while depressing the brake pedal and the engine will start.

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The Remote Engine Start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls, strong radio wave sources near the operating location or other obstructions between the key and the vehicle.
- For the Remote Engine Start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.

- To start your vehicle remotely:
 1. Press the **1** button **2** to lock all of the doors.
 2. Within 5 seconds, press and hold the engine start  button **5** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- While the Remote Engine Start feature is being used, the manual or automatic climate control system will default to the last used heating or cooling mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 through 2 to extend the time for an additional 10-minute period. Remote Engine Start can only be activated for a maximum of 20 minutes.
 - After two remote starts, the ignition switch must be cycled before the Remote Engine Start can be used again.
 - To cancel Remote Engine Start, press the engine start  button **5**.
- To start driving, depress the brake pedal and push the ignition switch to the ON position.

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"**, the **"Starting and driving (section 5)"** and the **"Do-it-yourself (section 8)"** of your Owner's Manual.

OPENING THE TAILGATE

- Pull the tailgate handle **1** upward and lower the tailgate. Support cables hold the tailgate open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



POWER SEAT ADJUSTMENTS (if so equipped) AND REAR SEATS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

SEAT LIFTER (driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

POWER LUMBAR SUPPORT (driver's seat)

- To adjust the lumbar area, push the front or back end of the switch **3**.



 
FIRST DRIVE FEATURES

REAR SEATS (if so equipped)

- To access the under seat storage (if so equipped):
 - Pull up the bottom of the seat toward the rear of the vehicle to fold the seat.
 - Lift the flat floor panels **1** toward the seat.
- When not in use, the storage bin's cover may be locked.
- To use the flat floor feature (if so equipped):
 - Pull up the bottom of the seat toward the rear of the vehicle to fold the seat.
 - Pull the handle **2** of the smaller top panel toward the rear of the vehicle.
 - Pull the flat floor panels **3** up and toward the front seats to fully unfold them and place them on the floor.
- Up to 247 lbs. (112 kg) of cargo can be attached to the flat floor panels using bungee cords. Only use bungee cords rated at the appropriate strength.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** and **"Instruments and controls (section 2)"** of your Owner's Manual.

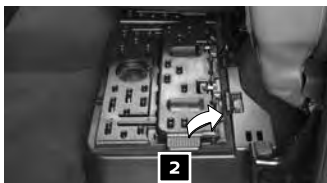

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the driver's side door panel.
- To select the left or right mirror, turn the knob **1** to select the desired mirror.
- Adjust each mirror to the desired position by pushing the side of the knob **1** up, down, left, or right.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
 1. Apply the brake.
 2. Place the ignition switch in the ON position.

3. Move the shift lever to the **R (REVERSE)** position.

4. Both outside mirror surfaces will turn downward. (The mirror control switch **1** must be out of the center [neutral] position.)

- The outside mirror surfaces will return to their original positions when one of the following conditions occurs:

- The shift lever is moved to any position other than **R (REVERSE)**.
- The outside mirror control switch **1** is set to the center (neutral) position.
- The ignition switch is placed in the OFF position.

POWER FOLDING OUTSIDE MIRRORS (if so equipped)

- To open or close the mirrors, push the switch **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors (if so equipped) can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:
 - Confirm that the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the ON or ACC position.
 - Adjust the driver's seat, steering column and outside mirrors (if so equipped) to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch **1**, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions (if so equipped) are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®. To link a memorized position to your Nissan Intelligent Key, press the unlock button on the key fob after completing the previous step.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

FIRST DRIVE FEATURES

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then place the ignition switch in the ON position. To deactivate the autolight system, turn the headlight control switch to the **OFF** position **4**,  position **1** or  position **2**.



HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the lever forward **5** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the lever back to the original position to select the low beam function and the blue indicator light will extinguish.
- Pull and release the lever **6** to flash the headlight high beams on and off.

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Push the bottom of the  switch **7** to turn on the fog lights.
- To turn them off, push the top of the  switch **8**.
- The fog lights will turn off if the headlights are turned off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Rotate the control ring to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Auto (**AUTO**) (if so equipped) – Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by rotating the control ring to increase or decrease wiper sensitivity.
- 3** Low (**LO**) – Wipers operate at a continuous low-speed.
- 4** High (**HI**) – Wipers operate at a continuous high-speed.
- 5** To activate the washer, press the button on the end of the lever. The wipers will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the ON position to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to the OFF position to turn the engine off.

START HESITATION (diesel models only)

- The starter for diesel models is designed to not engage until the glow plugs have had sufficient time to warm up.
- If the glow plugs need to warm up, the **Engine Warming – Keep Foot on Brake** message will appear in the vehicle information display **1** when the ignition switch is placed in the ON position.
- Keep the brake pedal depressed and wait until the **Engine Warming – Keep Foot on Brake** message extinguishes.
- During cold weather, the glow plugs may need approximately 4 seconds to warm up.



FIRST DRIVE FEATURES

- Refer to the “Starting and stopping the engine (section 3)” of your Titan Diesel Owner’s Manual for important information on starting and stopping the diesel engine.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual, the “Instrument panel (section 2)” and the “Starting and stopping the engine (section 3)” of your Titan Diesel Owner’s Manual.



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

2 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the automatic mode on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

3 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

4 FAN SPEED CONTROL BUTTON

- Press the  side or  side of the button to decrease or increase the fan speed.

5 MODE BUTTON

- Press the **MODE** button to manually control air flow.



Air flows from the center and side vents.



Air flows from the center, side and foot vents.



Air flows mainly from the foot vents.



Air flows from the front defroster and foot vents.

6 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Set the temperature control dial **2** and the fan speed control button **4** to their maximum settings.

7 REAR WINDOW AND/OR OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

8 FRESH AIR INTAKE CONTROL BUTTON

- Press the fresh air intake control button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

9 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- Press the fresh air intake control button  to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster, floor or front defroster/floor mode.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .

10 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORTS/AUX JACK AND iPod® INTERFACE

- The USB ports/AUX jack **1** is located on the control panel below the climate controls.
- When a compatible USB memory device or iPod® is plugged into a USB port, compatible audio files stored on the device can be played through the vehicle's audio system and front display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" or "Audio system (section 3)" of your NissanConnect® Owner's Manual.

FIRST DRIVE FEATURES



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 POWER BUTTON/VOLUME CONTROL DIAL

- Press the **POWER** button to turn the system on or off.
- Turn the **VOLUME** control dial to the right or left to increase or decrease the volume.

2 OK/TUNE-SCROLL DIAL

- Press the **OK** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** dial left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons **◀◀** or **▶▶**.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- To rewind or fast forward a track on a CD, press and hold the seek buttons **◀◀** or **▶▶**.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by touching the **AM** key **5**, **FM** key **6** or **SXM** key **7** then tune to the desired FM, AM or satellite radio station. Audio source icon layout in the launch bar is customizable, and your vehicle display may vary.
- Next touch and hold the desired station select key (**1-12**). The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key (**1-12**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio System (section 3)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The  (white) indicator light in the vehicle information display will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. The  (green) indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push up and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push down and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The  indicator light in the vehicle information display will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

POWER OUTLETS

12V OUTLETS

- The 12V power outlets are only powered when the ignition switch is in the ACC or ON position.
- The 12V power outlets are for powering electrical accessories such as cellular phones.
- The power outlets **1** are located on the passenger's side of the control panel, inside the center console **2** and on the rear console **4**. They are powered directly by the vehicle's battery.
- To use a power outlet, open the cap.



120V OUTLETS (if so equipped)

- 120V power outlets are not powered directly by the battery and require the ignition switch to be in the ON position and the power inverter switch **3** to be depressed.
- 400W mode is only available with the shift lever in the **P (PARK)** position.
- The 120V power outlets are for powering electrical devices up to 120V.
- The power outlets located in the 2nd row, behind the center console **4**, and in the truck box **5** are powered directly by the vehicle's battery.
- For devices that require power of 120V or more, the shift lever must be placed in the **P (PARK)** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Auxiliary gauges
- DEF level (diesel models only)
- Off-road information
- Fuel economy
- Trip computer information
- Driving aids (if so equipped)
- Cruise control system
- Indicators and warnings
- Tire pressure information
- Audio
- Drive system warnings and settings (if so equipped)



USING THE VEHICLE INFORMATION DISPLAY

 
The vehicle information display modes can be changed using the ◀▶ buttons **2**, the ⬆ switch **3** and the **ENTER** button **4** located on the steering wheel.

- Press the ◀▶ buttons **2** and push the ⬆ switch **3** to navigate through the items in the vehicle information display.
- Press the **ENTER** button **4** to change or select an item in the vehicle information display.
- Press the ◀ button **2** to go back to the previous menu.



RESETTING THE TRIP COMPUTER

1. Press the ◀▶ buttons **2** until you reach the "Trip" screen **5**.
2. Press the **ENTER** button **4** for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.

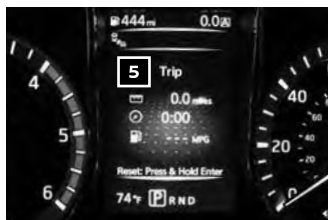

SETTINGS

The setting mode displays the settings that can be changed:

- | | | |
|---|---------------------------------------|-----------------|
| ■ Driver Assistance
(if so equipped) | ■ Towing Settings
(if so equipped) | ■ Unit |
| ■ Meter Settings | ■ Alarm (if so equipped) | ■ Language |
| ■ Vehicle Settings | ■ Maintenance | ■ Factory Reset |

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For Information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  button on the steering wheel, or the  **BACK** button on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **—** or **+** on the steering wheel or turn the **VOLUME** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



CONNECTING PROCEDURE

1. Touch the "Settings" key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" key **3** and touch "Add New". A message is displayed.
4. Touch "Yes" to connect a cellular phone. Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.
2. Touch the "Phonebook" key .
3. Choose the desired entry from the displayed list.

 
MAKING A CALL

1. Press the  button on the Launch Bar. The "Phone" screen  will appear on the display.
2. Select one of the following options to make a call:
 - "Quick Dial": Select a telephone number registered as a Quick Dial.
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call History": Select a telephone number from recent incoming, outgoing or missed calls.
 - "Dial Number": Enter the phone number manually using the keypad displayed on the screen.



RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch "Answer" on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch "Decline" on the screen.

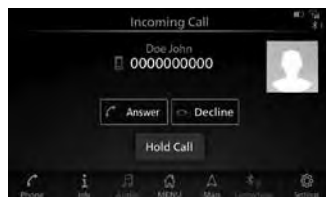

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Hands-Free Phone (section 4)**" of your NissanConnect® Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be "grayed-out" or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Navigation (if so equipped) (section 6)" of your NissanConnect® Owner's Manual.

- 1** **MAP** button – Press to display the current location map screen.
- 2** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE/SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 3** **VOL** control knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map out.
- 5** key – Select to zoom the map in.
- 6** **TUNE/SCROLL** knob – Turn to navigate the items in a list. Press to select a menu item.
- 7** **BACK** button – Press to return to the previous screen
- 8** Touch-screen display

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Navigation (if so equipped) (section 6)**" of your NissanConnect® Owner's Manual.

SYSTEM GUIDE

MONITOR A



MONITOR B



REAR SEAT INFOTAINMENT (RSI) SYSTEM (if so equipped)

- With the RSI system you can play DVD videos, video CDs or CDs that contain music or sound content. Images will display on the corresponding monitor. Sound will play from the vehicle's audio system (or wireless headphones provided in the kit) or your own wired headphones after connecting them to the headphone jacks of the corresponding DVD player.

1. Place the ignition switch in the ACC or ON position.

2. Press the  (power) button **1** on each monitor control panel to power on.

3. Insert a DVD (label facing to the rear of the vehicle) into either monitor.

 
4. Use the directional pad on the remote and select "Source" **6** then "DVD" from the Home screen to begin or resume playback to begin playing the DVD if it does not begin automatically.

5. To eject a DVD:

- Press the  button **3** on the top of **MONITOR A**, or
- Press the corresponding monitor control button (**MONITOR A** or **MONITOR B**) on the remote control and then press the  button **3**.

6. To turn off the DVD system:

- Press the  (power) button **1** on the corresponding monitor control panel, or
- Press the corresponding monitor control button (**MONITOR A** or **MONITOR B**) on the remote control and then press the  (power) button **1**.

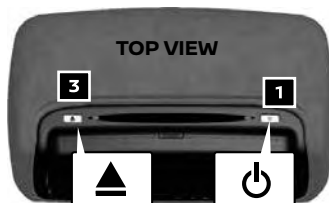


- You can also connect auxiliary devices, such as video games, camcorders, portable video players or USB devices, to the auxiliary jacks located on the corresponding monitor control panel. (Your device will be controlled through its own control panel.)
- The system provides a priority for each of the following device inputs:
 - HDMI port, USB port, disc player.
 - A device connected through the HDMI connections will override play of the disc player and USB port.
- Use the remote control provided with the system or the buttons on the corresponding monitor control panel to operate the rear display screens.
- Press the **AUDIO** button on the radio to listen to the audio through the vehicle's speakers.
- Use the headphones **4**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired headphones to the headphone jacks **5** located on the corresponding monitor control panel.
- To use the headphones, set the select switch on the side to **A** or **B** for use with the **MONITOR A** or **MONITOR B** respectively.
- For the best audio sound quality, please ensure you are facing the monitor directly in front of you.
- The wireless headphones will only operate in the line of sight.
- Navigate to "Source" **6** by using the directional pad on the remote **7** to cycle through the available video sources.



MONITOR A



 MONITOR B

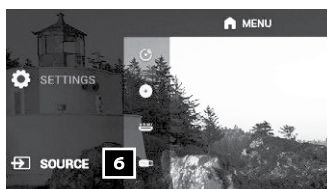

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

SYSTEM GUIDE

 


HOMELINK® UNIVERSAL TRANSCIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

COMPASS (if so equipped)

- Press the  button **1** for about 1 second when the ignition switch is placed in the ON position to toggle the compass display **2** on or off.
- The display will indicate the direction the vehicle is heading:
 - **N**: North
 - **E**: East
 - **S**: South
 - **W**: West
- If the display reads “C”, or for additional information, refer to the “Instruments and controls (section 2)” of the Owner’s manual.

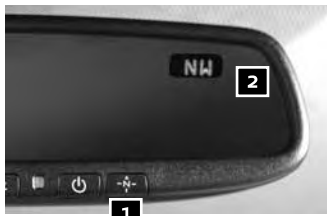

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2019/titan or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact Nissan Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

