 


2019 **370Z**

QUICK REFERENCE GUIDE



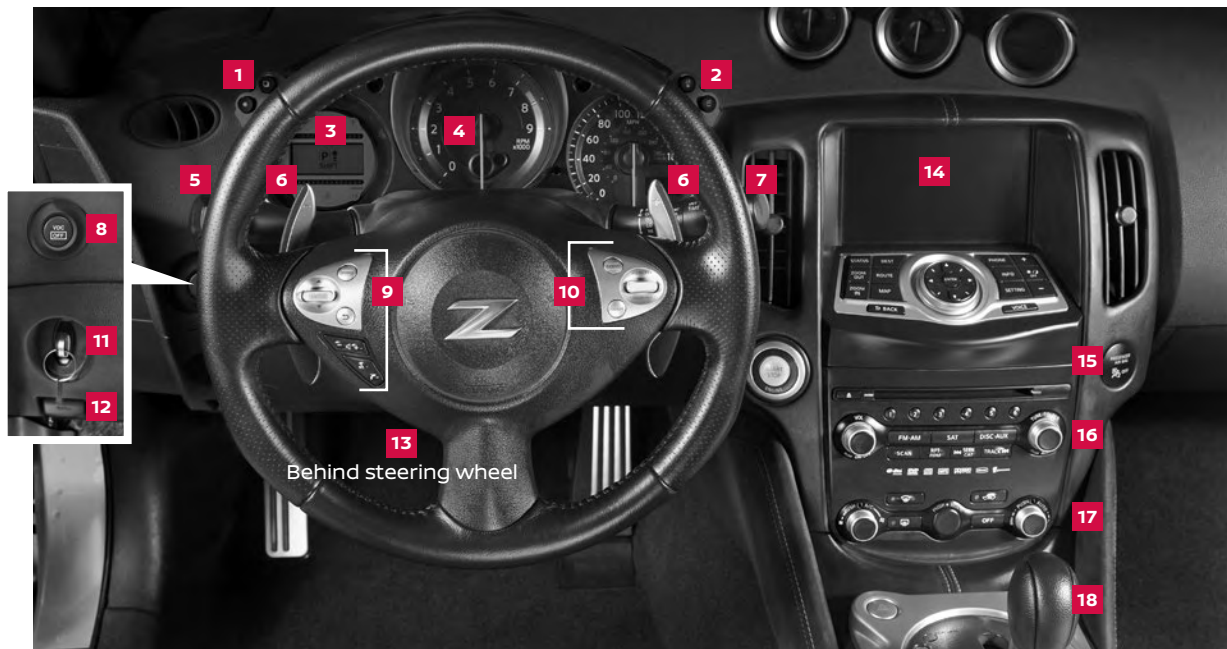

- 1** Enter/ Next Switches*
- 2** Instrument Brightness Control*
- 3** Vehicle Information Display*
- 4** Low Tire Pressure Warning Light
- 5** Headlight and Turn Signal Switch

- 6** Paddle Shifters*
- 7** Wiper and Washer Switch
- 8** Vehicle Dynamic Control (VDC) OFF Switch*
- 9** Steering Wheel Switches for Audio*/ Bluetooth*/ Navigation

- 10** Cruise Control
- 11** Intelligent Key Port
- 12** Hood Release*
- 13** Tilt Steering Column Adjustment*
- 14** Control Panel Display*

- 15** Front Passenger Air Bag Status Light*
- 16** Audio System
- 17** Heater and Air Conditioner (automatic)
- 18** Synchrorev Match® Mode (S-Mode) Switch*

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

RearView Monitor	2
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface	2
NavTraffic and NavWeather (if so equipped)	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	4
Loose Fuel Cap	5
Fuel-filler Door	5
Cleaning the Exterior (if so equipped)	5
Clock Set/Adjustment	6
Engine Oil Temperature Gauge	7
Automatic Power Windows	7

FIRST DRIVE FEATURES

Nissan Intelligent Key® System	8
Rear Hatch/Trunk Lid Release	9
Cruise Control	9
Power Seat With Manual Seat Adjustments (if so equipped)	10
Manual Seat Adjustments (if so equipped)	10
Power Outside Mirror Control Switch	11
Starting/Stopping the Engine	11
Headlight Control Switch	12
Wiper and Washer Switch	13
Heater and Air Conditioner (automatic)	13
FM/AM/SiriusXM® Satellite Radio with CD/DVD Player (if so equipped)	15
Soft Top Operation (Roadster models)	16

SYSTEM GUIDE

Trip Computer	17
Bluetooth® Hands-free Phone System	18
• System Operating Tips	18
Bluetooth® System without Navigation (if so equipped)	19
Bluetooth® System with Navigation (if so equipped)	20
Bluetooth® Streaming Audio with Navigation (if so equipped)	22
Navigation System (if so equipped)	23
HomeLink® Universal Transceiver (if so equipped)	24



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

NEW SYSTEM FEATURES

REARVIEW MONITOR

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.

• Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



MIRROR DISPLAY OPERATION (if so equipped)

- The rearview monitor automatically appears in the mirror display **1** when the shift lever is in the **R (REVERSE)** position. The indicator light **2** will illuminate in green.
- To turn off the mirror display **1**, push the **○** switch **3**. The indicator light **2** will illuminate in orange.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/ AUX JACK AND IPOD® INTERFACE

 
- The USB port/AUX jack is located in the center console under the armrest.
- When a compatible USB port device, iPod® or auxiliary device is plugged into the USB port/AUX jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

NAVTRAFFIC AND NAVWEATHER (if so equipped)

- Your vehicle's Navigation System is equipped with NavTraffic and NavWeather capabilities.
- NavTraffic enables your vehicle's Navigation System to display real-time traffic conditions, such as accidents or road construction, and may provide a detour to help avoid congestion.
- NavWeather tracks nationwide weather information, provides real-time weather reports and automatically alerts you to severe weather conditions around the current vehicle location.

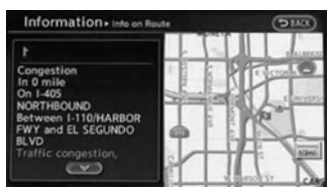

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Map settings (section 3)"**, the **"Viewing technical information (section 7)"** and the **"General system information (section 10)"** of your NissanConnect® Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display

 
1 and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- After the tire is inflated to recommended pressure, drive the vehicle at speeds above 16 mph (25 km/h) to turn off the low tire pressure warning light **2**.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

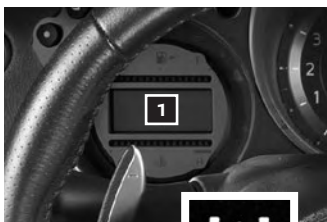

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset switch **2** is pushed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door is located on the passenger's side of the vehicle.
- Unlock the fuel-filler door using one of the following operations then push and release the left side of the door to open:
 - Push the door handle request switch while carrying the Nissan Intelligent Key® with you.
 - Press the **1** button on the Intelligent Key.
 - Push the power door lock switch to the **1** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

CLEANING THE EXTERIOR (if so equipped)

For models with decorative stickers, observe the following:

- Do not apply direct water pressure, such as high-pressure sprayer, on the vehicle body around the sticker. This may cause the sticker edges to peel away or come off from the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Appearance and care (section 7)"** of your Owner's Manual.

ESSENTIAL INFORMATION

CLOCK SET/ADJUSTMENT

WITHIN THE TRIPLE METER

- Adjust the clock **1** using the trip computer's  switch **2** and  switch **3**:
 1. Push the  switch **2** until Clock appears in the vehicle information display.
 2. Push the  switch **3** to select hours then push the  switch **2** to select minutes.
 3. Push the  switch **3** to set minutes then push the  switch **2** to complete the clock set procedure.



WITHIN THE NAVIGATION SYSTEM (if so equipped)

Press the **SETTING** button **4**, select the "Clock" key using the Multi Function Controller and press the **ENTER** button **5** to access the following clock settings:



- On-screen Clock - When this feature is turned to the **ON** position, a clock is always displayed in the upper right corner of the Multi Function Display. The clock is automatically adjusted by the GPS system.
- Clock Format - Choose either the 12-hour clock display or the 24-hour clock display.
- Offset (hour) - The time can be adjusted by increasing or decreasing per hour.
- Offset (min) - The time can be adjusted by increasing or decreasing per minute.
- Daylight Savings Time - Turn this item to the **ON** position for Daylight Savings Time application.
- Time Zone - Choose the time zone.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Other settings (section 7)**" of your Multi Function Display Owner's Manual, the "**Instruments and controls (section 2)**" and the "**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

ENGINE OIL TEMPERATURE GAUGE

- Performance driving patterns or extended driving at elevated ambient temperatures may result in increased engine oil temperature during operation.
- During normal vehicle operation, oil temperatures will be below 280°F (140°C). If the engine oil temperature gauge **1** indicates 280°F (140°C) or above while driving, reduce engine speed (rpm) and drive at a reduced vehicle speed.
- When the engine oil temperature is high, the engine protection mode, which helps reduce the chance of engine damage, may activate and automatically decrease engine power.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"**, the **"Do-it-yourself (section 8)"** and the **"Technical and consumer information (section 10)"** of your Owner's Manual.

AUTOMATIC POWER WINDOWS

- Your power windows have an automatic adjusting function to ensure power windows close completely to help seal against wind noise and weather leaks.
- When the front doors are opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.
- If your vehicle's battery has been discharged or disconnected, the power window automatic adjusting function will not operate.
- Refer to your Owner's Manual for information on how to initialize your power window system.
- If the power window functions do not operate properly after initializing the system, have your vehicle checked. It is recommended you visit a Nissan dealer for this service.

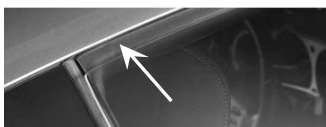

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your rear hatch/trunk lid and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

 


- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the **1** button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 1 minute; all other doors will unlock, or
 - Press the **1** button **3** on the key fob to unlock the driver's side door.
 - Press the **1** button **3** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **1** button **4** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the low battery indicator **5** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery in the Intelligent Key is almost discharged, the guide light **6** of the Intelligent Key port blinks and the key insertion indicator **7** will appear in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- Do not insert the mechanical key or any other objects into the Intelligent Key port. Inserting any object other than the Intelligent Key will damage the Intelligent Key port.

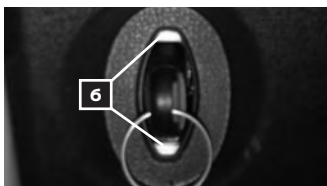

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

REAR HATCH/TRUNK LID RELEASE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Unlock the rear hatch/trunk lid by pulling the rear hatch release switch on the center console **1** (if so equipped) or on the rear hatch/trunk lid **2**.
- Once unlocked, push the opener switch **3** and pull up to open the rear hatch/trunk lid.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

POWER SEAT WITH MANUAL SEAT ADJUSTMENTS (if so equipped)

 
- To adjust the angle of the seatback, push the recline switch **1** forward or backward.
- To slide the seat forward or backward, push the switch **2** forward or backward.



MANUAL SEAT LIFTER

(if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion to the desired position, turn either dial **3**.

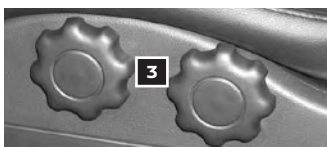

MANUAL LUMBAR SUPPORT

(if so equipped for driver's seat)

- The driver's seat lumbar support lever **4** is located on the inboard side of the driver's seat. To adjust the lumbar support, move the lever up or down.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety – Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

MANUAL SEAT ADJUSTMENTS (if so equipped)

 
SEAT SLIDE

- Pull the lever **1** up while you slide the seat forward or backward to the desired position. Release the lever to lock the seat in position.



SEAT RECLINING

- Type A (if so equipped): To recline the seatback, turn the adjusting dial **2** toward the rear of the vehicle and lean back. To bring the seatback forward, turn the adjusting dial **2** toward the front of the vehicle and lean your body forward.
- Type B (if so equipped): To recline the seatback, pull the lever **3** up and lean back. To bring the seatback forward again, pull the lever **3** and move your body forward.

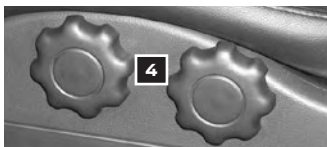

SEAT LIFTER

(if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion to the desired position, turn either dial **4**.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety – Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

POWER OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the center (neutral) position.

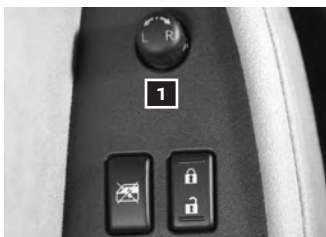

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).

AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once will activate the **ACC** mode.
 - Pushing the ignition switch a second time will activate the **ON** mode.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Depress the clutch pedal to the floor.
 - If the clutch pedal is not depressed, pushing the ignition switch once will activate the **ACC** mode.
 - Pushing the ignition switch a second time will activate the **ON** mode.
- Move the shift lever to the **N (NEUTRAL)** position.
- Push the ignition switch to start the engine.

TURNING THE ENGINE OFF

- For an automatic transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch to turn the engine off.
- For a manual transmission, move the shift lever to the **N (NEUTRAL)** position, apply the parking brake, place the vehicle in 1st gear and push the ignition switch to turn the engine off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FIRST DRIVE FEATURES

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

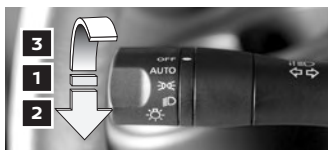


AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.

HIGH BEAM SELECT

 - With the headlights ON (either in the AUTO or ON position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

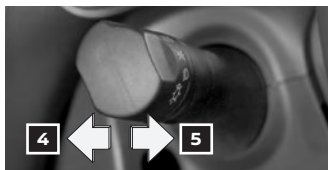

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

 
1 Mist (**MIST**) - One sweep operation of the front wipers.

2 Variable Intermittent (**INT**) - Move the lever down to the **INT** position and then rotate the control ring **3** to increase or decrease wiper speed.

4 Low (**LO**) - Front wipers operate at a continuous low-speed.

5 High (**HI**) - Front wipers operate at a continuous high-speed.

6 Washer  - Pull the lever toward you to activate the washer. The wipers will operate several times.

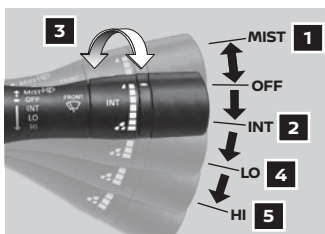

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.



HEATER AND AIR CONDITIONER (automatic)

1 A/C BUTTON/FAN SPEED CONTROL DIAL

- Press the **A/C** button to turn the A/C on or off.
- Turn the  fan speed control dial to the left to decrease fan speed or to the right to increase fan speed.

2 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

3 MODE/MANUAL AIR FLOW CONTROL BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

4 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the  front defroster button to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Set the  fan speed control dial **1** and the temperature control dial **2** to their maximum settings.

5 AIR INTAKE CONTROL BUTTON

- Press the  air intake control button to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- Press the  air intake control button again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster , floor  or front defroster and foot vent mode .
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

6 REAR WINDOW AND OUTSIDE MIRRORS (if so equipped) DEFROSTER SWITCH

- Push the rear window outside mirror defroster switch  to turn the system on or off.
- The rear window and outside mirrors defroster automatically turns off after approximately 15 minutes.

7 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.
- Press the **ON-OFF** button to turn the system on or off.

2 SEEK/CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK/CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For satellite radio to switch to the first channel of the previous or next category, press the **SEEK/CAT** button or the **TRACK** button.
- To change tracks on a CD, press the **SEEK/CAT** button or the **TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the **SEEK/CAT** button or the **TRACK** button.

3 AUDIO BUTTON/TUNE/FOLDER KNOB

- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

4 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SAT** button **6** then tune to the desired AM, FM or satellite radio station.
- Next press and hold the desired station select button (**1-6**) until the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station preset button (**1-6**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

 
FIRST DRIVE FEATURES

SOFT TOP OPERATION (Roadster models)

Before opening or closing your soft top, refer to the Owner's Manual for detailed warnings and cautions regarding soft top operation.

SOFT TOP OPERATION FROM INSIDE THE VEHICLE:

1. Make sure that the area is clear of obstructions and that there is at least 6 ft (2 m) of clearance above the vehicle.
2. Apply the parking brake and move the shift lever to the **P (PARK)** position (automatic transmission) or the **N (NEUTRAL)** position (manual transmission).
3. Depress the brake pedal and the clutch pedal (manual transmission).
4. Start the engine.
5. Push and hold the soft top operating switch, located on the center console, to the **OPEN** position **1** or **CLOSE** position **2** until the top is fully opened or closed.

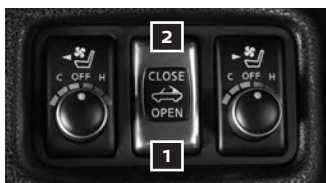

SOFT TOP OPERATION FROM OUTSIDE THE VEHICLE:

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- The soft top can be opened from outside the vehicle using the door handle request switch **3** as follows:
 - The ignition switch must be in the OFF position.
 - Push and hold the door handle request switch **3** until the soft top is fully opened.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

TRIP COMPUTER

- When the  switch **1** is pushed, the following modes will appear on the vehicle information display **2**:
- **MPG** – Displays the current fuel consumption.
 - **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - To reset, push and hold the  switch **3** for more than 1 second. Both the average fuel economy and average speed are reset at the same time.
 - **TIME/miles** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - To reset, push and hold the  switch **3** for more than 1 second. Both the elapsed time and total distance are reset at the same time.
 - **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - **CLOCK** – Allows you to set the time.
 - Push and hold the  switch **3** until the hours/minutes start to flash. Push again to adjust the desired time.
 - **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Push the  switch **3** to cycle through the various setting modes.
 - Push the  switch **1** to choose the selected menu.
 - **WARNING** – Displays when a warning is present.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

 
SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  or  button on the steering wheel.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode.

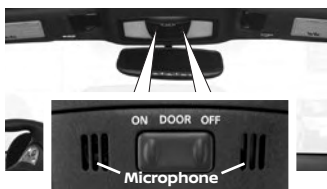

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
4. Initiate pairing from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
 - For cellular phones that support SSP (Simple Secure Pairing), confirm the PIN on the vehicle display matches the PIN displayed on the cellular phone.
5. Say the name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.



PHONEBOOK SETUP

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the name. If there are multiple locations associated with the name, the system asks the user to choose the location.
4. Once the name and location are confirmed, the system begins the call.

SYSTEM GUIDE

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or the "Audio system (section 3)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible Bluetooth® device can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

1. Press the **PHONE** button on the control panel or the  button on the steering wheel and select the "Connect Phone" key.
2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
 - For cellular phones that support SSP (Simple Secure Pairing), confirm the PIN on the vehicle display matches the PIN displayed on the cellular phone.
3. When the connecting is complete, the screen will return to the "Phone" menu.

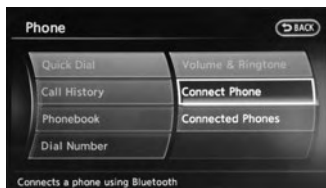


PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook into the "Phonebook" in the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle's phonebook may be set for up to 1,000 entries.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

■ To manually download entries:

 
1. Press the **PHONE** button on the control panel and select the "Quick Dial" key.
2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Phonebook" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.

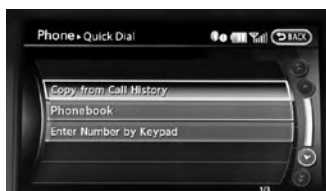

MAKING A CALL

To make a call, follow this procedure:

 1. Press the **PHONE** button on the control panel or the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Quick Dial", "Call History", "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.

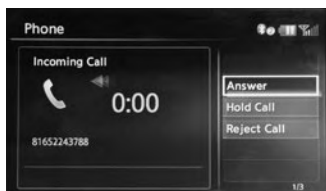

RECEIVING/ENDING A CALL

- To accept the call, press the **PHONE** button on the control panel, press the  button on the steering wheel or select the "Answer" key.
- To reject the call, press the  button on the steering wheel or select the "Reject Call" key.
- To hang up, press the  button on the steering wheel or select the "Hang up" key.



*Some jurisdictions prohibit the use of cellular telephones while driving.

 
 
 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual, the "**Hands-free phone (section 4)**" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE


BLUETOOTH® STREAMING AUDIO WITH NAVIGATION (if so equipped)

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
 - A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
 - To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
 2. Select "Connected Devices".
 3. Select "Audio Player".
 4. Select the name of the device that you are attempting to connect as an audio player.
 5. Select "Select".
 6. Verify that the system confirms that the device has been selected as an audio player.
- Once your Bluetooth® device has been connected as an audio device, press the **DISC-AUX** button on the control panel to select the Bluetooth® Streaming Audio player.
 - Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.

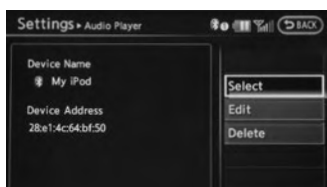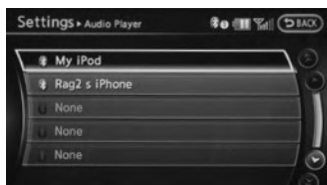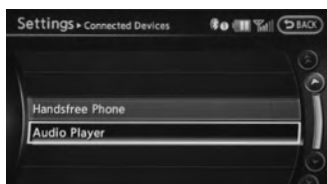

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

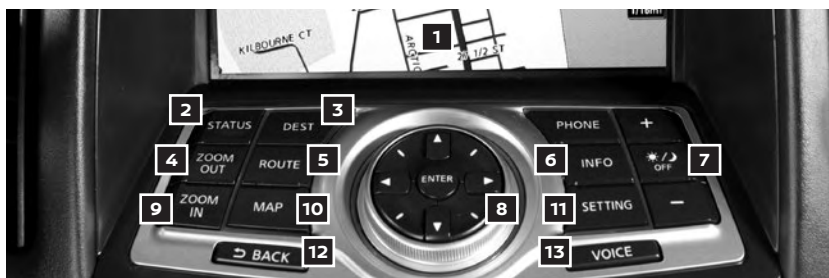

NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1** Touch-screen display
- 2** **STATUS** – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 3** Destination (**DEST**) – Press to enter a destination.
- 4** **ZOOM OUT** – Press to zoom out the map.
- 5** **ROUTE** – Press to access guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).
- 6** Information (**INFO**) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or Voice Recognition information.
- 7** ***/> OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- 8** Multi Function Controller
 - **ENTER** – Push to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
 - Main directional buttons – Press to move across the map, highlight an item on the screen or adjust a setting.
 - Additional directional buttons – Press to move across the map or highlight an item on the character input screen.
 - Center dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

- 9 ZOOM IN** – Press to zoom in the map.
- 10 MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 11 SETTING** – Press to access the system settings.
- 12 ↶ BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 13 VOICE** – Press to hear the current voice guidance for a programmed route.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Navigation (section 2)"** of your Multi Function Display Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.

- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink system, press and release the “learn” or “smart” button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink® website at www.homelink.com or call **1-800-355-3515**.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone.)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2019/370z
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2018 Nissan North America, Inc.
QR19EA 0234U0

Printing: February 2018

