

2020



CT5 Convenience & Personalization Guide

cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac CT5. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL



REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.

Press and hold for 3 seconds to close all windows.

To enable automatic mirror folding, go to Settings > Vehicle > Comfort and Convenience.



Unlock

Press to unlock the driver's door only or all doors.

Press and hold for 3 seconds to open all windows.



Remote Start

Press twice to start the engine from outside the vehicle.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.



Power Release Trunk

Press twice to open the trunk.

Door/Glovebox Key

Press the button (A) on the side of the transmitter to pull out the key. Refer to your Owner's Manual for instructions to remove the key cylinder cap on the driver's door handle.

Note: To change or enable some Remote Keyless Entry settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and trunk without removing the Remote Keyless Entry (RKE) transmitter from your pocket or purse. The transmitter must be within 3 feet of the trunk or door being unlocked.

KEYLESS UNLOCKING


With the RKE transmitter within range:

- ▶ Press the touch pad (A) on the inside of the driver's door handle to unlock the driver's door only or all doors.
- ▶ Press the touch pad on the inside of a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.

KEYLESS LOCKING

With the RKE transmitter within range:

- ▶ Press the Cadillac crest sensor (B) on the outside of either front door handle to lock all doors immediately.

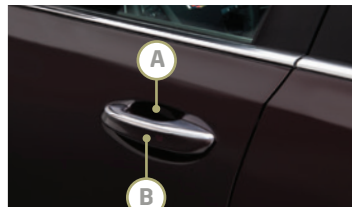

PASSIVE LOCKING

- ▶ To have all doors lock automatically after a short delay when the ignition is off, the RKE transmitter is removed from the vehicle, and all doors are closed, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Lock.
- ▶ To have the driver's door or all doors unlock when using the touch pad on the driver's door handle, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Unlock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, **press and hold the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: If the RKE transmitter battery is weak, place the transmitter in the rearward cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Retained Accessory Power will be available after the engine is turned off for up to 10 minutes, or until the driver's door is opened, to operate the radio, power outlets, OnStar[®], and wireless charging system[♦]. Power window and sunroof[♦] functionality will stop when any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.



The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button near the front of the center console to turn off the automatic stop/start system. The button indicator is illuminated when the system is on.

The system is turned on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on top of the shift lever. The shift lever always starts in the center position and, after shifting, returns to the center position. The selected gear position illuminates in red on the shift lever.

Park – Press the button (A) on top of the lever to shift into Park. To shift out of Park, press and hold the shift lock button (B) on the side of the lever while selecting the desired gear.

Reverse – Press and hold the shift lock button (B) and move the lever forward completely (pass the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for an extended period. It will automatically shift into Park. See Automated Car Wash Mode on page 19.

Drive – Move the lever rearward to shift into Drive.

Tap Shift Mode – With the transmission in Drive, pull back on the lever to shift manually. Press the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull back on the lever again to return to Drive.

To engage Temporary Tap Shift Mode, press either the left (downshift) or right (upshift) steering wheel paddle without moving the shift lever. The transmission will return to automatic shifting approximately 7–10 seconds after the last manual shift.



See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL

Driver Mode Control can automatically adjust the steering, powertrain, braking, engine sound and other tuning in real time. Pressing the **MODE** button on the center console displays the mode menu on the instrument cluster and activates the next available mode.

DRIVER MODES

MyMode – Allows the engine sound, steering and braking response to be customized to your preference; go to Settings > Vehicle > MyMode.

Tour Mode – Use in normal driving for balanced comfort and handling.


Sport Mode – Use where road conditions or personal preference dictate a more performance oriented response.

Snow/Ice Mode – Use during slippery conditions to help control wheel speed.

Track Mode – Use when maximum vehicle handling is desired.

V-Mode – Press the V-Mode button on the steering wheel to activate customized settings for maximum handling; go to Settings > Vehicle > V-Mode.

The mode features vary. Not all vehicles have all features.

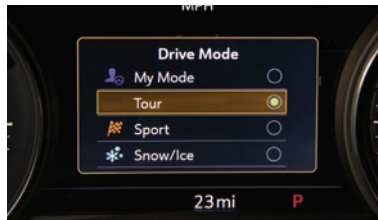

See Driving and Operating in your Owner's Manual.

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ADAPTIVE CRUISE CONTROL-ADVANCED

 **On/Off**

SET- Set Speed

With Cruise Control on , rotate the thumbwheel down to set the current cruise speed.

RES+ Resume Speed

With Cruise Control on , rotate the thumbwheel up to resume the set speed.

Adjust Speed

With a cruise speed set, rotate the thumbwheel up or down to the first detent to increase or decrease the set speed by 1-mph increments; rotate the thumbwheel past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory. Press and hold to switch between regular Cruise Control and Adaptive Cruise Control-Advanced.



Follow Distance Gap (Adaptive Cruise Control-Advanced)

Press to select a targeted gap setting of Far, Medium, or Near — the time between your vehicle and a vehicle detected directly ahead.

See Driving and Operating in your Owner's Manual.

B. VOICE RECOGNITION

 **Press to Talk**

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

 **End Call/Mute**

Press to end/decline a call or mute/unmute the audio system.

See your Cadillac User Experience Manual.



C. HEATED STEERING WHEEL

 **On/Off**

See Instruments and Controls in your Owner's Manual.

D. AUDIO CONTROLS

  **Volume**

Press  or  to adjust the volume.

  **Next/Previous**

Press  or  to select the next or previous stored favorite radio station or track.

See your Cadillac User Experience Manual.

E. DRIVER INFORMATION CENTER CONTROLS

 **Left/Right**

Press the  or  button to move between the display zones. Press  to exit a display menu.

  **Up/Down**

Rotate the thumbwheel up or down to move through the menus.

 **Select**

Press the  thumbwheel to open a menu, select or reset an item, or clear a message.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information.

DIC MENUS

Use the controls on the right side of the steering wheel to view the DIC menus.

Info – display trip, fuel range and other info pages

Audio – browse music and change the audio source

Navigation – view active route and change prompts



Phone – view active call and scroll through contacts

Options – change display information

SELECT INFO PAGES

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the ✓ thumbwheel to enter the menu.
3. Use the thumbwheel to scroll through the list of items.
4. Press the ✓ thumbwheel to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

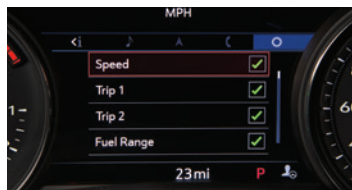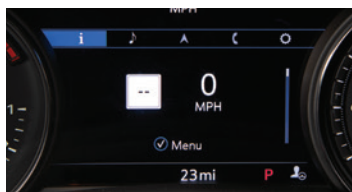

MULTI-COLOR HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

Brightness

Lift up or press down to brighten or dim the display. Hold down to turn off the display.

ROTATION OPTION

- To adjust the angle of the HUD, use the DIC controls to view Options > Head-Up Display and select Adjust Rotation. Rotate the DIC thumbwheel up or down to adjust the angle. Select OK to save the setting.

See Instruments and Controls in your Owner's Manual.



CADILLAC USER EXPERIENCE FEATURES

Read your Owner's Manual for important information about using the infotainment system while driving.

Your CT5 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen or use the Tune/Menu control or rotary controller and buttons to access an item. You can use simple gestures on the touch screen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.



CADILLAC USER EXPERIENCE FEATURES

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Display the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite item.

SIRIUSXM® WITH 360L♦

SiriusXM with 360L provides subscribers an enhanced in-vehicle listening experience with unique satellite and streaming channels, on-demand content, personalized recommendations and an interactive interface. Learn more at siriusxm.com. For the full SiriusXM with 360L experience, OnStar Connected Access is required. Learn more about OnStar services at onstar.com.

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smart-phone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
 2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.
- Press the  **Home** button to exit Apple CarPlay. To return to the last page viewed in Apple CarPlay, press and hold the  **Home** button.

ANDROID AUTO

Android Auto capability is available through a compatible smart-phone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
 2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
 3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.
- Press the  **Home** button to exit Android Auto. To return to the last page viewed in Android Auto, press and hold the  **Home** button.

PORTABLE AUDIO DEVICES

USB ports for data and charging are located in the center console storage compartment.

- Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- Touch Audio, and then touch More, if necessary, to select the USB device. Search for music on-screen or by voice commands.



Note: A charge-only USB port is located on the rear of the center console for rear seat passengers.

See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

APPS

Connected apps linking to music, news, weather, travel information, sports, entertainment and more are available for download to the infotainment system through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot. For more information, visit my.cadillac.com/learn.

VOICE RECOGNITION

Control the music source, enter a navigation destination, make phone calls hands-free, and perform other tasks using the natural voice recognition system.



1. Press the  **Press to Talk** button on the steering wheel.
2. The system will play a prompt followed by a beep.
3. After the beep, say what you want it to do.
 - Examples: "Call Dave" or "Tune to 99.5 FM"
 - Say "Help" for voice recognition assistance

BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri® Eyes Free or Voice Command.

- To activate Bluetooth Voice Recognition, press and hold the  **Press to Talk** button for a few seconds.

See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Press to Talk** button; after the prompt, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The secondary phone can only receive calls.

- To set the first and secondary phones, go to Settings > System > Phones and select the  Information icon.

NFC BLUETOOTH PAIRING

1. To use Near Field Communication (NFC) pairing, unlock your smartphone and enable NFC. Check your smartphone user's information for NFC compatibility.
2. Hold the phone next to the  NFC icon below the infotainment screen.
3. After pairing is initiated, follow the pairing instructions.



See your Cadillac User Experience Manual.

VALET MODE

Valet Mode can be used when it's desired that only an authorized user has access to personalized features.

- To lock/unlock the infotainment screen, select Settings > Vehicle > Valet Mode and enter a passcode.

See Instruments and Controls in your Owner's Manual.

WIRELESS CHARGING

The wireless charging system for smartphones is located at the front of the center console. To check mobile device compatibility, visit my.cadillac.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the smartphone face up on the pad.
4. The ⚡ battery charging symbol will display in green on the infotainment screen when the smartphone is charging. If not charging, remove the smartphone for 3 seconds and rotate it 180 degrees before placing it on the charging pad again.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. Some services require a data plan.

- To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

VEHICLE CUSTOMIZATION

Many vehicle features can be customized using the Settings menus on the infotainment screen. The Settings menus include System, Apps, and Vehicle.

1. Touch **Settings** on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch < Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See your Cadillac User Experience Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

ULTRAVIEW SUNROOF



OPEN/CLOSE THE SUNSHADE

- Press the  **Sunshade** switch to express-open both sunshades. Pull the  switch to express-close both sunshades. Press or pull again to stop movement.

OPEN/CLOSE THE SUNROOF

- Press the  **TILT** switch to vent the sunroof. Pull the  switch to close the sunroof.
- Press the  **SLIDE** switch to express-open the front sunroof. Pull the  switch to express-close the front sunroof. Press or pull again to stop movement.

See Keys, Doors and Windows in your Owner's Manual.

CLIMATE CONTROLS

The climate settings can be adjusted using the climate control buttons or by selecting Climate on the Home page of the infotainment system.



- ON/OFF AUTO Defog Mode Vent Mode Floor Mode Driver's Temp. Control Fan Speed Control Passenger's Temp. Control A/C Air Conditioning On/Off Recirculation Mode SYNC Max Defrost Rear Window Defog
- Synchronize passenger's settings to driver's settings

AUTOMATIC OPERATION

- Press AUTO. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If a function is manually adjusted, the auto indicator turns off and automatic operation for that function is disabled. Functions that have not been adjusted will stay in auto mode.

SYNC TEMPERATURE SETTINGS

- Press SYNC to synchronize all climate zone settings to the driver's settings.

CABIN AIR CLEANING IONIZER◆

The ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system. The ionizer status is shown on the climate control display on the infotainment screen.

- To turn on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the control band to activate the exterior lamps.



Off/On

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.



Parking Lamps



Headlamps



INTELLIBEAM SYSTEM

Press the button on the end of the lever with the lamp control in the AUTO or Headlamps position to turn the automatic high-beam system on or off. A green (A) indicator displays on the instrument cluster when the system is on; a blue (D) indicator displays when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS



Move the lever up or down to activate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes/AUTO Rainsense™ Sensitivity

Rotate the band up for more frequent wipes or down for less frequent wipes.

To turn Rainsense mode on or off, go to Settings > Vehicle > Comfort and Convenience > Rainsense Wipers.

Note: When entering an automatic car wash, turn off the Rainsense windshield wipers.

OFF

1x Single Wipe



Washer Fluid

Pull the lever to spray washer fluid on the windshield.

See Instruments and Controls in your Owner's Manual.

FRONT SEAT FEATURES

POWER SEAT ADJUSTMENT

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt♦, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press the round control to adjust the amount and position of lumbar support.



FRONT SEAT LUMBAR MASSAGE♦

- ▶ With the ignition on, press the button on the side of the seat to turn the massage feature on or off.

AUTOMATIC HEATED/VENTILATED FRONT SEATS♦

When the vehicle is turned on, the heated or ventilated front seats will automatically activate based on the vehicle's interior temperature. The seat button indicators on the instrument panel center controls will illuminate when the heated or ventilated seats are on. Manually turn off the heated or ventilated seats using the instrument panel center controls.

- ▶ To turn the automatic heated and ventilated front seats on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats and Auto Cooled Seats.

SET SEAT MEMORY♦ POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power steering column♦ and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- ▶ To store seat and power steering column♦ positions for more clearance when exiting the vehicle, repeat the steps using the  Exit button.



RECALL SEAT MEMORY♦ POSITIONS

- ▶ Press and hold button 1, 2 or  Exit until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the automatic recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards.

- ▶ Audible alerts may be selected instead of seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator on the instrument cluster is green when a vehicle is detected and is amber when following a vehicle ahead too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control–Advanced  Follow Distance Gap setting.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.


LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ Press the  **Lane Keep Assist** button (A) on the instrument panel center controls to turn the system on or off.

FRONT PEDESTRIAN BRAKING – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle, if you have not already done so.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

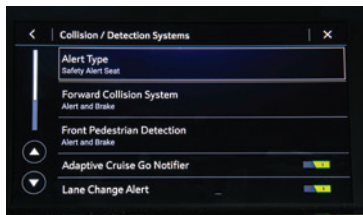

DRIVER ASSISTANCE SYSTEMS

AUTOMATIC EMERGENCY BRAKING – In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

REVERSE AUTOMATIC BRAKING – In detected potential imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ Press the **P**  **Park Assist** button (B) on the instrument panel center controls to turn Reverse Automatic Braking, Rear Cross Traffic Alert, and Park Assist on or off.

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the **P**  **Park Assist** (B) on the instrument panel center controls to turn Park Assist, Reverse Automatic Braking, and Rear Cross Traffic Alert on or off.



REAR PEDESTRIAN ALERT – During daytime driving, the system can detect pedestrians directly behind the vehicle up to a distance of 26 ft. and will display an amber  indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ To set to Alert or Off, go to Settings > Vehicle > Collision/Detection Systems > Rear Pedestrian Detection.

REAR CROSS TRAFFIC ALERT – When in Reverse, the system warns of cross traffic approaching in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn on or off, press the **P**  **Park Assist** button (B) on the instrument panel center controls or go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

HD REAR VISION CAMERA – When in Reverse below 8 mph, a view of the area behind the vehicle displays on the infotainment screen.

HD SURROUND VISION

– The Surround Vision system displays the area surrounding the vehicle along with front and rear camera views on the infotainment screen. The system operates when in Reverse or Drive while moving less than 8 mph. Camera view buttons are on the screen.

- ▶ The Surround Vision camera also can be activated by selecting the Camera icon on the Home page or by pressing the  Surround Vision button (C) on the instrument panel center controls.



DRIVER ASSISTANCE SYSTEMS

AUTOMATIC PARKING ASSIST WITH BRAKING♦

The Automatic Parking Assist with Braking system steers the vehicle at idle speed and applies the brakes to help you park the vehicle while you follow commands and control the gear selection.

1. While driving below 18 mph, press the **P**  **Park Assist** button on the instrument panel center controls. A parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button. To search for a parking spot to the right or left, touch the Parking Side screen button.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.



TRACTION CONTROL

The traction control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the **Traction Control** button at the front of the center console to turn the system off or on again. The **Traction Control Off** light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR♦

The Rear Camera Mirror uses a camera mounted in the roof antenna to provide a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.



A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt feature.

C. Adjustment

Press and release either button to adjust the selected feature.

See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

With the ignition On or in Accessory mode, the Tire Fill Alert will provide visual and audible alerts when inflating a tire.

See Vehicle Care in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the  parking brake switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the  switch.



See Driving and Operating in your Owner's Manual.

AUTOMATED CAR WASH MODE

When using an automatic car wash, there are different procedures for placing the automatic transmission in Neutral with the engine on or off and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

AUTOMATIC VEHICLE HOLD

Automatic Vehicle Hold will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The indicator illuminates in green on the instrument cluster when the system is holding the vehicle.

- ▶ To turn the system on or off, press the **AUTO HOLD** button near the front of the center console with the driver's seat belt fastened, the driver's door closed and the engine on.

See Driving and Operating in your Owner's Manual.

POWER RELEASE TRUNK

HANDS-FREE OPERATION♦

To open the trunk hands-free, kick your foot straight in and out under the center of the rear bumper, indicated by the vehicle logo projected on the ground. The Remote Keyless Entry (RKE) transmitter must be within 3 feet of the trunk.



Note: To change the power release trunk settings, go to Settings > Vehicle > Comfort and Convenience > Hands-Free Trunk Control.

See Keys, Doors, and Windows in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CADILLAC ONLINE OWNER CENTER

Create an account at **my.cadillac.com** to access personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 by General Motors. All rights reserved.

