

2020



ESCALADE Convenience & Personalization Guide


cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac Escalade. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

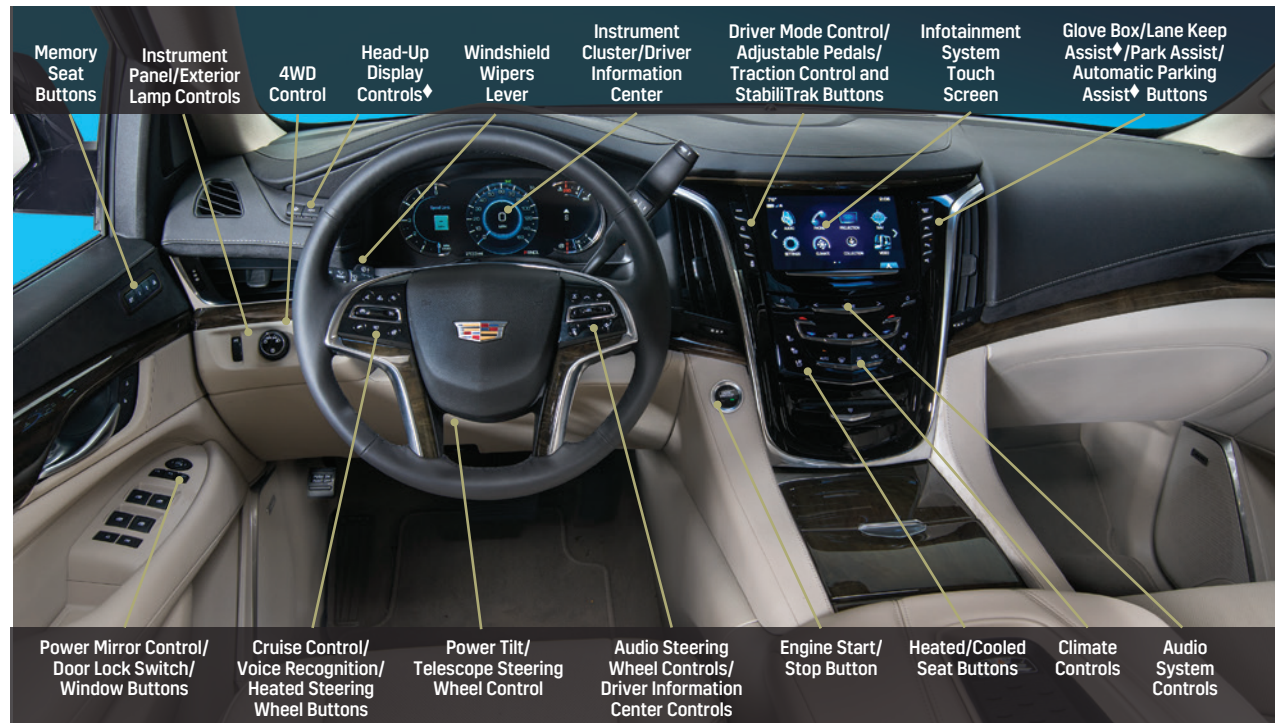

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors. Press and hold for 4 seconds to open all windows.



Liftglass

Press twice to open the liftglass.



Power Liftgate

Press twice to open or close the power liftgate.



Remote Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 4.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps flash and the horn sounds 3 times.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds or until the  button is pressed again.

Door Key

Press the button (A) on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door if needed.

Note: If a transmitter is left in the vehicle when locking the vehicle, the Remote Left in Vehicle Alert may sound. To change the Remote Keyless Entry settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad on the liftgate handle to open the power liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the RKE transmitter battery is weak, place the transmitter in the pocket in the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

ADAPTIVE REMOTE START

STARTING THE VEHICLE

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash (about 4 seconds).

When the vehicle starts, the doors remain locked and the parking lamps will light and remain on while the engine is running. The engine will continue running for 15 minutes. Repeat these steps for a 15-minute time extension. Remote start can be extended only once.

3. Before driving, press the brake pedal and then press the **ENGINE START/STOP** button to turn on the ignition.

CANCELING A REMOTE START

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

HEATED/COOLED SEAT OPERATION

Remote Start Auto Heated/Cooled Seats – The heated or cooled seats will turn on during a remote start when outside temperatures warrant if the Remote Start Heated or Cooled Seats option is selected in the Settings menu. Go to Settings > Vehicle > Remote Lock, Unlock, Start. During a remote start, the seat button indicators do not illuminate. The heated or cooled seats turn off when the ignition is turned on. For the seats to remain on after the remote start, the Auto Heated and Cooled Seats feature must be enabled.

Auto Heated and Cooled Seats – Anytime the vehicle is on, the heated or cooled seats will activate automatically based on the vehicle's interior temperature. The seat button indicators will illuminate when the heated or cooled seats are on. To enable this feature, go to Settings > Vehicle > Climate and Air Quality.

See Keys, Doors and Windows in your Owner's Manual.

STEERING WHEEL CONTROLS

CRUISE CONTROL/ADAPTIVE CRUISE CONTROL–ADVANCED♦

On/Off

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed. The  indicator illuminates in green.

RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed. Adaptive Cruise Control–Advanced♦ (ACC) can be resumed from a stop.

+ – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press and hold to continue increasing/decreasing speed.

With ACC♦, press and release the control bar up (+) or down (–) to increase or decrease the set speed by 1-mph increments; press and hold momentarily to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Switching between Regular Cruise Control and Adaptive Cruise Control–Advanced♦

Adaptive Cruise Control–Advanced (ACC) enhances regular Cruise Control to maintain a following gap by braking or accelerating automatically while you continue to steer.



- ▶ Press and hold the  **Cancel** button to switch between regular Cruise Control and ACC. When ACC is active, a green  indicator illuminates and the following gap is displayed.

When the vehicle is turned on, the Cruise Control is set to the last mode used.

Following Gap (Adaptive Cruise Control–Advanced♦)

Press repeatedly to set a following gap (the time between your vehicle and a detected vehicle ahead) of Far, Medium, or Near.

When a slower vehicle is detected ahead, the  Vehicle Ahead Indicator is displayed and the vehicle brakes to maintain the selected following gap. The ACC system may slow your vehicle to a stop behind the detected vehicle. When the ACC system is holding the vehicle at a stop, be prepared to manually apply the brakes.

If driver action is required to apply sufficient braking behind a detected vehicle, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected). See Safety Alert Seat on page 14.

Note: Changing the gap settings automatically changes the alert timing sensitivity for the Forward Collision Alert system.

See Driving and Operating in your Owner's Manual.

VOICE RECOGNITION

Push to Talk

Press to interact with the OnStar, Bluetooth or Infotainment system. Wait for the beep before speaking.

End Call/Mute

Press to end/decline a call or mute/unmute the audio system.

See your Infotainment System Manual.

STEERING WHEEL CONTROLS

DRIVER INFORMATION CENTER CONTROLS

The 5-way control moves left/right, up/down, and in.

<> Left/Right

Press to move between the display zones on the instrument cluster.

Press the left < to exit a center display menu.



^ v Up/Down

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner's Manual.

AUDIO CONTROLS

⏮ + ⏭ - Volume

Press ⏮+ or ⏭- to increase or decrease the volume.

⏮ ⏭ Next/Previous

Press ⏮ or ⏭ to go to the next or previous favorite radio station or track.

See your Infotainment System Manual.

INSTRUMENT CLUSTER



CLUSTER DISPLAY ZONES

Use the 5-way control on the steering wheel to move between the different display zones on the cluster and scroll through the various menus in each cluster configuration.

CLUSTER CONFIGURATIONS

1. Use the 5-way control to view the Options page in one of the display zones on the cluster. Press **SEL** (Select) to enter the Options menu.
2. Scroll  down to highlight Display Layout; press **SEL**.
3. Scroll  up or  down to highlight one of the cluster displays; press **SEL**.
4. Press < to exit the menu.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster can be set to display a variety of vehicle information.

DIC MENUS

Use the 5-way control on the steering wheel to view the menus:

Info – display trip and fuel information

Audio – browse music or change the audio source

Phone – view active call and scroll through contacts

Navigation – view active route or change prompts

INFO MENU

1. Use the 5-way control on the steering wheel to view the Options page in one of the display zones. Press **SEL (Select)** to enter the Options menu.
2. Scroll  down to highlight Info Pages; press **SEL**.
3. Scroll  up or  down to move through the Info items.
4. Press **SEL** to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY



The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image on the windshield. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View, Audio/Phone View, Navigation View, and Performance View.

Brightness

Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

See Instruments and Controls in your Owner's Manual.

INFOTAINMENT SYSTEM CONTROLS

Applications♦:
Touch a screen icon to access
a desired application.

VOLUME
Touch arrows or swipe finger
on or above the chrome bar.

Power/Mute:
Press and hold to turn
the system On/Off.
Press to mute audio.

Driver's Temperature
Control

OFF
Climate Control Power Off

Driver's Heated/
Cooled Seat Control

AUTO
Automatic Climate Control
Operation

Defrost Mode



Additional Pages:
Touch to view additional
pages of applications.

Interaction Selector:
Touch to display the
favorites list.

Home Page

Passenger's Temperature
Control

Climate Control Fan Speed

Passenger's Heated/
Cooled Seat Control

Recirculation Mode

Rear Window Defog

Storage Compartment
with USB Port:
Press and hold the bright
bar to open/close.

The controls use capacitive technology – simply touch the icon/text
to access a feature or adjust a function.

INFOTAINMENT SYSTEM MENUS

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Your Escalade offers a variety of entertainment, communication and vehicle system options. You can use simple gestures on the touch screen just as you would on a smartphone, such as tap, drag, pinch and spread. Touch an application icon on the touch screen to access the following items. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.



Audio

- Radio Band
- Media
- Seek Up/Down
- Tune
- Browse
- Menu



Navigation

- Zoom Out
- Zoom In
- Reset
- Destination
- Map Menu
- Seek Up/Down
- Mute/Unmute
- Cancel a Destination



Phone

- Voice Recognition
- Contacts
- Recent
- Keypad
- Voice Mail
- Phones

Note: Press and hold the  **Push to Talk** steering wheel button to activate Bluetooth Voice Recognition. See page 11.



Climate

- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Sync Temperature Settings
- A/C Mode
- Automatic Climate On/Off
- Air Distribution Settings
- Front/Rear Settings
- Fan Speed



Settings

- Time and Date
- Rear Seat Reminder
- Language
- Valet Mode
- Teen Driver
- Radio
- Vehicle
- Bluetooth
- Apple CarPlay
- Android Auto
- Voice
- Display
- Rear Camera
- Return to Factory Settings
- Software Information

INFOTAINMENT SYSTEM FEATURES

SETTING THE TIME

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch ◀ Back to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦), media (song, artist, album and genre with device connected to a USB port), phone contacts and navigation destinations can be stored in any order.

1. Display or select the desired radio station, media favorite, navigation destination or contact.
2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button until a beep is heard.
4. Repeat the steps to store another favorite item.

PORTABLE AUDIO DEVICES

USB ports are located in the console front storage bin and inside the console.

1. Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to a USB port.
2. Touch Audio > Media until the connected device is shown. Search for music on-screen or by voice commands.

APPS♦

In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the APPS icon on the Home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

APPLE CARPLAY™

Apple CarPlay capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Projection icon will change to Apple CarPlay. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO™

Android Auto capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Projection icon will change to Android Auto. Touch the Android Auto icon to have your apps displayed.

See your Infotainment System Manual.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free (after pairing your Bluetooth-enabled phone), using the voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a tone.
3. After the tone, say what you want it to do using natural speech. (Examples: "Call Amanda" or "Tune 99.5 FM")

BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition pass-thru allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri® Eyes Free or Voice Command. For more information, visit my.cadillac.com/learn.

- To activate Bluetooth Voice Recognition, press and hold the  **Push to Talk** steering wheel button.

See your Infotainment System Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi® hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks.

For more information on use and system limitations, visit my.cadillac.com/learn.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone."

To use the infotainment screen, select  Phone > Pair Device.

2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

STREAMING AUDIO

- With a paired device connected via Bluetooth, touch Audio > Media and then select Bluetooth to stream audio from the device.

Control operation using the device controls. For full control of the mobile device, it may be necessary to connect the device to a USB port.

See your Infotainment System Manual.

WIRELESS CHARGING

The Wireless Charging system for mobile devices is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be On.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the  charging symbol displays by the phone icon on the infotainment screen. If not charging, remove the device for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Many vehicle features can be customized in the Settings menu on the infotainment screen.

1. Touch Settings on the Home page.
2. Touch the desired menu item.
3. Touch the desired feature and setting. Settings are saved automatically.
4. Touch  Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Infotainment System Manual.

COOL BOX

The Cool Box (Platinum model only) in the center console provides cooled storage for cold beverages or other items. It is not a refrigerator.

- Press the  **Cool Box** button on the left side of the front storage bin to turn the Cool Box on or off.



See Storage in your Owner's Manual.

LIGHTING



Off/On

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.



Parking Lamps



Headlamps



Instrument Panel Brightness

Rotate the thumbwheel to adjust the instrument panel lighting.

DOME LAMPS

OFF

Press to turn off the dome lamps at all times, even when a door is open.

DOOR

Press to have the dome lamps turn on automatically when a door is open.

ON

Press to turn on all dome lamps.



See Lighting in your Owner's Manual.

WINDSHIELD WIPERS



Fast Wipes



Slow Wipes



INT Intermittent

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.



Auto - Rainsense™ On/Off

Press to turn the Rainsense wipers on/off. Use the INT band to adjust the wiper cycling based on the amount of moisture on the windshield. Rotate the band upward to increase the moisture sensitivity setting and the wipers will cycle more frequently.

OFF



Single Wipe



Washer Fluid

Push the paddle forward to wash the windshield.



Rear OFF-INT-ON

Slide the switch to activate the rear wiper.



Rear Washer Fluid

Press the button on the end of the lever to spray washer fluid on the rear window and rear camera mirror lens♦.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS ♦

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat pulses — left side, right side, or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, Near or Off. This is also the Adaptive Cruise Control–Advanced ♦ following gap setting.
- ▶ To set the Forward Collision Alert and Automatic Emergency Braking systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

FOLLOWING DISTANCE INDICATOR – The following time to the vehicle ahead is indicated in seconds on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, it may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the right side of the infotainment screen. The button illuminates when the system is on.

ENHANCED AUTOMATIC EMERGENCY BRAKING/REVERSE AUTOMATIC BRAKING

– In potential front- and rear-end imminent collision situations with vehicles directly ahead or behind, and with some objects behind, your vehicle, the brakes may be applied, if you have not already done so, to help reduce the collision's severity or help avoid collisions at very low speeds.

- ▶ To set Enhanced Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ To set Reverse Automatic Braking, Park Assist, and Rear Cross Traffic Alert on or off, press the  **Park Assist** button on the right side of the infotainment screen.

AUTOMATIC SEAT BELT TIGHTENING – While driving, the front seat belts automatically tighten during emergency braking or steering maneuvers, and release when conditions return to normal.

See Driving and Operating in your Owner's Manual.

SURROUND VISION

The Surround Vision system displays a rear or front camera view along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 8 mph.

REAR CROSS-TRAFFIC ALERT


When the vehicle is in Reverse, the Rear Cross-Traffic Alert system warns of cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the Surround Vision System guidance lines or Rear Park Assist symbols on or off, go to Settings > Rear Camera.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

The Rear Camera Mirror provides a wider, less obstructed field of view of the area behind the vehicle than a traditional rearview mirror. It displays a rear camera view that is helpful when the driver's view is obstructed, for example, by rear seat passengers or a rear seat entertainment screen.

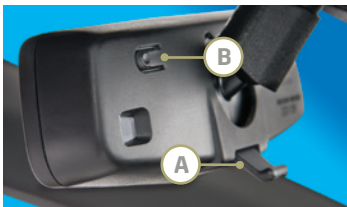

- ▶ Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off. When off, the mirror is a normal rearview mirror.
- ▶ To adjust the brightness of the display, press and release the button (B) on the upper back of the mirror without covering the light sensor. There are 5 brightness settings.

See Keys, Doors and Windows in your Owner's Manual.

◆ Optional equipment

AUTOMATIC PARKING ASSIST

Automatic Parking Assist steers the vehicle to help you park in parallel or perpendicular spaces while you follow commands and control the gear selection, acceleration and braking. The system is available when vehicle speed is below 18 mph.

1. Press the **P** **Automatic Parking Assist** button on the right side of the infotainment screen. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button during the search process.
3. The system searches for parking spaces to the right of the vehicle. To search for a parking space to the left, touch the Select Side screen button.
4. Once a space is found, shift the vehicle into Reverse or Drive as directed, follow the commands on the infotainment screen and apply the accelerator or brake as needed. The steering wheel will briefly vibrate as a reminder to remove your hands. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

FRONT AND REAR PARK ASSIST

During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or a continuous beep sounds (if selected).

- ▶ To turn the system on or off, press the **P** **Park Assist** button on the right side of the infotainment screen.

See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

RANGE SELECTION MODE

Range Selection Mode allows the driver to select the range of gears for the current driving conditions.

1. Move the shift lever to the L (Manual) position.
2. Press the + (plus) or – (minus) button (A) on the shift lever to select a lower or higher gear. The current gear is displayed next to the L on the Driver Information Center.

The transmission will be limited to the gear selected and lower gears. If vehicle speed is too high or too low for the requested gear, the shift will not occur.



TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- To turn the system on or off, press the  Tow/Haul Mode button (B) on the end of the shift lever.

See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL SYSTEM

The Driver Mode Control system automatically adjusts steering, automatic transmission and Magnetic Ride Control settings in real time.

- Press the **Mode** button on the left side of the infotainment screen to view the menu on the Driver Information Center. Press the button again to select the Tour or Sport mode.

See Driving and Operating in your Owner's Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

The Traction Control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- Press the  Traction Control/StabiliTrak OFF button on the left side of the infotainment screen to turn Traction Control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.



See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR


The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.** The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. Refer to your Owner's Manual for information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the **Power Liftgate** knob on the overhead console.
- ▶ Press the touchpad (A) on the liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the liftgate latch to close the liftgate.

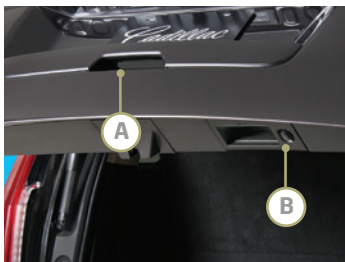

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the  button next to the liftgate latch (B) for 3 seconds. The turn signals flash and a beep sounds when the setting is saved.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight in and out under the center of the rear bumper, or above the vehicle logo projected on the ground. Do not swing your foot side-to-side.

The RKE transmitter must be within 3 feet of the liftgate.

See Keys, Doors and Windows in your Owner's Manual.

◆ Optional equipment

POWER ASSIST STEPS

The power assist steps lower automatically when a door is opened and retract after the doors are closed.

- ▶ To deploy the steps for cleaning and car washes, with the ignition on and the vehicle in Park or with the vehicle running and in Neutral, select the  Run Board screen button on the infotainment screen and then select the Extended option.
- ▶ To disable or enable the steps, with the ignition on and the vehicle in Park or Neutral, select the  Run Board screen button and then select On or Off.

See Keys, Doors and Windows in your Owner's Manual.

SUNROOF

OPEN/CLOSE THE SUNROOF

- ▶ Press the rear of the  **Sunroof Tilt** switch to vent the sunroof.
- ▶ Fully press the rear of the  **Sunroof Slide** switch to express-open the sunroof.
- ▶ Fully press the front of either  **Sunroof** switch to express-close the sunroof.



See Keys, Doors and Windows in your Owner's Manual.

POWER FRONT SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment


Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.

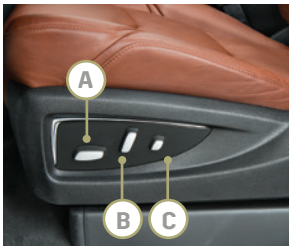

ADDITIONAL SEAT ADJUSTMENTS (PLATINUM MODEL)

D. Feature Select Control

Press and release the control to display the seat adjustment features on the infotainment screen. Press and hold to scroll through the adjustments.

E. 4-Way Control Pad

Use the 4-way control pad to make adjustments up, down, forward, or rearward to the selected feature.



F. Massage On/Off

With the ignition on, press to recall the last massage type and intensity.

SET MEMORY POSITIONS

With the vehicle in Park and the ignition On or in Accessory mode:

1. Adjust the power driver's seat, power adjustable pedals, power outside mirrors, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button. A beep will sound. Immediately press and hold button **1** until two beeps sound.
3. Repeat the steps using button **2** for a second driver.



To store driver's seat, adjustable pedals and steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the  **EXIT** button.

RECALL POSITIONS

- ▶ Press and hold button **1** or **2** or the  **EXIT** button until the seat, pedals, mirrors and steering column reach the set position.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned On/Off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

FOLDING 2ND-ROW SEATS

The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

1. Lower the head restraint, unbuckle the seat belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Lift the lever on the lower outboard side of the 2nd-row seat. The seatback will fold forward.
3. Lift the lever again to tumble the seat forward.



POWER FOLDING 2ND-ROW SEATS♦

1. Lower the head restraint, unbuckle the seat belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.



2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  **x2** button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.

UNFOLDING 2ND-ROW SEATS

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

POWER FOLDING/UNFOLDING 3RD-ROW SEATS

1. With the vehicle in Park, lower the head restraint, unbuckle the seat belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.



See Seats and Restraints in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar Safety & Security plan, push the blue OnStar button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit **onstar.com** or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

CADILLAC ONLINE OWNER CENTER

Create an account at **my.cadillac.com** to access personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 by General Motors. All rights reserved.

