



This supplement is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this supplement was accurate at the time of publication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



OWNER.FORD.COM



FORD.CA



United States

Ford Customer Relationship Center

1-800-392-3673 (FORD)

(TDD for the hearing impaired: 1-800-232-5952)

owner.ford.com



@FordService

Canada

Ford Customer Relationship Centre

1-800-565-3673 (FORD)

(TDD for the hearing impaired: 1-888-658-6805)

ford.ca



@FordServiceCA



December 2019
Second Printing
Litho in U.S.A.
LL3J 19B146 AA

2020 F-150 RAPTOR

OFF-ROAD OVERVIEW



2020 F-150 RAPTOR OFF-ROAD FEATURES OVERVIEW

Trail Control

Trail control can be used during low-speed and off-road driving to control your vehicle's acceleration and braking.

You can use trail control under the following speeds:

- 20 mph (31 km/h) in two-wheel or four-wheel drive high range.
- 10 mph (15 km/h) in four-wheel drive low range.
- 5 mph (8 km/h) in reverse (R).
- The system disengages above 42 mph (68 km/h), you must press the button again to re-engage.

To switch trail control on, press the  button. Drive to your preferred speed and use the SET + button to increase your speed and the SET - button to decrease it. You can also adjust the set speed by braking, but pressing the brake pedal does not switch off the system.

Terrain Control

The Terrain Management System optimizes steering, handling and powertrain response through mode selection.

To change the drive mode setting, press the drive mode button on the steering wheel.

Use extreme caution when using any device or feature that may take your attention off of the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so. Please refer to your Owner's Manual and Raptor Supplement for further information, including important safety information.

[†] Never go through water of any depth faster than 40 mph (65 km/h). You must reduce your speed significantly when driving through water over 6 in (150 mm) in depth. Do not exceed a maximum depth of 32 in (810 mm) and drive no faster than 4 mph (7 km/h) to avoid potential vehicle damage.



	On-Road Modes				Off-Road Modes		
	Slippery 	Tow/Haul 	Sport 	Normal 	Deep Snow/Sand 	Baja 	Rock Crawl 
ENGINE / TRANS CONTROLS	SLIPPERY	TOW	SPORT	NORMAL	DEEP SNOW/SAND	BAJA	ROCK CRAWL
ADVANCETRAC CONTROLS	SLIPPERY	NORMAL	NORMAL	NORMAL	DEEP SNOW/SAND	BAJA	ROCK CRAWL
STEERING EFFORT	NORMAL	NORMAL	SPORT	NORMAL	COMFORT	NORMAL	COMFORT
ELECTRONIC LOCKING DIFFERENTIAL (4x4 only)	AVAILABLE BELOW 25 MPH 40 KM/H	AVAILABLE BELOW 25 MPH 40 KM/H	AVAILABLE BELOW 25 MPH 40 KM/H	AVAILABLE BELOW 25 MPH 40 KM/H	ENGAGED AT ALL SPEEDS; CAN BE DISENGAGED MANUALLY	AVAILABLE AT ALL SPEEDS	ENGAGED AT ALL SPEEDS; CAN BE DISENGAGED MANUALLY
DEFAULT TRANSFER CASE	4X4 AUTO	MAINTAINS PREVIOUS 4X4 STATE	4X2	4X2	4X4 HIGH	4X4 HIGH	4X4 LOW