



GETTING TO KNOW YOUR **2020 YUKON/XL DENALI**



[gmc.com](https://www.gmc.com)

Review this Quick Reference Guide for an overview of some important features in your GMC Yukon/XL Denali. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.gmc.com/learn. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Instrument Panel
Illumination
Control/Exterior
Lamp Control

4WD
Control

Integrated
Trailer Brake
Control

Traction Control and StabiliTrak/
Front and Rear Park Assist/Lane
Keep Assist/Adjustable Pedals/
Power Assist Step Buttons

Turn Signal/
Windshield
Wipers Lever

Customizable
Driver
Display



Cruise Control/
Forward Collision
Alert/Heated
Steering Wheel
Buttons

Audio Next/
Previous Favorite
Station Controls
(behind steering
wheel)

Tilt/Telescopic
Steering Wheel
Control

Customizable Driver
Display Controls/
Voice Recognition
Buttons

Audio Volume
Controls (behind
steering wheel)

Symbols



Low Fuel



Traction Control Off



Lane Keep Assist Warning



Vehicle Ahead

BRAKE Brake System



Cruise Control Set



StabiliTrak Active



StabiliTrak Off



Security




Tow/Haul Mode



Lights On Reminder



Airbag Readiness

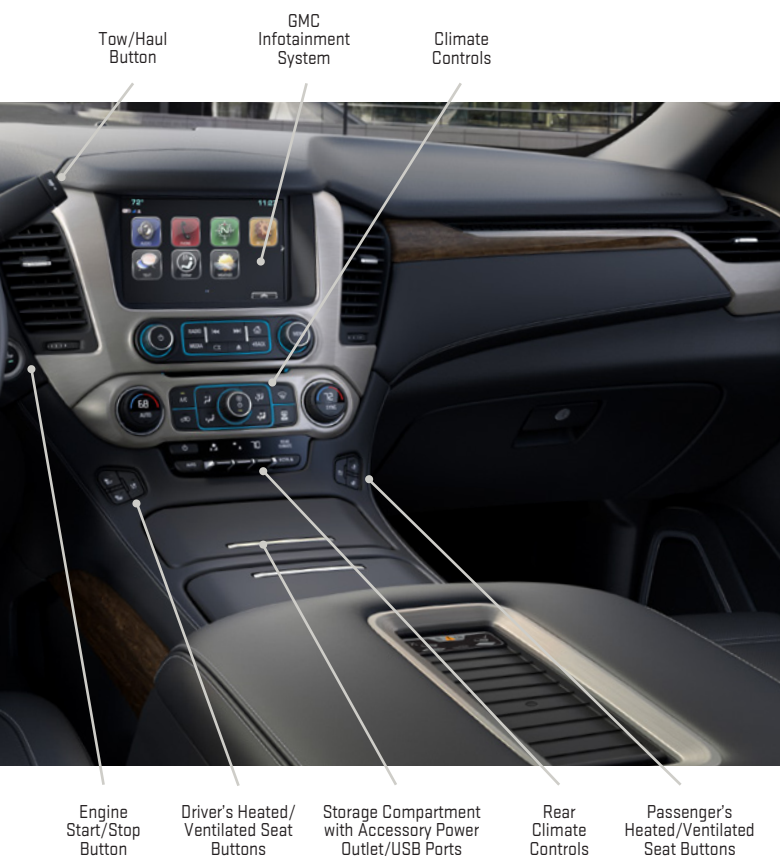

Check Engine



Antilock Brake System



Low Tire Pressure



Door Ajar



Oil Pressure



Charging System



Seat Belt Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Lock

Press to lock all doors.
Press and hold the Lock/Unlock buttons to automatically fold/unfold the power mirrors.

Note: To change the Auto Mirror Folding setting, go to Settings > Vehicle > Comfort and Convenience.

Liftglass

Press twice to open the liftglass.

Power Liftgate

Press twice to open or close the power liftgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps will flash and the horn will chirp 3 times.

Press and hold to activate the alarm.
Press again to cancel the alarm.



Remote Vehicle Start

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash (about 4 seconds) to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes.
- Remote Start can be extended once by repeating the remote start procedure.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.
- The heated/ventilated seats will turn on during a remote start (if selected in the Vehicle Settings menu) when outside temperatures warrant.

Note: If a key fob is left in the vehicle when locking the vehicle, the Remote Left in Vehicle Alert may sound. To program the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

KEYLESS ENTRY SYSTEM

The Keyless Entry System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To program the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start engine. The green indicator on the button will illuminate.



Note: If the RKE transmitter battery is weak, place the transmitter in the pocket in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

POWER FRONT SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment


Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.

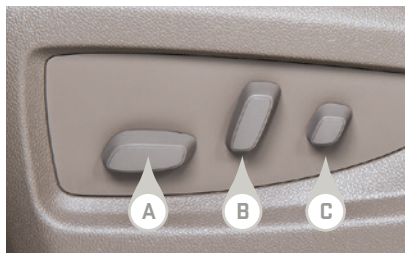

SET MEMORY POSITIONS

1. With the vehicle in Park and the ignition on, adjust the power driver's seat, power adjustable pedals, power outside mirrors, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until two beeps sound.
3. Repeat the steps using button **2** for a second driver.



SET EXIT POSITION

1. With the vehicle in Park and the ignition on, adjust the power driver's seat, power adjustable pedals, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button and then press and hold the  Exit button on the driver's door until two beeps sound.

RECALL POSITIONS

- Press and hold button **1** or **2** or the  Exit button until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

POWER FOLDING 2ND-ROW SEATS

1. Lower the head restraint, unbuckle the seat belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  **x2** button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.



UNFOLDING 2ND-ROW SEATS

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

POWER FOLDING/UNFOLDING 3RD-ROW SEATS

1. With the vehicle in Park, lower the head restraint, unbuckle the seat belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.



REAR SEAT REMINDER

When the vehicle is turned off, a chime may sound and a Rear Seat Reminder message may display on the Customizable Driver Display. The system does not actually detect people or items in the rear seat. It works by monitoring when a rear door is opened and closed, under certain conditions. The feature is active only once each time the vehicle is turned on and off. Always check the rear seat before exiting the vehicle.

- To turn the Rear Seat Reminder on or off, go to Settings > Rear Seat Reminder.

See Seats and Restraints in your Owner's Manual.

HANDS-FREE POWER PROGRAMMABLE LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the  **Power Liftgate** knob on the overhead console.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate latch to close the liftgate.

HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight in and out under the center of the rear bumper. Do not swing your foot side-to-side. The RKE transmitter must be within 3 feet of the liftgate.

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch for 3 seconds. The turn signals flash and a beep sounds when the setting is saved.



See Keys, Doors and Windows in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Rotate the band on the lever to activate the wipers.

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Rotate the band up for more frequent wipes or down for less frequent wipes.

 **AUTO – Rainsense™ On/Off**

Press to have the wipers operate automatically when moisture is detected on the windshield. Rotate the INT band to adjust the sensitivity setting.

OFF

 **Single Wipe**

 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.



REAR WIPER

Slide the switch to activate the rear wipers.

OFF

INT Intermittent

ON

See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS

- AUTO Driver's Temperature Control/Automatic Operation
- A/C/Air Conditioning Control/Recirculation Mode
- Vent Mode/Floor Mode
- Fan Speed Control/On/Off
- Defog Mode/Bi-level Mode
- Defrost Mode/Rear Window/Outside Mirror Defogger
- SYNC Passenger's Temperature Control/Link setting to driver's setting



- Driver's Heated/Ventilated Seat Buttons
- Rear Power Control
- AUTO Rear Automatic Operation
- Rear Fan Speed
- Rear Air Delivery
- Rear Temperature
- R CTRL Rear Control Lock-out
- Passenger's Heated/Ventilated Seat Buttons

AUTOMATIC OPERATION

1. Press **AUTO**.
2. Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, automatic operation is turned off.

SYNC TEMPERATURE SETTINGS

- Press **SYNC** to link the passenger's and rear climate temperature settings to the driver's setting. When the passenger's or rear climate setting is adjusted, the different temperature setting is displayed.

REAR CLIMATE CONTROLS

- Press the **Power** button to turn the rear climate controls on/off.
- Press the **R CTRL** button to lock out the rear controls. Rear climate control operation is controlled using the front controls.

CUSTOMIZABLE DRIVER DISPLAY

The Customizable Driver Display on the instrument cluster displays a variety of vehicle messages and system information.

Use the control pad on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Phone, Navigation, and Settings menus.

CONTROLS

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the △ or ▽ button to move through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.

CHANGING DISPLAY THEMES

The Customizable Driver Display features three display themes: Standard, Technology, and Media. The style of the display will change depending on the selected theme.

1. Use the control pad to display the Settings menu.
2. Select Display Theme.
3. Select the desired theme.

See Instruments and Controls in your Owner's Manual.



MULTI-COLOR HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image on the windshield. It cannot be adjusted side-to-side.

INFO

Press to select a display view.



Lift up or press down to brighten or dim the display. Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

LIGHTING

DOME LAMPS

OFF

Press to turn off the lamps at all times, even when a door is open.

DOOR

Press to have the lamps turn on automatically when a door is open.


ON

Press to turn on all dome lamps.

INSTRUMENT PANEL LIGHTING

Instrument Panel Brightness

Rotate the thumbwheel on the left side of the instrument panel to adjust the instrument panel lighting.

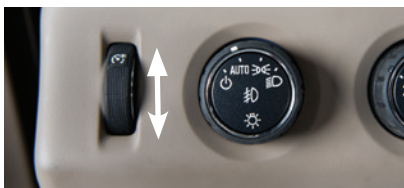

See Lighting in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the audio, Bluetooth or navigation system.

Press and hold to activate voice pass-thru or Siri® Eyes Free on a paired cell phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to display the current station or track. Press the top or bottom button again to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.

See your Infotainment System Manual.

8-INCH* GMC INFOTAINMENT SYSTEM WITH NAVIGATION

Refer to your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

8-INCH* GMC INFOTAINMENT SYSTEM WITH NAVIGATION

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. Press the  **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the  **Home** button to exit edit mode.

STORING FAVORITES

Up to 60 radio stations from all bands (AM, FM or SiriusXM[†]), media (song, artist, album, and genre with device connected to a USB port), phone contacts and navigation destinations can be stored in any order.

1. Select the desired radio station, media favorite, navigation destination or contact.
2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
4. Repeat the steps to store another favorite item.

► To change the number of favorites displayed, go to Settings > Radio.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
(Examples: "Call Amanda" or "Tune 99.5 FM." Say "Help" for assistance.)

APPS

In-vehicle apps — connecting to music, news, weather, travel information, sports, entertainment and more — are available for download to the radio through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

TEXT MESSAGE ALERTS

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the infotainment screen only when the vehicle is not moving.

- Touch  **Text** to view the text message inbox.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.gmc.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or use the **MENU** knob or the infotainment screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device. For full control of the device, connect it to a USB port.

See your Infotainment System Manual.

WIRELESS CHARGING

The Wireless Charging system for mobile devices is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.gmc.com/learn. See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the ⚡ charging symbol displays on the infotainment screen. If not charging, remove the device for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks.

Note: For more information on use and system limitations, visit my.gmc.com/learn.

See Instruments and Controls in your Owner's Manual.

APPLE CARPLAY™

Apple CarPlay capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Projection icon will change to Apple CarPlay. Touch the Apple CarPlay icon to have your apps displayed.

For more information, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

See your Infotainment System Manual.

ANDROID AUTO™

Android Auto capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Projection icon will change to Android Auto. Touch the Android Auto icon to have your apps displayed.

For more information, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/learn.

See your Infotainment System Manual.

TEEN DRIVER

Teen Driver Mode allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver Mode settings, or access the Report Card, go to Settings > Teen Driver.

See your Infotainment System Manual.

REAR SEAT ENTERTAINMENT SYSTEM♦

The system includes a Blu-ray/DVD/CD player, two USB ports, HDMI/MHL input, wireless digital headphones, a remote control, and two screens on XL models.

- Press the release button to open the video screen. Push up the screen when not in use. The screen turns on/off automatically.
- Use the remote control to select the same or a different source for each screen from the rear seats.
- To access the Rear Seat Entertainment controls from the front seat, select Video on the Home page.

♦ Optional equipment

See your Infotainment System Manual. 15

VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons.

CHANGING VEHICLE SETTINGS

The Vehicle Settings menu may include Climate and Air Quality, Collision/Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, and Remote Lock/Unlock/Start.

Use the **MENU** knob or the touch screen to:

1. Select **Settings** on the Home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **◀BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat pulses — left side, right side, or simultaneously — to alert the driver of the direction of potential hazards.

- Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- Press the  Collision Alert button on the left side of the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control—Advanced  following gap setting. The setting is displayed on the Customizable Driver Display.
- To set the Forward Collision Alert and Automatic Emergency Braking systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.



DRIVER ASSISTANCE SYSTEMS

AUTOMATIC EMERGENCY BRAKING – In potential front-end imminent collision situations with detected vehicles, the brakes may be applied, if you have not already done so, to help reduce damage or help avoid collisions at very low speeds with vehicles directly ahead. Automatic Emergency Braking works at speeds of 5–50 mph or, if also equipped with Adaptive Cruise Control–Advanced[◆], at speeds above 2 mph.

- ▶ To set the Automatic Emergency Braking and Forward Collision Alert systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ Press the  Lane Keep Assist button on the left side of the instrument panel to turn the system on or off.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph.

- ▶ To turn the Rear Vision Camera Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

REAR CROSS TRAFFIC ALERT – When the vehicle is in Reverse, the system warns of cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Customizable Driver Display and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or a continuous beep sounds (if selected).

- ▶ To turn the system on or off, press the  Park Assist button on the left side of the instrument panel.

See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing speed.

SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing speed.

Cancel

Press to cancel the Cruise Control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the Cruise Control.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL-ADVANCED♦

The system enhances regular Cruise Control to maintain a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

SELECTING THE FOLLOWING GAP

- ▶ Press the  **Following Gap** button on the left side of the steering wheel to set a following gap of Far, Medium or Near. This is also the Forward Collision Alert setting.

See Driving and Operating in your Owner's Manual.

ILLUMINATED POWER-RETRACTABLE ASSIST STEPS♦

The power assist steps lower automatically when a door is opened and retract after the doors are closed.

- ▶ With the ignition on and the vehicle in Park or with the vehicle running and in Neutral, press the  **Power Assist Steps** button on the left side of the instrument panel to deploy the steps for cleaning and car washes. Press the button again to retract the steps.
- ▶ With the ignition on and the vehicle in Park or Neutral, press and hold the  button for 4 seconds to lock/disable the steps or to unlock/enable the steps.

See Keys, Doors and Windows in your Owner's Manual.



TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the left side of the instrument panel to turn traction control off or on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

INTEGRATED TRAILER BRAKE CONTROL (ITBC)

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Customizable Driver Display.

- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.
- ▶ Squeeze the levers together (left lever does not move) on the control panel to manually apply the trailer brakes.



See Driving and Operating in your Owner's Manual.

TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the  **Tow/Haul Mode** button on the end of the shift lever to turn the system on or off.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR WITH TIRE FILL ALERT

The  **Low Tire Pressure** light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Customizable Driver Display.**

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid. Refer to your Owner's Manual for information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 General Motors. All rights reserved.



GENERAL MOTORS

84367256 A