

2020 **ALTIMA**

QUICK REFERENCE GUIDE



COCKPIT OVERVIEW



1

2

3

4

5

6

11



7

8

 
9

10

COCKPIT OVERVIEW

- 1** Low Tire Pressure Warning Light (!)
- 2** Vehicle Information Display
- 3** Headlight and Turn Signal Switch ☸
- 4** Wiper and Washer Switch
- 5** Steering Wheel Switches for Audio Control/ Navigation/
Vehicle Information Display
- 6** Cruise Control/Bluetooth®/
ProPilot Assist Switches
- 7** Steering Assist Switch 🌀
- 8** Trunk Release Switch 🚗
- 9** Instrument Brightness Control
- 10** Trip Computer Reset Switch
- 11** Tilt/Telescopic Steering Column

INSTRUMENT PANEL

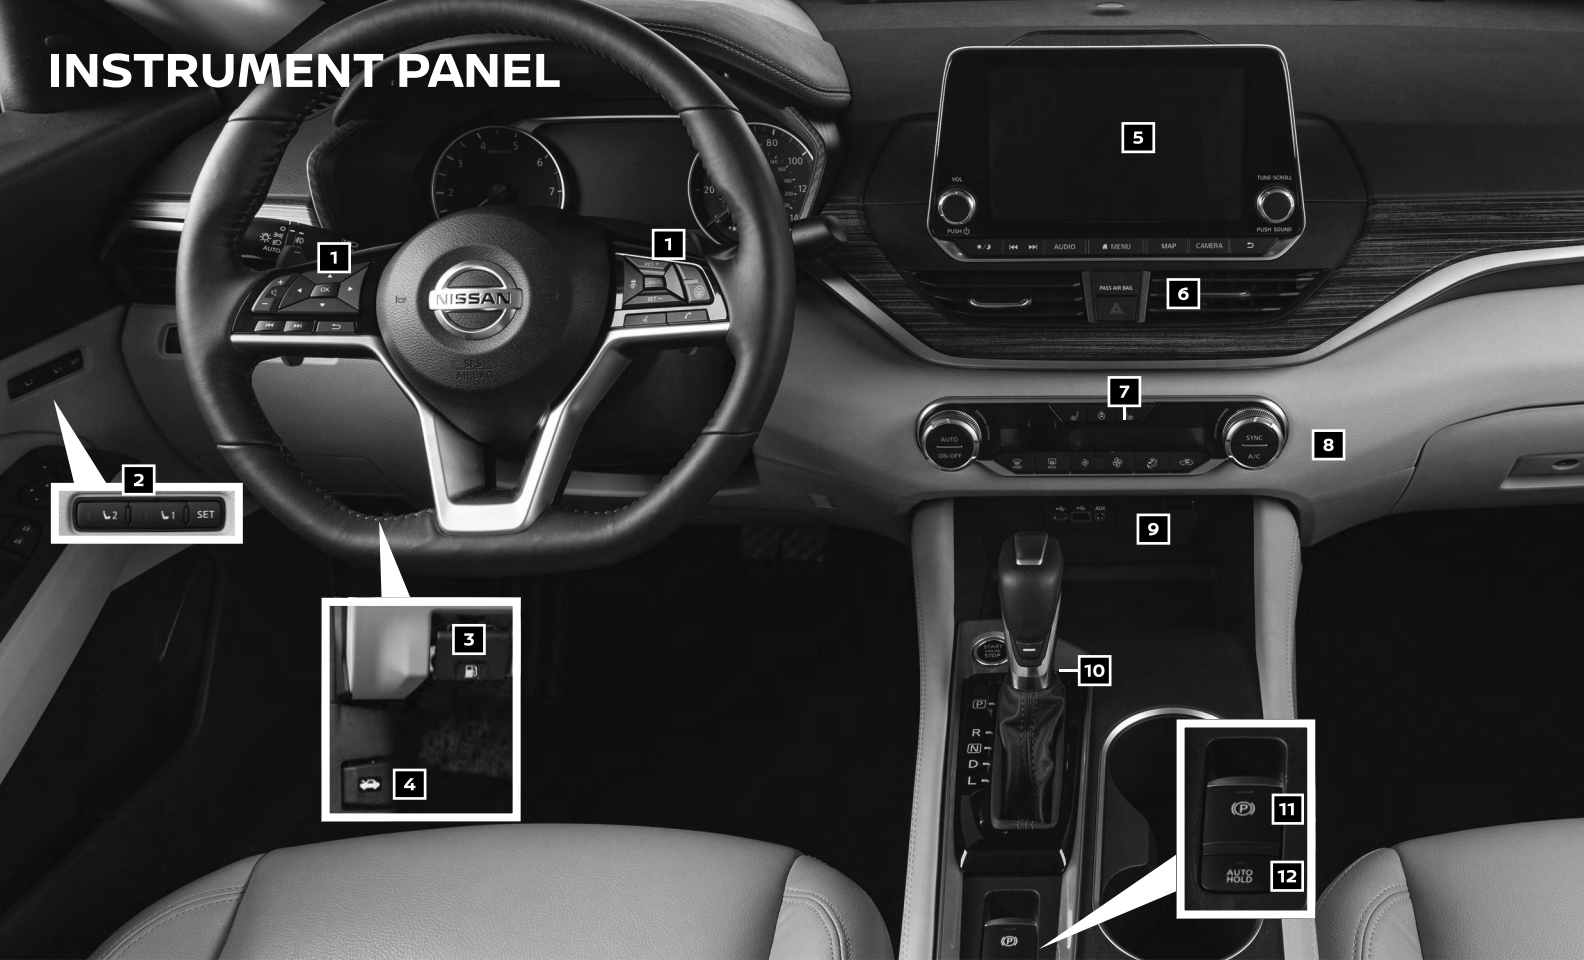

INSTRUMENT PANEL

- 1** Paddle Shifters
- 2** Automatic Drive Positioner
- 3** Fuel-filler Door Release 
- 4** Hood Release 
- 5** Control Panel Display Screen
- 6** Front Passenger Air Bag Status Light
- 7** Heated Seats /Steering Wheel Switch 
- 8** Heater and Air Conditioner (automatic)
- 9** USB Port/AUX Jack
- 10** Ds Button
- 11** Electronic Parking Brake Switch (P) 
- 12** Automatic Brake Hold

TABLE OF CONTENTS

GETTING STARTED

Nissan Intelligent Key® System	2
Seat Adjustments (if so equipped)	4
Automatic Drive Positioner (if so equipped)	4
Starting/Stopping the Engine	5
Tilt and Telescopic Steering Wheel	5
Outside Mirror Control Switch	6
Automatic Anti-Glare Rearview Mirror (if so equipped)	6
HomeLink® Universal Transceiver (if so equipped)	7
E-call (SOS) Button (if so equipped)	8
Heater and Air Conditioner (automatic) (if so equipped)	8
Heated Steering Wheel and Seats (if so equipped)	9
Headlight Control Switch	10
Wiper and Washer Switch	11
Sun Visors	12
Vehicle Information Display	12
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	13

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

Clock Set/Adjustment	15
USB (Universal Serial Bus) Connection Ports/AUX Jack and iPod® Interface	15
Bluetooth® Hands-free Phone System	16
• System Operating Tips	16
FM/AM/SiriusXM® Radio	18
Apple CarPlay®	19
Android Auto™	20
Navigation System (if so equipped)	21
NissanConnect® Services Powered by SiriusXM® (if so equipped)	22
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped)	24

DRIVING FEATURES

Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped)	25
ProPILOT Assist (if so equipped)	25
Intelligent Cruise Control (ICC) (for vehicles without ProPILOT Assist) (if so equipped)	28
Cruise Control (if so equipped)	29
Automatic Emergency Braking (AEB) (if so equipped)	30
Automatic Emergency Braking (AEB) with Pedestrian Detection System (if so equipped)	30
Traffic Sign Recognition (TSR) (if so equipped)	31
Rear Automatic Braking (RAB) (if so equipped)	31



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL*
(if so equipped)



- The Remote Engine Start operating range is approximately 200 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 10 minutes and then turn off.
 - You must wait at least 6 seconds before remotely starting the engine again.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two Remote Engine Starts, the ignition switch must be cycled before Remote Engine Start can be used again.
- To start driving, depress the brake pedal and push the ignition switch.

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the key fob.



- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 60 seconds; all other doors will unlock, or
 - Press the **1** button **4** on the key fob to unlock the driver's side door. Press the **1** button **4** again; all other doors will unlock.

TRUNK LID RELEASE

 
- To open the trunk, press and hold the trunk lid release  button **5** for more than 1 second.
- The trunk lid release button will not operate when the ignition switch is in the ON position.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press any button on the key fob to turn the panic alarm off, or press the door request switch if the key is in range.

INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **7** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery of the Intelligent Key is discharged and the indicator **8** appears in the vehicle information display, or if environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key near, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

GETTING STARTED

SEAT ADJUSTMENTS (if so equipped)

 
FRONT MANUAL SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



FRONT POWER SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the switch **3** forward or backward.
- To adjust the angle of the seatback, push the switch **4** forward or backward.

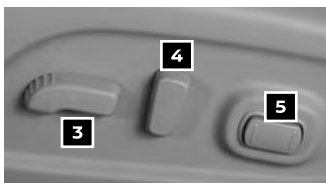

SEAT LIFTER (driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **3** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar area, push the front or rear end of the switch **5**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat and outside mirrors can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:
 - Unlock the vehicle with the desired Intelligent Key while the ignition is OFF.
 - Confirm the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the ON position.
 - Adjust the driver's seat and to the desired position using the seat adjustment switches for each feature.
 - Adjust the outside mirrors using the outside mirror control switch.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.



- The indicator light on the memory switch you select will illuminate for approximately 5 seconds and a beep will sound.
- The driver's seat and outside mirrors are now set to your preferences.

- These memorized positions can also be linked to your Nissan Intelligent Key®.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

TURNING THE ENGINE ON

- It is important to make sure the Nissan Intelligent Key® (if so equipped) is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the ON position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch to the OFF position.



AUTO ACCESSORY

- With the vehicle in the **P (PARK)** position, the Intelligent Key with you (that is, in your pocket or purse) and the ignition switch placed from ON to OFF, the radio can still be used for a period of time or until the driver's door is opened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



GETTING STARTED

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **1** right or left.
- To adjust the mirror angle, push the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, set the control switch **1** to the center (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

AUTOMATIC ANTI-GLARE REARVIEW MIRROR (if so equipped)

The inside mirror is designed so that it automatically dims during night-time conditions and according to the intensity of the headlights of the vehicle following you. The automatic anti-glare feature is activated when the ignition switch is in the ON position.



- The indicator light **1** will illuminate when the automatic anti-glare feature is operating.
- To turn off the anti-glare feature, press the **O** button on the rearview mirror. The indicator light will turn off.
- To turn on the anti-glare feature, press the **I** button on the rearview mirror. The indicator light will turn on.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- Place the ignition switch in the ON or ACC position (without starting the engine) when programming HomeLink.
- To program the HomeLink Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
 - At the receiver of the device that you are programing to the HomeLink system, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programing process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

GETTING STARTED

E-CALL (SOS) BUTTON (if so equipped)

- The E-call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the **SOS** button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call 855-426-6628.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.

2 SYNC BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **SYNC** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial to the left for cooler air or to the right for warmer air.

3 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature control **1** and fan speed control **6** to their maximum settings.

4 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

5 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

6 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

7 AIR FLOW CONTROL BUTTON

- Press the air flow control button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

9 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode , or foot and front defroster mode .

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HEATED STEERING WHEEL AND SEATS (if so equipped)

HEATED STEERING WHEEL (if so equipped)

- Push the  heated steering wheel switch **1**
- The heated steering wheel automatically turns on and off to maintain a temperature above 68°F (20°C).
- Push the switch to turn the heated steering off.
- If the temperature of the steering wheel is above 68°F (20°C), the system will not heat the wheel.



HEATED SEATS (if so equipped)

- Push the  or  heated seat switch **2** to heat the seats.

GETTING STARTED

- Two lights illuminated represent the high setting and one light represents the low setting.
- The heated seats turn on and off to maintain a temperature above 68°F (20°C).
- Push the switch to turn the heated seats off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch ON. To deactivate the autolight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn on the fog lights.
- Turn the switch (inside collar) to the OFF position to turn off the fog lights.



HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 16 mph (25 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **2** or select the low beam position by placing the lever in the neutral position.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

 
Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
- 1** Mist  – One sweep operation of the front wipers.
- 2** Intermittent  – Wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low  – Wipers operate at a continuous low-speed.
- 5** High  – Wipers operate at a continuous high-speed.
- 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

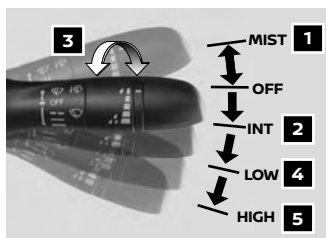

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Do-it-yourself (section 8)"** of your Owner's Manual.

GETTING STARTED

SUN VISORS

- Pull down the sun visor **1** to block glare from the front.
- Remove the sun visor from the center mount **2** by lifting it slightly and swing it to the side to block glare from the side window.
- Slide the sun visor out from the mount **3** to further extend the visor location.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Drive computer information
- Drive system warnings and settings (if so equipped)
- Audio information
- Fuel Economy
- Nissan Intelligent Key® operation information
- Cruise control information (if so equipped)
- ProPilot system information (if so equipped)
- Indicators and warnings
- Tire pressure information



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2**, the **▲** or **▼** buttons **3** and the **↺** button located on the steering wheel.

RESETTING THE DRIVE COMPUTER

1. Press the **▲** and **▼** buttons **3** on the steering wheel until you reach the desired drive computer mode.
2. Press and hold the **OK** button **2** to reset the selected mode.
3. Select one of the following items:
 - "Cancel" - returns to the previous screen without resetting.
 - Individual Value (varies according to the currently displayed drive computer mode):
 - "Distance"- resets the distance and time of the selected drive computer.
 - "Fuel Economy"- resets the average fuel economy of the selected drive computer.
 - "Speed"- resets the average speed of the selected drive computer.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To reset **TRIP A** or **TRIP B**, go to the desired mode by pressing the **TRIP RESET** button **4** and press and hold the **TRIP RESET** button **4** for more than 1 second.



The Settings menu allows you to change the information displayed in the vehicle information display such as:

- VDC Setting ■ Driver Assistance ■ Clock ■ Maintenance
- Unit/Language ■ TPMS Setting ■ Factory Reset
- Vehicle Settings ■ Customize Display ■ Key-Linked Settings

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) **3** may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.

GETTING STARTED

■ To use the Easy-Fill Tire Alert:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the ignition switch in the **ON** position. Do not start the engine.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**", the "**In case of emergency (section 6)**", the "**Do-it-yourself (section 8)**" and the "**Technical and consumer information (section 10)**" of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the  **MENU** button on the control panel.
 2. Touch the  Settings key on the Launch Bar.
 3. Touch the "Clock" key.
- Select "Set the clock manually" to manually adjust the time displayed
- Touch the  key **1** to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORTS/AUX JACK AND iPod® INTERFACE

- The USB ports/AUX jack **1** are located in the media pocket below the climate control system. The vehicle is equipped with both a standard and quick charge port.
- When a compatible USB memory device or iPod® is plugged into the USB port/AUX jack, compatible audio files stored on the device can be played through the vehicle's audio system.
- There are also USB charging ports located in the second row on the back of the center console **2**. These ports will charge compatible devices.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Audio System (section 3)" of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

 
 
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  or  button on the steering wheel, or  on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **-** or **+** on the steering wheel or turn the **VOLUME** control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

CONNECTING PROCEDURE

1. Select the  Settings key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New".

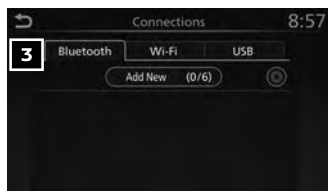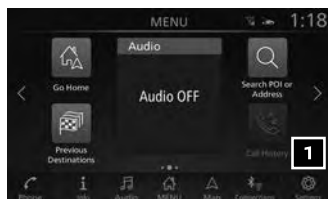

4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

VEHICLE PHONEBOOK

 
To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  key on the launch bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.



MAKING A CALL

1. Press the  button on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the options to make a call.

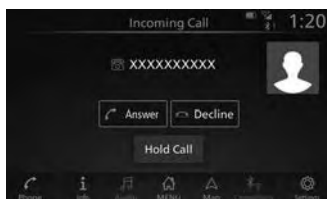

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen.

SWITCH TO HANDSET

- Start the call using Bluetooth hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS



FM/AM/SiriusXM® RADIO

Touch the Audio key on the Launch Bar to display the current audio source, and then touch the “Source” key to access the source selection screen.

1 PUSH (ON-OFF) BUTTON/VOL (volume) CONTROL KNOB

- Press the (ON-OFF) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 PUSH SOUND BUTTON/TUNE-SCROLL KNOB

- Press the **PUSH SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the Settings key on the Launch Bar and then touch the “Sound” key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 AUDIO (SOURCE) BUTTON

- Pressing this button will give access to the AM, FM, SXM, USB1, USB2, BT Audio or AUX audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the “AM” key, “FM” key, or “SXM” key, then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

 
 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Audio system (section 3)**” of your NissanConnect® Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “OK” then “Yes” to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  key **1** on the lower left corner of the Apple CarPlay screen.
- Press the  button on the steering wheel or touch the  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To return to the Apple CarPlay home screen after operation, touch the  key **1** on the lower left corner of the Apple CarPlay screen.
- To exit the Apple CarPlay screen, press the  MENU button, or touch the “Nissan” key **2** on the Apple CarPlay home screen.
- To return to the Apple CarPlay screen from the main menu:
 - Touch the  CarPlay key **3**, or
 - Touch the  Info key **4** on the Launch Bar, touch the “Apps” key, and then select the “Apple CarPlay” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

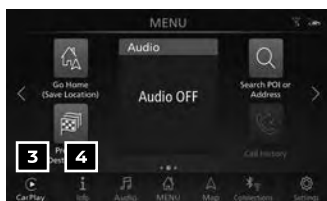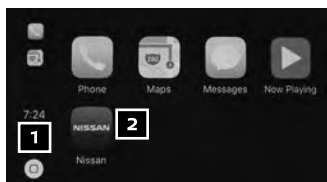

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

ANDROID AUTO™

 
- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "OK" to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, voice operation can be accessed. There are three ways to start voice operation:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the upper right corner of the Android Auto screen.
 3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto screen, press the  MENU button or touch the  key **3**, and select the "Return To Nissan" key on the Android Auto menu.
- To return to the Android Auto home screen from the main menu:
 - Touch the  key **4** on the Launch Bar, or
 - Touch the  Info key **5** on the Launch Bar, touch the "Apps" key, and then select the "Android Auto" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.

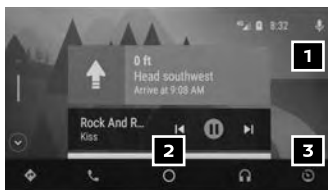

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle is not in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your NissanConnect® Owner's Manual.

1 Touch-screen

2 Map Menu - Touch to access different navigation options such as "Save Location", "Points of Interest", "Map Icons" and "Cancel Route".

3 "Add Home" - Use to set home location. After location is set, this icon will display "Go Home".

4 "POI" - Searches for a Points of Interest to set as a destination.

5 "Destination" - Displays the destination menu.

6 **Map** - Press to display the map.

7 Settings - Touch to display the system settings.

SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

■ Touch-screen Display

- Touch the "Destination" key on the Launch Bar and touch "Enter POI / Street Address". Enter a nearby location name or the street address of the desired location.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display

- Touch the "Points of Interest" key and then select one of the displayed options for choosing your destination.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation". Next, say "Nearby" or "POI by category". The system will give you the options available for setting a POI.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number or VIN. Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect® Owner's Manual.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.

- **Roadside Assistance**, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the  headset icon **1** on the map screen or by calling the Roadside Assistance provider directly.
- **Stolen Vehicle Locator**, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock**, for use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- **Remote Engine Start**, start your engine remotely using the NissanConnect Services companion app or website.
- **Alarm Notification**, this system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert**, review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Connected Search**, select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point of Interest (POI) search within a certain distance of the vehicle's location.
- **Valet Alert**, use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- **Curfew Alert**, specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.
- **Journey Planner**, a feature that allows you to send a route with a destination and up to five way points directly to the vehicle.
- **Boundary Alert**, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert**, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.



To access these features in your vehicle.

- Press the  **MENU** button **2** on the control panel.
- Touch the  **Info** key **3**.
- Touch the "NissanConnect Services" key **4**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Navigation (section 6)"** and the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

DRIVING FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- If the turn signal is turned on with a vehicle in the detection zone, there will be an audible alert and the indicator light will flash.
- The indicator **1** will illuminate after the ignition switch is placed in the ON position and the BSW system is enabled.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.



PROPILOT ASSIST (if so equipped)

ProPILOT Assist is a combination of Intelligent Cruise Control (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a "hands-on" driver assistance system and is intended for use on expressways/highways.

The driver must be prepared to steer and brake the vehicle at all times.

SETTING THE PROPILOT ASSIST SYSTEM

1. To set ProPILOT Assist, push the  switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.



DRIVING FEATURES

2. Push the **SET-** switch **2** when at the desired speed.
3. Push the distance switch **3** to select the following distance.

PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

- 4** Set vehicle speed indicator
 - Displays the speed set by the driver.
- 5** Steering Assist indicator
 - Shows whether Steering Assist is active or not (green-active, gray-standby).
- 6** Lane marker indicator
 - Appears green on display when lane lines are detected and Steering Assist is active.
- 7** ProPILOT Assist status indicator
 - Displays whether ProPILOT Assist is engaged or not.
- 8** Vehicle ahead detection indicator
 - Appears on the display when a vehicle is detected ahead.
- 9** Set distance indicator
 - Displays the selected distance set by driver.

CANCELING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
 - Push the **CANCEL** switch **10** on the steering wheel.
 - Tap the brake pedal.
 - Push the  switch **1**.

PROPILOT ICC

- ICC can be engaged when the vehicle speed is between 20 and 90 mph (32 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch **11** or **SET-** switch **2** and release it.
- When a vehicle is detected in the lane ahead, the ICC system controls the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- For more information, refer to the ICC section in this book.

VEHICLE AHEAD DECELERATES AND/OR STOPS

- The system will not detect a vehicle that is already stopped in the traveling lane before it enters the detection zone. The driver must control the vehicle to prevent a collision.
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and apply the brakes to keep the vehicle stopped.
- When the vehicle ahead accelerates, push and release the **RES+** switch **11** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.

- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.

STEERING ASSIST

- The Steering Assist system assists the steering operation to help keep the vehicle within the traveling lane.
 - Lane markers must be clear and consistent on both sides of the vehicle.
 - This feature will operate when vehicle speed is above 37 mph (60 km/h).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
- Steering Assist is cancelled or temporarily goes into standby mode under the following conditions:
 - The turn signals are activated.
 - Both hands are not detected on the steering wheel. To prevent standby mode, simply apply more pressure or a tighter grip on the steering wheel.
 - The wipers are in the HI speed position.
 - Steering Assist will not activate if the system does not detect lane markers.

- To turn off Steering Assist:
 - Push the  Steering Assist switch **12** on the instrument panel.



- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see Owner's Manual.
- If the driver lightly touches (instead of firmly gripping) the steering wheel, the steering torque sensor may not detect the driver's hand(s) on the wheel and a sequence of warnings may occur. When the driver holds and operates the steering wheel again, the warnings turn off.
- If the driver's hands remain off the steering wheel and the system remains on, the vehicle will eventually come to a stop.

ELECTRONIC PARKING BRAKE (if so equipped)

- To apply the parking brake, pull the  electronic parking brake switch **13**, located below the center console. The electronic parking brake indicator light **14** will illuminate red when applied.

DRIVING FEATURES

- To release the parking brake, with the ignition switch in the ON position and while the electronic parking brake indicator **14** is illuminated red, depress the brake pedal and push the (P) parking brake switch **13** down. The electronic parking brake indicator light **14** will turn off.



AUTOMATIC BRAKE HOLD (if so equipped)

- Automatic Brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the **AUTO HOLD** switch **15** to activate the automatic brake hold function. The indicator light will illuminate.
- To use the automatic brake hold function, the following conditions need to be met:
 - The driver's seat belt is fastened.
 - The electronic parking brake is released.
 - The shift lever is not in the **P (PARK)** position.
 - The vehicle is not parked on a steep hill.
- To cancel the automatic brake hold function push the **AUTO HOLD** switch **15**. To deactivate while the brake force has been maintained, depress the brake pedal and push the **AUTO HOLD** switch **15**.

SWITCHING TO CONVENTIONAL CRUISE CONTROL

- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist  switch **1** for longer than approximately 1.5 seconds.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", "Starting and driving (section 5)", "Technical and consumer information (section 10)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (for vehicles without ProPILOT Assist) (if so equipped)


VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the ICC switch **1** on the steering wheel. The ICC indicators **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  distance switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.

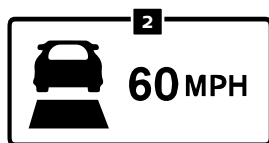

- This indicator **5** indicates the ICC system status depending on a color:

 - ICC system ON indicator (gray): Indicates that the ICC switch is on.
- ICC system SET indicator (green): Indicates that the cruising speed is set.
- ICC system warning (yellow): Indicates that there is a malfunction in the ICC system.

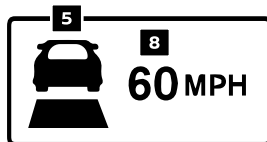

- To reset at a faster cruising speed, push and hold the **RES+** switch **6** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **7** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **8** will extinguish.
- To turn off ICC, push the ICC switch **1** on the steering wheel. The ICC indicators **2** in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the  cruise control switch **1** on the steering wheel. The  indicator will appear in the instrument panel.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the  cruise control switch **1** on the steering wheel. The  indicator in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

DRIVING FEATURES

AUTOMATIC EMERGENCY BRAKING (AEB) (if so equipped)

- The AEB system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator **1** will illuminate. If the driver applies the brakes after the warning and the AEB system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the AEB system will issue a second visual warning **2**, an audible warning and also apply partial braking.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM (if so equipped)

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the vehicle ahead detection indicator **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)

The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror and displays the detected signs in the vehicle information display **1**.

- To turn the TSR system on and off:
 1. Press the ◀▶ buttons until "Settings" displays in the vehicle information display and press the **OK** button. Use the ▲▼ buttons to select "Driver Assistance," then press the **OK** button.
 2. Select "Speed Limit Sign" and press the **OK** button to turn the system ON or OFF.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



REAR AUTOMATIC BRAKING (RAB) (if so equipped)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system indicator light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Around View Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING the RAB SYSTEM ON/OFF

1. Press the ◀▶ buttons until "Settings" displays in the vehicle information display. Use the ▲▼ buttons to select "Driver Assistance", then press the **OK** button.
2. Select "Emergency Brake" and press the **OK** button.
3. To set the RAB system to on or off, use the **OK** button to check the box for "Rear".



When the RAB system is turned off, the RAB system warning light **1** illuminates.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- **www.NissanUSA.com/bluetooth**
- **www.NissanUSA.com/connect**
- **www.youtube.com/user/NissanUSA**
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)



To view detailed instructional videos,
go to **www.nissanquickguide.com/2020/altima**
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at **<https://owners.nissanusa.com/nowners/navigation/manualsGuide>**. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

