

# 2020 **ARMADA**

## QUICK REFERENCE GUIDE



# COCKPIT OVERVIEW



2

4

3

1

5

6

7

8

9

10

 
11

12

# COCKPIT OVERVIEW

- 1** Headlight and Turn Signal Switch
- 2** Instrument Brightness Control
- 3** Vehicle Information Display
- 4** Low Tire Pressure Warning Light 
- 5** Wiper and Washer Switch
- 6** Bluetooth® / Audio Control / Vehicle Information Display Switch
- 7** Cruise Control / Dynamic Driver Assistance Switch 
- 8** Power Liftgate Switch 
- 9** Heated Steering Wheel Switch 
- 10** Warning Systems Switch 
- 11** Rear Door Alert Switch 
- 12** Power Liftgate Switch

# INSTRUMENT PANEL

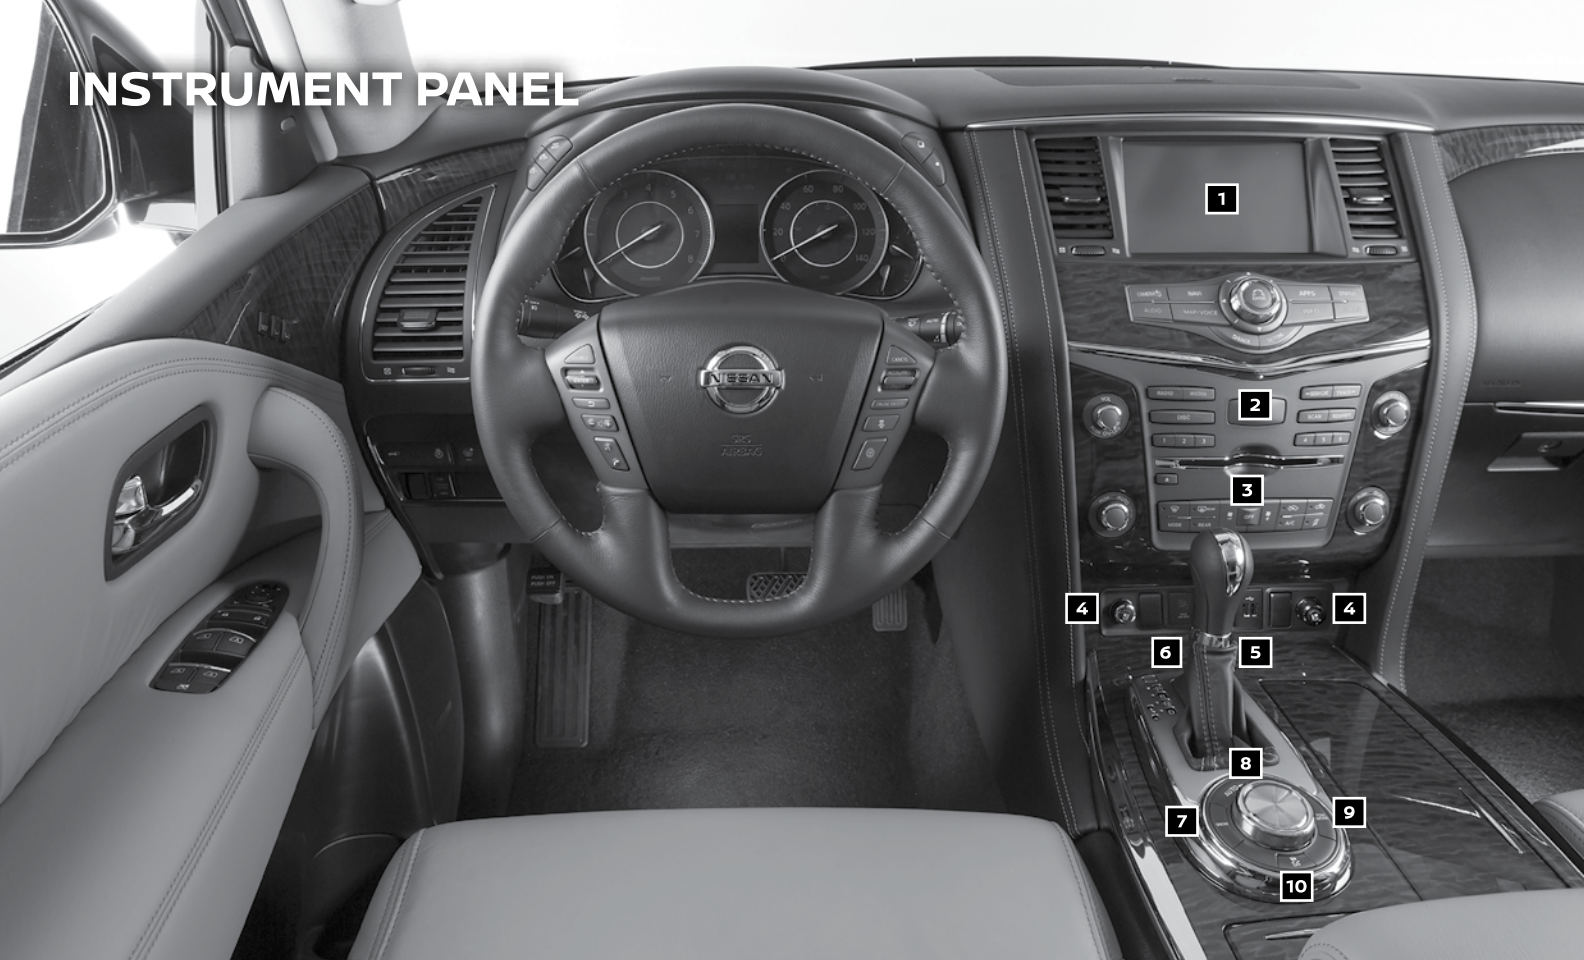

# INSTRUMENT PANEL

- 1** Center Display
- 2** Audio System
- 3** Heater and Air Conditioner (automatic)
- 4** Climate-Controlled Seat Switch 
- 5** USB Port
- 6** Front Passenger Air Bag Status Light
- 7** Snow Mode Switch
- 8** 4WD Shift Switch
- 9** Tow Mode Switch
- 10** Vehicle Dynamic Control (VDC) OFF Switch 

# TABLE OF CONTENTS

## GETTING STARTED

|                                                                        |    |
|------------------------------------------------------------------------|----|
| Nissan Intelligent Key® System .....                                   | 2  |
| Power Front Seat Adjustments .....                                     | 3  |
| 2nd Row Seat Adjustments (if so equipped) .....                        | 4  |
| 3rd Row Power Folding Seats (if so equipped) .....                     | 4  |
| Rear Door Alert .....                                                  | 5  |
| Automatic Drive Positioner (if so equipped) .....                      | 6  |
| Starting/Stopping the Engine .....                                     | 6  |
| Outside Mirror Control Switch .....                                    | 7  |
| Homelink® Universal Transceiver .....                                  | 7  |
| E-Call (SOS) Button .....                                              | 8  |
| Heater and Air Conditioner (automatic) (if so equipped) .....          | 9  |
| Rear Heater and Air Conditioner .....                                  | 11 |
| Headlight Control Switch .....                                         | 11 |
| Wiper and Washer Switch .....                                          | 13 |
| Vehicle Information Display .....                                      | 13 |
| Intelligent Rear View Mirror (if so equipped) .....                    | 14 |
| Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert ..... | 15 |
| Fuel-filler Door .....                                                 | 16 |
| Loose Fuel Cap .....                                                   | 16 |
| Power Liftgate Release (if so equipped) .....                          | 16 |
| Power Moonroof (if so equipped) .....                                  | 17 |
| Power Outlets .....                                                    | 17 |

## AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

|                                                                      |    |
|----------------------------------------------------------------------|----|
| Clock Set/Adjustment .....                                           | 18 |
| USB (Universal Serial Bus) Connection Port and iPod® Interface ..... | 18 |
| Bluetooth® Hands-free Phone System .....                             | 18 |
| • System Operating Tips .....                                        | 18 |
| FM/AM/SiriusXM®/HD Radio® with CD/DVD Player .....                   | 21 |
| Navigation System .....                                              | 23 |
| NissanConnect® Services Powered by SiriusXM® .....                   | 24 |
| SiriusXM® Traffic (if so equipped) and SiriusXM® Travel Link .....   | 26 |
| Hands-free Text Messaging Assistant .....                            | 26 |
| Bluetooth® Streaming Audio .....                                     | 27 |
| DVD Entertainment System (if so equipped) .....                      | 28 |

## DRIVING FEATURES

|                                                                                              |    |
|----------------------------------------------------------------------------------------------|----|
| Blind Spot Warning (BSW) (if so equipped) .....                                              | 30 |
| Intelligent Cruise Control (ICC) .....                                                       | 30 |
| Automatic Emergency Braking (AEB) .....                                                      | 31 |
| Intelligent Around View Monitor (if so equipped) .....                                       | 31 |
| Hill Start Assist .....                                                                      | 34 |
| Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI) (if so equipped) ..... | 34 |
| Intelligent Forward Collision Warning (I-FCW) .....                                          | 35 |
| Intelligent Back-up Intervention (I-BI) (if so equipped) .....                               | 35 |



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

# GETTING STARTED

## NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® System allows you to lock or unlock the vehicle, open the liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

### REMOTE ENGINE START\* (if so equipped)

- The remote engine start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter due to environmental conditions or obstacles between you and the vehicle.
- For the remote engine start to function, the vehicle must be in the **P (Park)** position with the ignition off and all the doors closed and locked.
- To start your vehicle remotely:
  1. Press the  button **1**.
  2. Within 5 seconds, press and hold the remote engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the last used mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
  - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and push the ignition switch.



### LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 30 seconds; all other doors will unlock, or
  - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again; all other doors will unlock.
- To open the liftgate, press the  button **5** for more than 1 second.
  - While liftgate is in motion, the request switch on door handles are disabled. To unlock or lock door, use key fob buttons.



- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

#### INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Move the shift lever to the **P (Park)** position.
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
  4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

\*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

---

## POWER FRONT SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.



#### SEAT LIFTER

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

#### POWER LUMBAR SUPPORT

- To adjust the lumbar area, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

# GETTING STARTED

## 2<sup>ND</sup> ROW SEAT ADJUSTMENTS (if so equipped)

- To recline the seatback, pull up on the recline handle **1** or the seatback latch **2** located on the upper corner of the seatback and lean back. To bring the seatback forward, pull the handle up and lean your body forward. Release the handle to lock the seatback in position.



### TIP UP FOR EASY ENTRY/EXIT OF THE 3<sup>RD</sup> ROW

1. Raise the armrest (captain's chairs) so it is parallel to the seatback and in the stowed position.
2. Then lift the recline handle **1** or the seatback latch **2** and fold the seatback forward onto the seat base.
3. Finally, lift the lower corner of the seat base and fold the seat forward.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.



## 3<sup>RD</sup> ROW POWER FOLDING SEATS (if so equipped)

- Before operating the 3<sup>RD</sup> row seats:
  - Make sure the 2<sup>ND</sup> row seatback is not reclined.
  - Lower the 3<sup>RD</sup> row headrest to the full down position.
  - Disconnect and secure the center seat belt and tongue into the retractor base. Always reconnect the center seat belt when the seat is returned to the upright position.
  - Make sure that there are no objects on the seatback cushion.
- The 3<sup>RD</sup> row power folding seat controls are located on the rear quarter trim panel behind the 3<sup>RD</sup> row seats (on the passenger's side) **1**.
- To fold down the 3<sup>RD</sup> row seats, push and hold the left portion of the switch.
- To raise the 3<sup>RD</sup> row seats, push and hold the right portion of the switch.



- If the ignition switch is in the OFF position, the power folding seats are always operational.
- If the ignition switch is in the ON position, the power folding seats are only operational when the shift lever is in the **P (Park)** or **N (Neutral)** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

## REAR DOOR ALERT

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being driven.

TO TURN THE REAR DOOR ALERT SYSTEM ON:

- Push the Rear Door Alert switch **1**. The Rear Door Alert switch indicator light **2** will illuminate.



TO TURN THE REAR DOOR ALERT SYSTEM OFF:

- Push the Rear Door Alert Switch **1** again. The Rear Door Alert Switch Indicator light will go off.

TO DISABLE THE REAR DOOR ALERT SYSTEM:

- When the vehicle is in the **P (Park)** position, a message will appear in the vehicle information display **3**. The options "DISMISS MESSAGE" or "DISABLE ALERT" will be listed.



- Push the  switch **4** to toggle between "DISMISS MESSAGE" and "DISABLE ALERT".
- Push the  switch **5** to select your option:

- Select "DISMISS MESSAGE" to clear the display. If no selection is made, the message turns off after a period of time.
- Select "DISABLE ALERT" to disable the horn alert for the remainder of the current trip.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety—Seats, seat belts and supplemental restraint system (section 1)**" and the "**Instruments and controls (section 2)**" of your Owner's Manual.

# GETTING STARTED

## AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, steering wheel and outside mirrors can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:
  - Confirm the shift lever is in the **P (Park)** position.
  - Place the ignition switch in the ON position.
  - Adjust the driver's seat, steering wheel and outside mirrors to the desired positions using the adjusting switches for each feature.
  - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
  - The indicator light on the memory switch you select will illuminate for approximately 5 seconds and a buzzer will sound.
  - The driver's seat, steering wheel and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®.
- To link a memorized position to your Nissan Intelligent Key, press the unlock button on the key fob after completing the previous step.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

---

## STARTING/STOPPING THE ENGINE

### TURNING THE ENGINE ON

- Depress the brake pedal.
- Push the ignition switch.

### TURNING THE ENGINE OFF

- Move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.



## OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, slide the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the control switch **1** to the center (neutral) position.



## POWER FOLDING OUTSIDE MIRRORS

- To fold the mirrors, push the CLOSE switch **3**.
- To unfold the mirrors, push the OPEN switch **4**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

### TYPE A (IF SO EQUIPPED)

- To program the HomeLink Universal Transceiver Type A (if so equipped):
  - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.

### TYPE B (IF SO EQUIPPED)

- To program the HomeLink Universal Transceiver Type B (if so equipped):
  - Press and release the desired HomeLink button. The indicator light will flash in orange and "TRAINING" will be displayed on the mirror.

# GETTING STARTED

- Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
- While the indicator light is flashing in orange, press and hold the hand-held transmitter button. DO NOT release until the HomeLink indicator light changes from orange to green and "TRAINED" is displayed on the mirror. When the indicator light illuminates in green, the hand-held transmitter button may be released.

## VERIFYING HOMELINK PROGRAMING

- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
  - At the receiver of the device that you are programing to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programing process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, and the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.

## E-CALL (SOS) BUTTON

- The E-Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of emergency.
- To use this feature, press the **SOS** button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) or call **855-426-6628**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, and the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.



## HEATER AND AIR CONDITIONER (automatic) (if so equipped)

### 1 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- Press the **AUTO** button, and the system will automatically control air flow distribution and fan speed to achieve and maintain the temperature setting (automatic cooling and/or dehumidified heating).
- Turn the driver's side temperature control dial to set your desired temperature.
- Automatic mode may be used year-round and will work to reach a comfortable temperature quickly. For example, on a very hot day, the system will initially operate at maximum air flow for rapid cool down.

### 2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side control by turning the passenger's side control.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

### 3 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually decrease the fan speed  or increase the fan speed .

### 4 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

### 5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **1** to set the desired temperature.
- To set the front defroster on high, press the fan speed control button  to increase the fan speed to the maximum setting.

# GETTING STARTED

## 6 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- Push the rear window and outside mirror defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

## 7 OUTSIDE AIR CIRCULATION BUTTON

- Press the outside air circulation button  **7** to draw outside air into the passenger compartment.

## 8 AIR RECIRCULATION BUTTON

- Press the air recirculation button  **8** to recirculate interior air inside the vehicle.
- The air recirculation mode cannot be activated when the air conditioner is in the front defroster mode.
- This mode helps to adjust the inside vehicle temperature more effectively.
- To automatically control air intake inside the vehicle, press and hold either the outside air circulation button  **7** or the air recirculation button  **8** (whichever indicator light is illuminated). Both of the indicator lights will flash twice, and then the air intake will switch to automatic control.



## 9 UPPER VENT BUTTON

- When the upper vent button  is pressed, the air flow against the driver's or passenger's upper body becomes gentle. The indicator light on the button will illuminate.
- In this mode, air from the upper vent flows to control the cabin temperature without blowing air directly on the occupants.

## 10 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.
- When on, the A/C system cools the air and removes humidity to help prevent window fogging.

## 11 REAR BUTTON

- This button will allow the front controls to operate the front or rear climate control systems.
- To operate the rear climate control system from the front, press the **REAR** button so that the light illuminates and the "Rear Climate" screen is displayed.
- To adjust the front climate control system, press the **REAR** button again.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instrument and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

## REAR HEATER AND AIR CONDITIONER

- To activate the system:

1. Press the **REAR** button **1** on the front control panel until the "Rear Climate" screen is displayed.

- The indicator light will illuminate.
- The fan speed, temperature, **AUTO** and **OFF** buttons will now control the rear climate control system.



 
2. Press the **REAR** button **1** again, and the screen will return to what was previously displayed.

- The indicator light will stay illuminated to indicate that the rear climate control system is active.

- **OFF** button **2** — Turns off the rear climate control system and **REAR** button indicator light.

- Fan speed control buttons **3** — Press **+** or **-** to increase or decrease fan speed.

- Temperature increase and decrease buttons **4** — Adjusts the rear temperature up **▲** or down **▼**.

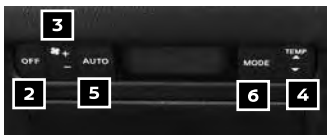

- **AUTO** button **5** — The system automatically works to keep air flow and fan speed at a constant temperature.

- **MODE** button **6** — Changes the air flow mode. The air flow modes are:

-  The air outlet is fixed at foot level.
-  The air outlet is fixed at the head and foot level.
-  The air outlet is fixed at the head level.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



# GETTING STARTED

## AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position, **1** or **2** position **2**.

## HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or **2** position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light **3** will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



## FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams **2** selected for the fog lights to operate.
- Turn the switch (inside collar) to the **ON** position **6** to turn on the fog lights.
- Turn the switch (inside collar) to the **OFF** position to turn off fog lights.

## LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

## WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the front wipers.
- 2** Auto (**AUTO**) (if so equipped) – Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper sensitivity.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Front washer  – Pull the lever toward you to activate the front washer. The front wipers will operate several times.

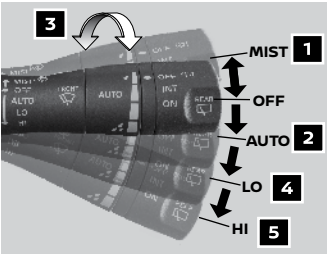

### REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Rear washer  – Push the lever forward to activate the rear washer. The rear wiper will operate several times.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

## VEHICLE INFORMATION DISPLAY

- The vehicle information display **1** is located to the left of the speedometer.
- Press the  button **2** located to the right of the instrument panel to toggle through the following modes:
  - Average MPG – Displays the instant fuel economy since the last reset.
  - Real Time MPG / MPH – Displays estimated average fuel economy and average vehicle speed.
  - Drive TIME / Distance Traveled – Displays the current drive time and distance traveled since the last reset.

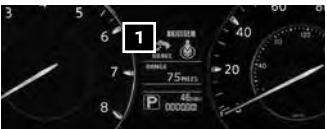


# GETTING STARTED

- **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
  - **OUTSIDE TEMP** – Displays the current outside temperature.
  - **SETTING** – Displays all available display and system settings.
  - **WARNING** – Displays when a warning is present.
- To enter the highlighted menu, press the **○** button **3**.
  - To reset TRIP A or TRIP B, go to the desired mode by pressing the **TRIP RESET** button **4** and press and hold the **TRIP RESET** button **4** for more than 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

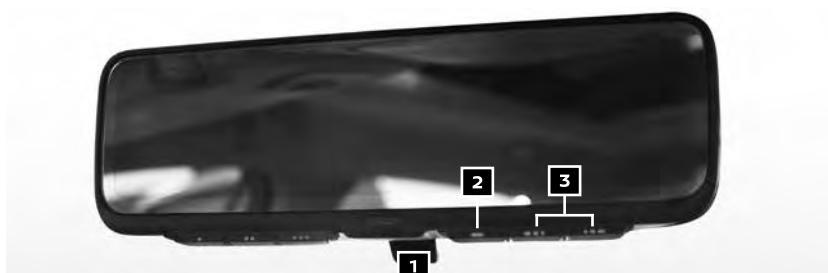

## INTELLIGENT REAR VIEW MIRROR (if so equipped)

- The Intelligent Rear View Mirror provides a clear rear view from a camera located on the rear of the vehicle. Intelligent Rear View Mirror has two modes: conventional rearview mirror mode and Intelligent Rear View Mirror mode (camera view mode). You can switch between these two modes by the mode select lever **1**.
- When the Intelligent Rear View Mirror mode is on, the settings menu can be selected by pressing the menu button **2**.
- Press the adjustment buttons **3** to adjust the following settings:
  - Brightness
  - Down/Up
  - Language
  - Indication
  - Rotation
  - Dimming Mirror

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **CHECK TIRE PRESSURE** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

### EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
  1. Move the shift lever to the **P (Park)** position and apply the parking brake.
  2. Place the ignition switch in the **ON** position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
  5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**", the "**In case of emergency (section 6)**", the "**Do-it-yourself (section 8)**" and the "**Technical and consumer information (section 10)**" of your Owner's Manual.

# GETTING STARTED

## FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, press on the fuel-filler door then pull the lid open. The doors must be unlocked.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

## LOOSE FUEL CAP

- A **Loose Fuel Cap** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the  button **2** is pressed for longer than one second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

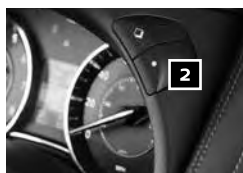

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

## POWER LIFTGATE RELEASE (if so equipped)

When the liftgate is closed, the liftgate will fully open automatically by:

- Pushing the power liftgate switch **1** on the instrument panel.
- Pulling the liftgate opener switch **2** once the vehicle is unlocked.
- Pressing the  button **3** on the key fob for more than 1 second.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

## POWER MOONROOF (if so equipped)

### OPENING/CLOSING THE MOONROOF

- To fully open or close the moonroof, push the open **1** or close **2** side of the switch and release it. The roof will automatically open or close; it need not be held.

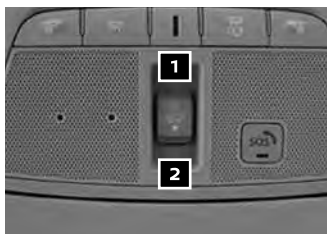

### TILTING THE MOONROOF

- To tilt up, first close the moonroof, then push the close **2** side of the switch and release it; it need not be held. To tilt down the moonroof, push the open **1** side of the switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

## POWER OUTLETS

- The power outlets are used for powering electrical accessories such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- Power outlets are located on the control panel **1**, on the rear of the center console **2**, and in the cargo area **3**.
- To use a power outlet, open the cap or pull out the plug cover.
- The power outlets are powered only when the ignition switch is in the ACC or ON position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

 
# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## CLOCK SET/ADJUSTMENT

■ To adjust the time and the appearance of the clock on the display:

1. Press the **SETTING** button on the control panel.
2. Touch the **"Clock"** key.

■ Press the **↩ BACK** button to return to the previous screen.

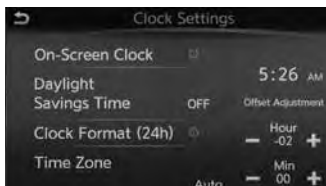

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual and the **"Getting Started (section 2)"** of your NissanConnect® Owner's Manual.

## USB (Universal Serial Bus) CONNECTION PORT AND IPOD® INTERFACE

- The USB port **1** is located on the control panel.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio files stored on the device can be played through the vehicle's audio system.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual and **"Audio System (section 3)"** of your NissanConnect® Owner's Manual.

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

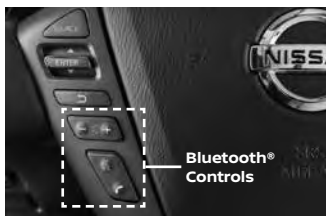

### SYSTEM OPERATING TIPS

- Press the **📞** button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
  - This system has an Alternate Command Mode setting that allows the total number and length of prompts to be reduced. When the Alternate Command Mode is activated,



To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

 
 
you may speak second level commands with the main menu command. For example, press the  button on the steering wheel, and after the tone, say "Call" followed by a stored name. Refer to the "Voice Recognition (section 9)" of your NissanConnect® Owner's Manual.



- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  button on the steering wheel.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

#### CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
  1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
  2. Touch the "Connect Device" key.
  3. Touch the "Add New (x/5) Free" key.
  4. The "Connect Device" screen will display.
  5. Initiate connecting from the cellular phone.
    - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

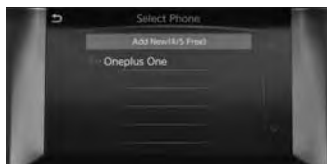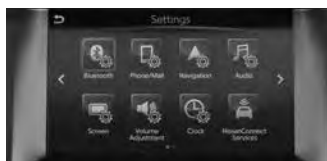


# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- If prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
  - For cellular phones that support SSP (Simple Secure Pairing), confirm that the PIN on the vehicle display under "Security Code" matches the PIN displayed on the cellular phone.
6. When connecting is complete, the screen will return to the "Phone" screen.



## PHONEBOOK

 
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 2,000 entries.
- To manually download entries:
  1. Press the **SETTING** button.
  2. Touch "Phone/Mail".
  3. Touch "Phone Settings".
  4. Touch "Phonebook/Favorites Settings".
  5. Touch "Manual Phonebook Transfer".
  - This will start downloading up to 2,000 entries from the cellular phone.

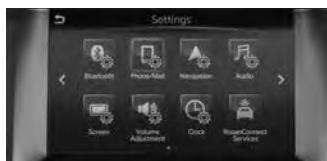

## MAKING A CALL


To make a call, follow this procedure:

 1. Press the  button on the steering wheel.  
The Phone menu will appear on the control panel display.
2. Touch the "Favorites," "Call History," "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the  key is selected.

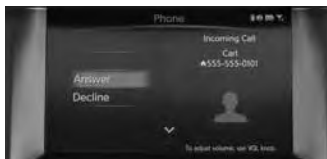

## RECEIVING/ENDING A CALL

 - To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To decline the call, touch the "Decline" key.
- To hang up, press the  button on the steering wheel or touch the "Hang up" key.

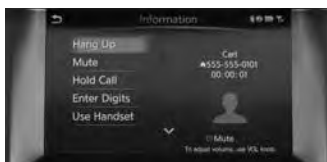

## SWITCH TO HANDSET

- Start the call using Bluetooth hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

\*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

For more information, refer to the "Bluetooth® Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).



## FM/AM/SiriusXM®/HD RADIO® WITH CD/DVD PLAYER

### 1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## 2 AUDIO BUTTON/TUNE/FOLDER KNOB

- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

## 3 SEEK-CAT AND TRACK BUTTONS

 
- To scan quickly and stop at the previous or next broadcast station, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button.
- For satellite radio, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button.
- To rewind or fast forward a track on a CD, press and hold the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button.

## 4 STATION PRESET BUTTONS

- Six stations can be set for the AM band, 12 for the FM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **RADIO** button **5** or **MEDIA** button **6** then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station preset button (**1-6**) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then come on, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and "**Audio System (section 3)**" of your NissanConnect® Owner's Manual.

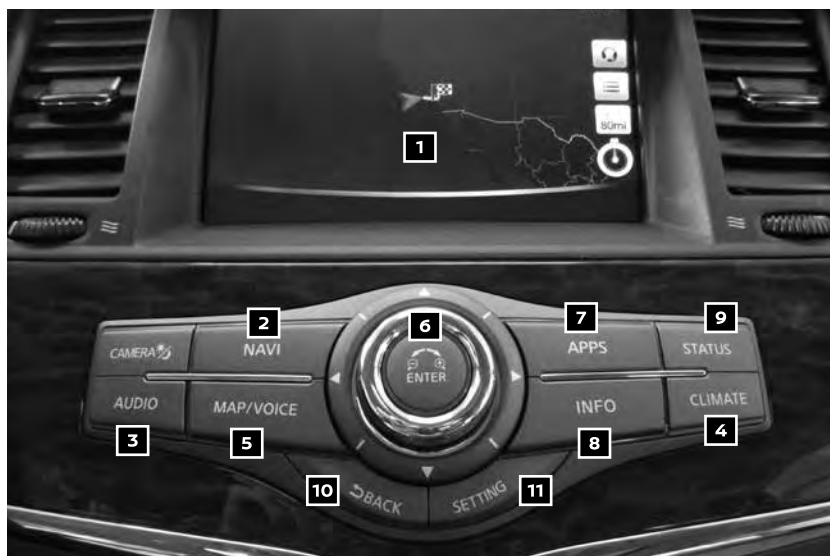

## NAVIGATION SYSTEM

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions.

- 1** Touch-screen display
- 2** Navigation (**NAVI**) – When a route is not set, push to display the destination menu screen.
- 3** **AUDIO** – Push to operate the audio system.
- 4** **CLIMATE** – Push to display the screen for air conditioner operations.
- 5** **MAP/VOICE** – Push to display the current location map screen. Push and hold to repeat the voice guidance for a guide point.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## 6 Multi-Function Controller

- a. **ENTER** button – Press to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
- b. Main directional buttons – Press to move across the map, highlight an item on the screen or adjust a setting.
- c. Additional directional buttons – Press to move across the map or highlight an item on the character input screen.
- d. Center dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.

## 7 APPS – Push to display the available Apps.

## 8 INFO – Push to display the information menu.

## 9 STATUS – Push to display the current setting of the vehicle information, air conditioner and audio system.

## 10 BACK – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.

## 11 SETTING – Push to access the system settings.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

---

## NISSANCONNECT® SERVICES POWERED by SiriusXM®

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)** or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect® Owner's Manual.

- Scheduled Maintenance Notification, your NissanConnect system generates a monthly Vehicle Health Report. Based on the mileage data, contained in that report, you'll automatically be notified when your next service appointment is due.

- Automatic Collision Notification, a service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Roadside Assistance, which dispatches roadside assistance to the vehicle's location in non-emergency situations. Roadside Assistance can be accessed by touching the  headset icon **1** on the map screen, via NissanConnect Services Companion app or by calling the Roadside Assistance provider directly.
- Stolen Vehicle Locator, a service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock, for use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start, start your engine remotely using the NissanConnect Services companion app or website.
- Assisted Search, a feature that allows you to verbally request point-of-interest or destination data from a live operator by touching the  headset icon **1** on the map screen.
- Journey Planner, with which you can send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert, a feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert, which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification, this system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert, receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search, select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle's location.
- Valet Alert, use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.



# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- Curfew Alert, specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Press the **APPS** button **2** on the control panel, then
- Touch the "NissanConnect Services" key **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



## SiriusXM® TRAFFIC (if so equipped) AND SiriusXM® TRAVEL LINK

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- Press the **INFO** button to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



## HANDS-FREE TEXT MESSAGING ASSISTANT\*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.



To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

 
\*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Bluetooth® Hands-free phone (section 4)**" of your NissanConnect® Owner's Manual.

## BLUETOOTH® STREAMING AUDIO\*

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
  1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
  2. Select the "Connect Device" key.
  3. Select the "Add New (X/5) Free" key.
  4. The "Connect Device" screen will display.
  5. Initiate connecting from the device.

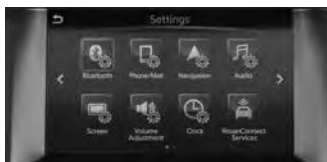

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- Once your Bluetooth® device has been connected as an audio device:
  - Press the **MEDIA** button on the control panel.
  - Select the “Source” key.
  - Select the “Bluetooth Audio” key.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.



\*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Audio system (section 3)**” of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## DVD ENTERTAINMENT SYSTEM (if so equipped)

- With this entertainment system, you can play video files via a DVD or CD, providing images and sound both from the front and rear display screens.

### WATCHING A DVD

1. Insert a DVD into the DVD slot **1**.
2. The DVD will play automatically.
  - To watch or control videos on the front display, make sure the vehicle is in the **P (Park)** position and the parking brake is applied.



### REAR DISPLAYS

- To turn the rear displays on or off from the front seats:
  1. Press the **SETTING** button **2** on the control panel.
  2. Select the “Rear Display” key on the display.
  3. Toggle the “L” (Left) or “R” (Right) display **3** on or off.



- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC** button **4** on the control panel while the vehicle is in the **P (Park)** position and the parking brake is applied.

- To turn the rear displays on or off from the rear seats:

1. Select the desired seat by sliding the **DISPLAY SELECT** switch **5** on the remote control to the **L (Left)** or **R (Right)** position.
2. Press the **POWER**  button **6** on the remote control.

- To control the DVD from the rear seats, use the remote control.



#### OPERATING TIPS

- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- For the best audio sound quality, please make sure you are facing the monitor directly in front of you.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual.

# DRIVING FEATURES

## BLIND SPOT WARNING (BSW) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light **1** located near the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light **2** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.



 
 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

## INTELLIGENT CRUISE CONTROL (ICC)

### VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Press the distance  button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.



- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off Intelligent Cruise Control, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

## AUTOMATIC EMERGENCY BRAKING (AEB)

- The AEB can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The AEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light **1** will illuminate. If the driver applies the brakes after the warning and the AEB detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the AEB will issue a second flashing visual warning **2**, an audible warning and also apply partial braking.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

 
## INTELLIGENT AROUND VIEW MONITOR (if so equipped)

- With the ignition switch in the **ON** position, activate the Intelligent Around View Monitor by pressing the **CAMERA**  button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.




# DRIVING FEATURES

- When the shift lever is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position and the **CAMERA**  button **1** is pressed, the following views will display in order:


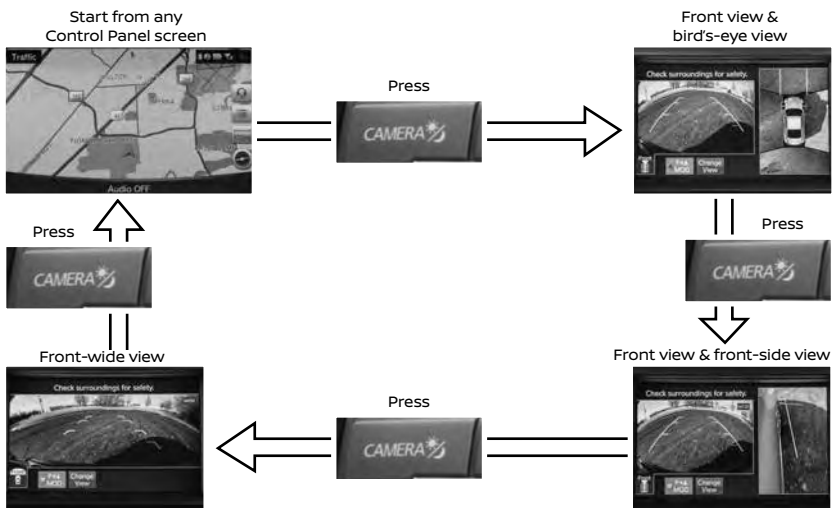


 - When the shift lever is in the **R (Reverse)** position and the **CAMERA**  button **1** is pressed, the following views will display in order:

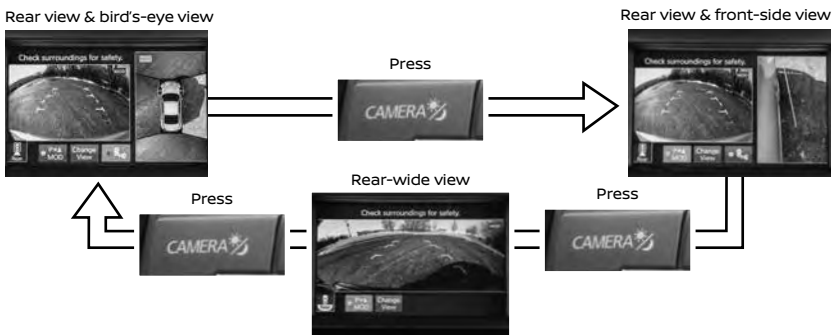

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m)
  - Yellow 3 ft (1 m)
  - Green 7 ft (2 m)
  - Green 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

  - There are some areas where the system will not detect objects:
  - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
  - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
  - The distance between objects viewed on the Intelligent Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

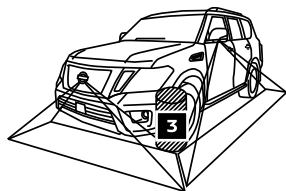

#### MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (Drive)**, **N (Neutral)**, **R (Reverse)** or **P (Park)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
  - Green **MOD** icon **4**; the system is active.
  - Gray **MOD** icon; the system is not active.
  - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The **MOD** system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

# DRIVING FEATURES

## HILL START ASSIST

The Hill Start Assist system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

 
- The Hill Start Assist system will operate automatically under these conditions:
  - The shift lever is shifted into a forward or a reverse gear.
  - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist system will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

## LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) (if so equipped)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 45 mph (70 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will chime and the orange LDW light **1** on the instrument panel will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW system can be turned on and off through the center display. To temporarily turn off the system, push the warning systems switch **2** on the instrument panel.
- When the system is off, the indicator light **3** on the switch is off.

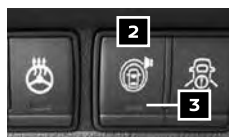


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

## INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

 - The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver with the vehicle ahead detection indicator light **1** and an audible warning tone will be heard.

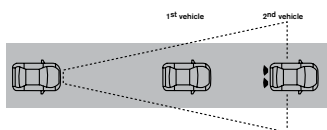

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

---

## INTELLIGENT BACK-UP INTERVENTION (I-BI) (if so equipped)

- The I-BI system can help alert the driver of an approaching vehicle or objects behind the vehicle when backing out of parking spaces.
- The rear radar sensors detect the approaching vehicle from up to approximately 49 ft (15 m) from the bumper.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

# MEMO

# MEMO



## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](https://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store® or Android Google Play™ Store for download to your smartphone)



To view detailed instructional videos, go to [www.nissanquickguide.com/2020/armada](http://www.nissanquickguide.com/2020/armada) or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

