



GETTING TO KNOW YOUR

2021 SIERRA 2500 HD / 3500 HD



gmc.com

Review this Quick Reference Guide for an overview of some important features in your GMC Sierra. Some optional equipment described in this guide may not be included in your vehicle.

More information can be found in your Owner's Manual and at my.gmc.com.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Exterior/
Instrument
Panel/Cargo
Lamp Controls

4WD
Controls♦/
Traction Select
Controls

HUD Controls♦
(behind steering
wheel)

Cruise Control/ Forward
Collision Alert♦/Heated
Steering Wheel♦
Buttons

Turn Signal/
Windshield
Wipers Lever

Driver
Information
Center

Range +/-
Gear Selection
Buttons (on
shift lever)



Power
Mirror♦/
Window
Buttons

Electric
Parking
Brake
Switch

Audio Next/
Previous Favorite
Station Controls
(on back of
steering wheel)

Steering Wheel
Adjustment
Lever
(on steering
column)

Audio Volume
Control
(on back
of steering
wheel)

Driver
Information
Center
Controls♦/Voice
Recognition
Buttons

Engine
Start/Stop
Button♦

Diesel model shown

Symbols



Low Fuel



Traction Control Off

BRAKE Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security

PARK

Electric Parking Brake



Electric Parking Brake Service



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Departure Warning

 
Driver's Heated/
Ventilated Seat
Buttons◆

Infotainment
System (8-inch*
screen shown◆)

Infotainment
System
Controls

Climate
Controls◆

Passenger's Heated/
Ventilated Seat
Buttons◆

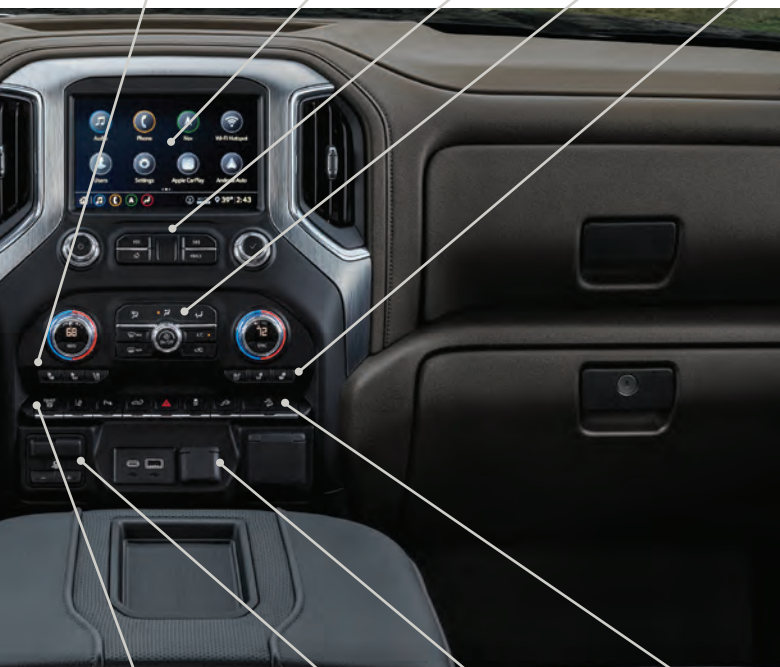

Diesel Exhaust Brake◆/
Lane Departure Warning◆/
Park Assist◆/Power
Release Tailgate◆/Hazard
Warning Flashers Buttons

Integrated
Trailer Brake
Control◆

USB Ports/
Accessory Power
Outlet/120-Volt
Power Outlet◆

Traction Control-StabiliTrak
Off/Power Outlet◆/Hill
Descent Control◆/
Power Windows◆ Buttons

-  Vehicle Ahead
-  Antilock Brake System
-  Low Tire Pressure
-  Door Ajar
-  Charging System

-  Driver Seat Belt Reminder
-  Passenger Seat Belt Reminder
-  4WD Mode

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)♦



Lock

Press to lock all doors and tailgate.



Unlock

Press to unlock the driver's door or all doors and tailgate.

Remote Windows♦

Press and hold the 

Unlock button until the windows are fully open. To enable, select the Settings menu on the infotainment screen. Go to Settings > Vehicle > Remote Lock, Unlock, Start.

Remote Mirrors♦

Press and hold the Lock/Unlock button for 1 second to fold/unfold the power mirrors. To enable, go to Settings > Vehicle > Comfort and Convenience.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times

Press and hold to activate the alarm. Press again to cancel the alarm.



Power Release Tailgate♦

Press twice to lower the tailgate.



Remote Vehicle Start♦

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

To cancel a remote start, press and hold the  button until the parking lamps turn off.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM♦

The Keyless Access System enables operation of the doors and tailgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The key fob must be within 3 feet of the tailgate or the door being unlocked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again within 5 seconds to unlock all doors and tailgate.
- ▶ Press the button on a passenger door handle to unlock all doors and tailgate.
- ▶ Press the lower button on the tailgate to lower the standard tailgate.



KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and tailgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

 
KEYED IGNITION SYSTEM (IF EQUIPPED)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

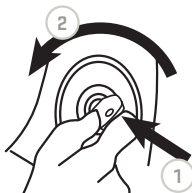

See Driving and Operating in your Owner's Manual.

KEYLESS (PUSHBUTTON) START♦

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE/ON

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the pocket in the center storage compartment (under the bench seat) or center console cupholders (bucket seats) to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine. The green button indicator will turn off.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The amber button indicator will illuminate. Press and hold the **ENGINE START/STOP** button for several seconds to place the ignition in Service Mode to operate additional systems.

See Driving and Operating in your Owner's Manual.

POWER FRONT SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control to adjust the lumbar support.



SET MEMORY POSITIONS

1. With the vehicle in Park, adjust the driver's seat and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2 (key fob 1 or 2).



To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  Exit button instead of button 1 or 2.

RECALL POSITIONS

- Press and hold button 1 or 2 or  Exit until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- To set the automatic recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

ELECTRIC PARKING BRAKE

- To apply the parking brake, press the  **Parking Brake** button on the left side of the instrument panel.
- To release the parking brake, turn on the ignition, press the brake pedal, and then press the  button.



See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

BASE DIC CONTROL

- Use the trip odometer reset stem on the instrument cluster to access the DIC menu. Turn the stem to scroll through the menu. Press and hold the stem to reset an item.

MIDLEVEL AND UPLEVEL DIC CONTROLS♦

Use the controls on the right side of the steering wheel to view the various menus.

- Press the ◀ or ▶ button to move between the display zones.
- Rotate the thumbwheel up or down to move through the menus.
- Press the thumbwheel to open a menu, or to select or reset an item.

 
SELECT INFO PAGES♦

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.



Midlevel and uplevel DIC Controls♦ shown

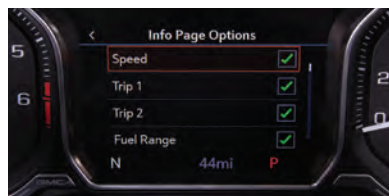

MULTICOLOR HEAD-UP DISPLAY♦

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation directions, also may be displayed. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays:

- **Speed View** – Speedometer only
- **Active Safety View** – Speedometer and driver assistance information
- **Navigation View** – Speedometer and turn-by-turn navigation information
- **Off-Road View** – Speedometer and off-road information (e.g. pitch angle, steering angle and rolling angle)

± Brightness

Lift up or press down to brighten or dim the display. Hold down to turn off the display.

 
See Instruments and Controls in your Owner's Manual.

♦ Optional equipment



CLIMATE CONTROLS/VEHICLE CONTROLS ♦

Dual automatic climate controls ♦ shown

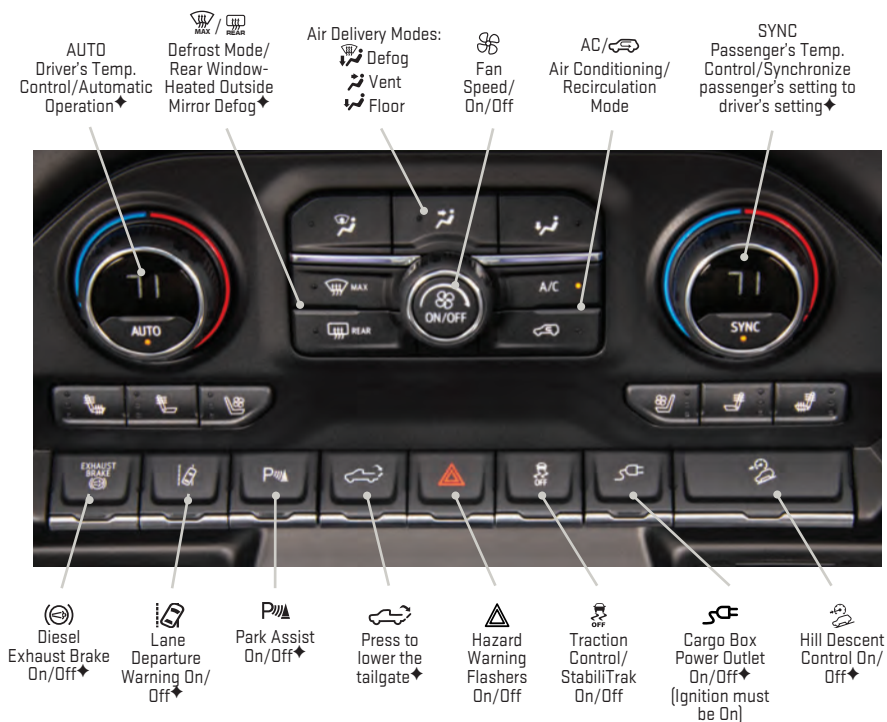

See Introduction in your Owner's Manual.

VEHICLE CUSTOMIZATION ♦

Some features can be turned on/off or customized using the Settings menus on the infotainment screen. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press ◀BACK to exit each menu.



See Instruments and Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Uplevel infotainment system♦ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®, and offers hands-free voice control. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/how-to-support.

MANAGING HOME PAGE ICONS

1. Press the Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM⁺) can be stored in any order. The source options are on the left side of the audio page.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
Favorites also can be stored by touching ★ in a station list.



SIRIUSXM WITH 360L⁺

Trial participants and subscribers can enjoy an advanced entertainment experience with SiriusXM with 360L. The personalized content features over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to thousands of hours of On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and the GMC Connected Access plan. See siriusxm.com and onstar.com for details and limitations.

IN-VEHICLE APPS

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

APPLE CARPLAY AND ANDROID AUTO⁺

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
2. There are two ways to set up device projection:
 - Wireless Connection – Connect your smartphone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your smartphone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
3. Follow the instructions on the infotainment system and the smartphone.
4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- ▶ To automatically launch Apple CarPlay or Android Auto when a Bluetooth-paired phone is connected, select Phone icon > Phones > ⓘ Information. Turn Apple CarPlay or Android Auto on or off.
- ▶ To exit Apple CarPlay or Android Auto, press the  Home button. To return to Apple CarPlay or Android Auto, press and hold the Home button.

See Infotainment System in your Owner's Manual.

 
BLUETOOTH® SYSTEM ♦

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

PAIR A PHONE

1. To use voice recognition, press the  **Press to Talk** button; after the beep, say "Pair phone"; or to use the infotainment screen, select the Phone icon > Phones or Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

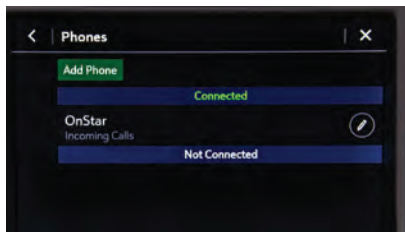

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, select the Phone icon > Phones >  Information.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT ♦

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the name and password for the hotspot, select the Wi-Fi icon on the Home page or go to Settings > System > Wi-Fi Hotspot on the infotainment system.

For more information, call 1-855-478-7767 or visit my.gmc.com/how-to-support.

See Infotainment System in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM ♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

WIRELESS CHARGING

The Wireless Charging system for smart-phones is located at the front of the center console. To check device compatibility, visit my.gmc.com/how-to-support. See your phone retailer for details on required phone accessories.



1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  on the pad.
4. The  charging symbol will appear on the infotainment screen when charging. If not charging, remove the device for 3 seconds, and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

LIGHTING

LAMP CONTROLS

Rotate the knob to activate the exterior lamps.

 Off/On

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 Parking Lamps

 Headlamps

 Fog Lamps

Press to turn the fog lamps on/off.

 Instrument Panel Brightness

Press and hold the +/– buttons to adjust the instrument panel lighting.

 Task Lighting

Press repeatedly to cycle through the forward-facing outside mirror lamp options: both lamps on, left lamp on, right lamp on, both lamps off.

 Cargo Lamp

With the vehicle in Park, Reverse, or Neutral, press to cycle through the cargo bed/hitch lamps and/or rear-facing mirror lamps*. The button indicator illuminates when the cargo bed lamps are on.



INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off according to surrounding traffic when the lamp control is in the AUTO or  position and the system is activated, indicated by a green  on the instrument cluster. A blue  appears when the high-beam headlamps are on.

- To turn the IntelliBeam system on or off, press the  button on the end of the turn signal lever with the lamp control in the AUTO or  position.

Note: The fog lamps must be off to activate the IntelliBeam system. IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

TRACTION SELECT SYSTEM♦/FOUR-WHEEL DRIVE♦

TRACTION SELECT MODES

The Traction Select (Driver Mode) settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Driver Information Center (DIC).

 
- Rotate the control knob (A) to the right to select a mode. Modes may include:

Normal – Use for normal driving.

❄️ **Snow/Ice (2WD only)** – Use for enhanced traction during slippery conditions.

🚙 **Off-Road (4WD only)** – Use for enhanced control on unpaved roads or trails at moderate speeds.

🚚 **Tow/Haul** – Rotate the knob to the left; use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic, rolling hills, or busy parking lots.

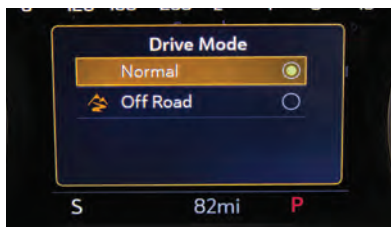

FOUR-WHEEL DRIVE

Use the four-wheel drive buttons (B) on the left side of the instrument panel to shift into and out of four-wheel drive. The transfer case status is displayed on the DIC.

AUTO Automatic Four-Wheel Drive High –

Use when traction conditions vary for automatic shifting between 2WD and 4WD. Shift into this mode at any speed except when shifting from 4↓.

2↑ **Two-Wheel Drive High** – Use for most streets and highways. Shift into this mode at any speed except when shifting from 4↓.

4↑ **Four-Wheel Drive High** – Use when extra traction is needed or in most off-road driving. Shift into this mode at any speed except when shifting from 4↓.

4↓ **Four-Wheel Drive Low♦** – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral.

N Neutral – Use to tow the vehicle. Read your Owner's Manual for the shift procedure.



See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL♦

Hill Descent Control sets and maintains vehicle speed from 1–14 mph while descending a steep incline in a forward or reverse gear.

1. Press the 🛖 **Hill Descent Control** button on the center of the instrument panel. Vehicle speed must be below 31 mph to enable the system. The 🛖 symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The 🛖 symbol flashes when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS[◆]

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

 
SAFETY ALERT SEAT – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

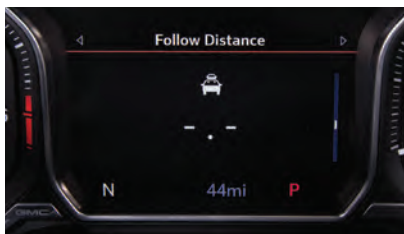

AUTOMATIC EMERGENCY BRAKING – In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or automatically apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

LANE DEPARTURE WARNING – When crossing a detected lane marking without using a turn signal in that direction, the system flashes an amber indicator on the instrument cluster and the Safety Alert Seat pulses or beeps sound (if selected) on the side of the lane departure direction.

- ▶ To turn on or off, press the  **Lane Departure Warning** button on the center of the instrument panel.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS ♦

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or a continuous beep sounds (if selected).

- ▶ To turn on or off, press the  Park Assist button on the instrument panel.



REAR CROSS TRAFFIC ALERT – When the vehicle is in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red triangle with directional arrow alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

See Driving and Operating in your Owner's Manual.

CRUISE CONTROL ♦

SETTING CRUISE CONTROL

- ▶ Press the  On/Off button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
- ▶ When traveling at the desired speed, rotate the thumbwheel down to set the speed. The  symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

+RES Resume/Accelerate

Rotate the thumbwheel up to resume a set speed. When active, rotate the thumbwheel up to increase speed 1 mph; rotate and hold to continue increasing speed.

–SET Set/Coast

When active, rotate the thumbwheel down to decrease speed 1 mph; rotate and hold to continue decreasing speed.

Cancel

Press the  button, or press the brake pedal, to cancel Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

See Driving and Operating in your Owner's Manual.

CAMERA SYSTEM FEATURES

The available camera systems feature up to 8 cameras♦ with up to 15 views♦ to help make it easier to hitch a trailer and provide better visibility while towing.

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Camera view buttons♦ are on the screen.

- ▶ Touch the  **Guidance Lines** or  **Hitch Guidance** button to change guidelines.
- ▶ Touch the  **Hitch View** button for a zoomed-in view of the hitch area.

SURROUND VISION♦

High-definition rear, front or side camera views along with a view of the area surrounding the vehicle are displayed on the infotainment screen when the vehicle is in Reverse or Drive. Camera view buttons♦ are on the screen.

- ▶ Touch the  **Guidance Lines** or  **Hitch Guidance** button to change guidelines.
- ▶ Touch the  **Bed View** button to view the bed to check cargo or to view guidelines to help when hitching a 5th wheel or gooseneck trailer. Zoom functionality also available.
- ▶ To check the available camera views when in Drive above 8 mph, touch the Camera icon on the infotainment screen and select the desired view. Touch X to exit the view.



Surround Vision Rear Camera View screen



Bed View screen

ADDITIONAL TRAILER CAMERA VIEWS♦

Multiple views to aid in trailering are shown on the infotainment screen using the vehicle cameras and up to two additional wired accessory cameras♦ mounted on the rear or interior of the trailer.

- ▶ Touch the  **Rear Side View** button for a biased split view of each side of the trailer (more of the left or right side will be shown based on trailer position) and to view trailer length when a turn signal is activated.
- ▶ Touch the  **Transparent Trailer View** button for a view behind the trailer. Compatible with most conventional box trailers; requires accessory camera♦.



Transparent Trailer View screen

Jack-Knife Alert♦ – The Jack-Knife Alert displays a warning symbol when the truck/trailer angle is in a possible jack-knife position and there is a potential imminent collision situation. The Safety Alert Seat♦ may pulse or beeps may sound.

Note: Accessory camera system compatible with most trailer and hitch types.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR♦

The rear camera mirror provides a wider, less obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. ◀ ▶ Adjustment

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

POWER MIRRORS♦/TRAILERING MIRRORS♦

POWER MIRROR ADJUSTMENT

- ▶ Press the  Mirror Selector button to select the driver or passenger side mirror; use the four-way control pad to adjust the mirror.



POWER FOLDING MIRROR

- ▶ Press the  Folding Mirror button to fold or unfold the mirrors.

TRAILERING MIRRORS

The mirrors can be extended for better visibility when towing a trailer. The lower wide-field view mirror adjusts manually.

MANUAL EXTENSION♦

- ▶ To extend the manual mirror, grasp the mirror housing and pull back and rearward in one motion. The housing extends on a curved arc. Push in the housing to return the mirror to its original position.



POWER EXTENSION♦

Press the  Power Extend button to extend or retract the power mirror.

Note: Reset the power mirrors if they are adjusted manually by using the power controls to fold/unfold or extend/retract the mirrors to their normal position.

 
See Keys, Doors and Windows in your Owner's Manual.

TRAILERING♦

PROGRADE TRAILERING SYSTEM♦

The in-vehicle trailering app on the infotainment screen allows customized trailer profiles with a variety of helpful towing assistance features, including a hitching and setup checklist, trailer tire pressure and temperature monitoring♦, trailer light testing, Jack-Knife Alert, trailer length indicator, trailer theft detection and more. Trailering App information also is available with the myGMC mobile app.

Note: The Trailering App will monitor trailer presence, even while the vehicle is off, by periodically checking the trailer lighting circuits. On trailers equipped with LED lights, these periodic checks may cause the trailer lights to flash. This flashing will become more frequent if Theft Alert is enabled.

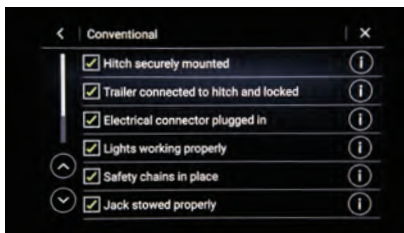

HITCH AREA LIGHTING

- ▶ Press the  **Cargo Lamp** button on the left side of the instrument panel to turn the cargo bed lamp or conventional hitch lamp on/off.

TRAILERING INFORMATION LABEL

The Trailering information label, located by the driver's door latch, provides vehicle-specific weight information to help when loading the vehicle.

INTEGRATED TRAILER BRAKE CONTROL (ITBC)♦

The ITBC system can be used to adjust the power output, or Trailer Gain, to the trailer brakes. The control panel is on the center of the instrument panel. ITBC information is displayed on the ITBC page on the Driver Information Center.



- ▶ Squeeze the control together (right side does not move) to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons.

See Driving and Operating in your Owner's Manual.

TRUCK TIRE PRESSURE MONITORING SYSTEM

The (!) Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

With the ignition On or in Accessory mode, the Tire Fill Alert will provide visual and audible alerts to help with inflating a tire to the recommended tire pressure (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

Note: Refer to your Owner's Manual for accessory trailer tire pressure monitoring system information.

See Vehicle Care in your Owner's Manual.

GMC MULTIPRO TAILGATE OPERATION ♦

The tailgate has 6 functional positions to improve loading, unloading and access to the cargo box.

1. Primary Gate

Open the primary gate for access to the cargo box.

2. Primary Gate Load Stop

With the primary gate open, the load stop helps keep longer items secure in the cargo box.

3. Easy Access

The inner gate folds down for easier reach into the cargo box to access items near the cab.

4. Full-width Step

With the primary gate open, the inner gate folds into a sturdy step (up to 375 lbs.) with a convenient handle for easy cargo box entry and exit.

5. Inner Gate Load Stop

With the primary gate closed, fold the inner gate for two-tier storage and open the load stop to help keep longer items secure.

6. Inner Gate Work Surface

With the primary gate closed, fold the inner gate for two-tier storage or for use as a standing-height work surface.

Note: Do not lower the inner gate with the primary gate open if a hitch ball or trailer is attached.

OPEN THE INNER GATE

- Press the upper button (A) on the tailgate.

OPEN THE PRIMARY GATE

 
- Press the lower button (B) on the tailgate.
- Press the  **Power Tailgate** button twice on the Remote Keyless Entry transmitter.
- Press the  **Power Tailgate** button on the center of the instrument panel.

OPEN THE PRIMARY GATE AND INNER GATE

- Press the lower button and then upper button (B then A) on the tailgate consecutively.

OPEN THE LOAD STOP OR STEP

- Press the release bar (C).

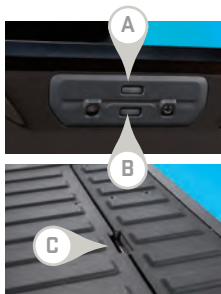

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, push the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or GM Genuine Parts

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2020 General Motors. All rights reserved.



GENERAL MOTORS

84744499 A