

QX50

2021 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to
www.infinitiquickguide.com/2021/qx50
or snap this barcode with an appropriate
barcode reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

- **VEHICLE OWNER'S MANUAL**

- **INFINITI CLIENT SUPPORT 1-800-662-6200**

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

- **INFINITI CONNECTION TO ROADSIDE ASSISTANCE**

1-800-662-6200 (option 1)

As part of the Infiniti Total Ownership Experience®, Connection to Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

- **INFINITI ELITE® EXTENDED PROTECTION PROGRAM**

1-800-662-6200

Infiniti Elite® Assurance Products provide you with quality, long-term protection and enhanced peace of mind.

- **INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437**

For client support with your Infiniti Financial Services loan or lease.

- **INFINITI FINANCIAL SERVICES www.infinitifinance.com**

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

- **OWNER PORTAL 1-855-444-7244 www.owners.infinitiUSA.com/iowners**

Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

- **INFINITI INTOUCH™ 1-855-444-7244 usa.infinitiintouch.com**

This suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.

- **SiriusXM® RADIO 1-877-447-0011**

For support with your SiriusXM® subscription.

- **INFINITIUSA.COM www.infinitiUSA.com/bluetooth**

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

- **INFINITI ELECTRONIC QUICK REFERENCE GUIDE**

(use the Quick Response (QR) code or URL on this page or on the back cover)

Table of Contents

Cockpit Overview.....	1	Bluetooth® Streaming Audio.....	13
Instrument Panel.....	3	Shutter with Slide Function.....	14
Meters and Gauges.....	5	USB Connection Ports.....	14
Electronic Shift Lever.....	7	Apple CarPlay®.....	15
Electronic Parking Brake.....	8	Android Auto™.....	16
Memory Seat (if so equipped).....	8	Navigation System (if so equipped).....	17
HomeLink® Garage Door Opener (if so equipped).....	9	INFINITI InTouch™ Services (if so equipped).....	18
Heater and Air Conditioner (automatic).....	10	Voice Recognition.....	19
Wiper and Washer Switch.....	11	Cruise Control (if so equipped).....	20
Opening the Liftgate.....	12	ProPILOT Assist (if so equipped).....	21
Motion-Activated Liftgate (if so equipped).....	12	Head Up Display (HUD) (if so equipped).....	22
Connecting Your Cellular Phone or Device via Bluetooth®.....	13		

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch™ Owner's Manual at www.infinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the **"Safety – Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

Cockpit Overview



1

2

3

4

5

1

Cockpit Overview

- ❶ Turn signal switch
- ❷ Bluetooth®/Center display multi-function control switches
- ❸ Wiper and washer switch
- ❹ ProPILOT Assist/Intelligent Cruise Control (ICC) switches (if so equipped)
- ❺ Vehicle information display switches

Instrument Panel



1

2

2

3

8

4

7

6

5

3

Instrument Panel

- ➊ Upper display/Navigation System (if so equipped)
- ➋ Automatic heater and air conditioner controls
- ➌ Lower display
- ➍ Audio control panel
- ➎ Shift lever
- ➏ Push-button ignition switch
- ➐ Hood latch release
- ➑ Lower switch bank
 - Instrument brightness control
 - Front and rear sonar switch (if so equipped)
 - Steering assist switch (if so equipped)
 - Power liftgate switch
 - Headlight control switch
 - Fog light switch (if so equipped)
 - Head Up Display (HUD) switch (if so equipped)
 - Dynamic driver assistance switch (if so equipped)

Meters and Gauges



Meters and Gauges

- 
- 1 Engine coolant temperature gauge
 - 2 Odometer/Trip 1/Trip 2
 - 3 Shift lever indicator
 - 4 Vehicle information display
 - 5 Speedometer
 - 6 Fuel gauge

Electronic Shift Lever

TO PUT THE VEHICLE IN N (NEUTRAL):

The ignition switch must be in the ON position and the brake must be depressed.

From P (Park) to N (Neutral) and D (Drive) to N (Neutral):

Without pressing the shift lever button, push the shift lever forward from the idle position and hold for .5 seconds.

From R (Reverse) to N (Neutral):

Without pressing the shift lever button, pull the shift lever backward from the idle position and hold for .5 seconds.

After operating the shift lever, the shift lever returns to the idle position by releasing your hand from the shift lever.

While in the **N (Neutral)** position, the **P (Park)** position is automatically engaged if the ignition is turned off or the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

TO PUT THE VEHICLE IN R (REVERSE):

Press the button ①, then push the electronic shift lever forward past the point of resistance and release the shift lever.

TO PUT THE VEHICLE IN D (DRIVE):

Press the button ① and pull the electronic shift lever back past the point of resistance and release the shift lever.

TO PUT THE VEHICLE IN P (PARK):

Make sure the vehicle is completely stopped and press the **P (Park)** button ②. If you switch the ignition off with the transmission in **D (Drive)** or **R (Reverse)**, the transmission automatically shifts into the **P (Park)** position. The **P (Park)** position is automatically engaged if the ignition is turned off or the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Electronic Parking Brake



To apply the parking brake, pull the electric parking brake switch ① up, located below the instrument panel, regardless of the ignition switch position.

To release the parking brake, depress the brake pedal and push the electric parking brake switch ① down while the ignition is on. The parking brake will be automatically released when you depress the accelerator pedal as long as certain conditions are met, such as having your seatbelt fastened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Memory Seat (if so equipped)

Two positions for the driver's seat, steering column and outside mirrors can be stored in the memory seat system. To set a memory position:

1. Place the ignition switch in the ON position. (The vehicle should be stopped while setting the memory.)
2. Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
3. Push the **SET** switch ①, and within 5 seconds, push the memory switch (1 or 2) ②. The indicator light for the memory switch you select will illuminate for approximately 5 seconds and a chime will sound when the memory is stored.

The driver's seat and steering column will automatically move when the driver's side door is opened, to allow the driver to get in and out of the driver's seat more easily. "Lift Steering upon Exit" and "Slide Driver Seat Back on Exit" can be adjusted in the lower touch-screen display under "Comfort & Convenience."

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



HomeLink® Garage Door Opener (if so equipped)

To complete HomeLink® programming, you can download the HomeLink app or read the instructions below.

Before you start programming HomeLink, park outside and within range of your garage. Then, clear the area around your garage door, place the ignition switch in the ON or ACC position (without starting the engine) and locate the remote control transmitter, ensuring a fresh battery is installed. Please note, a ladder and another person may be needed.

To program HomeLink:

1. Position the handheld transceiver within 3 in (8 cm) from the HomeLink surface.
2. Press and hold the desired HomeLink ① and garage door opener button. Release both when the indicator ② flashes rapidly.

Before proceeding to the next steps, be sure your garage door is not moving.



- Press the HomeLink button ① for 2 seconds up to 3 times. If the garage door responds, training is complete.

If the garage door doesn't respond:

- Press the "learn" or "set" button ③ on the garage opener until an indicator illuminates. Within 30 seconds, press the HomeLink button ① in your vehicle for 2 seconds up to 3 times.

If the garage door doesn't respond, please see your owner's manual, go to www.HomeLink.com/infiniti or call **1-800-355-3515**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

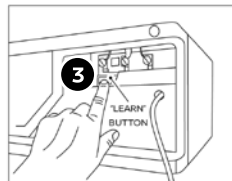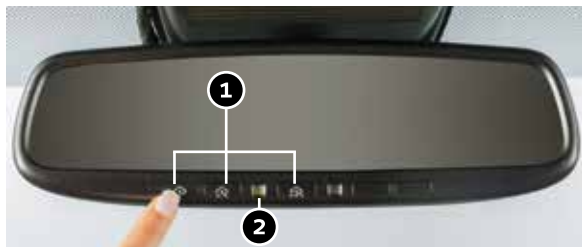

Heater and Air Conditioner (automatic)

The climate controls can be adjusted using the buttons on either side of the lower display and through the "Climate" screen ① on the lower display.

- To access the "Climate" screen ①, press the **CLIMATE** button ② below the lower display.

HEATED STEERING WHEEL (if so equipped)

To turn the heated steering wheel on or off, touch the "Steering Heater" key ③ on the lower display.

REAR CONTROLS (if so equipped)

- Adjust the temperature up or down using the temperature buttons ④.

SYNC MODE SETTING

The driver's, passenger's and rear (if so equipped) temperature set points can be synchronized touching the "SYNC" key ⑤ on the lower display. If the feature is engaged, the rear temperature settings will synchronize with the driver's and passenger's side settings. The temperature can then be controlled by using the temperature control buttons ⑥.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Wiper and Washer Switch



Move the lever (1) up or down to one of the following positions to operate the windshield wipers:

MIST One sweep operation

OFF Wipers are OFF

AUTO Speed-sensing and rain-sensing automatic wipe (if so equipped)

LO Continuous wipe, slow

HI Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring (2). Pull the lever (1) toward you to operate the windshield washer.

REAR WIPER AND WASHER

Turn the rear wiper switch (3) to one of the following positions to operate the rear wiper:

OFF Wiper is OFF

 Intermittent wipe

 Continuous wipe

Push the lever (1) forward to operate the rear windshield washer.

To turn the rain sensor function on and off:

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key and then the "Comfort & Convenience" key (4) on the display.
3. Touch the "Rain Sensor" key (5) to toggle the feature ON and OFF.



When the rain-sensing function is disabled, the **AUTO** position on the wiper stalk will work in conventional intermittent mode.

WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position:

- When the ignition switch is in the ON position or within 60 seconds of placing the ignition switch in the OFF position, lift the windshield wiper and washer lever upwards twice in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.



To move the wiper blades back to the original position:

- Place the wiper arm in the down position and lift the wiper and washer lever up for more than 1 second, or lower the lever down to operate at any wiper speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Opening the Liftgate



The power liftgate operation can be turned on or off by the power liftgate main switch ① inside the glove box.

To open the liftgate, perform one of the following procedures:

- Push and hold the power liftgate switch ② on the instrument panel.
- Push the liftgate opener switch ③; the liftgate must be unlocked, or you must have the Intelligent Key® with you (that is, in your pocket or purse).
- Press the  **HOLD** button ④ on the Infiniti Intelligent Key for longer than 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Motion-Activated Liftgate (if so equipped)



To operate the liftgate hands-free:

- Ensure you have the Intelligent Key within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper ①. After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Connecting Your Cellular Phone or Device via Bluetooth®*



Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **MENU** button below the lower display.
2. Touch "Connections".
3. Touch "Add New (X/6)".
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Streaming Audio*



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the **MEDIA** button ① on the control panel to switch to Bluetooth® Streaming Audio.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Shutter with Slide Function



The sliding shutter can be moved by pushing the shutter handle ① open toward the front of the vehicle, or by pulling it closed toward the back of the vehicle.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

USB Connection Ports



Your vehicle is equipped with two USB ports, located under the control panel, to which you can connect compatible devices (cellular phones, iPod®, other compatible audio devices, USB memory sticks, etc.).

After connecting your device through one of the USB ports, press the **MEDIA** button on the control panel to select audio playback from the device connected through the USB ports.

A second device can be connected for charging. In order to switch to the second device for audio playback, both devices will need to be removed and the second device reconnected first.

There are also USB charging ports located in the first row on the inside of the console box and in the second row on the back of the center console. These ports will charge compatible devices.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Apple CarPlay®

Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display. The display may be different based on iOS software version.

Connect your compatible iPhone to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

While connected to Apple CarPlay, Siri® operation can be accessed.

There are two ways to start a Siri session:

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  key ① or  key ② on the lower left corner of the Apple CarPlay screen.

Press the  button on the steering wheel or touch the  key ① or  key ② on the lower left corner of the Apple CarPlay screen to end the Siri session.

Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.

When Siri finishes responding the session will automatically end and return to the home screen.

Some Siri functions may not be available during driving. For functions that can be used with Siri, please refer to the Apple® website.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Android Auto™

Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Android Auto.
- After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system. When connected to Android Auto, Google Assistant™ can be accessed. There are three ways to start Google Assistant™:

1. Press and hold the  button on the steering wheel until a beep is heard.
2. Touch the  key ① on the Launch Bar.
3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

To return to the Android Auto home screen after operation, touch the  key ② on the Launch Bar.


To exit the Android Auto screen, touch the  key ② on the Launch Bar and then touch the exit key.

To return to the Android Auto home screen from the main menu:

1. Press the **MENU** button and touch the  key ③, or
2. Touch the "Information" key ④, touch the "Apps" key, and then select the "Android Auto" key.

If you have difficulties with connection or performance, try a different USB cable.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

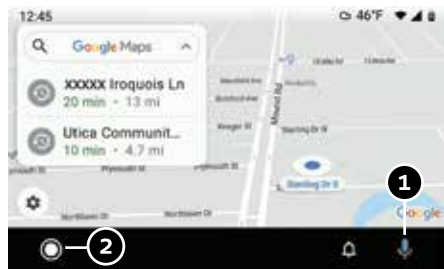

Navigation System (if so equipped)

Use the Infiniti controller ①, touch-screen and **OK** button ② to navigate through the upper display screens.

- Press the  back button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the upper display.

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Destination" key ⑥ on the lower display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.


SETTING A ROUTE WHILE DRIVING USING VOICE RECOGNITION

1. Press the  button on the steering wheel. Wait for the prompt and say "Navigation".
2. Then, say a command from the list, such as "Street Address", and follow the prompts until your route is calculated.

CANCELING A ROUTE

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Cancel Route" key ⑦ on the lower display.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

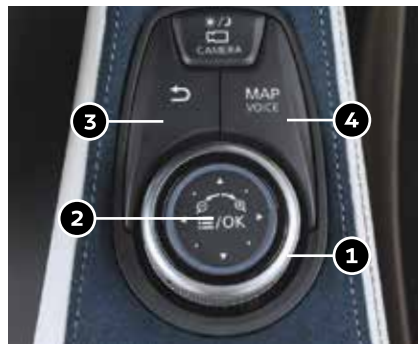

INFINITI InTouch™ Services (if so equipped)

If equipped, your vehicle may include INFINITI InTouch™ connected features and services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth and more. For complete information about your INFINITI InTouch™ features and services, please visit usa.infinitiintouch.com or call **1-855-444-7244**.

For frequently asked questions, please visit

www.infinitiusa.com/intouch/faq.

To access INFINITI InTouch Services:


1. Press the **MENU** button ① under the lower display.
2. Select the "InTouch Services" key ② on the lower display.

In case of an emergency, press and release the **SOS** button lid ③, located above the rearview mirror, and press the in-vehicle telematics **SOS** button ④.

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account. (<https://owners.infinitiusa.com/iowners/>)
2. From your INFINITI Owner Portal account, enroll in INFINITI InTouch Services.
3. Download the INFINITI InTouch Services companion app from the App store and log in using your INFINITI Owner Portal ID and password.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

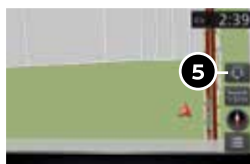

Available services may include:

- Automatic Collision Notification
- Emergency Calling
- Stolen Vehicle Locator
- Alarm Notification
- Maintenance Alert
- Vehicle Health Report
- Scheduled Maintenance Notification
- Remote Door Lock/Unlock
- Remote Horn & Lights
- Remote Engine Start/Stop (if so equipped)
- Maximum Speed Alert
- Valet Alert
- Curfew Alert
- Destination Send-to-Vehicle
- Connected Search

The following services can also be accessed by touching the headset icon ⑤:

- Infiniti Personal Assistant
- Connection to Roadside Assistance

Voice Recognition



SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- Press the  button ① on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button ① on the steering wheel.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Cruise Control (if so equipped)



SETTING A CRUISING SPEED

- Push the cruise control ON-OFF switch ① to turn on the system.
- With the vehicle at the desired speed, push down the control switch ② to **SET -** to enable cruise control.
- The cruising speed can be adjusted to a higher or lower speed by toggling the control switch ② up or down.

CANCELING THE PRESET SPEED

- Push the **CANCEL** switch ② or tap the brake pedal.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

ProPILOT Assist (if so equipped)

ProPILOT Assist allows you to maintain gap and "Stop-Hold" in-between vehicles while also helping to keep you in the center of your lane.

PROPILOT ASSIST DISPLAY

- ① Set vehicle speed indicator: Displays the speed set by the driver.
- ② Steering Assist indicator: Shows whether steering assist is active or inactive (green-active, grey-standby).
- ③ Lane marker indicator: Appears green on the display when lane lines are detected and steering assist is active.
- ④ ProPILOT Assist status indicator: Displays whether ProPILOT Assist is engaged or not.
- ⑤ Vehicle ahead detection indicator: Appears on the display when a vehicle is detected ahead.
- ⑥ Set distance indicator: Displays the gap amount between the vehicle and the preceding vehicle as set by driver (1 bar - shortest gap, 3 bars - longest gap).

To set ProPILOT Assist, push the ProPILOT Assist switch ⑦ on the steering wheel. The ProPILOT Assist status ④ will appear on the vehicle information display. When the desired cruising speed is reached push the **SET-** switch ⑧ and release it.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



PROPILOT INTELLIGENT CRUISE CONTROL

To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch ⑨ or **SET-** switch ⑧ and release it.

When a vehicle is detected in the lane ahead, the Intelligent Cruise Control system controls the vehicle speed based on the distance set by the driver.

To cancel a set speed, push the **CANCEL** switch ⑩ on the steering wheel or tap the brake pedal.

To turn the system off, push the ProPILOT Assist switch ⑦.

To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch ⑦ for longer than approximately 1.5 seconds."

STOP-HOLD FEATURE:

When the vehicle ahead decelerates to stop, your vehicle decelerates to a standstill if the ProPILOT Assist is activated. Once the vehicle stops, the system will keep the vehicle stopped.

If the vehicle is stopped for less than 3 seconds, and the vehicle ahead begins to move, your vehicle will start moving again automatically.

If the vehicle is stopped for more than 3 seconds, and the vehicle ahead begins to accelerate, push and release the **RES+** switch ⑨ or the accelerator pedal. This will resume the last set cruising speed.

Head Up Display (HUD) (if so equipped)



The Head Up Display (HUD) can show Vehicle Speed, Driving Aids, Navigation and Traffic Sign Recognition on the center of the windshield. Push the HUD switch ① on the instrument panel to turn the system on and off.

To adjust the HUD settings, when the system is on:

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key and then the "Head Up Display" key ②.
3. Adjust the positioning of the HUD on the windshield by touching the arrows ③, and the brightness by touching the brightness keys ④.

To change what items are shown in the HUD, touch the "Display items" key ⑤.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


Memo



Printing October 2020
QR21EO 0J55U1
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).

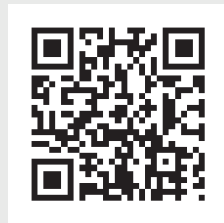

To view detailed instructional videos, go to www.infinitiquickguide.com/2021/qx50 or snap this barcode with an appropriate barcode reader.



INFINITI®