

QX80

# 2021 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to  
[www.infinitiquickguide.com/2021/qx80](http://www.infinitiquickguide.com/2021/qx80)  
or snap this barcode with an  
appropriate barcode reader.



## Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

- **VEHICLE OWNER'S MANUAL**

- **INFINITI CLIENT SUPPORT 1-800-662-6200**

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

- **INFINITI CONNECTION TO ROADSIDE ASSISTANCE**

**1-800-662-6200 (option 1)**

As part of the Infiniti Total Ownership Experience®, Connection to Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

- **INFINITI ELITE® EXTENDED PROTECTION PROGRAM**

**1-800-662-6200**

Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.

- **INFINITI FINANCIAL SERVICES CLIENT SUPPORT**

**1-800-627-4437**

For client support with your Infiniti Financial Services loan or lease.

- **INFINITI FINANCIAL SERVICES [www.infinitifinance.com](http://www.infinitifinance.com)**

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

- **OWNER PORTAL 1-855-444-7244**

[www.owners.infinitiUSA.com/iowners](http://www.owners.infinitiUSA.com/iowners)

Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

- **INFINITI INTOUCH™ 1-855-444-7244 [usa.infinitiintouch.com](http://usa.infinitiintouch.com)**

The suite of services that is your direct link to personal security, convenience and confidence.

- **SiriusXM® RADIO 1-877-447-0011**

For support with your SiriusXM® subscription.

- **INFINITIUSA.COM [www.infinitiUSA.com/bluetooth](http://www.infinitiUSA.com/bluetooth)**

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

- **INFINITI ELECTRONIC QUICK REFERENCE GUIDE**

(Use the Quick Response (QR) code or URL on this page or on the back cover)

# Table of Contents

|                                                               |    |                                                                   |    |
|---------------------------------------------------------------|----|-------------------------------------------------------------------|----|
| Cockpit Overview.....                                         | 1  | Bluetooth® Streaming Audio .....                                  | 16 |
| Instrument Panel.....                                         | 3  | Apple CarPlay® .....                                              | 17 |
| Meters and Gauges .....                                       | 5  | Android Auto™ .....                                               | 18 |
| Infiniti Intelligent Key System .....                         | 7  | Navigation System.....                                            | 19 |
| Seat Adjustments.....                                         | 8  | INFINITI InTouch™ Services (if so equipped) .....                 | 20 |
| Rear Door Alert.....                                          | 9  | Voice Recognition.....                                            | 21 |
| Head Restraint Adjustment .....                               | 9  | Infiniti Mobile Entertainment System (MES) (if so equipped) ..... | 22 |
| Windows.....                                                  | 10 | Parking Brake.....                                                | 23 |
| Smart Rear View Mirror (if so equipped).....                  | 10 | Cruise Control .....                                              | 23 |
| HomeLink® Garage Door Opener.....                             | 11 | Blind Spot Warning (BSW) .....                                    | 24 |
| Exterior Light Operation.....                                 | 12 | Forward Emergency Braking with Pedestrian Detection.....          | 24 |
| Wiper and Washer Switch .....                                 | 13 | Around View® Monitor with Moving Object Detection .....           | 25 |
| Sun Visors.....                                               | 14 | Hill Start Assist .....                                           | 26 |
| Fuel-filler Door.....                                         | 14 | Lane Departure Warning (LDW) (if so equipped).....                | 26 |
| Clock Set/Adjustment .....                                    | 14 | Predictive Forward Collision Warning (PFCW).....                  | 27 |
| USB Connection Port.....                                      | 15 | Back-Up Collision Intervention (BCI) (if so equipped) .....       | 27 |
| Connecting your Cellular Phone or Device via Bluetooth® ..... | 15 |                                                                   |    |

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch™ Owner's Manual and at [www.InfinitiUSA.com](http://www.InfinitiUSA.com).

## PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)", the "Display screen, heater and air conditioner, and audio system (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

# Cockpit Overview

1

2

3

4

7

6

5

1





# Cockpit Overview

- ➊ Vehicle information display brightness switches/Trip odometer switch
- ➋ Headlight/Turn signal/High Beam/Fog Light switch
- ➌ Navigation/Audio control switches
- ➍ Bluetooth®/Voice Recognition system switches
- ➎ Cruise control switches
- ➏ Wiper and washer switch
- ➐ Vehicle information display

# Instrument Panel



1

2

3

3

4

4

5

6

8

7

3

# Instrument Panel

- 1 Multi-function control touch-screen/RearView Monitor display/Around View® Monitor display
- 2 Lower display menu buttons
- 3 Climate control panel
  - Heater and air conditioning (automatic)
  - Front/Rear window defroster
- 4 Climate controlled seat switches (if so equipped)
- 5 Audio controls
- 6 Shift lever
- 7 Lower switch bank
  - Power liftgate button
  - Warning Systems Switch
  - Power Liftgate ON/OFF switch
  - Steering wheel heater
  - 2nd row seat release buttons
- 8 Parking brake (behind steering wheel)

## Meters and Gauges



# Meters and Gauges

- 
- 1 Tachometer
  - 2 Engine coolant temperature gauge
  - 3 Shift lever indicator
  - 4 Vehicle information display
  - 5 Speedometer
  - 6 Fuel gauge



# Infiniti Intelligent Key System

## REMOTE ENGINE START (IF SO EQUIPPED)

The remote engine start system must be enabled in the vehicle settings within the lower display. To start your vehicle remotely:

1. Press the lock button ① to lock the vehicle.
2. Press and hold the remote engine start button ② within 5 seconds of pressing the lock button ① and the engine will start.

To start driving, depress the brake pedal and push the ignition switch **START/STOP** button to the ON position.

State laws may apply, review local laws before using.

 
## LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch ④ once or press the lock button ① on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch ④ once; the corresponding door will unlock. Push the door handle request switch ④ again within 60 seconds; all other doors will unlock, or
  - Press the unlock button ③ on the key fob to unlock the driver's side door. Press the unlock button ③ again; all other doors will unlock.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



# Seat Adjustments

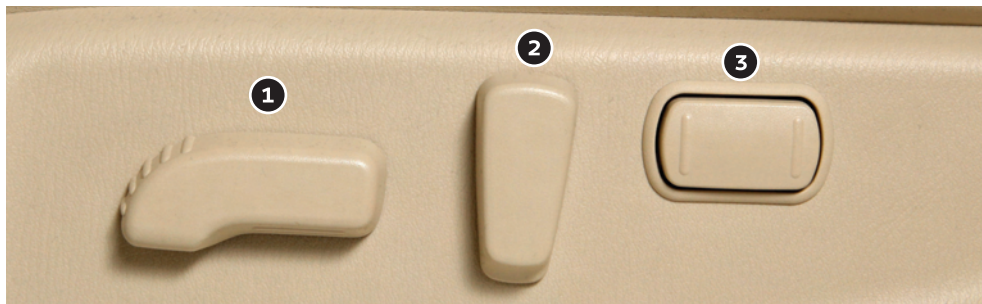

- To slide the seat forward or backward, push the  switch ① forward or backward.
- To recline the seatback, push the  switch ② forward or backward.

## SEAT LIFTER

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the  switch ① up or down.

## LUMBAR SUPPORT

- Push each side of the  adjusting switch ③ to adjust the seat lumbar area until the desired position is achieved.

## SEAT/STEERING POSITIONING ON EXIT

- The shift lever must be in P (PARK) position with the ignition switch in the OFF position.
- The entry/exit function can be activated by pushing **SET** switch ④, located on the driver's side door, and then the corresponding seat switch ⑤.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



## Rear Door Alert

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being driven.

### TURNING THE REAR DOOR ALERT SYSTEM ON:

- Push the Rear Door Alert switch (1). The Rear Door Alert switch indicator light (2) will illuminate.

 


### TURNING THE REAR DOOR ALERT SYSTEM OFF:

- Push the Rear Door Alert Switch (1) again. The Rear Door Alert Switch Indicator light will go off.

### TO DISABLE THE REAR DOOR ALERT SYSTEM:

- When the vehicle is in the **P (Park)** position, a message will appear in the vehicle information display (3). The options "**DISMISS**" or "**DISABLE ALERT**" will be listed.
- Push the ◀ switch (4) to select "**DISMISS**" to clear the display. If no selection is made, the message turns off after a period of time.
- Push the ▶ switch (4) to select "**DISABLE ALERT**" to disable the horn alert for the remainder of the current trip.

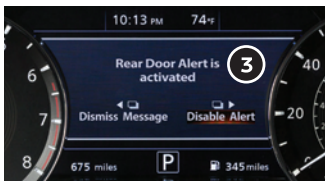

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Head Restraint Adjustment



To raise the head restraint: Pull the head restraint up.  
To lower the head restraint: Push and hold the lock knob (1) and push the head restraint down.

Make sure the head restraint is fully engaged in position after any adjustment.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# Windows

All power windows can be operated through the main switch on the driver's door.

- 1 Power windows open/close
- 2 Disable passengers' window operation

## POWER WINDOW CONVENIENCE OPENING/CLOSING FEATURE

To unlock the vehicle and open the windows simultaneously, press and hold the  button ③ on the Intelligent Key for about 3 seconds after the door is unlocked.

To stop opening, release the  button ③.

The window cannot be closed using the Intelligent Key.

Using the mechanical key:

 
Insert the mechanical key and turn the driver's door key cylinder to the rear of the vehicle for longer than 1 second. The door is unlocked and the window keeps opening while turning the key.

To close the windows, turn the driver's door key cylinder to the front of the vehicle for longer than 1 second. The door is locked and the window keeps closing while turning the key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



# Smart Rear View Mirror (if so equipped)

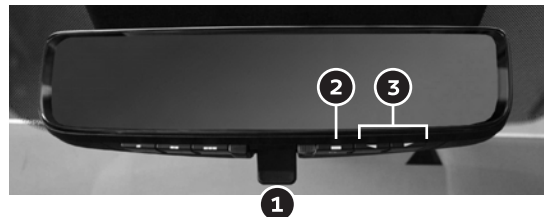

You can switch between the conventional rearview mirror mode and Smart Rear View Mirror mode (camera view mode) by using the mode select lever ①.

- When the Smart Rear View Mirror mode is on, the settings menu can be selected by pressing the menu button ②.
- Press the adjustment buttons ③ to adjust the following settings:
  - Brightness • Down/Up • Left/right
  - Indication • Language • Rotation
  - Dimming Mirror

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# HomeLink® Garage Door Opener

To complete HomeLink® programming, you can download the HomeLink app or read the instructions below.

Before you start programming HomeLink®, park outside and within range of your garage. Then, clear the area around your garage door, place the ignition switch in the ON or ACC position and locate the remote control transmitter, ensuring a fresh battery is installed. Please note, a ladder and secondary person may be needed.

To program HomeLink:

1. Position the handheld transceiver within 3 in (8 cm) from the HomeLink surface.
2. Press and hold the desired HomeLink (1) and garage door opener button. Release both when the indicator (2) flashes rapidly (if so equipped) or "TRAINED" (if so equipped) is displayed in the status area (3) of the mirror.

Before proceeding to the next steps, be sure your garage door is not moving.

 
- Press the HomeLink button (1) for 2 seconds up to 3 times. If the garage door responds, training is complete.

If the garage door doesn't respond:

- Press the "learn" or "set" button (4) on the garage opener until an indicator illuminates. Within 30 seconds, press the HomeLink button (1) in your vehicle for 2 seconds up to 3 times.

If the garage door doesn't respond, please see your owner's manual, go to [www.HomeLink.com/infiniti](http://www.HomeLink.com/infiniti) or call **1-800-355-3515**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

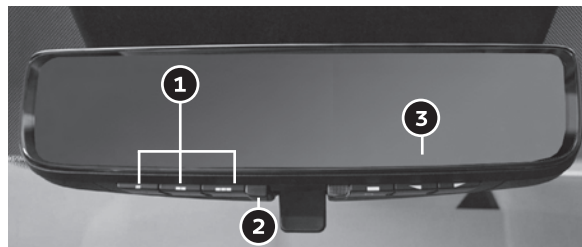


# Exterior Light Operation

- 1 OFF position
- 2 Automatic (**AUTO**) headlight mode ON position (headlights switch on/off automatically depending on ambient light conditions/daytime running light system)
- 3 Headlight ON position
- 4 Side lights, license plate lights and combination meter lighting ON position
- 5 Front fog light switch
- 6 Push the headlight switch forward for the high beams.  
For High Beam Auto-Dimming (Auto position):
  - When the vehicle speed is less than 17 mph (27 km/h), the headlight returns to low beam.
  - To disable high beam auto-dimming, turn headlight switch to headlight ON position 3.
- 7 Pull the headlight switch rearward to flash the high beams.

For normal headlight operation, leave the exterior light switch in the **AUTO** position.

 Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

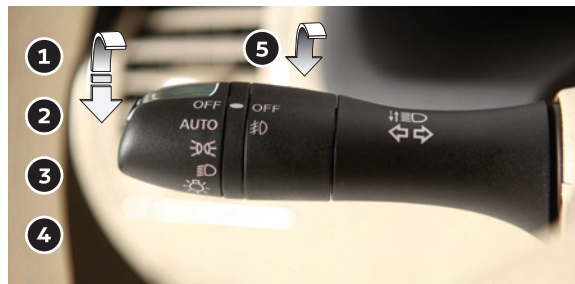



# Wiper and Washer Switch



Move the lever ① up or down to one of the following positions to operate the windshield wipers:

- |             |                             |
|-------------|-----------------------------|
| <b>MIST</b> | One sweep operation         |
| <b>OFF</b>  | Wipers are OFF              |
| <b>AUTO</b> | Rain-sensing automatic wipe |
| <b>LO</b>   | Continuous wipe, slow       |
| <b>HI</b>   | Continuous wipe, fast       |

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring ②.

 
Pull the lever ① toward you operate the windshield washer.



## REAR WIPER AND WASHER

Intermittent (**INT**) – Rear wiper operates intermittently.  
Low (**ON**) – Rear wiper operates at a continuous low-speed.

Push the lever forward ③ to activate the rear washer.

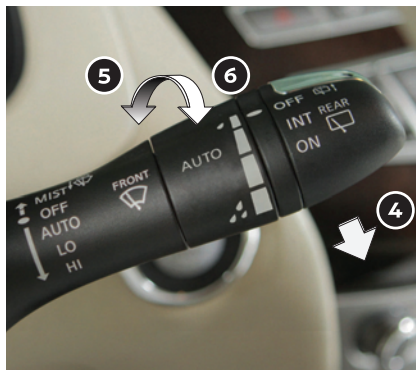

## RAIN-SENSING AUTOMATIC WIPER SYSTEM

To set the Rain-Sensing Automatic Wiper System:

- Push the lever down to the **AUTO** position ④.

The rain sensor sensitivity level can be adjusted by:

- Turning the knob toward the rear (Low) for low sensitive operation ⑤.
- Turning the knob toward the front (High) for high sensitive operation ⑥.

To turn the Rain-Sensing Automatic Wiper System off, push the lever to the **OFF** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Sun Visors



- 1 Pull down the sun visor to block glare from the front.
- 2 Remove the sun visor from the center mount by lifting it slightly and swing it to the side to block glare from the side window.
- 3 Draw out the extension sun visor from the main sun visor to block further glare.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
## Fuel-filler Door



To open the fuel-filler door, unlock the vehicle and gently push the rear side of the fuel-filler door.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Clock Set/Adjustment

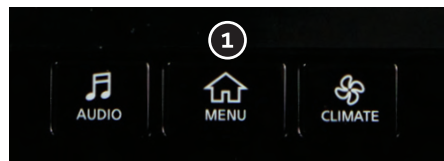

To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button (1) below the lower display. Then select the "Settings" key on the lower display.
2. Select the "Clock" key to adjust "On-Screen Clock", "Daylight Savings Time", "Clock Format (24h)" and "Time Zone".

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## USB Connection Port



Your vehicle is equipped with two USB ports ①, located under the control panel, to which you can connect compatible devices (cellular phones, iPod®, other compatible audio devices, USB memory sticks, etc.).

After connecting your device through one of the USB ports, press the **AUDIO** button on the control panel to select audio playback from the device connected through the USB ports.

A second device can be connected for charging. In order to switch to the second device for audio playback, both devices will need to be removed and the second device reconnected first.

There are also USB charging ports located in the second row on the back of the center console. These ports will charge compatible devices.

 
Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Connecting your Cellular Phone or Device via Bluetooth®\*

Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **MENU** button and touch the "Connections" key.
2. Touch "Devices" and then "Add New". A message is displayed.
3. Operate as guided by the system. (Operations may differ depending on the device.)

The paired cellular phone will be added to the list on the "Connections" screen.

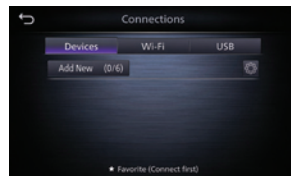

### FAVORITE HANDS-FREE PHONE

- You can register a favorite hands-free phone. The phone device name selected as a favorite will be marked with a star.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Bluetooth® Streaming Audio



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system. After connecting your Bluetooth® device, press the **MEDIA** button ① on the control panel to switch to Bluetooth® Streaming Audio. For any Bluetooth® connectivity issues, reboot your cellular phone or device.

\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# Apple CarPlay®

Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.

If your compatible iPhone does not connect wirelessly, connect your iPhone to the USB connection port located in the center console.

- Depending on the setting, the startup information screen will appear on the upper display.
- Select "Yes" to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

While connected to Apple CarPlay, Siri® operation can be accessed.

There are two ways to start a Siri session:

1. Press and hold the  button on the steering wheel.
2. Select and hold the  key ① on the lower left corner of the Apple CarPlay screen.

Press the  button on the steering wheel or select the  key ① on the lower left corner of the Apple CarPlay screen to end the Siri session.

Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.

 
Some Siri functions may not be available during driving. For functions that can be used with Siri, please refer to the Apple® website.

To return to the Apple CarPlay home screen after operation, select the  key ① on the lower left corner of the Apple CarPlay screen.

To return to the Apple CarPlay screen from the main menu:

1. Press the **MENU** button and select the  Apple CarPlay key ②, or
2. Select the "Information" key ③, select the "Apps" key, and then select the "Apple CarPlay" key.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

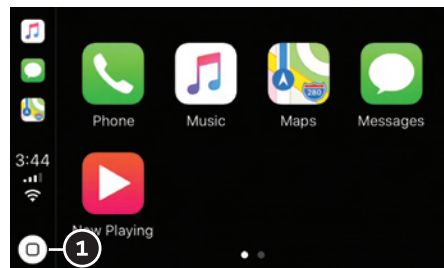

# Android Auto™

Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

## INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

## USING ANDROID AUTO

To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located in the center console.

- Depending on the setting, the startup information screen will appear on the upper display.
- Select "Yes" to use Android Auto.
- After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system. When connected to Android Auto, Google Assistant™ can be accessed. There are three ways to start Google Assistant™:

1. Press and hold the  button on the steering wheel until a beep is heard.
2. Select the  key (1) on the upper right corner of the Android Auto screen.
3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

To return to the Android Auto home screen after operation, select the  key (2) on the Launch Bar.

 
To exit the Android Auto screen, press the **MENU** button or select the  key (3).

To return to the Android Auto home screen from the main menu:

1. Press the **MENU** button and select the  key (4), or
2. Select the "Information" key (5), select the "Apps" key, and then select the "Android Auto" key.

If you have difficulties with connection or performance, try a different USB cable.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

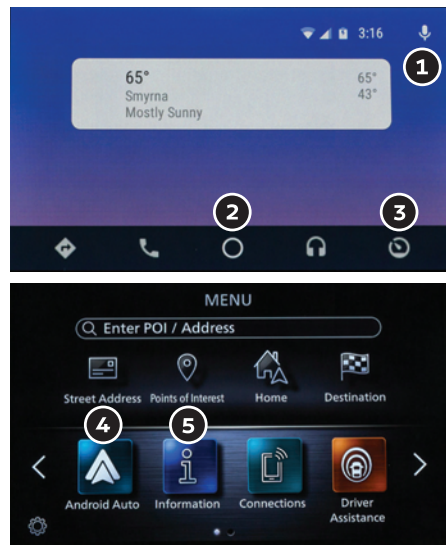



# Navigation System



Use the INFINITI controller ① and **OK** button ② to navigate through the upper display screens.

- Press the **↶** button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

## SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the upper display.

1. Press the **MENU** button ⑤ below the lower display.
2. Select the "Destination" key ⑥ on the lower display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.

## CANCELING A ROUTE

1. Press the **MENU** button ⑤ below the lower display.
2. Select the "Cancel Route" key ⑦ on the lower display.

## GUIDANCE VOLUME

- While guidance is being announced, the guidance volume can be adjusted by turning the audio system volume knob.
  - The guidance volume can also be adjusted in the "Settings" menu.
1. Press the **MENU** button ⑤ below the lower display.
  2. Select the "Settings" key and then the "Volume & Beeps" key ⑧ on the display.
  3. Next, select the "Guidance Volume" key. Use the "-" and "+" keys ⑨ to adjust the volume.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



 
# INFINITI InTouch™ Services (if so equipped)

If equipped, your vehicle may include INFINITI InTouch™ connected features and services such as Emergency SOS Calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more.

For complete information about your INFINITI InTouch™ features and services, please visit [usa.infinitiintouch.com](http://usa.infinitiintouch.com) or call **1-855-444-7244**. For frequently asked questions, please visit [www.infiniti.com/intouch/faq](http://www.infiniti.com/intouch/faq).

To access INFINITI InTouch™ Services:

1. Press the **MENU** button ① under the lower display.
2. Select the "InTouch Services" key ② on the lower display.
- Press the in-vehicle telematics **SOS** button ③ (if so equipped) in case of an emergency, located above and in front of the rearview mirror.

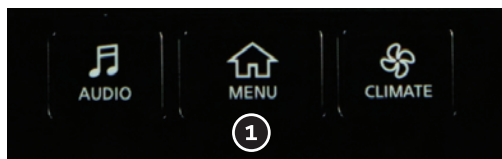

## INFINITI INTOUCH™ SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account.  
(<https://owners.infiniti.com/iowners/>)
2. From your INFINITI Owner Portal account, enroll in INFINITI InTouch™ Services.
3. Download the INFINITI InTouch™ Services companion app from the App store and log in using your INFINITI Owner Portal ID and password.

Available services may include:

- Automatic Collision Notification
- Emergency SOS Calling
- Wi-Fi

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# Voice Recognition



## SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

## USING THE VOICE RECOGNITION SYSTEM

- Press the  button (1) on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button (1) on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button (1) on the steering wheel.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# Infiniti Mobile Entertainment System (MES) (if so equipped)



With this entertainment system, you can play video files on the rear display screen ①.

## Watching videos:

- Connect your compatible device to the USB connection port or HDMI port located at the rear of the center console box.
- The source can be changed on the rear displays using the remote by pressing the **HOME** button ②.



## REAR DISPLAYS

To turn the rear displays on and off from the front seats:

1. Press the **MEDIA** button ③ on the control panel.
2. Select the "Left Disp." or "Right Disp." key.

- ② **HOME** – Change video source
- ④ **POWER** – Turn display screen on and off
- ⑤ **DISPLAY SELECT** – Change display controls between right and left screen
- ⑥ **MENU** – Change menu display
- ⑦ **ENTER/Selection Buttons** – Control and select buttons
- ⑧ **BACK** – Previous menu button
- ⑨ **SETUP** – Bring up display menu
- ⑩ **Video Controls** – Play, stop, fast forward and rewind buttons
- ⑪ **Volume** – Control audio level

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Parking Brake



To apply the parking brake, fully depress the parking brake pedal ①.

To release the parking brake:

- Firmly apply the foot brake ②.
- Depress the parking brake pedal ① and the parking brake will be released.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Cruise Control

### SETTING A CRUISING SPEED

- Push the **ON/OFF** switch ① to turn on the system.
- With the vehicle at the desired speed, push down the switch ② to **COAST/SET** to enable cruise control.
- The cruising speed can be adjusted to a higher or lower speed by toggling the switch ② up or down.

### CANCELING THE PRESET SPEED

- Push the **CANCEL** switch ③ or tap the brake pedal.

### INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.

- To increase the distance to the vehicle ahead to be maintained by the ICC system, push the distance switch ④ until the display shows the desired set distance, which is shown by the number of lines on the set distance indicator ⑤.
- When a vehicle is detected ahead, a car icon will illuminate on the vehicle ahead detection indicator ⑥ and your vehicle will reduce the speed to match the slower vehicle.

To use Conventional (fixed speed) Cruise Control mode (if so equipped):

- While cruise control is off, push and hold the **ON/OFF** switch ① for more than 1.5 seconds. The cruise indicators are displayed.
- Accelerate to the desired speed.
- Push the switch ② down toward **COAST/SET** and release it. The color of the cruise indicator changes to green and set vehicle speed indicator is displayed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
### CONVENTIONAL CRUISE CONTROL (if so equipped)



### INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)



## Blind Spot Warning (BSW)

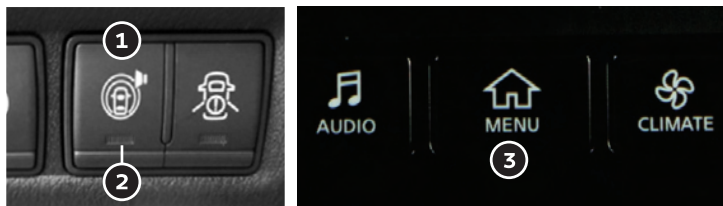

- The Blind Spot Warning (BSW) can help alert the driver of other vehicles in the blind spot area when changing lanes.
- When the Warning Systems switch (1) is turned off, the warning systems ON indicator light (2) on the switch is off.


### TURNING BLIND SPOT WARNING ON OR OFF

 1. Push the **MENU** button (3) and touch "Driver Assistance" on the lower display.
2. Touch "Blind Spot Assist".
3. Touch "Blind Spot Warning" to enable or disable the system.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Forward Emergency Braking with Pedestrian Detection

- The Forward Emergency Braking (FEB) system can assist the driver when there is a risk of a forward collision with the vehicle ahead in the traveling lane or with a pedestrian.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light (1) will illuminate. If the driver applies the brakes after the warning and the FEB detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB will issue a second flashing visual warning (2), an audible warning and also apply partial braking.

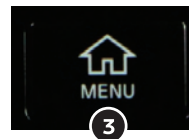

### TURNING FORWARD EMERGENCY BRAKING WITH PEDESTRIAN DETECTION ON OR OFF

1. Push the **MENU** button (3) and touch "Driver Assistance" on the lower display.
2. Touch "Emergency Assist".
3. Touch "Emergency Braking" to turn the system ON/OFF.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



 
# Around View<sup>®</sup> Monitor with Moving Object Detection

- With the ignition switch in the **ON** position, activate the Intelligent Around View<sup>®</sup> Monitor by pressing the **CAMERA**  button ①, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.

## MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (Drive)**, **N (Neutral)**, **R (Reverse)** or **P (Park)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
  - Green **MOD** icon ②; the system is active.
  - White **MOD** icon; the system is not active.
  - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The **MOD** system will not operate if the liftgate is open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

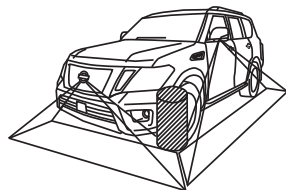

## Hill Start Assist

The Hill Start Assist system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- The Hill Start Assist system will operate automatically under these conditions:
  - The shift lever is shifted into a forward or a reverse gear.
  - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist system will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Lane Departure Warning (LDW) (if so equipped)

 
Lane Departure Warning (LDW) warns you if the vehicle is beginning to leave the traveling lane.

- LDW is activated at speeds of 45 mph (70 km/h) and above and the lane markings are clear.
- If a front wheel passes over a lane marking, LDW will warn you through a visual alert ① and an intermittent vibration in the steering wheel for up to 1.5 seconds.
- The Warning Systems switch ② is located in the lower switch bank.



### TURNING LANE DEPARTURE WARNING ON OR OFF

1. Push the **MENU** button ③ and touch "Driver Assistance" on the lower display.
2. Touch "Blind Spot Assist".
3. Touch "Blind Spot Warning" to turn Lane Departure Warning ON or OFF.

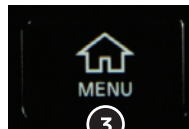


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Predictive Forward Collision Warning (PFCW)

 The Predictive Forward Collision Warning (PFCW) system uses a sensor in front of the vehicle to analyze the distance and speed of the vehicle ahead.

- The PFCW system operates above speeds of 3 mph (5 km/h).
- If there is a risk of a forward collision, a warning to the driver by flashing indicator will appear ①, along with an audible alert.

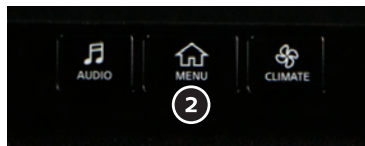

### TURNING PREDICTIVE FORWARD COLLISION WARNING ON OR OFF

1. Press the **MENU** button ② below the lower display.
  2. Touch the "Driver Assistance" key ③ on the lower display.
  3. Touch the "Emergency Assist" key
  4. Touch the "Emergency Braking" key to turn system on or off.
- A warning light ④ will illuminate when the system is off. The PFCW system automatically turns back on when the engine is restarted.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Back-Up Collision Intervention (BCI) (if so equipped)


The I-BI system can help alert the driver of an approaching vehicle or objects behind the vehicle when backing out of parking spaces.



- I-BI system will turn on when the shift lever is in reverse and the vehicle speed is less than 5 mph (8 km/h).
- Warning chimes and the indicator light ① located near the outside mirrors will illuminate and indicators will appear on the touch screen display ②.

### TURNING INTELLIGENT BACK-UP INTERVENTION (I-BI) ON OR OFF

 1. Press the **MENU** button ③ below the lower display.
2. Touch "Settings" and then touch "Camera" on the lower display.
3. Touch "Camera"
4. Touch the "BCI" key ④ to turn the system ON or OFF.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



# Memo





# Memo





Printing August 2020  
QR21EA 0Z62U1  
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to [www.infinitiquickguide.com/2021/qx80](http://www.infinitiquickguide.com/2021/qx80) or snap this barcode with an appropriate barcode reader.



INFINITI®