



QUICK REFERENCE GUIDE

2021 NV PASSENGER VAN

COCKPIT OVERVIEW

 


Behind
steering
wheel

COCKPIT OVERVIEW

- 1** Low Tire Pressure Warning Light (!)
- 2** Wiper and Washer / Headlight Beam Select ≡D / Turn Signal Control Switch
- 3** Trip Computer Info Knob
- 4** Trip Computer
- 5** Instrument Brightness Control / Trip Odometer Reset Switch
- 6** Steering Wheel Switches for Audio / Bluetooth®
- 7** Cruise Control
- 8** Fog Light Switch ≡D
- 9** Headlight Control Switch ≡D
- 10** Tilt Steering Column
- 11** Outside Mirror Control Switch
- 12** Vehicle Dynamic Control (VDC) OFF Switch OFF

INSTRUMENT PANEL

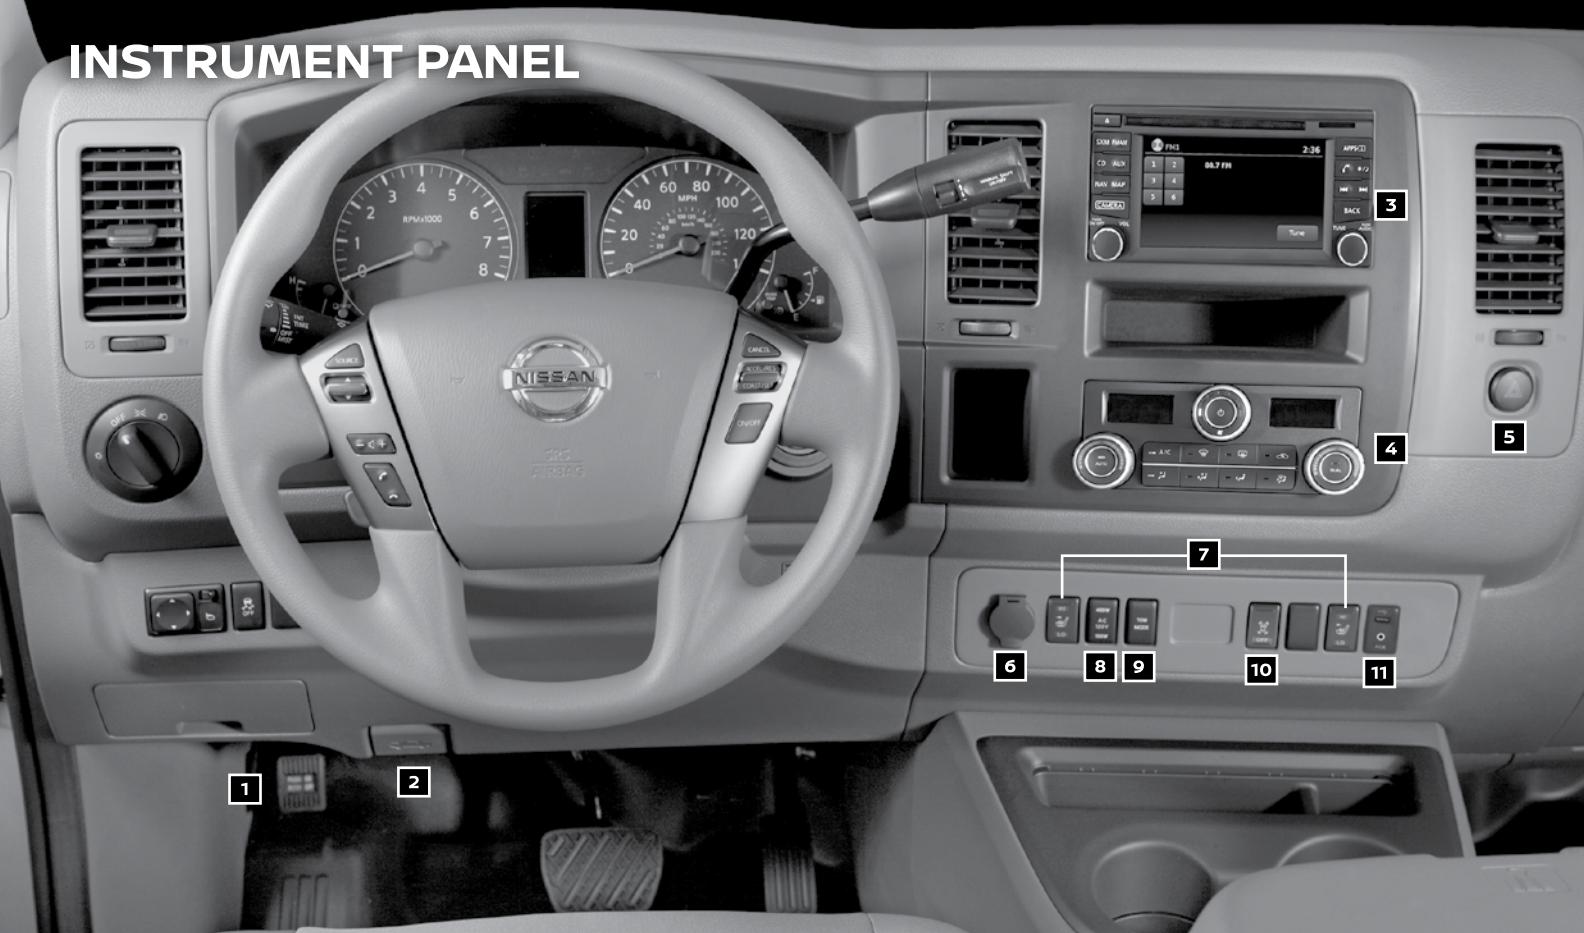

INSTRUMENT PANEL

- 1** Parking Brake
- 2** Hood Release 
- 3** Audio and Navigation System
- 4** Heater and Air Conditioner (automatic)
- 5** Hazard Warning Flasher Switch
- 6** Power Outlet
- 7** Heated Seat Switch 
- 8** Power Inverter Switch
- 9** Tow Mode Switch
- 10** Front and Rear Sonar System OFF Switch 
- 11** USB/AUX and iPod® Jack

TABLE OF CONTENTS

GETTING STARTED

Remote Keyless Entry System	2
Front Power Seat Adjustment (if so equipped for driver's seat)	2
Opening the Back Doors	2
Operating the Sliding Door	3
Removing the 2 nd , 3 rd and 4 th Row Seats	3
Installing the 2 nd , 3 rd and 4 th Row Seats	4
Starting/Stopping the Engine	5
Outside Mirror Control Switch	5
Heater and Air Conditioner (automatic) (if so equipped)	6
Rear Climate Controls	7
Headlight Control Switch	8
Wiper and Washer Switch	9
Trip Computer	9
Tire Pressure Monitoring System (TPMS)	10
Loose Fuel Cap	11
Fuel-filler Door	11
Power Outlets	11
Power Inverter Switch (if so equipped)	12

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

Clock Set/Adjustment (if so equipped)	13
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface	14
Bluetooth® Hands-free Phone System	14
• System Operating Tips	14
Bluetooth® System without Navigation (if so equipped)	15
Bluetooth® System with Navigation (if so equipped)	17
FM/AM/SiriusXM® Radio with CD Player (if so equipped)	19
Navigation System (if so equipped)	20
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped)	21
Nissan Mobile Partner (if so equipped)	21
Hands-free Text Messaging Assistant	23

DRIVING FEATURES

Cruise Control	24
RearView Monitor	24
Front and Rear Sonar Switch (if so equipped)	25



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

REMOTE KEYLESS ENTRY SYSTEM

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your key fob.
- To unlock the driver's door, press the  button on your key fob.
- Press the  button again within 5 seconds and all doors will unlock.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENT (if so equipped for driver's seat)

- To slide the seat forward or backward, push the switch  forward or backward.
- To adjust the angle of the seatback, push the switch  forward or backward.

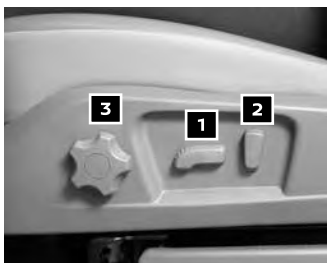

SEAT LIFTER

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch  up or down.

MANUAL LUMBAR SUPPORT

- Turn the knob  to adjust the seat lumbar area.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety—Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

OPENING THE BACK DOORS

- Unlock the vehicle by pressing the  button on your key fob twice.
- Pull the door handle  toward you to open the right back door.



- Lift the lever on the back door **2** and pull the door to open.
- To open either door to the wide open position, pull the release latch **3** toward the back door to release the check-link arm.
- Open the door slowly until the magnetic door stopper connects to the stop pad on the outside of the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



OPERATING THE SLIDING DOOR

- The sliding door can be opened from the inside or outside of the vehicle.
- To open the sliding door from the inside, pull the release lever **1** down and pull the handle **2** toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the inside, pull the release lever **1** down. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



REMOVING THE 2nd, 3rd AND 4th ROW SEATS

1. On the back of the seat, remove the pull straps **1** from the stowed position.
2. Stand directly behind the seat and pull up and rearward on the pull straps to disengage the seat.

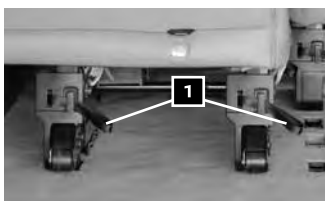

GETTING STARTED

3. Push up and forward to remove the seats from the wells.
4. Rest the seat on the vehicle floor, and with two people, remove the seat from the vehicle.
5. Store the seat in a safe location.
 - The 4th row seats have rollers on the seat frame to make them easier to move.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety—Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.



INSTALLING THE 2nd, 3rd AND 4th ROW SEATS

1. Make sure the seat mounting locations are free from objects.
2. Check the latches to make sure that they are in the open position. Pull the pull strap if the latch is closed.
3. Using two people, bring the seat to the appropriate mounting position.
4. Push up on the rear of the seat.
5. Line up the seat with the mounting locations. Tilt the seat slightly forward so the front hooks engage into the front mounting locations.
6. Push up on the rear of the seat so the rear latches are 4 in (10 cm) above the floor. Make sure that the area beneath the seat is clear. Release the seat so the rear latches drop into the mounting locations and lock.



7. Check the front hook and rear latch to make sure the latches are locked into the mounting locations.
8. Push and pull each seat to ensure the seat is properly engaged. Check that the latch indicator does not show more than 50% red. If necessary, pull the pull straps and re-latch the seats.
9. When the seats are secure, place the pull straps in their holders to keep them from being inadvertently pulled.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety—Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.



STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.



OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the small switch **1** to select the left or right mirror.
- Adjust each mirror to the desired position using the large switch **2**.



GETTING STARTED

- Move the small switch **1** to the center (neutral) position to prevent accidentally moving the mirror.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL DIAL/OFF BUTTON

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.
- Press the button to turn the system off.

4 AIR FLOW CONTROL BUTTONS

- Press the air flow control buttons to manually control air flow.



Air flows from the center and side vents.



Air flows from the center, side and foot vents.



Air flows mainly from the foot vents.



Air flows from the front defroster and foot vents.

5 FRONT WINDOWS DEFROSTER BUTTON

- Press the front defroster button  to turn the system on: The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows, set the driver's side temperature control dial **1** and fan speed control dial **3** to their maximum settings.

6 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window and outside mirror (if so equipped) defroster switch  to turn the system on or off.
- The rear window and outside mirror (if so equipped) defroster automatically turns off after approximately 15 minutes.

7 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .

8 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

REAR CLIMATE CONTROLS

1 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial to the left to decrease fan speed or to the right to increase fan speed.
- Turn the dial all the way to the left to turn off the fan.



GETTING STARTED

2 TEMPERATURE CONTROL DIAL

- The temperature control dial adjusts the temperature and air flow of the outlet air.
- Turn the dial to the left for cooler air or to the right for warmer air.
- When the temperature control dial is turned all the way to the left, the air flows only from the ceiling vents. When the temperature control dial is turned all the way to the right, the air flows only from the floor vents beneath the 2nd and 3rd row seats.
- When the temperature control dial is turned toward the center settings, air flows from both the floor and ceiling vents.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position **2** to turn on the headlights.



HIGH BEAM SELECT

- With the headlights ON, push the lever forward **3** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the lever back to the original position to select the low beam function and the blue indicator light will extinguish.
- Pull and release the lever **4** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Push the fog light switch **5** to turn the fog lights on.
- To turn them off, push the fog light switch **5** again.
- The fog lights will turn off if the headlights are turned off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

 
 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Intermittent (**INT**) - Wipers operate intermittently by moving the lever to the **INT** position and then rotating the control ring **2** to increase or decrease INT wiper speed.
- 3** Low (**LO**) - Wipers operate at a continuous low-speed.
- 4** High (**HI**) - Wipers operate at a continuous high-speed.
- 5** Mist (**MIST**) - One sweep operation of the wipers.
- 6** To activate the washer, press the button on the end of the lever. The wipers will operate several times.

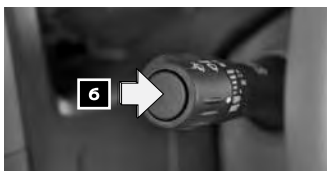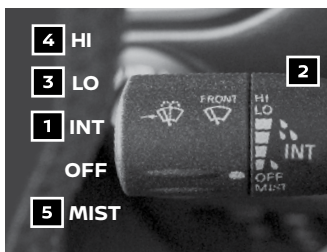

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

 
TRIP COMPUTER

- Turn the **INFO** knob **1** to display the following modes in the trip computer **2**:
 - **RANGE** - Displays the estimated distance the vehicle can be driven before refueling.
 - **AVG MPH** - Displays the average speed since the last reset.
 - **TIME** - Displays the time driven since the last reset.
 - **TIRE INFO** - Push to display the specific tire pressure of each tire (except the spare).



GETTING STARTED

- **SETTINGS** – The setting mode allows you to set reminders or preferences for maintenance intervals, to reset the TPMS after rotating the tires or to change the unit of the display. In the setting mode screen, turn the **INFO** knob **1** to select settings. Press the **INFO** knob **1** to select and change one of the menu items.

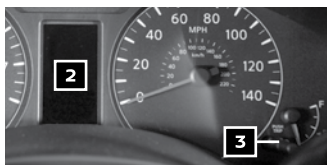


- **WARNING** – Displays when a warning is present.

- To reset **TRIP A** or **TRIP B**, go to the desired mode on the trip computer and press and hold the **PUSH TRIP** knob **3** for more than 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

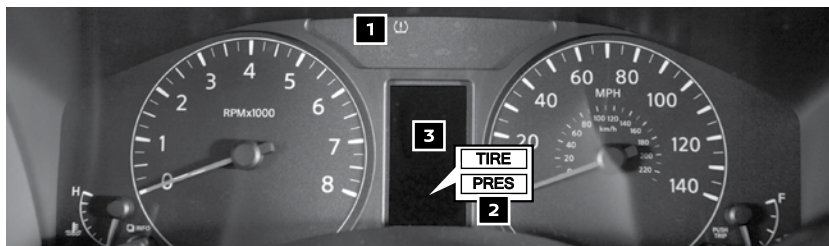

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- The low tire pressure warning light **1** and a **TIRE PRES** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible within the trip computer **3** when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**", the "**In case of emergency (section 6)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the **INFO** knob **2** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the lid open.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

POWER OUTLETS

12V OUTLETS

- The power outlets are for powering electrical accessories such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- Open the cap to use a power outlet.
- The power outlets on the instrument panel **1** and the 3rd row (if so equipped) **2** are powered only when the ignition switch is in the **ACC** or **ON** position.

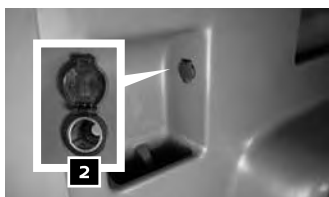

GETTING STARTED

- The power outlet located inside the center console storage box (if so equipped) **3** is powered directly by the vehicle's battery.

120V OUTLETS (if so equipped)

- There are two 120V power outlets supplied with your vehicle. They are located inside the center console storage box **4** and in the rear luggage area **5**.
- Use the 120V power outlets with the engine running to avoid discharging the vehicle's battery.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

POWER INVERTER SWITCH (if so equipped)

- The power inverter switch is located on the control panel below the climate controls. This switch controls power provided to the 120V outlets.
- To use the outlets for items requiring between 150W and 400W, stop your vehicle, place the shift lever in the **P (PARK)** position, place the ignition switch in the **ON** position and push the power inverter switch.
- **400W** or **150W** will illuminate on the switch according to the mode selected.
- Only the 150W mode is available when the ignition switch is placed in the **ACC** or **ON** position or while the vehicle is being driven.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT (if so equipped)

FM/AM RADIO (if so equipped)

- To adjust the time and the appearance of the clock on the display:

1. Touch the "Settings" key **1**.
2. Touch the "Clock" key **2**.

- The following settings can be adjusted:

- **On-Screen Clock:** Sets the clock display on/off. When this item is on, the clock display appears.
- **Clock Format:** The clock can be set to 12 hours or 24 hours.
- **Daylight Savings Time:** Turn on/off the daylight savings time setting.
- **Set Clock Manually:** Adjust the clock manually. Touch the "+" or "-" keys to adjust the hours, minutes, day, month and year up or down. Clock Mode must be set to Manual for this option.



- Touch the  key **3** to return to the previous screen.

WITH NAVIGATION SYSTEM (if so equipped)

- To adjust the time and the appearance of the clock on the display:

1. Press the APPS  button **4**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" keys to adjust the hours, minutes, day and month up or down.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- **Time Zone:** Touch the "Time Zone" key **5** to choose from the applicable time zone list and/or touch "Daylight Savings Time" to switch between ON and OFF.
- **Auto:** Automatically sets the clock to the vehicle's current location.



- Press the **BACK** button **6** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port/AUX jack **1** is located on the control panel in front of the shift lever.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/AUX jack **1**, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- Reduce background noise as much as possible by closing windows and pointing heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, wait 5 seconds, say "Cancel" or "Quit", or press and hold the  (for vehicles without navigation) or  (for vehicles with navigation) button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the volume control knob on the audio system while the audio system is responding.
- If the Nissan Voice Recognition System does not recognize your voice commands, please see your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

 
CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
 1. Press the  **MENU** button on the control panel.
 2. Touch the "Connections" key on the screen.
 3. In the Bluetooth tab, touch the "Add New" key to connect a phone.
 4. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.




AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.
 - Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen display shows the connection is successful, or press the **HOME MENU** button on the control panel, touch the "Connections" key and confirm that your cellular phone is listed.
5. When connecting is complete, the screen will return to the Phone menu display.

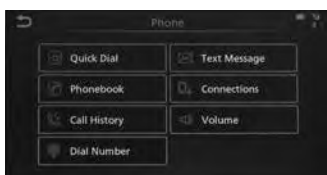

PHONEBOOK SETUP

 - Press the **HOME MENU** button on the control panel.
 - Touch the "Phone" key and then touch the "Phonebook" key.
 - Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
 - The Quick Dial phonebook can also be set with up to twenty entries that can be used with your cellular phone.
1. From the "Phone" display screen, touch the "Quick Dial" key.
 2. Touch the "Edit" key and then the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Phonebook" to save a number that has been downloaded from your handset to the vehicle.


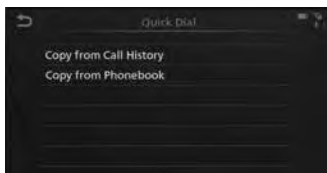


MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.
1. Press the **VOICE** button on the steering wheel.
 2. After waiting for the tone, say "Call".
 3. The system will ask for a phonebook name followed by location type if known.
 4. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
 5. If it does not automatically dial, confirm the correct name and location is recognized by saying or selecting the item number.

RECEIVING/ENDING A CALL

  - To accept the call:
 - Press the  button on the steering wheel, or
 - Touch the “Answer” key on the touch-screen display.
- To reject the call:
 - Touch the “Decline” key on the touch-screen display.
- To hold the call:
 - Touch the “Hold Call” key on the touch-screen display.
- To hang up:
 - Press the  button on the steering wheel, or
 - Touch the “Hang up” key on the touch-screen display.

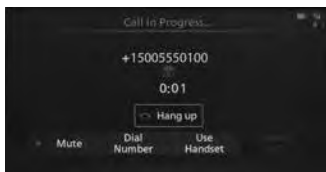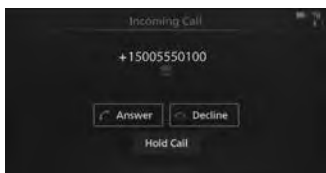

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

 
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **APPS+** button on the control panel.
2. Touch the “Settings” key **1**.
3. Touch the “Phone & Bluetooth” key **2**.
4. Touch the “Connect New Device” key **3**.
5. Initiate the connecting process from the handset. The system will display the message:

“Is PIN XXXXXX displayed on your Bluetooth device?”

If the PIN is displayed on your Bluetooth® device, select “Yes” to complete the connecting process.

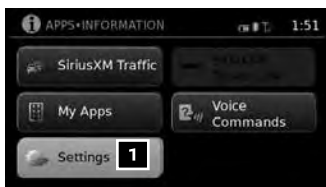


AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

VEHICLE PHONEBOOK

To access the vehicle phonebook:

 1. Press the  button on the control panel.
2. Touch the "Phonebook" key .
3. Choose the desired entry from the displayed list.

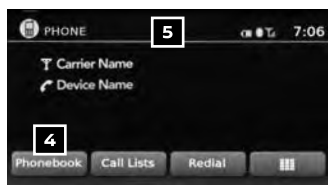


MAKING A CALL

1. Press the  button on the control panel. The "PHONE" screen  will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 - : Input the phone number manually using the keypad displayed on the screen.

RECEIVING/ENDING A CALL

 - To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  icon on the screen.
- To end a cellular phone call, either:
 - Press the  button on the steering wheel, or
 - Touch the  icon on the screen.

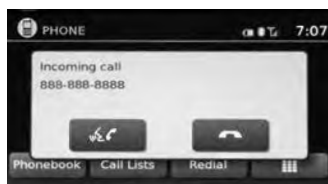

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.



FM/AM/SiriusXM® RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display, and the sound will resume. Programming is now complete.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV button** – Press to access the functions of the Navigation System.
- 2 MAP button** – Press to display the current location map screen.
- 3 VOL (volume) control knob** – Turn right to increase the volume or left to decrease the volume.
- 4 + key** – Touch to zoom the map in.
- 5 - key** – Touch to zoom the map out.

- 6 APPS**  button – Press to access SiriusXM® Traffic messages, SiriusXM® Travel Link, MyApps, Voice Commands and Settings.
- 7**  button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn on the display.
- 8 BACK** button – Press to return to the previous screen.
- 9 TUNE** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® System Owner's Manual.

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

NISSAN MOBILE PARTNER (if so equipped)

- Your vehicle may be equipped with Nissan Mobile Partner, allowing you to control various compatible smartphone applications through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle. For more details about your Nissan Mobile Partner trial, please visit www.nissanusa.com/connect/faq#apps-&-features.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To enroll in Nissan Mobile Partner:
 1. Create a Nissan Owner Portal account at **owners.NissanUSA.com**.
 - Make sure to include your vehicle's VIN when creating your account.
 2. Under the Nissan Mobile Partner tab, select the red button next to Manage Subscription to enroll.
 3. Next, download the Nissan Mobile Partner companion app from Google Play™ store or the App Store®. Log into the companion app using your Nissan Owner Portal ID and password.
 4. Launch the app, select "United States", and accept the Terms and Conditions.
 5. Select "Sign In", then sign in with the email username and password you created when registering on the Nissan Owner Portal website.
- Connect your cellular phone to the vehicle.
 - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-free Phone system.
 - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your cellular phone's USB cable.
- You can select which apps you want activated in the vehicle from the Nissan Mobile Partner companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some apps require you to have the app downloaded and installed on your phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnect application site are available on all models.
- To help identify specific apps available for your vehicle or to contact a specialist via chat, please visit **www.NissanUSA.com/connect/support**.
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet. For additional information on connecting your device, see your Owner's Manual or visit **www.NissanUSA.com/bluetooth**.
- The Nissan Mobile Partner app must be running on your device and the **Connected** icon **1** must be green before using your apps. If the **Disconnected** icon **2** is displayed, press the **APPS** **3** button **3** multiple times to ensure the connection is established.
- To access your apps with the vehicle controls, start your vehicle and then press the **APPS** **3** button **3** on the control panel. The system may take a few seconds to boot up before it is enabled. This is normal.



- If available, your apps can be accessed once the vehicle and cellular phone are connected through the Nissan Mobile Partner companion app.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

DRIVING FEATURES

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4**.
- To turn off cruise control, push the **ON/OFF** switch **1**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

REARVIEW MONITOR

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
 - Green 10 ft (3 m) (if so equipped)



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

FRONT AND REAR SONAR SWITCH (if so equipped)

- The front and rear sonar system detects obstacles both in front of and behind the vehicle. The system is activated when the ignition switch is in the ON position and the shift lever is moved to either the **R (REVERSE)** or **D (DRIVE)** position.
- When moving forward, the front sonar system will beep to alert you to obstacles within 3 ft (1.0 m) of the front bumper.
- When backing up, the rear sonar system will beep to alert you to obstacles within 5.9 ft (1.8 m) of the rear bumper.
- Turn the system off by pushing the sonar system **OFF** switch **1**. Push the switch again to enable the system. The system will automatically reset the next time the ignition switch is in the ON position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2021/nvpassengervan or snap this barcode with an appropriate barcode reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://www.nissanusa.com/vehicles/commercial/nv-passenger/ownership.html>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

