



QUICK REFERENCE GUIDE

2021 NV200 COMPACT CARGO

 
COCKPIT OVERVIEW



COCKPIT OVERVIEW

- 1 Trip Computer
- 2 Low Tire Pressure Warning Light (!)
- 3 Instrument Brightness Control/Trip Odometer Reset Switch
- 4 Headlight and Turn Signal Switch
- 5 Wiper and Washer Switch
- 6 Steering Wheel Switches for Audio/Bluetooth®
- 7 Cruise Control
- 8 Vehicle Dynamic Control (VDC) OFF Switch 
- 9 Outside Mirror Control Switch

INSTRUMENT PANEL

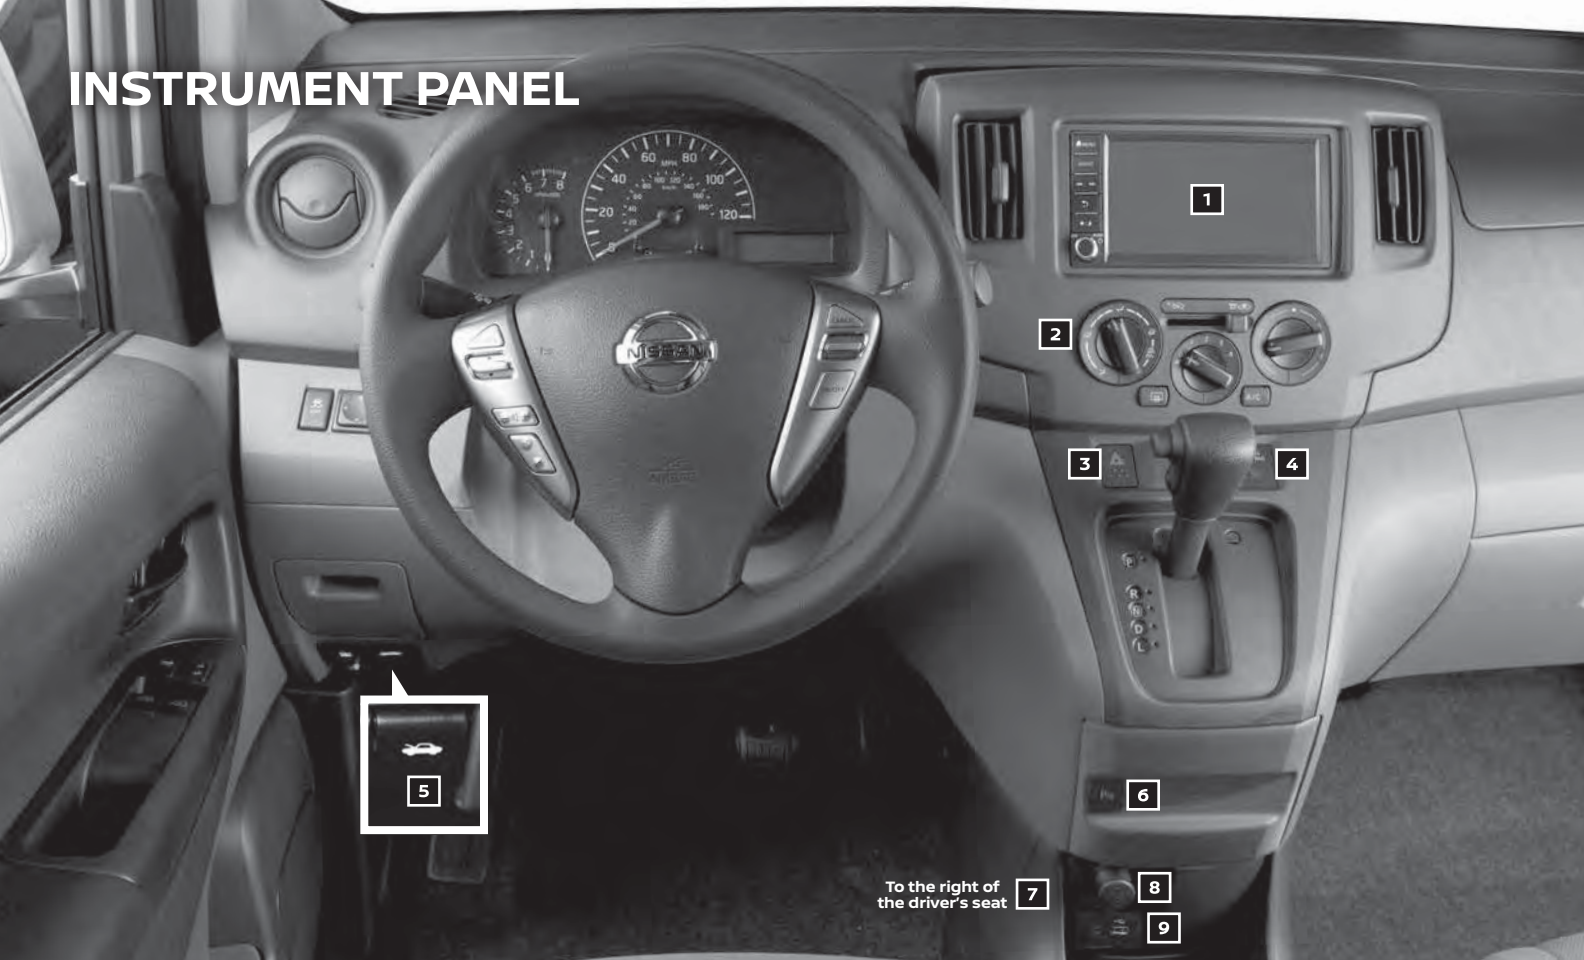

1

2

3

4

5

6

7

8

9

To the right of
the driver's seat

INSTRUMENT PANEL

- 1** Audio System
- 2** Climate Controls
- 3** Hazard Warning Flasher Switch
- 4** Front Passenger Air Bag Status Light
- 5** Hood Release 
- 6** Rear Sonar System OFF Switch
- 7** Parking Brake
- 8** Power Outlet
- 9** USB Connection Port/AUX Input Jack

TABLE OF CONTENTS

GETTING STARTED

Power Outlets.....	2
Tire Pressure Monitoring System (TPMS)	2
Loose Fuel Cap.....	3
Fuel-filler Door	3
Opening the Back Doors.....	3
Operating the Sliding Doors	4
Manual Seat Adjustment.....	4
Remote Keyless Entry System (if so equipped)	5
Outside Mirror Control Switch (if so equipped)	5
Starting/Stopping the Engine	6
Headlight Control Switch	6
Wiper and Washer Switch.....	7
Heater and Air Conditioner (manual)	7
Trip Computer	8

AUDIO AND BLUETOOTH® SYSTEMS

Clock Set/Adjustment	10
FM/AM/SiriusXM® Radio	10
Apple CarPlay®.....	11
Android Auto™.....	12
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface	13
Bluetooth® Hands-free Phone System	14
• System Operating Tips	14
Hands-free Text Messaging Assistant	15

DRIVING FEATURES

Rear Sonar System (if so equipped).....	17
RearView Monitor.....	17
Cruise Control (if so equipped).....	17



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

 
For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

POWER OUTLETS


12V OUTLETS

- The power outlets are for powering electrical accessories, such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- Open the cap or remove the plug to use a power outlet.
- The power outlets located below the shift selector **1** and on the back of the center console **2** (if so equipped) are powered only when the ignition switch is in the **ACC** or **ON** position.

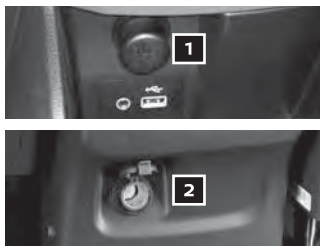

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

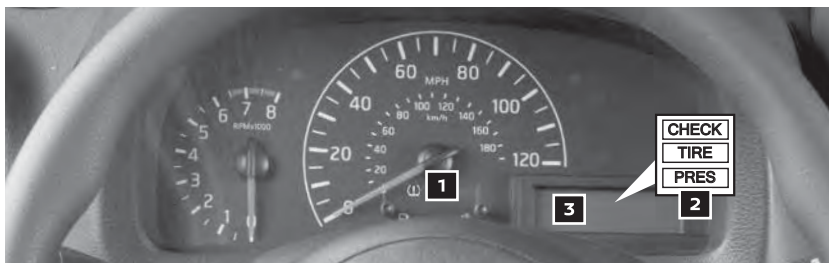

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- The low tire pressure warning light **1** and a **CHECK TIRE PRES** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible within the trip computer **3** when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately one minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"**, the **"Starting and driving (section 5)"**, the **"In case of emergency (section 6)"**, the **"Do-it-yourself (section 8)"** and the **"Technical and consumer information (section 10)"** of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the fuel-filler door release **1**.
- The fuel-filler door is located on the passenger's side of the vehicle.

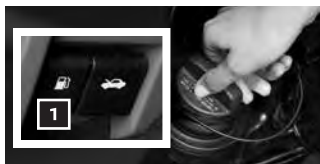

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

OPENING THE BACK DOORS

- Unlock the vehicle by pressing the  button on your key fob (if so equipped) twice.
- Pull the handle **1** to open the right side back door.
- Turn the lever **2** on the left side back door and pull the door to open.
- To open either door to the wide open position, pull the release lever **3** toward the front of the vehicle to release the check-link arm.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

GETTING STARTED

OPERATING THE SLIDING DOORS

- The sliding door can be opened from the inside or the outside of the vehicle.
- To open the sliding door from the inside, pull the handle **1** toward the rear of the vehicle and slide the door until it clicks into the detent.
- To close the sliding door from the inside, pull the handle **1** toward the front of the vehicle. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks into the detent.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

MANUAL SEAT ADJUSTMENT

- Pull up on the bar **1** under the front of the seat and slide forward or backward. Release the bar to lock the seat in position.
- Pull up on the lever **2** and lean back to recline the seatback. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



SEAT LIFTER (driver's seat)

- Pull up or push down on the lever **3** repeatedly to adjust the seat height.

LUMBAR SUPPORT (if so equipped for driver's seat)

- Move the lever **4** forward or backward to adjust the seat lumbar area.



FLAT FOLD PASSENGER SEAT

- Slide the passenger seat to the rear most position using the adjustment bar **1**.
- Lift up on the lever **2** and fold the seatback as far forward as it will go.
- Move the lever **5**, located on the inside of the seatback, forward to release the back of the seat.
- Push down the seatback until it is flat.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.



 
REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the **1** button on your key fob.
- To unlock the driver's door, press the **2** button on your key fob.
- Press the **2** button again within 5 seconds, and all doors will unlock.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

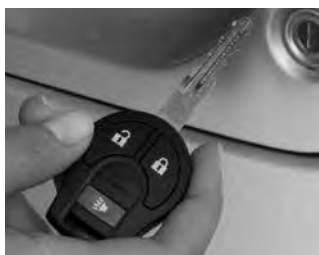

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the switch **1** to select the left or right mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the center (neutral) position to prevent accidentally moving the mirror.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



GETTING STARTED

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (Park)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (Park)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position **2** to turn on the headlights.

HIGH BEAM SELECT

- With the headlights in the  position, push the headlight control switch forward **3** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight control switch back to the original position to select the low beam function. The blue indicator light will extinguish.
- Pull and release the lever **4** to flash the headlight high beams on and off.

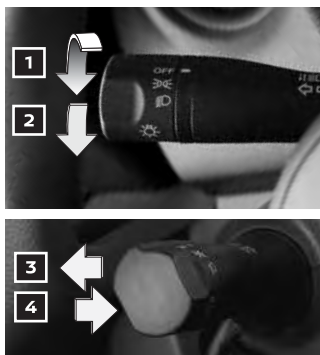

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. The turn signal will automatically flash three times (if so equipped). Hold the lever until the lane change is completed.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Intermittent (**INT**) – Wipers operate intermittently by moving the lever down to the **INT** position and then rotate the control ring **3** to increase or decrease **INT** wiper speed.
- 4** Low (**LO**) – Wipers operate at a continuous low-speed.
- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

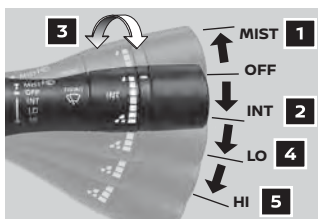

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



HEATER AND AIR CONDITIONER (manual)

1 AIR FLOW CONTROL DIAL

- Turn the dial to select one of the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot outlets.
-  Air flows mainly from the foot outlets.
-  Air flows from the front defroster and foot outlets.
-  Air flows mainly from the front defroster vents.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

GETTING STARTED

2 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL DIAL

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

4 AIR INTAKE LEVER (Fresh air/Air recirculation)

- Move the air intake lever to the  position to recirculate air inside the vehicle.
- Move the air intake lever to the  position to draw outside air into the passenger compartment.

5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- First, move the air intake lever **4** to the  position to draw fresh air into the vehicle.
- Then turn the air flow control dial **1** to the front defroster mode .
- When the  or  position is selected, press the **A/C** button **7** to turn the air conditioner on for better performance. This will dehumidify the air and help defog the windows.

6 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- Push the rear window and outside mirror defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

7 A/C BUTTON

 
- Press the **A/C** button to manually turn the A/C on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

TRIP COMPUTER

- With the ignition switch in the **ON** position, modes of the trip computer **1** can be selected by pressing the trip computer change button **2** on the instrument panel.
- **TRIP A** – Measures the distance of one specific trip.
- **TRIP B** – Measures the distance of a second specific trip.
- **mpg** – Displays the instant fuel economy.

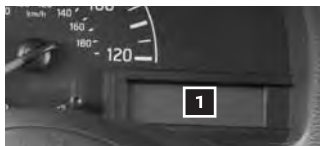

- **mpg AVG** – Displays average fuel consumption since the last reset.
- **Distance to empty** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- To reset **TRIP A**, **TRIP B**, **mpg** or **mpg AVG**, go to the desired mode on the trip computer and hold the trip computer change button **2** for more than 3 seconds.

OUTSIDE TEMPERATURE DISPLAY (if so equipped)

- The outside temperature function provides a display of the outside temperature when the ignition switch is placed in the **ON** position.
- The display of positive temperatures is unsigned (blank); negative temperatures are prefixed with minus sign.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT

 
- To adjust the time and appearance of the clock on the display.

1. Press the **MENU** button on the control panel.
2. Touch the Settings key **1** on the Launch Bar.
3. Touch the "Clock" key **2**.
4. Touch "Set Clock Manually" to manually adjust the time displayed on the clock.

- Touch the key **3** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

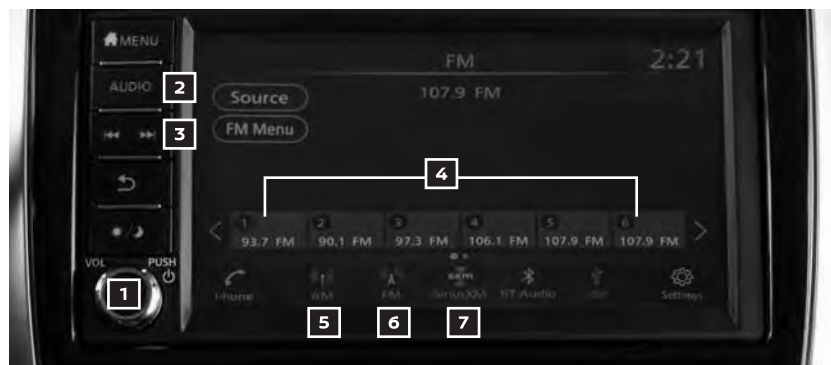

FM/AM/SiriusXM® RADIO

1 POWER BUTTON/VOL (volume) CONTROL KNOB

- Press the **POWER** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON

- Press the **AUDIO** button to go to the audio screen.
- To manually tune the radio, press the seek buttons or .

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.

4 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, first select a radio band by pressing the **AM** key **5**, **FM** key **6** or **SiriusXM** key **7** then tune to the desired FM, AM or satellite radio station.
- Now touch and hold the desired station memory key (1-18) until the preset number is updated on the display and a beep is heard. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (1-18).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Audio System (section 3)**" of your NissanConnect® Owner's Manual.

 
APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.



AUDIO AND BLUETOOTH® SYSTEMS

- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To exit the Apple CarPlay screen, press the  MENU button on the control panel.
- To return to the Apple CarPlay screen from the main menu:
 - Touch the  Apple CarPlay key **2**, or
 - Touch the  Info key **3** on the Launch Bar, touch the "Smartphone Connection" key, and then select the "CarPlay" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

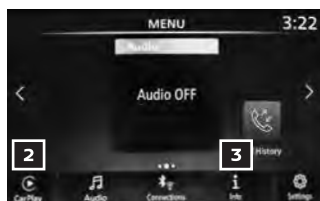

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" and the "**Information (section 5)**" of your NissanConnect® Owner's Manual.

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

 
INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the launch bar.
 3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

- To return to the Android Auto home screen after operation, touch the **○** key **2** on the Launch Bar.
- To exit the Android Auto screen, touch the **○** key **2** on the Launch Bar and then touch the exit key.
- To return to the Android Auto home screen from the main menu:
 - Touch the **▲** key **3** on the Launch Bar, or
 - Touch the **i** Info key **4** on the Launch Bar, touch the "Smartphone Connection" key, and then touch the "Android Auto" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.

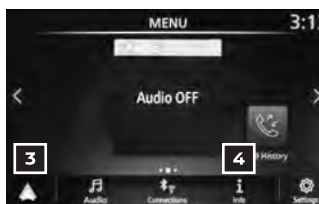

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** and the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port/AUX jack **1** is located below the shift selector.
- When a compatible USB port device, iPod® or auxiliary device is plugged into the USB port/AUX jack, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** and the **"Audio system (section 3)"** of your NissanConnect® Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  button on the steering wheel, or  on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL** (volume) control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



CONNECTING PROCEDURE

1. Select the  Settings key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New".
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  Phone key on the Launch Bar.
2. Touch the "Phonebook" key .
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Touch the  Phone key on the Launch Bar. The "Phone" screen  will appear on the display.
2. Select one of the options to make a call:

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call:
 - Touch the  Decline key on the screen.

SWITCH TO HANDSET

- Start the call using your Bluetooth® hands-free phone and touch the "Use Handset" key on the screen to use the handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-Free Phone (section 4)" of your NissanConnect® Owner's Manual.



HANDS-FREE TEXT MESSAGING ASSISTANT*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender, date and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.



AUDIO AND BLUETOOTH® SYSTEMS

- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Hands-Free Phone (section 4)"** of your NissanConnect® Owner's Manual.

DRIVING FEATURES

REAR SONAR SYSTEM (if so equipped)

- With the shift lever in the **R (Reverse)** position, this system will sound a tone to alert you of obstacles up to 5.9 ft (1.8 m) from the bumper with a decreased coverage area at the outer corners of the bumper.
- The rate of the tone increases as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 10 in (25 cm) from the bumper.
- Turn the system off by pushing the Rear Sonar System off switch **1**. Push the switch again to activate the system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

REARVIEW MONITOR

- When the shift lever is shifted into the **R (Reverse)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 30 mph (48 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.

DRIVING FEATURES

- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2021/nv200cargo or snap this barcode with an appropriate barcode reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://www.nissanusa.com/vehicles/commercial/nv200-compact-cargo/ownership.html>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

