



GETTING TO KNOW YOUR **2022 ENCORE**



buick.com

Review this Quick Reference Guide for an overview of some important features in your Buick Encore. Some optional equipment described in this guide may not be included in your vehicle.


More information can be found in your Owner's Manual and at **my.buick.com**.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

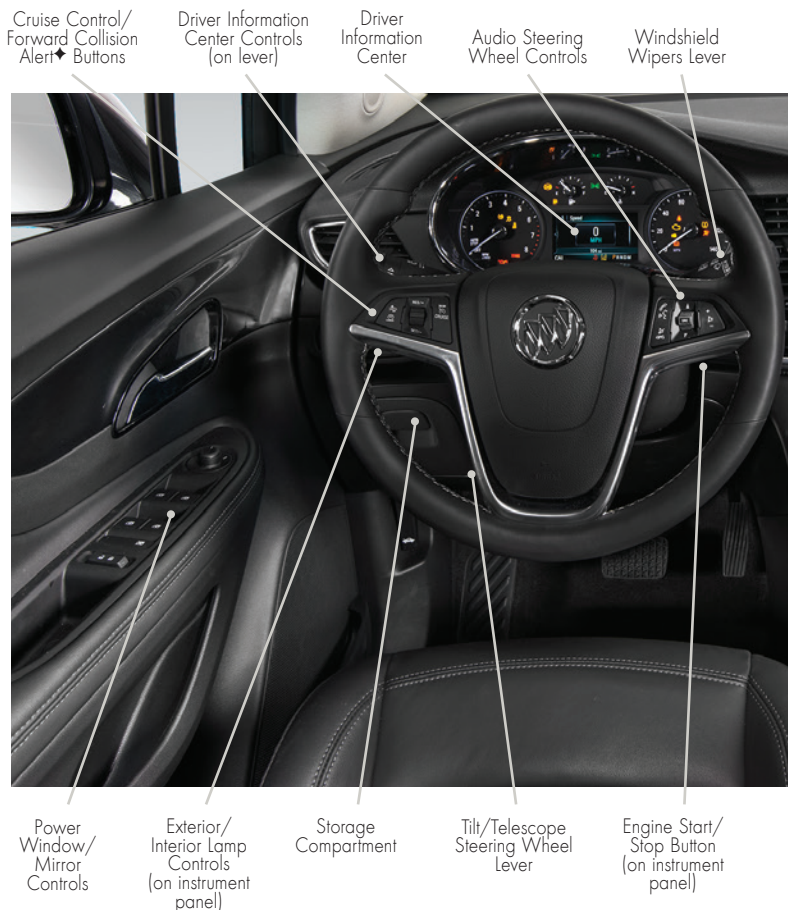

Symbols



Power Steering



Traction Control Off



Engine Coolant Temperature

BRAKE Brake System Warning



Cruise Control Set



Low Tire Pressure



StabiliTrak Active



StabiliTrak Off



Security



Check Engine



Oil Pressure



Charging System



-  Seat Belt Reminder
-  Airbag Readiness
-  Antilock Brake System

-  Lane Departure Warning
-  Lights On
-  Forward Collision Alert

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

KEYLESS ACCESS SYSTEM

Keyless Access enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or purse. The key fob must be within 3 feet of the door to be unlocked or within 3 feet of the liftgate.

Keyless Unlocking

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and the liftgate.
- ▶ Press the button on the passenger's door handle to unlock all doors and the liftgate.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



Keyless Locking

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors and the liftgate will lock automatically after a short delay once all doors and the liftgate are closed.

Note: To change the door lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

REMOTE VEHICLE START[◆]

Use the Remote Vehicle Start feature on the Remote Keyless Entry transmitter (key fob) to start the engine from outside the vehicle.

- ▶ Press and release the  **Lock** button and then press and hold the  **Remote Start** button until the turn signal lamps flash. After entering the vehicle, turn on the ignition.
- ▶ Press and hold the  button until the parking lamps turn off to cancel a remote start.

During a remote start, the engine will run for 15 minutes. Repeat the steps to run the engine for an additional 15 minutes. A remote start can be extended once.

Note: To change the remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

Starting the Engine

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the front cupholder in the center console to enable the engine to start. Replace the key fob battery as soon as possible.



Stopping the Engine/Off

- ▶ Shift to Park and then press and hold the **ENGINE START/STOP** button until the engine turns off.

Accessory Mode

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the vehicle in accessory mode. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

DIC Controls

A. MENU

Press to display the **Info** menu (speedometer, trip odometers, fuel range, oil life, fuel economy and tire pressure), **Navigation** menu (cancel guidance and voice prompt), or **Options** menu (units and info pages).



B.

Rotate the switch to scroll through the items of each menu.

C. SET/CLR

Press the button on the end of the lever to view or set a menu item or clear a message. Press and hold the button to reset a menu item.



See Instruments and Controls in your Owner's Manual.

TILT/TELESCOPE STEERING WHEEL

- ▶ With the vehicle parked, push down the lever on the left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

SEATS

Power Driver's Seat

A. Lumbar Adjustment


Press the small control to adjust the lumbar support.

B. 6-Way Seat Adjustment

Move the large control to slide the seat forward or rearward and to tilt, raise or lower the seat.


C. Seatback Recline Adjustment

Lift the lever to adjust the seatback position.

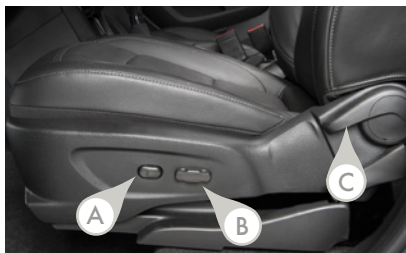

Folding Rear Seats

1. Unbuckle the seat belts and return them to their normally stowed position.
2. Lower the head restraints.
3. Pull up the tab (D) located at the center front of the seat cushion.
4. Pull up the rear edge of the seat cushion and tilt it forward.
5. Pull the lever (E) on top of the seatback. When the red marking is visible, the seatback is unlatched.
6. Fold down the seatback.
7. When unfolding the seats, make sure the seat belt buckles are accessible above the seat cushions.

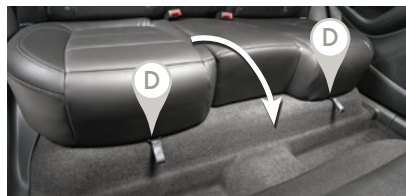

See Seats and Restraints in your Owner's Manual.

WINDSHIELD WIPERS

Windshield Wipers and Washer

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent or Rainsense™

To adjust the delay between wipes or the Rainsense system sensitivity, rotate the band up (more frequent wipes) or down (less frequent wipes).

OFF


1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

Rear Wiper and Washer

Press the switch on the end of the lever to operate the rear wiper.

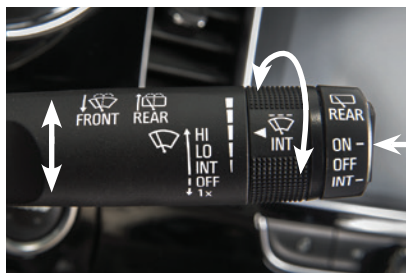

ON Slow Wipes

OFF

INT Intermittent Wipes

 **Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

+ ▢ - Volume

Press + or - to adjust the volume.

SRC Source

Press to select an audio source.

 **Next/Previous**

Rotate the switch up or down to go to the next or previous favorite radio station or track.

 **Push to Talk**

 Press to answer an incoming call or to interact with the OnStar® or Bluetooth system.

 **End Call/Mute**

 Press to end or decline a call. Press to mute the vehicle speakers.



See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touch screen, such as tap, drag, and swipe, to interact with the system. For assistance, call 1-855-478-7767 or go to my.buick.com/how-to-support.

INFOTAINMENT SYSTEM

Managing Home Page Icons

The Home page icons can be arranged in any order.

1. To enter edit mode, touch and hold the Home page icon to move.
2. Drag the icon to the desired position and release.
3. Press the  **Home** button to exit edit mode.

Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order. The audio source options are on the left side of the Audio page.

1. Select Audio on the Home page.
2. Tune in the desired radio station.
3. Select the desired page of favorite screen buttons.
4. Touch and hold one of the favorite screen buttons until a beep is heard.



Natural Voice Recognition[◆]

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech. Examples: "Call Dave" or "Tune 99.5 FM." Say "Help" for assistance.

Voice Pass-Thru

Voice Pass-Thru allows access to the voice recognition commands on a paired, compatible cell phone; e.g., Siri Eyes Free or Voice Command.

- ▶ To activate phone voice recognition, press and hold the  **Push to Talk** button on the steering wheel for 2 seconds.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Portable Audio Devices

USB ports, an auxiliary input jack and accessory power outlet are located in the front storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands.
- ▶ Touch the Audio icon and then touch More, if necessary, to select a portable device as the audio source.



Apple CarPlay™

Apple CarPlay capability is available through a compatible phone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your phone to a USB data port using the Lightning cable provided with your phone. Aftermarket cables may not work.
 2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.
- ▶ To exit Apple CarPlay, press the  **Home** button. To return to the last page viewed in Apple CarPlay, press and hold the **Home** button.

Android Auto™

Android Auto capability is available through a compatible phone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
 2. Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket cables may not work.
 3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.
- ▶ To exit Android Auto, press the  **Home** button. To return to the last page viewed in Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. For more information, visit my.buick.com/how-to-support.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI HOTSPOT®♦

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit my.buick.com/how-to-support.


- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus and the touch screen buttons. The Settings menus include System, Apps, and Vehicle.

1. Touch Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **<BACK** to exit each menu.

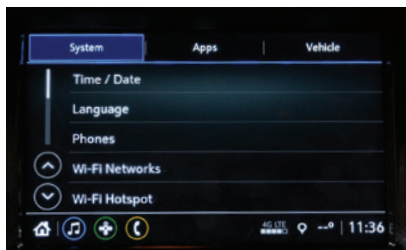

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS



Recirculation Mode

The  Recirculation Mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner's Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, rotate the thumbwheel down to the **SET** position to set the speed. The  symbol will illuminate in green on the instrument cluster.



Adjusting Cruise Control

RES/+ Resume/Accelerate

Rotate the thumbwheel up to resume a set speed. When the system is active, rotate the thumbwheel up to increase speed.

SET/- Set/Coast

When the system is active, rotate the thumbwheel down to decrease speed.

Cancel

Press to cancel the Cruise Control but retain the set speed in memory.

Pressing the brake pedal also will cancel the Cruise Control.

Turn off Cruise Control or the vehicle ignition to erase the set speed.

See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

Driver Shift Control is a manual mode that allows the driver to manually select the range of gears. It can be used to drive in a sportier manner or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever to the Manual (M) position.
2. Press the **+** (plus) or **-** (minus) button on the shift lever to upshift or downshift. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur.



See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center Information menu.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.


DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

Lane Departure Warning♦

The  Lane Departure Warning Indicator on the instrument cluster is green when a lane marking is detected. If a detected lane marking is crossed without using a turn signal in that direction, the system flashes an amber  indicator and 3 beeps sound on the side of the departure direction.

- ▶ To turn on or off, press the  **Lane Departure Warning** button (A) on the center of the instrument panel.

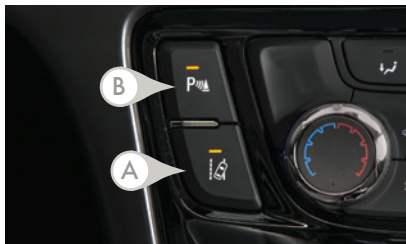

Forward Collision Alert♦

The  Vehicle Ahead Indicator is green on the instrument cluster when a vehicle that you're following is detected ahead and is amber when following a detected vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

Side Blind Zone Alert♦

While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Side Blind Zone Alert on the infotainment screen.

Traction Control and StabiliTrak® Systems

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center of the instrument panel to turn traction control off or on again. The  Traction Control Off light will illuminate on the instrument cluster when traction control is off.

Front and Rear Park Assist♦

During low-speed parking maneuvers, detected objects are indicated by audible beeps. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30 cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- ▶ To turn on or off, press the  **Park Assist** button (B) on the center of the instrument panel.

DRIVER ASSISTANCE SYSTEMS

Rear Vision Camera

When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph.

Rear Cross Traffic Alert♦

When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and sounding 3 beeps.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert on the infotainment screen.

See Driving and Operating in your Owner's Manual.

CARGO SHADE

Remove the Shade

1. Unhook the cords (A) from the liftgate.
2. Lift the shade out of the rear hinges (B).
3. Slide the shade along the channels (C) to store it behind the rear seats.

Install the Shade

1. Insert the shade into the rear hinges.
2. Hook the cords to the liftgate.

See Storage in your Owner's Manual.



REFUELING THE VEHICLE

1. To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
2. The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

Note: When using a portable gas can, insert the funnel adapter, stored under the cargo floor, into the capless fuel fill before filling the tank.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for 5 years/60,000 miles, whichever occurs first, at no expense to you. The Buick Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lock-out) or make arrangements to tow your vehicle to the nearest Buick dealer.

OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYBUICK MOBILE APP

Download the myBuick app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

BUICK OWNER CENTER

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **my.buick.com**.

We recommend always using ACDelco or GM Genuine Parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2021 General Motors. All rights reserved.



84857913 A