

2022



ESCALADE Convenience & Personalization Guide

 
[cadillac.com](https://www.cadillac.com)



Review this quick reference guide for an overview of some important features in your Cadillac Escalade. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at **my.cadillac.com**.


Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

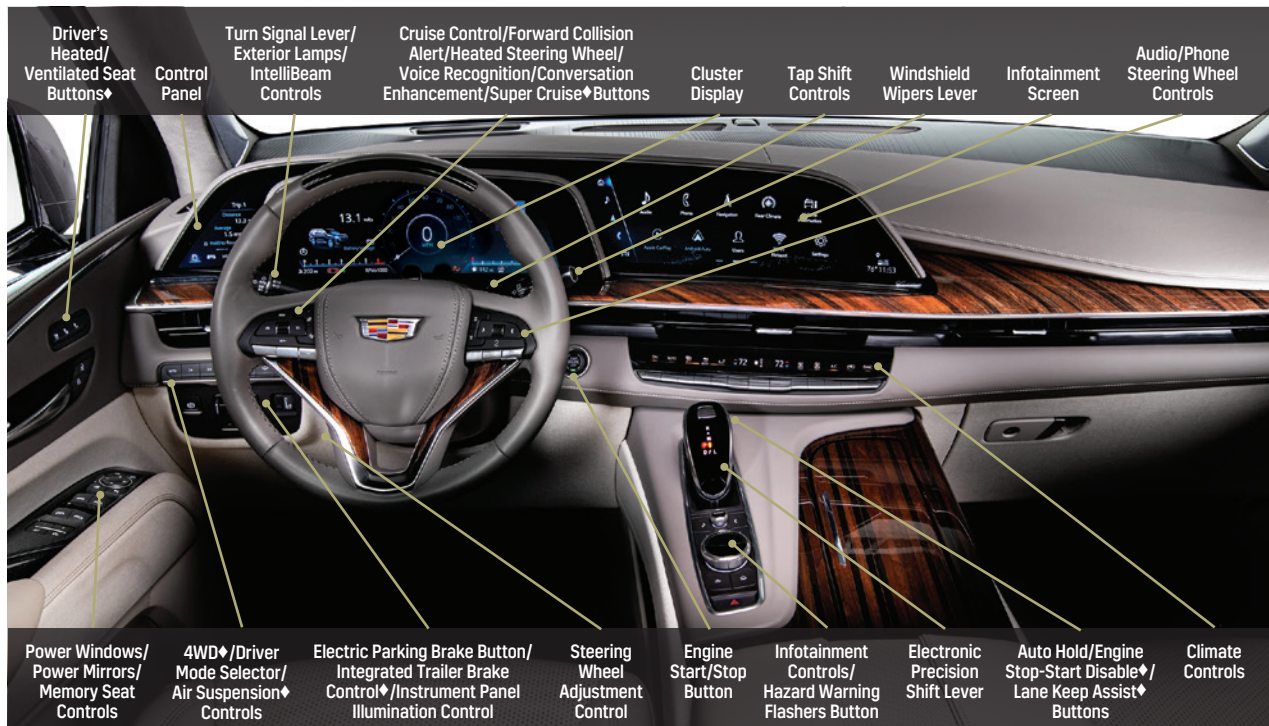

See Introduction in your Owner's Manual.

 CADILLAC OLED INFOTAINMENT SYSTEM

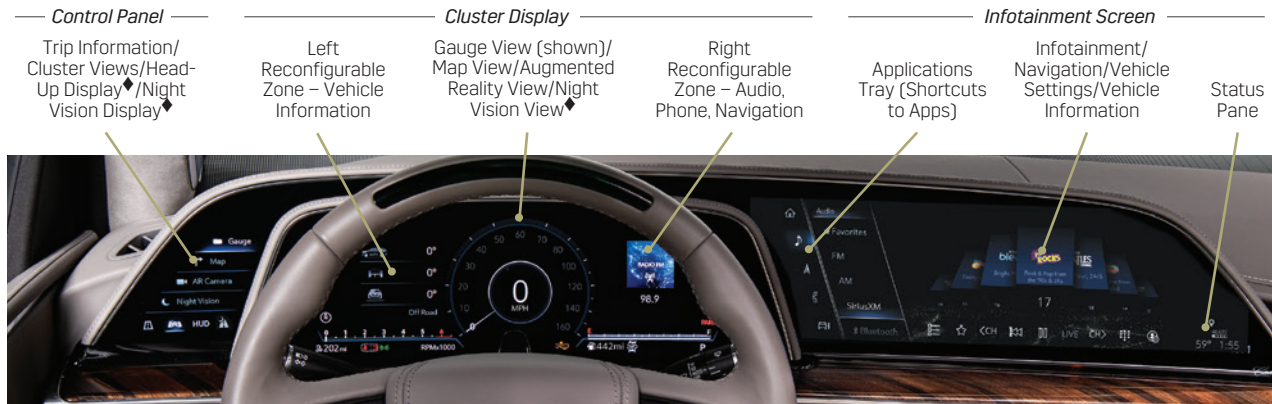

TOUCH CONTROLS

Use simple gestures to interact with the Control Panel and the Infotainment Screen.

- ▶ Swipe left/right to view the available menus and options.
- ▶ Scroll up/down to view menu items.
- ▶ Tap to select or adjust the displayed item.
- ▶ Press and hold some icons to reset the information.

MULTI-COLOR HEAD-UP DISPLAY (HUD)◆

1. Select HUD on the Control Panel.
 2. Touch the controls to adjust the height and brightness of the image.
- ▶ To turn the HUD on/off and select HUD content, go to Settings > System > Display > Head-Up Display on the Infotainment Screen.

◆ Optional equipment.

CLUSTER DISPLAY CONFIGURATION

1. Select  Cluster Display on the Control Panel.
2. Select Gauge (information zones left and right of the speedometer), Map (navigation), Augmented Reality (AR) Camera (front camera view), or Night Vision◆.

SELECT VEHICLE INFORMATION (GAUGE VIEW - LEFT RECONFIGURABLE ZONE)

1. Press the  button on the multi-function controller on the center console or on the Infotainment Screen to view all available vehicle information.
2. Select Show in Cluster to display an item in the left reconfigurable zone. Select Remove from Cluster to remove an item, or select another item.

See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors, fuel door and liftgate.



Unlock

Press to unlock the driver's door and fuel door only or all doors and liftgate.



Remote Vehicle Start

Press twice to start the engine from outside the vehicle. After entering the vehicle, press the **ENGINE START/STOP** button.



Rear Liftglass

Press twice to open the rear liftglass.



Power Liftgate

Press twice to open or close the power liftgate. Press once to stop power operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.

Remote Power Windows

Press and hold the  button to fully open the windows or the  button to fully close the windows. To enable, go to Settings > Vehicle > Remote Lock, Unlock, and Start > Remote Window Operation.

Automatic Mirror Folding

To enable the automatic power folding mirrors, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Note: To change or enable some remote settings, go to Settings > Vehicle > Remote Lock, Unlock, and Start.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The key fob must be within 3 feet of the liftgate or door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the touchpad (A) on the back of the driver's door handle to unlock the driver's door or all doors and liftgate.
- ▶ Press the touchpad on the back of a passenger door handle to unlock all doors and liftgate.
- ▶ Press the Cadillac crest under the liftglass to open the liftgate.



KEYLESS LOCKING

With the key fob within range:

- ▶ Press the Cadillac crest sensor (B) on the outside of a front door handle to lock all doors and liftgate immediately.

PASSIVE LOCKING

- ▶ To have all doors lock automatically after the last door is closed, the ignition is off, and the key fob is removed from the vehicle, go to Settings > Vehicle > Remote Lock, Unlock, and Start > Passive Door Lock.
- ▶ To have the driver's door or all doors unlock when using the touchpad on the driver's door handle, go to Settings > Vehicle > Remote Lock, Unlock, and Start > Passive Door Unlock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the key fob battery is weak, place the key fob in the front cupholder in the center console to enable the engine to start. Replace the key fob battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

Retained Accessory Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof[◆] until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode to operate the radio, windows and other accessories with the engine off. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START[◆] (IF EQUIPPED)

Automatic Stop/Start is a fuel-saving feature that automatically turns off the engine when the brake pedal is pressed, the vehicle is at a complete stop, and operating conditions are met. In Auto Stop mode, an AUTO STOP message will display. When the brake pedal is released or the accelerator pedal is pressed, the engine will automatically restart.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current climate control settings require the engine to run.
- The Auto Stop has reached the maximum allowed time.

AUTO STOP/START DISABLE

- ▶ Press the **(A) Auto Stop** button on the center console when the engine is running to turn off the stop/start system. The button indicator turns off when the system is disabled.

Auto Stop/Start is turned on each time the vehicle is started.

Note: Disable Auto Stop/Start when using the Rear Seat Media System for continuous play while driving.

See Driving and Operating in your Owner's Manual.

CADILLAC OLED INFOTAINMENT SYSTEM CONTROLS

Read your Owner's Manual for important information about using the infotainment system while driving.

Your Escalade offers a variety of entertainment, communication and vehicle options. Touch an application icon on the infotainment touchscreen or use the rotary controller and buttons to access an item. You can use simple gestures on the touchscreen, such as tap, drag, pinch and spread, to interact with the system. Link a compatible smartphone or portable audio player to the system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit my.cadillac.com/how-to-support.



Home screen

Additional Views/Pages:
Swipe to display additional views or
pages of apps (if available)

Applications Tray:
Shortcuts
to apps

Applications:
Touch a screen
icon to access an app



Audio
menu

Volume/Mute/Off:
Rotate to adjust the
volume/ Press to mute/
Press and hold to turn
system on-off

Phone
menu

Vehicle
Information
menu

Navigation
menu

Multifunction Controller:
Rotate to move on the
screen/Tilt knob (left, right,
up, or down) to go to the next
item or group on the screen/
Press to select an item.

Return to
previous
screen

Home
screen

CADILLAC OLED INFOTAINMENT SYSTEM FEATURES

MANAGING HOME PAGE ICONS

1. Press the  **Home** button.
2. To enter edit mode, touch and hold the icon to move.
3. Drag the icon to the Applications Tray or the desired position on the screen.
4. After positioning all icons as desired, select Done.

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order. Audio source options are on the left side of the Audio screen.

1. Display the desired radio station.
2. Touch the ★ icon. Favorites also can be saved by touching the ★ in a station list.



IN-VEHICLE APPS

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the Infotainment Screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

PORTABLE AUDIO DEVICES

USB ports for data and charging are located at the front of the center console and in the console storage compartment.

1. Connect an iPhone[®], MP3 player, or USB flash drive to the USB port.
2. Touch Audio, and then select the USB device.

APPLE CARPLAY[®] AND ANDROID AUTO[™]

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the Infotainment Screen and phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

CADILLAC OLED INFOTAINMENT SYSTEM FEATURES

SIRIUSXM® WITH 360L♦

The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

VOICE RECOGNITION

Control the music source, enter a navigation destination, make phone calls hands-free, and perform other tasks using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The system will play a prompt.
3. After the prompt, say what you want it to do.
 - Examples: "Call Dave" or "Tune to 99.5 FM."
 - Say "Help" for voice recognition assistance.



BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired phone; e.g., Siri or Google Assistant.

- ▶ To activate Bluetooth Voice Recognition, press and hold the  **Push to Talk** button for 3-4 seconds.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The vehicle must be stopped to pair a device. Enable Bluetooth on the device before pairing.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair Phone." To use the Infotainment Screen, select the Phone icon > Connect Phone.
2. From the phone's Bluetooth settings, select the name shown on the Infotainment Screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. A secondary phone can be set to receive calls only.

- ▶ To set first and secondary phones, select the Phone icon > Phones.

STREAMING AUDIO

- ▶ To stream audio from a device connected via Bluetooth, select the device as the audio source under the Audio menu.

See Infotainment System in your Owner's Manual.

NAVIGATION SYSTEM



- ▶ Select the Navigation icon on the Home screen to start a route, get directions, choose a display view and select other features.
- ▶ Select Settings to save Home and Work destinations, set map preferences and more.
- ▶ Swipe on the screen or use the rotary controller to view the surrounding area, powered by Google Street View.

AUGMENTED REALITY VIEW



Route guidance and upcoming turns appear as graphics on the front camera image displayed in the Cluster Display.

- ▶ To view the Augmented Reality View, after entering a destination and selecting a route, select AR Camera from the  Cluster Display menu on the Control Panel.

See Infotainment System in your Owner's Manual.

◆ Optional equipment.

WIRELESS PHONE CHARGING

The wireless phone charging system is located in the center console. Visit my.cadillac.com/how-to-support to check device compatibility. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the phone in the pocket with the screen facing up.
4. The ⚡ battery charging symbol will display on the Infotainment Screen. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees, before reinserting it in the charging pocket.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For information on use and system limitations, visit my.cadillac.com/how-to-support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the Infotainment Screen or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual

VEHICLE CUSTOMIZATION

Many vehicle features can be turned on/off and customized using the Settings menus on the Infotainment Screen, including Remote Start, Power Liftgate, Auto Heated/Ventilated Seats♦, Safety Alert Seat, Mirror Folding, Wipers and others.



1. Touch Settings on the Home screen.
2. Select the System, Vehicle, or Search tab.
3. Select the desired feature and setting.
4. Touch Back to exit each menu.

See Instruments and Controls in your Owner's Manual

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

REAR SEAT MEDIA SYSTEM♦

The Rear Seat Media system includes 2 touchscreens, 2 HDMI ports, and 2 Bluetooth wireless headphones.

- ▶ To power on the system and view the Home page, double tap anywhere on either screen.
- ▶ To power on the system and control the screen sources from the front seats, select the Rear Media icon on the Infotainment Screen.
- ▶ Touch the Headphone icon on the screen to pair headphones or view a list of available headphones.



See Infotainment System in your Owner's Manual.

CENTER CONSOLE POWER OUTLET

- ▶ To disable power to the 110-volt outlet on the rear of the center console or in the rear cargo area, with the vehicle On, press the **Power Outlet** button (A) inside the center console storage compartment. **If uninterrupted power to your devices is required while driving, disable the Auto Stop/Start feature.**



See Instruments and Controls in your Owner's Manual.

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ADAPTIVE CRUISE CONTROL♦/SUPER CRUISE♦

 **On/Off**

SET– Set Speed

With Cruise Control on, press the switch down to set a speed.

RES+ Resume Speed

With Cruise Control on, press the switch up to resume the set speed.

Adjust Speed

With a cruise speed set, press the switch up or down to the detent to increase (+) or decrease (–) the set speed by 1-mph increments; fully press the switch past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between Cruise Control and Adaptive Cruise Control♦.

Follow Distance Gap (Adaptive Cruise Control♦)

Press to select a targeted gap setting of Far, Medium, or Near – the time between your vehicle and a vehicle detected directly ahead.



Super Cruise♦

Engage or disengage Super Cruise (Adaptive Cruise Control must be on).

See Driving and Operating in your Owner's Manual.

B. HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner's Manual.

C. VOICE RECOGNITION/BLUETOOTH

Push to Talk

Press to answer a call or start voice recognition. Press and hold for 3-4 seconds to use Bluetooth voice recognition (Siri or Google Assistant).

Conversation Enhancement

Press to turn the system on/off. For microphone settings, go to Settings > System > Conversation Enhancement.

See Infotainment System in your Owner's Manual.



D. AUDIO CONTROLS

Volume

Press  or  to adjust the volume.

Mute

Press to mute/unmute the audio system.

Next/Previous

Press  or  to go to the next or previous favorite, or selected source, radio station or track. Change the audio source to scroll through other available sources.

See Infotainment System in your Owner's Manual.

E. AUDIO/PHONE/NAV CONTROLS

Now Playing

Press to open the Now Playing screen.

Phone

Press to view the Phone menu.

Select

Rotate the thumbwheel to move through the active menu. Press the thumbwheel to open a menu, select or reset an item, or clear a message.

See Infotainment System in your Owner's Manual.

CLIMATE CONTROLS



 
- ON
Power On/Off
- AUTO
Automatic Operation
- Airflow Delivery
- Driver's Temperature
(lift up/press down)
- Fan Speed
(lift up/press down)
- Passenger's Temperature
(lift up/press down)
- Windshield Defrost/
Rear Defog
- A/C
Air Conditioning/
Recirculation
- SYNC
Synchronize all
settings to driver's
settings

AUTOMATIC OPERATION

- Press the **AUTO** button. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature.

REAR CLIMATE CONTROLS

Use the rear climate control switches or select the Rear Climate icon on the Infotainment Screen to adjust the rear climate control settings. The Rear Climate status may be displayed in the bottom-right corner of the Infotainment Screen.

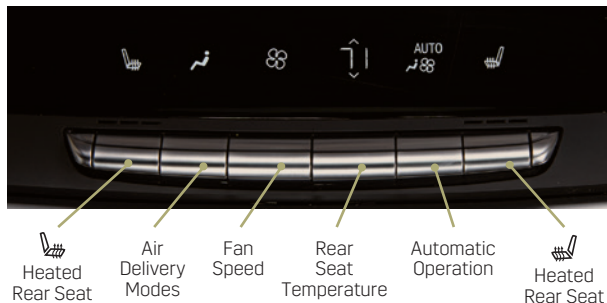


See Climate Controls in your Owner's Manual.

SEAT FEATURES

FRONT SEAT ADJUSTMENTS

 - A. Seat Adjustment
- B. Seatback Recline
- C. Lumbar Support
- D. Seat Massage♦

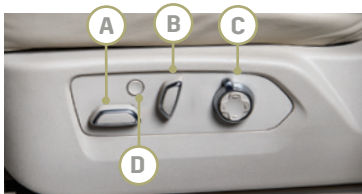

SET FRONT SEAT MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power steering column and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver **1** or **2**.
- To store seat and power steering column positions for exiting the vehicle, repeat the steps using the **Exit** button.



RECALL FRONT SEAT MEMORY POSITIONS

- Press and hold button **1**, **2** or **Exit** until the set position is reached.
- To enable the seat positions to be recalled automatically when the vehicle is turned On/Off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

2ND-ROW SEAT ADJUSTMENTS

- To slide a 2nd-row seat, lift the front lever (E) on the side of the seat cushion.
 - To recline a 2nd-row seatback, lift the rear lever (F) on the side of the seat cushion and push on the seatback.
 - To fold a 2nd-row seat, lift the rear lever (F) on the side of the seat cushion or, from the 3rd-row seat, pull the strap on the bottom of the seatback. The seatback will fold forward. Lift the lever or pull the strap again to tumble the seat forward.
- To return the seat to the upright position, pull down the seat and lift the seatback until it locks in place. Slide the seat rearward by using the lever (E) on the seat cushion.



Note: Do not slide the 2nd-row seat while folded.

See Seats and Restraints in your Owner's Manual.

SEAT FEATURES

 
POWER RELEASE 2ND-ROW SEATS

1. Unbuckle the seat belts, remove anything under or in front of the seats, and move the front seats forward to allow room for the folded seat.
2. Press the  **Seat Release** button (A) on the panel behind each rear door or the  **2nd-Row Seat** button (B) in the cargo area. The seatback will fold forward.
3. Press either button again to tumble the seat forward.
 - ▶ To return the seat to the upright position, pull down the seat and lift the seatback until it locks in place



POWER FOLDING/UNFOLDING 3RD-ROW SEATS

1. Unbuckle the seat belts, remove anything on the seats, and move the 2nd-row seats forward to allow room for the folded seats.
2. Press and hold the bottom of the  **3rd-Row Seat** button (C) in the cargo area or  **3rd-Row Folding Seat** button on the front overhead console to fold the seatback.
 - ▶ To unfold the seat, press and hold the top of either  button.

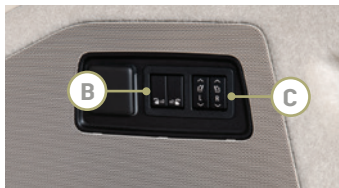

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice to open or close.
- ▶ Press the  **Power Liftgate** knob on the overhead console to open or close.
- ▶ Press the Escalade crest below the liftglass to open.
- ▶ Press the button next to the liftgate latch to close.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob to the 3/4 position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button next to the liftgate latch until the turn signals flash and a beep sounds.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the passenger's side of the rear bumper, right of center. The key fob must be within 3 feet of the liftgate. Depending on operating conditions, the Cadillac logo is projected on the ground near the rear bumper to indicate the kicking motion location.



Note: To change the liftgate settings, go to Settings > Vehicle > Comfort and Convenience > Hands Free Liftgate on the Infotainment Screen.

See Keys, Doors and Windows in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on top of the shift lever with the selected gear position illuminated in red. The shift lever always starts in the center position and, after shifting, returns to the center position.

Park – Press the button (A) on top of the lever to shift into Park. To shift out of Park, press the brake pedal and then press and hold the shift lock button (B) while selecting the desired gear.

Reverse – Press the brake pedal and then press and hold the shift lock button (B) while moving the lever forward completely (pass the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for an extended period. It will automatically shift into Park. See Car Wash Mode.

 
Drive – From Park, press the brake pedal and then press and hold the shift lock button (B) while moving the lever rearward to shift into Drive. From Reverse, move the lever rearward to shift into Drive.

Tap Shift Mode – With the transmission in Drive, pull back on the shift lever to shift manually. Pull the left steering wheel paddle to downshift and the right paddle to upshift. Pull back on the shift lever again to return to Drive.

Car Wash Mode – When entering an automatic car wash, press the brake pedal and move the lever forward (to the detent) to shift into Neutral. Release the brake pedal.

See Driving and Operating in your Owner's Manual.

◆ Optional equipment.

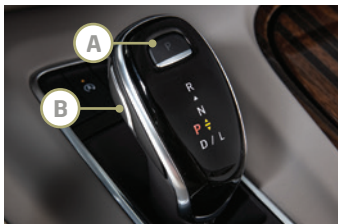

DRIVER MODE SELECTOR

The Driver Mode Selector settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Cluster Display.

- Press the **MODE** button on the left side of the instrument panel to select a different driving mode.

Available modes may include:

Tour – Use in normal driving for a smooth ride.

 
Sport – Use for enhanced responsiveness. Performance Shift Features are enabled when spirited driving is detected.

Snow/Ice (2WD only) – Use for enhanced acceleration on slippery surfaces.

Off-Road (4WD◆ only) – Use for enhanced control on unpaved roads or trails at moderate speeds. Accelerator pedal mapping, steering, ride height and other systems are modified.

Tow/Haul – Use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic or rolling hills.

My Mode – Allows the engine sound, steering and braking feel to be customized to your preference.

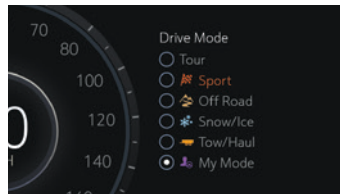

TERRAIN MODE (4WD SINGLE-SPEED TRANSFER CASE ONLY)◆

- Press the  button for enhanced control in low-speed, off-road conditions. The transmission will hold a lower gear longer to maximize engine torque. The system automatically provides light vehicle braking. Only available when in 4↑.

See Driving and Operating in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

FOUR-WHEEL DRIVE◆

- Use the four-wheel-drive buttons on the left side of the instrument panel to shift into and out of four-wheel drive.

Shift between **2↑**, **4↑**, and **AUTO** at normal driving speeds. The current status of the transfer case is displayed on the Driver Information Center.

AUTO Automatic 2WD High/4WD High – Use when traction conditions vary; engages the front and rear wheels automatically based on driving conditions.

2↑ 2WD High – Use for most streets and highways.

4↑ 4WD High – Use when extra traction is needed or in most off-road driving.

4↓ 4WD Low (2-Speed Transfer Case◆) – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral.

N Neutral (2-Speed Transfer Case◆) – Use to dolly or dinghy tow the vehicle. Refer to your Owner's Manual for the shift procedure.



See Driving and Operating in your Owner's Manual

AIR RIDE ADAPTIVE SUSPENSION◆

The Air Ride Adaptive Suspension offers load-leveling and adjustable ride height capabilities.

1. Press either Ride Height button to display the menu on the Cluster Display.
2. Press the **Up** or **Down Ride Height** button to select a ride height.
3. After a brief pause, the menu will time out and the selection will be saved.

Ride heights that are unavailable for selection will be grayed out in the menu. Available modes may include:

Normal Ground Clearance – Use for normal driving.

Entry/Exit Ground Clearance – Lowers the vehicle for easy entry/exit.

 
Increased Ground Clearance – Raises the vehicle 1 inch from Normal. 4WD◆ models only.

Maximum Ground Clearance – Raises the vehicle 2 inches from Normal. 4WD◆ models only; available only in 4WD Low.

Aero – Automatically lowers the vehicle when vehicle speed exceeds 65 mph for a period of time to improve aerodynamics. This feature cannot be user-selected.

- To have the vehicle automatically lower to the Entry/Exit height when the vehicle is shifted to Park, go to Settings > Vehicle > Ride Height > Automatic Entry/Egress.

Note: Heavy use of the air suspension may cause the system to temporarily suspend all height changes to allow the air compressor to cool down.

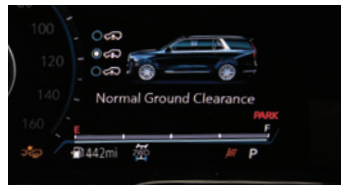

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the Infotainment Screen.

SAFETY ALERT SEAT – The driver's seat pulses — left, right, or both sides — to alert you of the direction of potential hazards. Audible alerts may be selected instead.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green when a vehicle is detected ahead that you're following and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following. The system works at speeds below 50 mph. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an  amber indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

REAR PEDESTRIAN ALERT – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the Infotainment Screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.



LANE KEEP ASSIST WITH LANE DEPARTURE WARNING♦ –

The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- To turn the system on or off, press the  **Lane Keep Assist** button on the center console.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT ♦ – While driving, the system displays a  warning symbol on the left- or right-side mirror when a vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

ADAPTIVE CRUISE CONTROL ♦ – The system enhances regular Cruise Control to maintain a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer. See Steering Wheel Controls on page 11.

- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the  **Following Gap** button to select a gap setting of Far, Medium or Near.

HIGH DEFINITION SURROUND VISION – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the Infotainment Screen. It works at low speeds and can help when parking.

- ▶ Camera view buttons are on the left side of the screen.
- ▶ Surround Vision also can be activated by selecting the Camera icon on the Infotainment Screen.



REAR CROSS TRAFFIC ALERT ♦ – When in Reverse, the system warns of detected cross-traffic coming in either direction by displaying a red alert on the Infotainment Screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

REVERSE AUTOMATIC BRAKING ♦ – In detected, potentially imminent collision situations with some objects behind your vehicle when in Reverse, the system provides alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Cluster Display and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ To turn Park Assist and Reverse Automatic Braking on or off, select Park Assist on the Infotainment Screen.

Note: If a bike rack or trailer hitch is installed, go to Settings > Vehicle > Collision/Detection Systems and select Park Assist Towbar.

ENHANCED AUTOMATIC PARKING ASSIST ♦ – The system can search for a parallel or perpendicular parking space and then steer and brake the vehicle into that space while shifting gears as needed. It can also help you unpark the vehicle after parallel parking. While using the system, you need to remain in your vehicle and be prepared to override and take control.

- ▶ To activate the system, select Auto Parking Assist on the Infotainment Screen. A parking assist display will be shown. Follow all instructions as directed.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.



A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.

- ▶ Rotate the Rear Wiper control band to the washer position to clean the Rear Camera Mirror lens and rear window.

See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITORING

The (U) Low Tire Pressure light illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Infotainment Screen.

When inflating a tire, the Tire Fill Alert sounds the horn and changes the turn signals from flashing to solid when the recommended tire pressure is reached (does not apply to spare tire).

See Vehicle Care in your Owner's Manual.

◆ Optional equipment.

LIGHTING



INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night.

- ▶ Press the button on the end of the lever with the lamp control in the AUTO or Headlamps position to turn the system on or off. A green indicator displays on the Cluster Display when the system is on; a blue indicator displays when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

DOME LAMPS

- ▶ To turn a reading lamp on/off, press the lamp lens.
- ▶ To turn on/off all reading/dome lamps with the doors closed, press and hold either reading lamp in the overhead console.
- ▶ To turn all dome lamps off when the doors are open, press the OFF button on the overhead console.

See Lighting in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, press the blue OnStar button or red Emergency button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit onstar.com or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

We recommend always using ACDelco or GM Genuine Parts.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2021 General Motors LLC. All Rights Reserved.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see your parking location and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from the App Store or Google Play Store.

CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com to access personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service account required) and more.

