

Rear Seat Entertainment (RSE) System Quick Reference Guide



04001-00260-2
KA4USR5E


Component Names and Functions

Display Monitors

Front

Power Key
Press to turn the unit on/off.

Power Indicator LED

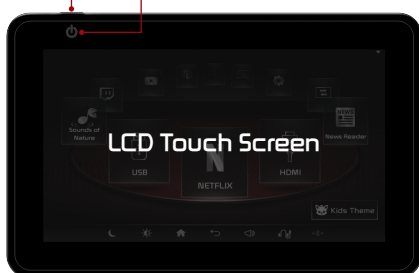


Rear



Reset
USB Port
Headphone Jack
AV IN
HDMI

Using the System for the First Time

Home Screen

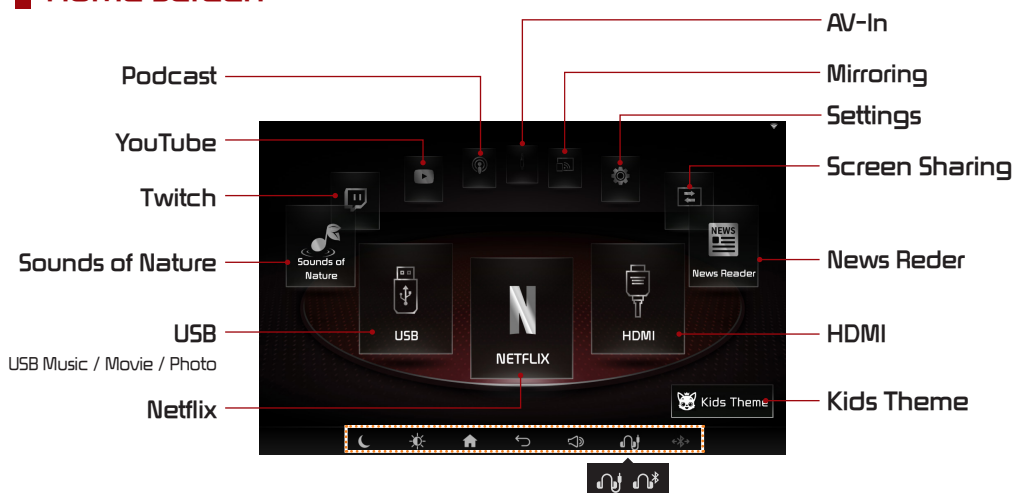


Button	Description
	Turns display off.
	Adjusts brightness.
	Displays the Home screen.
	Returns to the previous screen.
	Adjusts volume.

Button	Description	
	Earjack Headphones	Speaker Mode
	Bluetooth Headphones	
	Bluetooth Audio Sync - Syncs the audio and video upon Bluetooth connection.	

Key Features


Media

You can enjoy music, videos, and images from media types, including **USB devices** and other **external devices**. In the Home screen, press the desired media.

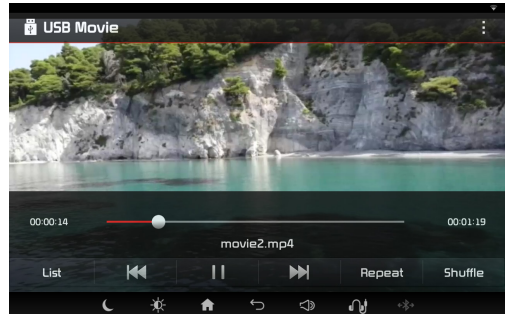


Connectivity

You can enjoy **News Reder**, **Podcast**, **Netflix**, **YouTube**, **Twitch**, **YouTube Kids** by connecting Wi-Fi connection. In the Home screen, press the desired connectivity feature. To use Mirroring, you must disconnect the Wi-Fi connection.

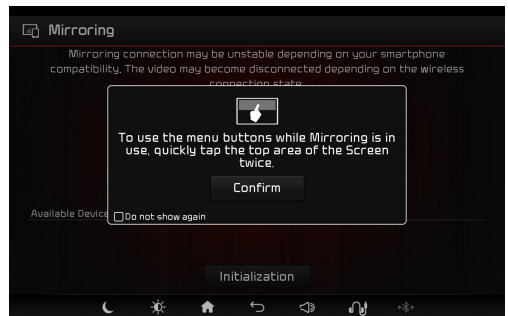

Settings

Use the Settings menu to configure various system settings, including languages, Bluetooth, network, power setting, and factory reset. In the Settings screen, select and set the desired option.

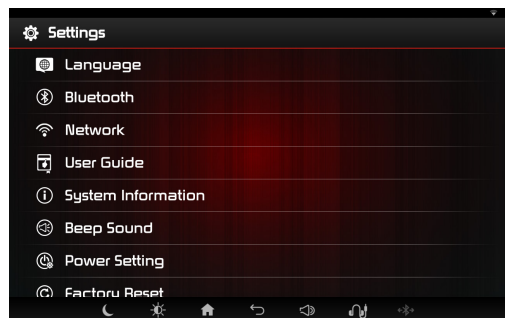

Note


- If there is no sound of media, check the connection of a Bluetooth (automobile/speaker/headset) or sound output device.

Key Features

Remote Controller



Remote Controller App Screen

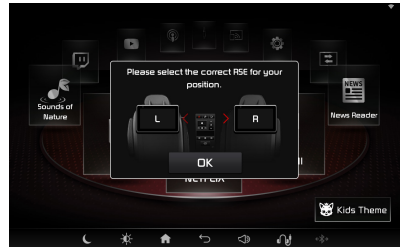

RSE Screen

Note

- To use rear seat entertainment, you must first install the RSE Remote App on your smartphone.
- For Android phones, search for RSE Remote at the Google Play store.
- For iPhones, search for RSE Remote at the App Store.
- For more information on using the RSE Remote App, please refer to the RSE Remote user guide.
- When WIFI is not connected News Reader, Podcast, Netflix, YouTube, Twitch, YouTube Kids mode cannot be changed with MODE button.
- When the USB is not connected, USB mode cannot be changed with MODE button.
- The remote controller can control only one monitor selected from left and right, and not at the same time.

Button	Description
1	Turns RSE ON/OFF.
2	Searches and connects RSE.
3	Changes RSE Speaker mode.
4	Displays current RSE mode.
5	Selects L/R Monitors. (Cannot select both at the same time)

Button	Description
6	Controls and mutes volume.
7	Displays file format, file name or lists.
8	Play, pause and move between files. Move to and select within lists.
9	Selects mode.
10	Displays connection method and Troubleshooting.

Warranty Coverage
3 years / 36,000 miles
*whichever occurs first.

Refer to the system user guide to learn more about the RSE system.
In the Settings screen, press [User Guide].
All feature images are for illustrative purposes only.

