



GETTING TO KNOW YOUR
***4500 HD/4500 XD/
5500 HD/5500 XD
DIESEL LOW CAB FORWARD***



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Low Cab Forward. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at my.chevrolet.com. For easy reference, keep this guide with your Owner's Manual in your glove box.


Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



Pre-production model shown. Actual production model will vary.

OVERVIEW



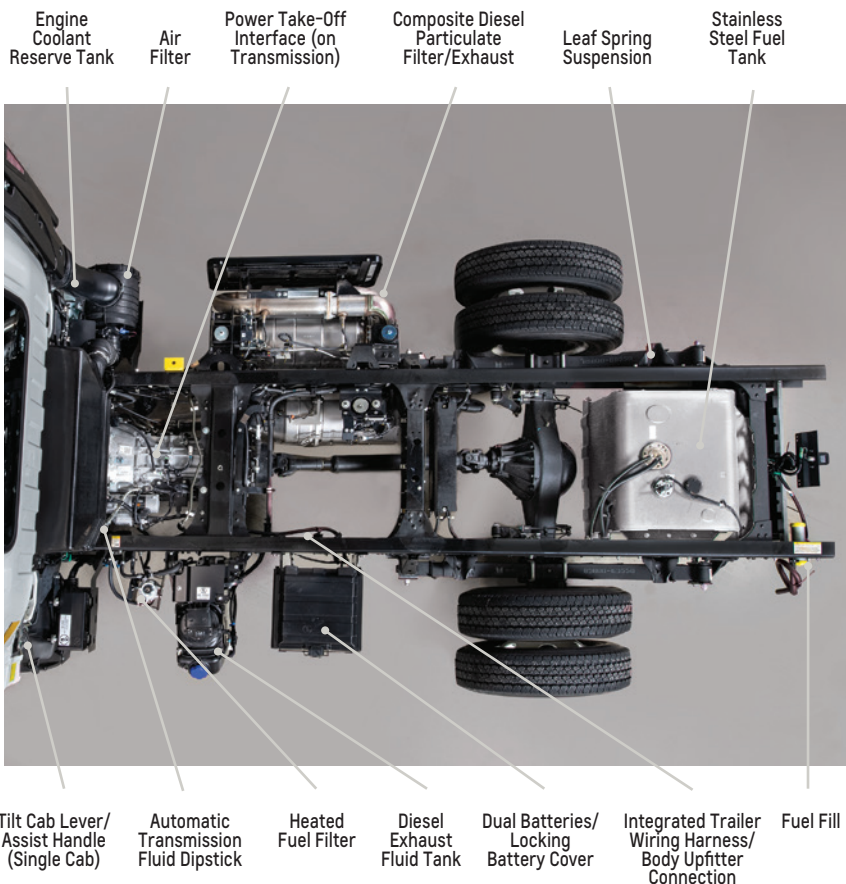

Single cab model shown

See Introduction in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

INSTRUMENT PANEL

- Brake Fluid Fill (Behind Inspection Cover)
- Cargo Lamp Button ♦/ PTO Switches ♦
- Instrument Panel Illumination Control/Door Lock Switch/Odometer Check Switch
- Windshield Wipers/ Exhaust Brake Lever
- Traction Control/ Stability Control/ Automatic Emergency Braking ♦ Buttons
- Diesel Particulate Filter/Outside Mirror Heater ♦/ Cruise Control Main Switches
- Infotainment System/ Climate Controls



- Turn Signal/ Exterior Lamps Control/Cruise Control
- Steering Wheel Adjustment Lever (on Steering Column)
- Rear Power Window Switches ♦ (Crew Cab)
- Hazard Warning Flashers Button
- Accessory Power Outlets
- Lane Departure Warning Control ♦/ Rear Power Window Lock Switches ♦ (Crew Cab)
- Card Holder/ Bag Hook
- Fuse/Relay Box (Under Instrument Panel)

Base model shown

TRIP ODOMETER RESET

- ▶ With the ignition On, press and release the trip odometer reset stem on the instrument cluster to display the odometer, trip A and trip B mileage. Press and hold the reset stem to reset the trip A or trip B odometer while displayed.

ODOMETER/FUEL GAUGE CHECK

- ▶ To display the odometer, trip odometer mileage and fuel gauge with the ignition Off, press the Odometer Check switch on the left side of the instrument panel.

See Introduction in your Owner's Manual.

INSTRUMENT CLUSTER



Base instrument cluster shown

SYMBOLS

	Cruise Control On		Service Vehicle Soon		Charging System
	Cruise Control Set		Engine Oil Pressure		High-Beam Headlamps
	Daytime Running Lamps		Power Take-Off		Antilock Brake System
	Check Engine		Brake System/ Parking Brake Set		Seat Belt Reminder
	Wait to Start (Glow Plug)		Brake Booster		Engine Coolant Temperature
	Automatic Transmission Fluid Temperature Warning		Exhaust Brake		Overdrive Off
	Tilt Cab Sensor		Diesel Exhaust Fluid		Engine Oil Level
	Idle Stop		Reduced Engine Power		Service Transmission
			Traction Control Off		Lane Departure Warning♦
			Stability Control Off		Automatic Emergency Braking Off♦
			Engine Shutdown		

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument panel.

See Instruments and Controls in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB) ♦

Lock

Press for 1 second to lock all doors.

Unlock

Press for 1 second to unlock all doors.


Note: If a door is not opened within 30 seconds after pressing the Unlock button, the doors will lock again to help prevent theft.

See *Keys, Doors and Windows* in your Owner's Manual.

KEYED IGNITION SYSTEM

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the On position.
- ▶ Observe the Wait-to-Start light. If the light is not on, rotate the key to the Start position.

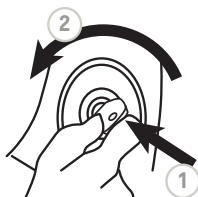

TURNING OFF THE VEHICLE

- ▶ Shift to Park. Allow the engine to idle for approximately 3 minutes.
- ▶ Push the key all the way in (1) and then rotate the key counterclockwise to the Lock/Off position (2).

See *Driving and Operating* in your Owner's Manual.

SEATS

DRIVER'S SEAT

A. Seat Adjustment

Lift the lever under the front of the seat to slide the seat forward or rearward.

B. Seatback Adjustment

Lift the side lever to recline or raise the seatback.

C. Suspension Adjustment ♦

Turn the knob under the front of the seat to adjust the scale to match your weight.



PASSENGER'S SEAT/CENTER SEAT

D. Seatback Adjustment

Pull the side lever to fold the seatback.



See *Seats and Restraints* in your Owner's Manual.


Pre-production model shown

Some equipment shown may not be included in your vehicle.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, pull up the lever on the left side of the steering column to unlock the column. The steering wheel can be adjusted up or down and forward or rearward. Push down the lever to lock the steering wheel in place.

See *Instruments and Controls* in your Owner's Manual.

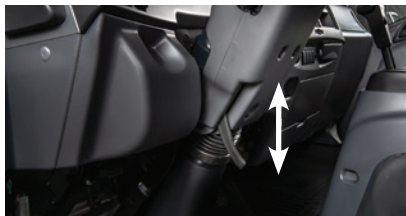

POWER DOOR LOCKS

DOOR LOCK BUTTON (DRIVER'S DOOR)

- ▶ To lock all doors, press the power door lock switch by the driver's door handle.

DOOR LOCK SWITCH (INSTRUMENT PANEL)

- ▶ Press the  Lock or  Unlock switch on the left side of the instrument panel to lock all doors or unlock all doors.



See *Keys, Doors and Windows* in your Owner's Manual.

HEATED MIRRORS♦

- ▶ Press the  **Outside Mirror Heater** switch on the instrument panel to defog the outside mirrors. Press the switch again to turn off operation when defogging is complete.

See *Keys, Doors and Windows* in your Owner's Manual.



POWER OUTLETS

Use the accessory power outlets on the center of the instrument panel to power electrical equipment.

When inserting or removing the plug of any equipment, turn off the equipment or place the ignition in the Lock position. Total maximum electrical load must not exceed 120W. Turn off any electrical equipment when not in use for extended periods to avoid draining the battery.

See *Instruments and Controls* in your Owner's Manual.

LIGHTING

EXTERIOR LAMP CONTROLS

Rotate the end of the lever to activate the exterior lamps.

○ Off

☞ Parking Lamps

☞ Headlamps

Note: The Daytime Running Lamps will turn on when the engine is started in the daytime with the lamp control off and the parking brake released.



INSTRUMENT PANEL LIGHTING

☞ Instrument Panel Brightness

Rotate the thumbwheel (A) to adjust the instrument panel lighting.



CARGO LAMP♦

☞ Cargo Lamp

Press the button (B) to turn the rear body interior lamp on or off. The button indicator illuminates when the lamp is on.

See Lighting in your Owner's Manual.



WINDSHIELD WIPERS

Rotate the end of the lever to activate the wipers.

○ OFF

☞ INT Intermittent Wipes

— Slow Wipes

== Fast Wipes

☞ Washer Fluid

Push the button on the end of the lever to wash the windshield.



See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS




MAXIMUM HEATING/COOLING

- Select the Recirculation Mode, the desired temperature and the maximum fan speed to quickly heat or cool the air inside the vehicle. Selecting the Recirculation Mode also prevents dusty air or outside odors from entering the cab.

Note: Extended use of the Recirculation Mode increases air humidity and may cause the windows to fog.

PASSENGER COMPARTMENT AIR FILTERS

- There are two air filters – an inside air filter and an outside air filter – that filter air in the passenger compartment. The inside air filter (A) is located behind the cover on the right side of the instrument panel. The outside air filter (B) is located under the right side of the instrument panel. Remove the filters and use a vacuum cleaner to clean them of dust and dirt.

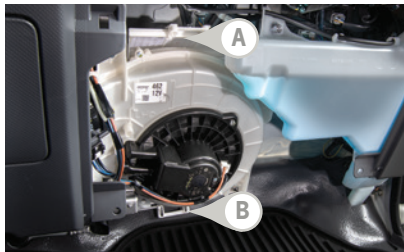

See Climate Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Note: The audio system will mute the volume automatically when the vehicle is shifted into Reverse.

SETTING THE TIME

1. Press the **FUNC** button.
2. Turn the **MODE** knob to display Clock. Press ENTER (press the knob).
3. Turn the **MODE** knob to display Set. Press ENTER.
4. Turn the **MODE** knob to adjust the hour and minutes. Press ENTER.

TUNING STATIONS

- For manual tuning, press the $\wedge$ or $\vee$ button. Press the $\wedge$ or $\vee$ button again to view the next or previous station.
- For automatic tuning, press the $\wedge$ or $\vee$ button for more than 1 second to seek the next or previous station. Press and hold the $\wedge$ or $\vee$ button for more than 2 seconds to continue seeking stations. To cancel, press the button again.

STORING FAVORITES (PRESET)

Up to 30 radio stations (12 AM, 18 FM) can be stored on up to 5 pages.

1. Press the **MODE** knob, and then turn the knob to display the desired favorite page (FM1, FM2, FM3, AM1, AM2). Press ENTER.
2. Tune in the desired radio station.
3. Press and hold one of the Favorite buttons until the station is displayed.

See Infotainment System in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

INFOTAINMENT SYSTEM

PORTABLE AUDIO DEVICES

- ▶ Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to the USB port or auxiliary jack.
- ▶ Press the **MODE** knob, and then turn the knob to display USB or AUX. Press ENTER.

For assistance with the infotainment system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/how-to-support.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/how-to-support for more information.

PAIR A PHONE

1. Press **FUNC**.
2. Turn the **MODE** knob to display Bluetooth. Press ENTER (press the knob).
3. When Pairing is displayed, press ENTER. If the device has been paired previously, turn the **MODE** knob to display Pairing. Press ENTER.
4. Start the pairing process on your phone. A 4-digit code is displayed on the infotainment system.
5. Follow the pairing instructions.
6. When pairing is complete, Connected is displayed.



MAKING/ANSWERING A PHONE CALL

- ▶ To make a call, press the **Off Hook** button to talk hands-free. Use the **MODE** knob to enter a phone number or use your phonebook. Press ENTER. Calling is displayed.
- ▶ When a call is received, Incoming is displayed. Press the **Off Hook** button to talk hands-free. To end the call, press the **On Hook/List** button.

See Infotainment System in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

- ▶ Press the  **On/Off** button on the instrument panel. The  Cruise Control symbol will illuminate on the instrument cluster.
- ▶ When traveling at the desired speed, rotate the band on the turn signal lever down to the SET position to set the speed. The  symbol will illuminate on the instrument cluster.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Rotate the band on the turn signal lever up to the RES position to resume a set speed. When active, rotate and hold the band up to increase speed.

SET- Set/Coast

When active, rotate and hold the band down to decrease speed.

Cancel

Press the brake pedal to cancel Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.



See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

Use the selector lever to select the gear or the range of gears desired for the current driving conditions.

P – Park

R – Reverse

N – Neutral

D – Drive

2 – Second: Use on downhill roads or when engine braking is required. Select the 2 position at speeds below 25 mph.

1 – Low: Use on steep downhill roads or when strong engine braking is required.

Overdrive: Press to turn Overdrive on or off. Overdrive provides increased road speed, lower running noise, and enhanced fuel economy.



See Driving and Operating in your Owner's Manual.

TRACTION CONTROL/STABILITY CONTROL

The traction control system, also known as Anti-Slip Regulation (ASR), limits wheelspin in difficult driving conditions. The electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically each time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/Stability Control Off** button on the instrument panel to turn traction control off or on again.  will illuminate on the instrument cluster when traction control is off.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS ♦

LANE DEPARTURE WARNING

When approaching or crossing a detected lane marking without using a turn signal in that direction, the system flashes an amber  indicator on the instrument cluster, displays an indicator on the Driver Information Center and beeps sound.

- ▶ To adjust system settings, press the  **Lane Departure Warning** button on the instrument panel.

FORWARD COLLISION ALERT

When approaching a detected object directly ahead too rapidly, a BRAKE! alert illuminates on the instrument cluster and beeps sound.

AUTOMATIC EMERGENCY BRAKING

In detected, potentially imminent collision situations with objects directly ahead, a BRAKE! alert illuminates on the instrument cluster, rapid beeps sound and the system automatically applies braking to help reduce the severity or help avoid collisions.

- ▶ To turn Automatic Emergency Braking and Forward Collision Alert on or off, press the  **Automatic Emergency Braking System** button on the instrument panel.

See Driving and Operating in your Owner's Manual.

WINDSHIELD WASHER FLUID

The windshield washer fluid fill is located on the passenger's side of the instrument panel.

1. Remove the cap.
2. Fill the reservoir with a quality, premixed washer fluid.
3. Tighten the cap.



See Vehicle Care in your Owner's Manual.

DIESEL ENGINE FEATURES

DIESEL EXHAUST FLUID (DEF)

DEF reduces the amount of regulated emissions produced by the diesel engine. The DEF level must be maintained for the vehicle to run properly. The DEF gauge (A) on the instrument cluster indicates the approximate quantity of DEF remaining in the tank. The DEF level also can be checked by viewing the sight tube (B) on the side of the DEF tank.

As the DEF level becomes low, warnings are displayed on the instrument cluster. As the tank nears empty, vehicle speed will be limited in a series of steps. Refill the DEF tank to release the speed limitation.

The DEF fill port (blue cap) is located behind the cab on the driver's side of the vehicle.



Base instrument cluster shown



DIESEL PARTICULATE FILTER (DPF)

The DPF filters the diesel exhaust gas to reduce emissions. Occasionally, the DPF goes through a cleaning process as part of normal operation as the vehicle is driven. The DPF status is displayed on the instrument cluster. If driving conditions do not allow the DPF cleaning to take place, the Selectable Regeneration Required or Regeneration Required message is displayed.

- ▶ Press the  **DPF** switch on the instrument panel to complete DPF regeneration when the Selectable Regeneration or Regeneration Required lamp is illuminated.

See *Driving and Operating* in your Owner's Manual.

ENGINE OIL

Check the engine oil regularly. The engine oil dipstick is located on the driver's side of the engine. The oil fill is located on the passenger's side of the engine.

- ▶ On single cab models, tilt the cab to access the dipstick.
- ▶ On crew cab models, the dipstick is located under the sub cover beneath the driver's seat. Pull the red lock lever under the seat cushion to access the cover.
- ▶ With the engine cool, press the  **Engine Oil Level Check** switch on the left side of the instrument panel. A red  Oil Pressure light indicates a low oil level and a green  light indicates the level is OK.



See *Vehicle Care* in your Owner's Manual.

BATTERY LOCATION

The batteries are located behind the cab on the driver's side of the vehicle.

- ▶ Release the spring clip on the cover to access the batteries.


See Vehicle Care in your Owner's Manual.



TILT-CAB OPENING (SINGLE CAB)


TILT THE CAB

1. Follow all precautions before tilting the cab, including removing or securing all loose items in the cab.
2. On the driver's side of the vehicle, behind the cab, pull and hold the metal lever (A) by the assist handle (B) and then pull the lock handle (C).
3. Hold the assist handle (B) to prevent the cab from lifting and pull the safety hook (D) to release the cab.
4. Raise the cab fully while holding the assist handle (B) until the cab support locks.
5. With the cab support locked by the support lock lever (E), insert the safety lock pin (F).

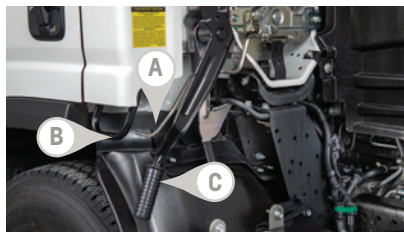

LOWER THE CAB

1. Remove the safety lock pin (F).
2. Hold the assist handle (B) and, while pressing the support lock lever (E), pull the cab support rearward.
3. Lower the cab until the safety hook is engaged and then push down the lock handle (C).

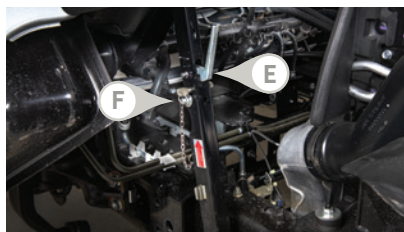

See Vehicle Care in your Owner's Manual.

POWER TAKE-OFF CONTROLS

A Power Take-Off (PTO) device can be used to power add-on equipment. The vehicle must be in Park or Neutral and the parking brake must be set to use the PTO mode. The PTO switches are located on the left side of the instrument panel.

- ▶ Press the  PTO main switch to activate the PTO mode. Idle speed will increase to the preset speed.
- ▶ Use the PTO +/- engine speed control switch to adjust idle speed.

♦ *Optional equipment*

See Driving and Operating in your Owner's Manual.

REFUELING THE VEHICLE

The fuel fill port(s) is located on the driver's side of the vehicle.

1. Remove the fuel cap by turning it counterclockwise.
2. Fully insert the fuel pump nozzle before starting to fill the tank.
3. Replace the fuel cap and turn it clockwise until it clicks.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-899-1327

As the owner of a new medium-duty Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for the duration of the vehicle's powertrain warranty, which is up to 3 years/unlimited miles, at no expense to you.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet Medium-Duty Dealer for any repairs.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual, track your service history and warranty status, and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or GM Genuine Parts.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2021 General Motors LLC. All Rights Reserved.

