



GETTING TO KNOW YOUR **2022** **SILVERADO 1500 LTD**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Silverado 1500 LTD. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Exterior/
Instrument Panel/
Cargo Lamp
Controls

4WD
Controls♦/
Driver Mode
Control

Cruise Control/ Forward
Collision Alert♦/Heated
Steering Wheel♦
Buttons

Turn Signal/
Windshield
Wipers Lever

Driver
Information
Center

Range +/- Gear
Selection
Buttons (on
shift lever)



Power
Mirror♦/
Window
Buttons

Electric
Parking
Brake
Switch

HUD Controls♦
(behind
steering
wheel)

Audio Next/
Previous
Favorite Station
Controls
(on back of
steering wheel)

Steering
Wheel
Adjustment
Lever
(on steering
column)

Audio Volume
Control
(on back
of steering
wheel)

Driver
Information
Center
Controls♦/
Voice
Recognition
Buttons

Gasoline model shown

SYMBOLS



Low Fuel



Traction Control Off

BRAKE

Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



PARK Electric Parking Brake



Electric Parking Brake Service



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist

Engine
Start/
Stop
Button ♦

 
Driver's Heated/
Ventilated Seat
Buttons ♦

Infotainment
System (8-inch*
screen shown ♦)

Infotainment
System
Controls

Climate
Controls ♦

Passenger's
Heated/Ventilated
Seat Buttons ♦

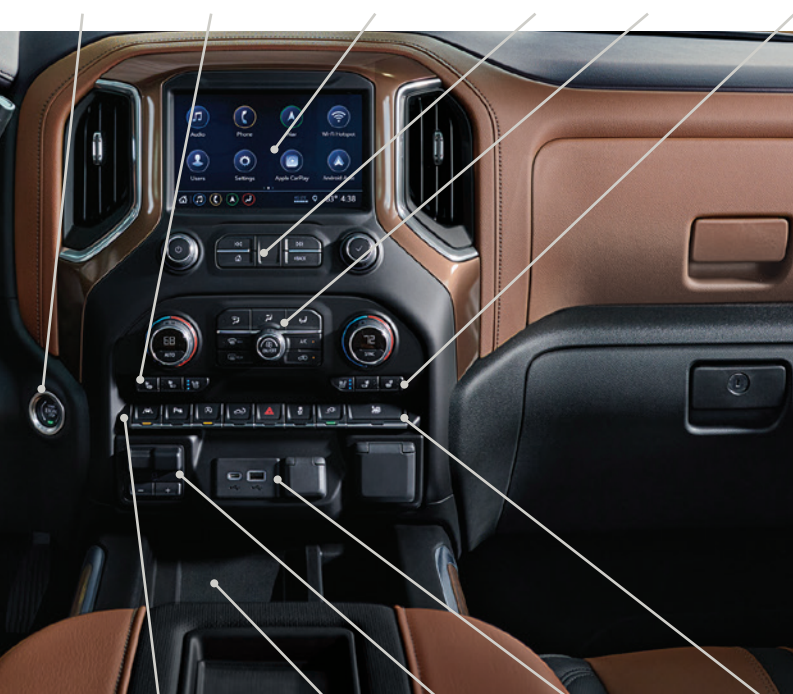

Lane Keep Assist ♦/Park
Assist ♦/Auto Engine Stop-
Start Disable ♦/Power
Tailgate ♦/Hazard Warning
Flashers Buttons

Wireless
Phone
Charging
Pad ♦

Integrated
Trailer
Brake
Control ♦

USB Ports/
Accessory
Power
Outlet/120-Volt
Power Outlet ♦

Traction Control-StabiliTrak
Off/Power Outlet ♦/Hill
Descent Control ♦/Power
Windows ♦/Power Assist
Steps ♦ Buttons

Uplevel model shown



Vehicle Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Charging System



Driver Seat Belt Reminder



Passenger Seat Belt Reminder



4WD Modes

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)★

Lock

Press to lock all doors and tailgate.

Unlock

Press to unlock the driver's door or all doors and tailgate.

Remote Windows★

Press and hold the  button until the windows are fully open. To enable, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

Remote Mirrors★

Press and hold the Lock/Unlock button for 1 second to fold/unfold the power mirrors. To enable, go to Settings > Vehicle > Comfort and Convenience on the infotainment screen.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
Press and hold to activate the alarm.
Press again to cancel the alarm.

Power Release★/Power Tailgate★

Press twice to lower the tailgate.
To raise the power tailgate, press once and then press again and hold until the tailgate is fully closed.

Remote Vehicle Start★

Press and release the  button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.
To cancel a remote start, press and hold the  button until the parking lamps turn off.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM★

The Keyless Access System enables operation of the doors and tailgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The fob must be within 3 feet of the tailgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again within 5 seconds to unlock all doors and tailgate.
- ▶ Press the button on the front passenger's door handle to unlock all doors and tailgate.
- ▶ Press the button on the tailgate to lower the standard tailgate.



KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any front door handle to lock all doors and tailgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

 
KEYED IGNITION SYSTEM (IF EQUIPPED)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

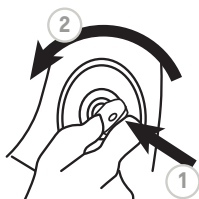

See Driving and Operating in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START♦

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE/ON

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the pocket in the center storage compartment (under the bench seat) or center console cupholders (bucket seats) to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine. The green button indicator will turn off.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate. Press and hold the **ENGINE START/STOP** button for several seconds to place the ignition in Service Mode to operate additional systems.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION ♦ (IF EQUIPPED)

The fuel-saving Engine Stop/Start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions.

- ▶ Press the  **Auto Stop** button on the center of the instrument panel when the engine is running to disable the system. The button indicator will turn off.

The Engine Stop/Start system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

POWER FRONT SEATS ♦

SET MEMORY POSITIONS

1. With the vehicle in Park, adjust the driver's seat and power outside mirrors ♦.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2 (key fob 1 or 2).

To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button 1 or 2.

RECALL MEMORY POSITIONS

- ▶ Press and hold button 1 or 2 or  **Exit** until the set position is reached.
- ▶ To enable the memory positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.



See Seats and Restraints in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

BASE DIC CONTROL

- ▶ Use the trip odometer reset stem on the instrument cluster to access the DIC menu. Turn the stem to scroll through the menu. Press and hold the stem to reset an item.

 


MIDLEVEL AND UPLEVEL DIC CONTROLS

Use the controls on the right side of the steering wheel to view the various menus.

- ▶ Press the < or > button to move between the display zones.
- ▶ Rotate the thumbwheel up or down to move through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

Midlevel and uplevel DIC Controls shown

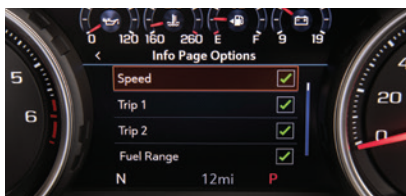

SELECT INFO PAGES

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

MULTICOLOR HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed. The HUD controls are on the left side of the instrument panel.

HUD Position

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.

INFO

Press to select from four displays:

- Speed View – Speedometer only
- Active Safety View – Speedometer and driver assistance information
- Navigation View – Speedometer and turn-by-turn navigation information
- Off-Road View – Speedometer and off-road information

Brightness

 
Lift up to brighten or press down to dim the display. Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS/VEHICLE CONTROLS

Uplevel model with dual automatic climate controls shown

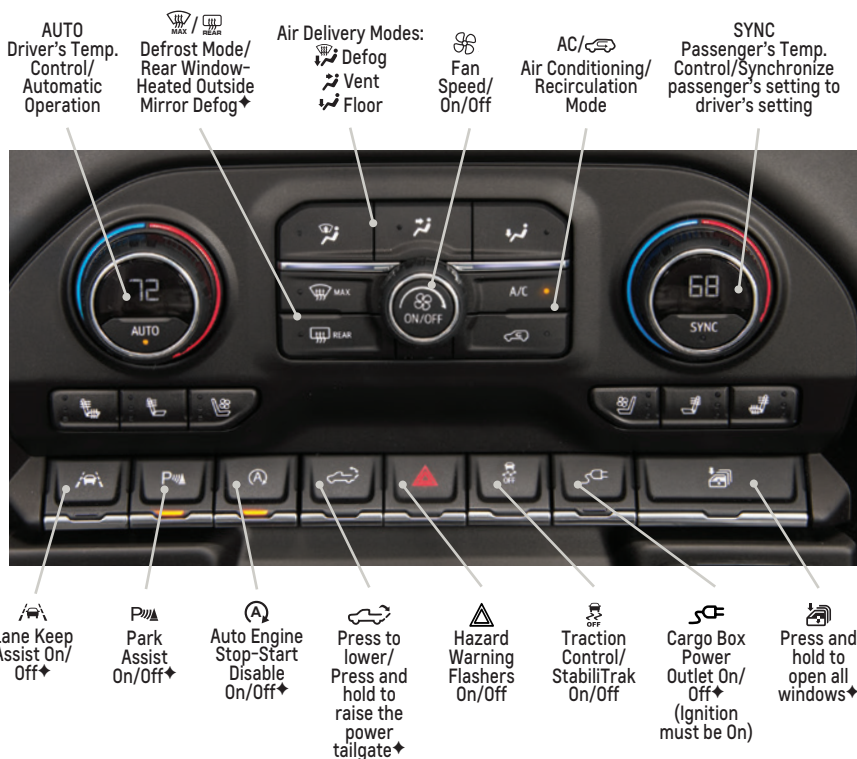

See Introduction in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menus on the infotainment screen. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press **BACK** to exit each menu.



Uplevel model shown

See Instruments and Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Uplevel infotainment system♦ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®, and offers hands-free voice control. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/how-to-support.

MANAGING HOME PAGE ICONS

1. Press the **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order. Audio sources are on the left side of the screen.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.

Favorites also can be stored by touching ★ in a station list.



Uplevel model shown

SIRIUSXM WITH 360L⁺

The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

IN-VEHICLE APPS

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

APPLE CARPLAY[®] AND ANDROID AUTO[™]

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and the phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the Home button. To return to Apple CarPlay or Android Auto, press and hold the Home button.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM ♦

Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone." To use the infotainment screen, select the Phone icon > Phones or Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, select the Phone icon > Phones >  Information.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT ♦

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot on the infotainment system.

For more information on use and limitations, visit my.chevrolet.com/how-to-support.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING ♦

The Wireless Phone Charging system is located on the center console. Visit my.chevrolet.com/how-to-support to check device compatibility. See your phone retailer for any required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the  symbol on the pad.
4. The  charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees.



LIGHTING

LAMP CONTROLS

Use the knob to activate the exterior lamps.

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps**♦

Press to turn the fog lamps on/off.

 **Instrument Panel Brightness**

Press and hold the +/- buttons to adjust the instrument panel lighting.

 **Task Lighting**♦

Press repeatedly to cycle through the forward-facing outside mirror lamp options: both lamps on, left lamp on, right lamp on, both lamps off.

 **Cargo Lamp**♦

With the vehicle in Park, Reverse, or Neutral, press to cycle through the cargo bed/hitch lamps and/or rear-facing mirror lamps.♦ The button indicator illuminates when the cargo bed lamps are on.



INTELLIBEAM SYSTEM♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night when the lamp control is in the AUTO or  position and the system is activated, indicated by a green  on the instrument cluster. A blue  appears when the high-beam headlamps are on.

- ▶ To turn the IntelliBeam system on or off, press the  button on the end of the turn signal lever with the lamp control in the AUTO or  position.

Note: The fog lamps must be off to activate the IntelliBeam system. IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

ADAPTIVE CRUISE CONTROL♦

The system enhances regular Cruise Control to maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.
- ▶ Use the steering wheel controls to set and adjust Cruise Control or Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near.



See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL ♦/FOUR-WHEEL DRIVE ♦

DRIVER MODE CONTROL

The Driver Mode Control settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Driver Information Center.

- ▶ Rotate the control knob (A) to the right to select a mode. Modes may include:

Normal – Use for normal driving.

 
 **Sport** – Use for enhanced responsiveness on paved roads.

 **Snow/Ice (2WD only)** – Use for enhanced traction during slippery conditions.

 **Off-Road (4WD only)** – Use for enhanced control on unpaved roads or trails at moderate speeds.

 **Tow/Haul** – Rotate the knob to the left; use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic, rolling hills, or busy parking lots.

 **Terrain (4WD only)** – Press the  button for enhanced control in low-speed off-road conditions. The system automatically provides light vehicle braking to simulate engine vehicle braking. Only available with the single-speed transfer case when in **4↑**.

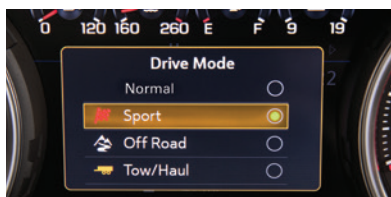

4WD Model shown

FOUR-WHEEL DRIVE

- ▶ Use the four-wheel drive buttons (B) on the left side of the instrument panel to shift into and out of four-wheel drive. The Driver Information Center displays the current status of the transfer case.

AUTO Automatic Four-Wheel Drive High –

Use when traction conditions vary for automatic shifting between 2WD and 4WD. Shift into this mode at any speed except when shifting from **4↓**.

2↑ Two-Wheel Drive High – Use for most streets and highways. Shift into this mode at any speed except when shifting from **4↓**.

4↑ Four-Wheel Drive High – Use when extra traction is needed or in most off-road driving. Shift into this mode at any speed except when shifting from **4↓**.

4↓ Four-Wheel Drive Low♦ – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral.

N Neutral – Use to dolly or dinghy tow the vehicle behind an RV. Neutral is not available with the single speed transfer case. Refer to your Owner's Manual for the shift procedure.



See *Driving and Operating* in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS*

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

 
SAFETY ALERT SEAT – The driver's seat pulses – left side, right side or simultaneously – to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat-pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND

ZONE ALERT – While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

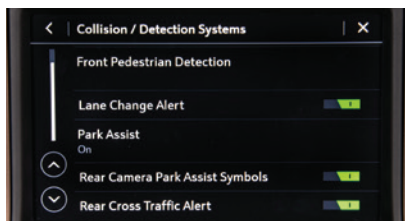

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle that you're following is detected and is amber when you're following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an  amber indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS♦

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

 
- ▶ To turn on or off, press the  **Lane Keep Assist** button on the center of the instrument panel.

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or a continuous beep sounds (if selected).

- ▶ To turn on or off, press the  **Park Assist** button on the center of the instrument panel.

REAR CROSS TRAFFIC ALERT – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red triangle with directional arrow alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

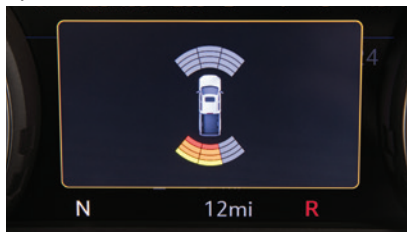

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR♦

The rear camera mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

CAMERA SYSTEM FEATURES

The available camera systems feature up to 8 cameras* with up to 15 views* to help make it easier to hitch a trailer and provide better visibility while towing.

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen. Camera view buttons* are at the bottom of the screen.

- ▶ Touch the  **Guidance Lines**/ **Hitch Guidance** button to change guidelines.
- ▶ Touch the  **Hitch View** button for a zoomed-in view of the hitch area.

SURROUND VISION*

The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. Camera view buttons* are at the bottom of the screen.

- ▶ Touch the  **Guidance Lines**/ **Hitch Guidance** button to change guidelines.
- ▶ Touch the  **Bed View** button to check cargo. Zoom functionality also available.
- ▶ To check available camera views when in Drive above 8 mph, touch the Camera icon on the infotainment screen and select the desired view. Touch X to exit the view.



Surround View screen



Bed View screen

ADDITIONAL TRAILER CAMERA VIEWS*

Multiple views to aid in trailering are shown on the infotainment screen using the vehicle cameras and up to two additional wired Chevrolet accessory cameras* mounted on the rear or interior of the trailer.

- ▶ Touch the  **Rear Side View** button for a biased split view of each side of the trailer (more of the left or right side will be shown based on trailer position).
- ▶ Touch the  **Transparent Trailer View** button for a view behind the trailer. Compatible with most conventional box trailers*; requires accessory camera*.



Transparent Trailer View screen

Jack-Knife Alert** – The Jack-Knife

Alert displays a warning symbol when the truck/trailer angle is in a possible jack-knife position and there is a potentially imminent collision situation. The Safety Alert Seat* may pulse or beeps may sound (if selected).

Note: Accessory camera system compatible with most trailer and hitch types.

See *Driving and Operating* in your Owner's Manual.

POWER MIRRORS♦/TRAILERING MIRRORS♦

POWER MIRROR ADJUSTMENT

- ▶ Press the  **Mirror Selector** button to select the driver or passenger side mirror; use the four-way control pad to adjust the mirror.

POWER FOLDING MIRROR

- ▶ Press the  **Folding Mirror** button to fold or unfold the mirrors.

TRAILERING MIRRORS

The mirrors can be extended for better visibility when towing a trailer. The lower wide-field view mirror adjusts manually.

- ▶ To extend the manual mirror, grasp the mirror housing and pull back and rearward in one motion. The housing extends on a curved arc. Push in the housing to return the mirror to its original position.

Note: Reset the power mirrors if they are adjusted manually by using the power controls to fold/unfold the mirrors to their normal position.



See Keys, Doors and Windows in your Owner's Manual.

HILL DESCENT CONTROL♦

The system maintains vehicle speed from 1–14 mph while descending a steep incline in a forward or reverse gear. Vehicle speed must be below 31 mph to enable the system.

1. Press the  **Hill Descent Control** button on the center of the instrument panel. The current speed will be the set speed. The  symbol will illuminate on the instrument cluster.
2. Adjust speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes when the system is actively applying the brakes.

See Driving and Operating in your Owner's Manual.

TRUCK TIRE PRESSURE MONITORING SYSTEM

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

With the ignition On or in Accessory mode, the Tire Fill Alert provides visual and audible alerts to help with inflating a tire (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

Note: Refer to your Owner's Manual for accessory trailer tire pressure monitoring system information.

MULTI-FLEX TAILGATE OPERATION

The tailgate has 6 functional positions to improve access to the cargo box. To operate the tailgate, it must be unlocked or the key fob must be within 3 feet of the tailgate.

1. Primary Gate

Open the primary gate for access to the cargo box.

2. Primary Gate Load Stop

With the primary gate open, the load stop helps keep longer items secure in the cargo box.

3. Easy Access

The inner gate folds down for easier reach into the cargo box to access items near the cab.

4. Full-width Step

With the primary gate open, the inner gate folds into a sturdy step (up to 375 lbs.) with a convenient handle for easy cargo box entry and exit.

5. Inner Gate Load Stop

With the primary gate closed, fold the inner gate for two-tier storage and open the load stop to help keep longer items secure.

6. Inner Gate Work Surface

With the primary gate closed, fold the inner gate for two-tier storage or for use as a standing-height work surface.

OPEN THE INNER GATE

 
- Press the upper button (A) on the tailgate.

Note: Do not lower the inner gate with the primary gate open if a hitch ball or trailer is attached.

ENABLE/DISABLE THE INNER GATE

The inner gate can be disabled to prevent it from being opened when a hitch or other equipment is installed.

- To disable or enable inner gate operation, press and hold the upper button (A) for 3 seconds until the taillamps flash.

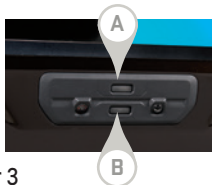

OPEN THE PRIMARY GATE

- Press the lower button (B) on the tailgate.
- Press the  **Power Tailgate** button twice on the key fob.
- Press the  **Power Tailgate** button on the center of the instrument panel.



See Keys, Doors and Windows in your Owner's Manual.

MULTI-FLEX TAILGATE OPERATION*

OPEN THE PRIMARY GATE AND INNER GATE

- ▶ Press the lower button and then upper button (B then A) on the tailgate consecutively.

OPEN THE LOAD STOP OR STEP

- ▶ Press the release bar (C).

 


See Keys, Doors and Windows in your Owner's Manual.

TRAILERING*

ADVANCED TRAILERING SYSTEM*

The in-vehicle trailering app on the infotainment screen allows customized trailer profiles with a variety of helpful towing assistance features, including a hitching and setup checklist, trailer tire pressure and temperature monitoring*, trailer light testing, Jack-Knife Alert*, Trailer Length Indicator*, trailer theft detection and more. Trailering App information also is available with the myChevrolet mobile app.

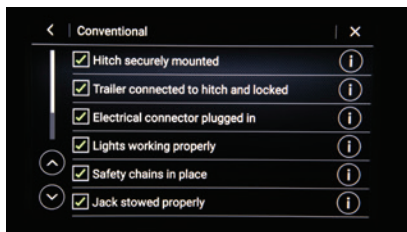

Note: The Trailering App will monitor trailer presence, even while the vehicle is off, by periodically checking the trailer lighting circuits. On trailers equipped with LED lights, these periodic checks may cause the trailer lights to flash. This flashing will become more frequent if Theft Alert is enabled.

HITCH AREA LIGHTING

- ▶ Press the  **Cargo Lamp** button on the left side of the instrument panel to turn the cargo bed lamp or conventional hitch lamp on/off.

TRAILERING INFORMATION LABEL

The Trailering Information Label, located on the pillar between the driver and rear-passenger doors, provides vehicle-specific weight and capabilities ratings.



INTEGRATED TRAILER BRAKE CONTROL (ITBC)*

The ITBC system can be used to adjust the power output, or Trailer Gain, to the trailer brakes. The control panel is on the center of the instrument panel. ITBC information is displayed on the ITBC page on the Driver Information Center.

- ▶ Squeeze the control together to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA 1-800-243-8872

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see your parking location and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from the App Store or Google Play Store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or GM Genuine Parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2021 General Motors. All rights reserved.



85116175 A