



GETTING TO KNOW YOUR **2022** **TAHOE & SUBURBAN**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Tahoe or Suburban. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at my.chevrolet.com. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

- Electronic Parking Brake Switch
- Traction Control-StabiliTrak Off/ Park Assist+/Auto Engine Stop-Start Disable+/Power Outlet Enable/Lane Keep Assist+/Hill Descent Control+/ 360 Camera+ Buttons
- Head-Up Display Controls+
- Cruise Control/ Adaptive Cruise Control+/Forward Collision Alert/ Heated Steering Wheel+ Buttons
- Turn Signal/ Windshield Wipers/ Washer Lever
- Driver Information Center Controls/Voice Recognition Buttons



- Power Mirror/ Power Window/ Memory Seat+ Buttons
- 4WD+/Drive Mode/Air Suspension Controls+
- Exterior/ Instrument Panel Lamp Controls
- Integrated Trailer Brake Control+
- Audio Next/ Previous Favorite Station Controls (behind steering wheel)
- Steering Wheel Adjustment Control
- Audio Volume Control (behind steering wheel)
- Engine Start/ Stop Button

SYMBOLS

- | | | |
|---------------------|----------------------------------|---------------------------|
| Low Fuel | Airbag Readiness | Antilock Brake System |
| BRAKE Brake System | PARK Electronic Parking Brake | Charging System |
| Cruise Control Set | Service Electronic Parking Brake | Driver Seat Belt Reminder |
| Security | Check Engine | Pass. Seat Belt Reminder |
| IntelliBeam | Traction Control Off | Low Tire Pressure |
| Engine Oil Pressure | Lights On Reminder | Power Outlet On |

Electronic
Precision
Shift
Transmission
Controls

Infotainment
System
Touchscreen

Infotainment
System
Controls

Storage
Compartment*
(press handle
button to slide)

Hazard
Warning
Flashers
Button



Climate
Control
Automatic
Operation

Driver's
Heated/
Ventilated
Seat
Buttons*

Wireless Phone
Charging Pad*/
USB Ports/
Accessory
Power Outlet*

Rear Climate
Controls
On-Off/
Rear Display
Buttons

Climate
Control Fan
Speed/Air
Delivery
Modes

Passenger's
Heated/
Ventilated
Seat
Buttons*

Climate Control Sync
Settings (Synchronize
passenger's settings
to driver's settings)



4WD Modes



Hill Descent Control



Lane Keep Assist



Vehicle Ahead



Forward Collision Alert



Engine Coolant



Pedestrian Ahead



StabiliTrak Active



StabiliTrak Off



Trailer Sway Control



Door Ajar

High Country model shown

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

♦ Optional equipment

Some equipment shown may not be included in your vehicle.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors and liftgate.

Unlock

Press to unlock the driver's door or all doors and liftgate.

Remote Windows[♦]

Press and hold the  button until the windows are fully open. To enable, go to Settings > Vehicle > Remote Lock, Unlock, Start > Remote Window Operation.

Remote Mirrors[♦]

To enable the automatic power folding mirrors, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Power Liftgate[♦]

Press twice to open or close the liftgate.
Press once to stop the liftgate.



Rear Liftgate[♦]

Press twice to open the rear liftgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm.

Press again to cancel the alarm.

Remote Vehicle Start

Press twice to start the engine from outside the vehicle. After entering the vehicle, press the **ENGINE START/STOP** button.

- During a remote start, the engine will run for 15 minutes. Press the  button twice again for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System allows locking/unlocking of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door or all doors and liftgate.
- ▶ Press the button on a passenger's door handle to unlock all doors and liftgate.

KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and liftgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors and liftgate will lock automatically after a short delay.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine. The green button light will illuminate.

Note: If the key fob battery is weak, place the key fob in the center console left cupholder to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The amber button light will illuminate. Press and hold the **ENGINE START/STOP** button for several seconds to place the ignition in Service Mode to operate additional systems.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION♦ (IF EQUIPPED)

The fuel-saving Automatic Stop/Start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions.

- ▶ Press the **(A) Auto Stop** button on the left side of the instrument panel to turn the system off or on again. The button indicator turns off when the system is disabled.

The Automatic Stop/Start system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

BUCKLE TO DRIVE

Buckle to Drive prevents the vehicle from shifting out of Park if the engine is running, the brake pedal is pressed, and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park after several seconds. Shifting from Park is prevented once each ignition cycle.

- ▶ To turn off or on again, go to Settings > Vehicle > Buckle to Drive on the infotainment screen. The vehicle may need to be restarted to register the setting change.

See Seats and Restraints in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The Electronic Precision Shift transmission control switches are located on the center of the instrument panel. The selected gear position illuminates in red on the switch.

Park – Press the **P** button to shift to Park.

Reverse – Pull the **R** switch to shift to Reverse.

Neutral – Press and hold the **N** button to shift to Neutral.

Drive – Pull the **D** switch to shift to Drive.

Note: To place the transmission in Neutral for an extended period while using an automatic car wash, refer to Car Wash Mode in your Owner's Manual.



ELECTRONIC RANGE SELECT MODE

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. Press the **L** (Low) button.
2. Press the **+** (plus) or **-** (minus) button to increase or decrease the gear range available. The highest available gear is displayed on the Driver Information Center.

If vehicle speed is too high for the requested gear, the shift will not occur.

See Driving and Operating in your Owner's Manual.


DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

DIC CONTROLS


Use the controls on the right side of the steering wheel to view the various menus.

- ▶ Press the **◀** or **▶** buttons (A) to move between the display pages.
- ▶ Rotate the thumbwheel (B) up or down to move through the menus.
- ▶ Press the thumbwheel (B) to open a menu, select an item, or clear a message.

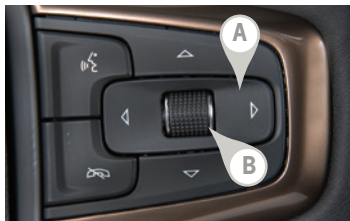

SELECT INFO PAGES*

1. Open the Info or Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select/deselect an item to display in the Info menu.

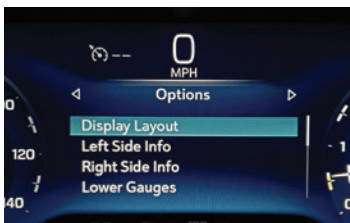

Uplevel model shown

See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menus on the infotainment screen, including Remote Start, Power Liftgate[†], Auto Heated/Ventilated Seats[†], Mirror Folding[†], Wipers and others.

1. Select Settings on the Home page.
2. Select the desired menu.
3. Select the desired feature and setting.
4. Press < Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

MULTI-COLOR HEAD-UP DISPLAY[†]

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are located on the left side of the instrument panel.

HUD Position

Lift up or press down to adjust the position of the display.

INFO

Press to select from 4 display views.

Brightness

Lift up or press down to brighten or dim the display. Hold down to turn off the HUD.



See Instruments and Controls in your Owner's Manual.

POWER FRONT SEATS

SET MEMORY POSITIONS[†]

1. With the vehicle On and in Park, adjust the driver's seat and power outside mirrors[†] to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button 1 or 2 until two beeps sound.
- To store a seat position for exiting the vehicle, repeat these steps using the  Exit button instead of button 1 or 2.



RECALL MEMORY POSITIONS[†]

- Press and hold button 1, 2 or  Exit until the set position is reached.
- To enable the seat positions to be recalled automatically when the vehicle is turned On/Off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

2ND-ROW SEAT ADJUSTMENTS

- ▶ To slide a 2nd-row seat, lift the front lever (A) on the side of the seat cushion.
- ▶ To recline a 2nd-row seatback, lift the rear lever (B) on the side of the seat cushion and push on the seatback.
- ▶ To fold a 2nd-row seat, lift the rear lever (B) on the side of the seat cushion or, from the 3rd-row seat, pull the strap (C) on the bottom of the seatback. The seatback will fold forward. Lift the lever or pull the strap again to tumble the seat forward.
- ▶ To return the seat to the upright position, lift the seatback until it locks in place and then slide the seat rearward by using the front lever (A) on the side of the seat cushion.



Note: Do not slide the 2nd-row seat while folded.

POWER FOLDING 2ND-ROW SEATS+

1. Unbuckle the seat belts, remove anything under or in front of the seats, and move the front seats forward to allow room for the folded seats.
 2. Press the  **Seat Release** button (D) on the panel behind each rear door or the  **2nd-Row Seat** button (E) in the rear cargo area. The seatback will fold forward.
 3. Press either button again to tumble the seat forward.
- ▶ To return the seat to the upright position, pull the seat down until it latches to the floor and then lift the seatback until it locks in place.



POWER FOLDING/UNFOLDING 3RD-ROW SEATS+

1. Unbuckle the seat belts, remove anything on the seats, and move the 2nd-row seats forward to allow room for the folded seats.
 2. Press and hold the bottom of the  **3rd-Row Seat** button (F) in the cargo area or  **3rd-Row Folding Seat** button on the front overhead console to fold the seatback.
- ▶ To unfold the seat, press and hold the top of either  button.



CLEANING THE SEATS

The seats are easily cleanable. For best results, using a damp, soft microfiber cloth, gently rub from the outside of the soiled edge to the center.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE◆

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the  **Power Liftgate** knob (A) on the front overhead console.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the liftgate latch to close the liftgate.




PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob (A) to the 3/4 position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch (C) until the turn signals flash and a beep sounds.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the passenger's side of the rear bumper, right of center. The key fob must be within 3 feet of the liftgate. Depending on operating conditions, the Chevrolet logo (D) is projected on the ground near the rear bumper to indicate the kicking motion location.

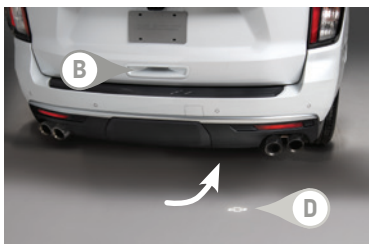

Note: To change the hands-free operation settings, go to Settings > Vehicle > Comfort and Convenience > Hands Free Liftgate on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

POWER RUNNING BOARDS◆



The Power Running Boards lower automatically when a door is opened and retract after the doors are closed.

- ▶ To turn the boards on or off, go to Settings > Vehicle > Running Boards > Automatic Running Boards.
- ▶ To deploy the boards for cleaning or to use the boards with the doors closed, with the vehicle in Park or Neutral, go to Settings > Vehicle > Running Boards > Deploy Running Boards.

See Keys, Doors and Windows in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

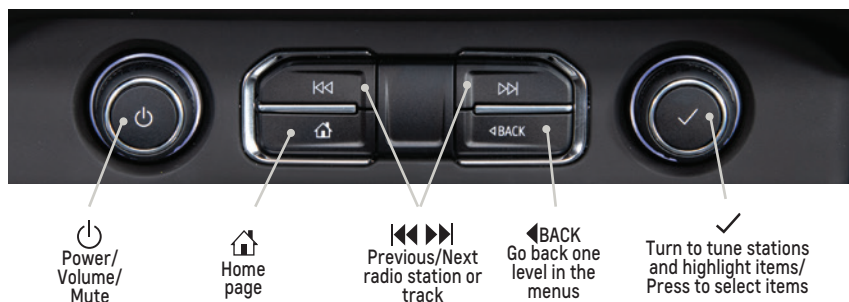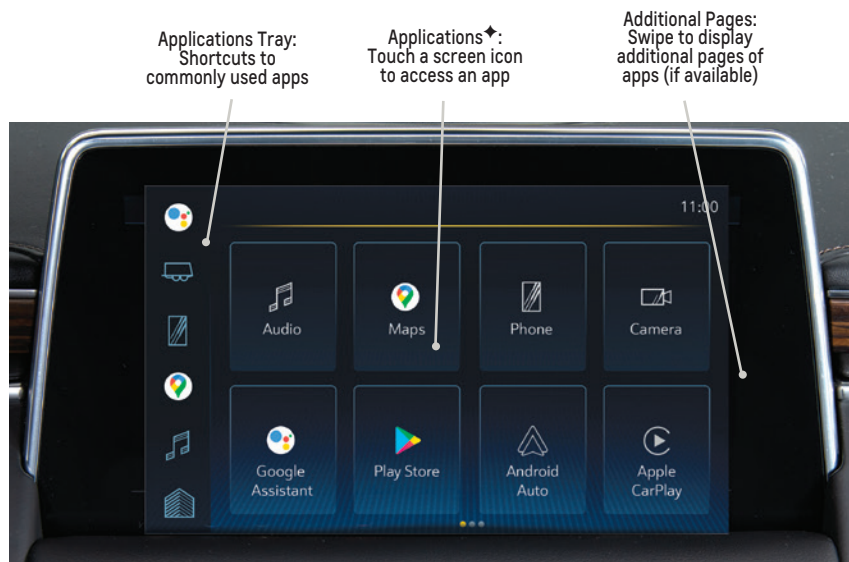

Uplevel model shown

The infotainment system uses a Bluetooth or USB connection to link to a smartphone or other compatible device and offers hands-free voice control. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/how-to-support.

MANAGING HOME PAGE ICONS

1. Press the  **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM, or SiriusXM[®]) can be stored in any order.

1. Tune in a radio station. Source options are on the left side of the Audio page.
2. Select a desired page of favorite buttons.
3. Touch and hold one of the favorite buttons until a beep is heard.

SIRIUSXM[®] WITH 360L⁺

The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

GOOGLE BUILT-IN⁺

Google built-in provides access to your favorite apps, including Google Assistant, Google Maps and Google Play.

Google Assistant – Get things done with your voice so you can keep your focus on driving. Easily get directions, play media, control vehicle functions and more.

- To start, say “Hey Google” or press the  **Push to Talk** button on the steering wheel.

Google Maps – Reach your destination faster with real-time traffic information, automatic rerouting and voice control. Sign in for personalized maps with home and recent locations.

Google Play – Download favorite apps in your vehicle just as you would on your phone, including Spotify and iHeart Radio, to listen to music, podcasts, audiobooks and more.

- Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Note: Downloading and using the apps requires internet connectivity and a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

APPLE CARPLAY[®] AND ANDROID AUTO[™]⁺

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection:
 - **Wireless Connection** – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and the phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the Home button.

See *Infotainment System* in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, go to Phone > Phones or Manage Phones > Add Phone.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. A secondary phone can receive calls only.

- To set the First to Connect phone, go to Settings > Connections > Phone > Options > First to Connect.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT◆

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit my.chevrolet.com/how-to-support.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING◆

The Wireless Phone Charging system is located at the front of the center console. Visit my.chevrolet.com/how-to-support to check mobile device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, at the rear edge of the pad (A) near the cupholders.
4. The ⚡ charging symbol will appear on the infotainment screen when charging.



See Instruments and Controls in your Owner's Manual.

REAR SEAT MEDIA SYSTEM♦

The Rear Seat Media system includes 2 touch-screens, 2 HDMI ports, and 2 Bluetooth wireless headphones along with access to select streaming services (requires unlimited data plan).

- ▶ To power on the system and view the Home page, double tap anywhere on either screen.
- ▶ To control the screens from the front seats, select the Entertainment Studio App icon on the infotainment screen.
- ▶ Touch the  Headphone icon on the screen to pair headphones or view a list of available headphones.



See Infotainment System in your Owner's Manual.

INTELLIBEAM LIGHTING SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night when the lamp control is in the AUTO or  Headlamps position and the system is activated, indicated by a green  symbol on the instrument cluster. A blue  symbol appears when the high-beam headlamps are on. The system is turned off if the high/low-beam changer or the flash-to-pass feature is used.

- ▶ To enable the IntelliBeam system, activate the high/low-beam changer 2 times within 2 seconds using the turn signal lever.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

ADAPTIVE CRUISE CONTROL♦

The system enhances regular Cruise Control to maintain a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.
- ▶ Use the steering wheel controls to set and adjust Cruise Control or Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near.



See Driving and Operating in your Owner's Manual.

OVERHEAD CONSOLE FEATURES



DOME LAMPS

- ▶ To turn a reading lamp on/off, press the lamp lens.
- ▶ To turn on/off all reading/dome lamps with the doors closed, press and hold any lens. The dome lamps will not turn on if the **OFF** button is pressed on the overhead console.

Refer to your Owner's Manual for more information about the Overhead Console features.

POWER SLIDING CENTER CONSOLE

The Power Sliding Center Console moves rearward for additional storage options and easier access to rear console features.

- ▶ Press and hold the  or  button on the front overhead console to move the center console rearward or forward.
- ▶ With the center console fully rearward, pull the lower handle (A) to pull out the lower storage compartment.
- ▶ With the center console moved rearward, push forward on the console armrest (B) to move it forward.



See Storage in your Owner's Manual.

DRIVER MODE CONTROL ♦/FOUR-WHEEL DRIVE ♦

DRIVER MODE CONTROL

The Driver Mode Control settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Driver Information Center.

- ▶ Rotate the Driver Mode Control knob (A) on the left side of the instrument panel to select a mode.



4WD model shown

Normal – Use for normal driving.

Sport – Use for enhanced responsiveness on paved roads.

Snow/Ice (2WD only) – Use for enhanced traction during slippery conditions.

Off-Road (4WD only) – Use for enhanced control on unpaved roads or trails at moderate speeds.

Tow/Haul – Use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic, rolling hills, or busy parking lots.

Terrain (4WD only ♦) – Press the  button for enhanced control in low-speed, off-road conditions. The system automatically provides light vehicle braking to simulate engine vehicle braking. Only available with the single-speed transfer case when in 4↑.

FOUR-WHEEL DRIVE

- ▶ Use the four-wheel-drive buttons (B) on the left side of the instrument panel to shift into and out of four-wheel drive.



Shift between 2↑, 4↑, and AUTO at normal driving speeds. The current status of the transfer case is displayed on the Driver Information Center.

AUTO Automatic 4WD High – Use when traction conditions vary.

2↑ 2WD High – Use for most streets and highways.

4↑ 4WD High – Use when extra traction is needed or in most off-road driving.

4↓ 4WD Low (2-Speed Transfer Case ♦) – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral. Shift the transmission into gear when the indicator light stops flashing.

N Neutral (2-Speed Transfer Case ♦) – Use to dolly or dinghy tow the vehicle. Refer to your Owner's Manual for the shift procedure.

See Driving and Operating in your Owner's Manual.

AIR RIDE ADAPTIVE SUSPENSION♦

The Air Ride Adaptive Suspension offers load-leveling and adjustable ride height capabilities.

1. Press the  **Ride Height** button (A) to display the menu on the Driver Information Center.
2. Turn the knob (B) left or right to select a ride height in the menu.
3. To save the selection, press the  button again or wait for the menu to time out.

 **Normal Ground Clearance** – Use for normal driving.

 **Entry/Exit Ground Clearance** – Lowers the vehicle for easy entry and exit.

 **Increased Ground Clearance** – Raises the vehicle 1 inch from Normal. 4WD♦ models only.

 **Maximum Ground Clearance** – Raises the vehicle 2 inches from Normal. 4WD♦ models only. Vehicle must be in 4WD Low.

Aero – Automatically lowers the vehicle when vehicle speed exceeds 65 mph for a period of time to improve aerodynamics. This feature cannot be user-selected.

- To have the vehicle automatically lower to the Entry/Exit height when the vehicle is shifted to Park, go to Settings > Vehicle > Ride Height > Automatic Entry/Egress.

Note: Heavy use of the air suspension may cause the system to temporarily suspend all height changes to allow the air compressor to cool down.

See Driving and Operating in your Owner's Manual.



HILL DESCENT CONTROL♦

Hill Descent Control sets and maintains vehicle speed from 1–19 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button on the left side of the instrument panel. Vehicle speed must be below 37 mph to enable the system. The  Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- switch on the steering wheel. The adjusted speed becomes the new set speed. The symbol flashes when the system is actively applying the brakes to maintain vehicle speed.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

SAFETY ALERT SEAT[♦] – The driver's seat pulses – left, right, or both sides – to alert you of the direction of potential hazards. Audible alerts may be selected instead.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT[♦] – While driving, the system displays a  warning symbol on the left- or right-side mirror when a vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green when a vehicle that you're following is detected ahead and is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

► Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited..

REAR PEDESTRIAN ALERT[♦] – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING[♦] – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

► To turn on or off, press the  **Lane Keep Assist** button on the instrument panel.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

FRONT AND REAR PARK ASSIST♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

REAR CROSS TRAFFIC ALERT♦ – When in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn Front and Rear Park Assist and Rear Cross Traffic Alert on or off, press the **P** **Park Assist** button on the left side of the instrument panel. To change the settings, go to Settings > Vehicle > Collision/Detection Systems.

HIGH DEFINITION REAR VISION CAMERA

When in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen. Camera view buttons are at the bottom of the screen.

HIGH DEFINITION SURROUND VISION♦

The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. Camera view buttons are at the bottom of the screen.

- ▶ Select the CAMERA icon on the infotainment screen or press the **360° Camera** button on the left side of the instrument panel to activate the cameras. Press the X on the screen or the **Home** button to exit the view.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR♦

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.

- ▶ Rotate the Rear Window Wiper control band to the **Washer** position to clean the Rear Camera Mirror lens and rear window.



See Keys, Doors and Windows in your Owner's Manual.

TRACTION CONTROL

The Traction Control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control** button on the left side of the instrument panel to turn Traction Control off or on again.

See Driving and Operating in your Owner's Manual.

TRAILERING

TRAILERING APP⁺

The in-vehicle trailering app on the infotainment screen includes a variety of helpful functions when towing a trailer, including hitching and setup checklists, trailer tire pressure monitoring⁺, trailer light testing, customized trailer profiles, trailer theft detection (requires an active OnStar service plan⁺) and more.



INTEGRATED TRAILER BRAKE CONTROL (ITBC)⁺

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the ITBC page on the Driver Information Center.

- ▶ Squeeze the control together (right side does not move) to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.



See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

The Tire Fill Alert provides visual and audible alerts when inflating a tire (excluding the spare tire). With the vehicle On, the horn sounds and the turn signals change from flashing to solid when the recommended air pressure is reached.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see your parking location and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from the App Store or Google Play Store.†

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at my.chevrolet.com.

†Android, Android Auto, Google, Google Play and Google Maps are trademarks of Google LLC.; Apple CarPlay is a trademark of Apple Inc.; SiriusXM, is a trademark of Sirius XM Radio Inc.

We recommend always using ACDelco or GM Genuine Parts.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2021 General Motors LLC. All Rights Reserved.



84793882 A