

Features & Functions Guide

KIA

FORTE

WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area — with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with your QR Code Reader App. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos

QUICK TIPS

If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal

After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODES

Drive Mode Integrated Control System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1 Smart Key	46
2 Fuel Filler Lid Release.	50
3 Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	43
4 Seat Warmers / Ventilated Seats*	42
5 Folding Rear Seats	44
6 Wiper Service Mode	26
7 Windshield Wipers & Washers.	26
8 Smart Cruise Control (SCC) with Stop & Go	16-17
9 Smart Power Trunk*	48
10 Normal Maintenance Schedules	52, Back Cover
11 User Settings - Instrument Cluster* / Vehicle Settings - Audio Head Unit* . . .	08
12 Bluetooth® Wireless Technology	28-29
13 UVO link Activation*	32
14 UVO link with Navigation*	34
15 Android Auto™ / Apple CarPlay® Setup.	30

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

www.kia.com
Consumer Affairs - Roadside Assistance¹⁴:
1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

VIDEOS & QR CODES . . . Inside Front Cover**INSTRUMENT CLUSTER**

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Fuel Economy	05
Tire Pressure Monitoring System (TPMS)	05
Drive Mode Integrated Control System*	06

VEHICLE SETTINGS

LCD Instrument Cluster Modes	07
Trip Modes / Trip Computer	07
User Settings - Instrument Cluster*	08
Service Interval Mode	08
Vehicle Settings - Audio Head Unit*	09

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Forward Collision-Avoidance Assist (FCA)	10
Blind-Spot Collision-Avoidance Assist (BCA)*	11
Lane Keeping Assist (LKA)	12
Safe Exit Warning (SEW)*	13
Driver Attention Warning (DAW)	14
Lane Following Assist (LFA)	15
Smart Cruise Control (SCC) with Stop and Go*	16
Cruise Control (CC)*	17
Navigation-Based Smart Cruise Control (NSCC)*	17
Highway Driving Assist (HDA)*	18
Rear View Monitor (RVM)	19
Reverse Parking Distance Warning (PDW)*	19
Rear Cross-Traffic Collision-Avoidance Assist*	20
Rear Occupant Alert (ROA)* with Door Monitoring	21

DRIVER'S PANEL

Electronic Stability Control (ESC)	22
Instrument Cluster Control	22
Hill-start Assist Control (HAC)	22
Engine Start/Stop Button*	23

DRIVER'S PANEL CONTINUED

Power Windows, Window Lock & Central Door Lock	24
Power Folding Outside Mirrors*	24
Automatic Door Lock/Unlock	24
Heated Outside Mirrors*	24
Manual Folding Mirrors*	24

STEERING WHEEL CONTROLS

Headlights & High Beams	25
Turn Signals & Fog Lights*	25
Windshield Wipers & Washers	26
Lifting Wipers (Wiper Service Mode)	26
Tilt/Telescoping Steering Wheel	27

AUDIO SYSTEMS

Bluetooth® Wireless Technology	28
Audio Controls	29
Android Auto™ / Apple CarPlay® Setup*	30
Standard Audio System*	31
UVO link Activation*	32
UVO Assistance*	32
Kia Access with UVO link App Download	33
Kia Access with UVO link App Features Guide	33
UVO link with Navigation*	34

CENTER PANEL

Multimedia USB Port, Power Outlets & USB Charger Ports*	35
Digital Clock (Navigation System)*	35
Automatic Climate Control*	36
Manual Climate Control*	37
Automatic Gear Shift with Sportmatic® Shifting* / Manual Mode	38
Paddle Shifters*	38
Manual Gear Shift*	39
Dual Clutch Transmission (DCT)*	39

CENTER PANEL CONTINUED

Electronic Parking Brake (EPB)*	40
Auto Hold	40
Wireless Smartphone Charging System*	41

SEATING

6-Way Manual Adjustable Driver's Seat*	42
Seat Warmers* / Ventilated Seats*	42
10-way Power Adjustable Driver's Seat*	43
Front Seat Headrest Adjustment	43
Folding Rear Seats*	44

OTHER KEY FEATURES

Map/Room Lamps*	45
Sunroof Operation*	45
Smart Key*	46
Remote Keyless Entry (Folding Key)*	47
Double-Turn Lock/Unlock All	47
Smart Power Trunk*	48
Hood Release Lever and Latch	49
Sunvisor	49
Trunk Release Lever and Button*	49
Fuel Filler Lid Release Lever	50
Fuel Cap / Malfunction Indicator (Check Engine Light)	50
Tire Mobility Kit*	50

SAFETY FEATURES

 
Seat Belts	51
Child-Protector Rear Door Locks	51
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	51

MAINTENANCE - TURBO 52**MAINTENANCE - NON-TURBO** Back Cover**LEGAL DISCLAIMERS** Inside Back Cover

Instrument Cluster Overview

- A** Tachometer
- B** Speedometer
- C** Turn Signal Indicators
- D** LCD Gear Shift Position, Odometer, Trip Modes / Trip Computer, Exterior Temperature
- E** Engine Coolant Temperature Gauge
- F** Fuel Gauge


 Arrow direction indicates the side of the vehicle the fuel door is located

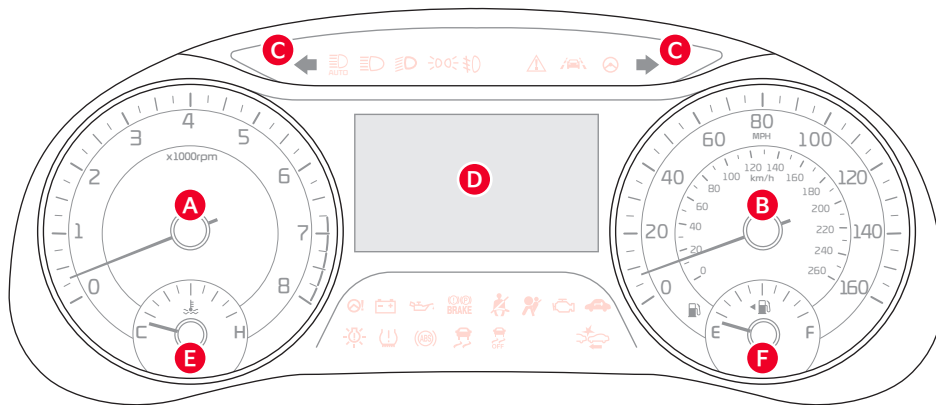

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

 Indicators & Warning Lights

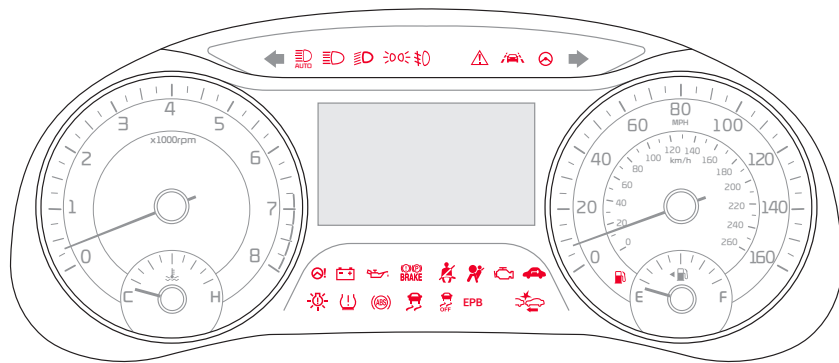

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration or be in a different position. On the vehicle, they may appear in the LCD.

- | | | | |
|--|--|--|--|
| | Low Tire Pressure Indicator / TPMS Malfunction Indicator | | Door Ajar Warning Indicator |
| | Electronic Stability Control OFF Indicator | | Airbag Warning Indicator |
| | Anti-Lock Brake System (ABS) Indicator | | Charging System Warning Indicator |
| | Trunk Open Indicator | | High Beam Indicator |
| | Immobilizer Indicator | | Low Fuel Level Warning Indicator |
| | Electronic Stability Control Indicator | | Cruise Control ON Indicator* |
| | Malfunction Indicator* | | Cruise Control Set Indicator* |
| | Light on Indicator | | Master Warning Mode* |
| | KEY OUT Indicator* | | SPORT Mode Indicator* |
| | Electronic Power Steering (EPS) Warning Indicator* | | Lane Keeping Assist Indicator* |
| | Front Fog Lights Indicator* | | Forward Collision-Avoidance Assist Warning Light |
| | Engine Oil Pressure Warning Indicator | | Washer Fluid Warning Indicator |
| | Safety Belt Warning Indicator | | |

- | | |
|--|--|
| | Electronic Brake Force (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time) |
| | Icy Warning Indicator* |
| | Low Beam Indicator |
| | High Beam Assist Indicator* |
| | Parking Brake & Brake Fluid Warning Light |
| | LED Headlamp Warning Light* |
| | SMART Mode Indicator* |
| | Electronic Parking Brake |

Fuel Economy

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

Refer to section 6 in the Owner's Manual for more information or snap the QR Code above to view a video.

Tire Pressure Monitoring System (TPMS)^{†23}

 
The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

 The TPMS indicator is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower. The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

- Inflate tire(s) to specifications to turn off the Low Tire Pressure Light  using an accurate tire pressure gauge. See front driver's door jamb for PSI specifications
- When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate - See dealer for service

REMINDERS:

- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s).
- Check the recommended tire pressure label located on the left side of the driver's door jamb, visible when the door is opened.
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate.

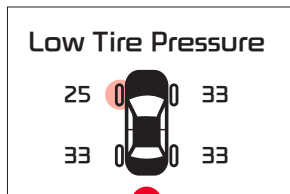

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for approximately 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

QR CODES

Fuel Economy Video



Tire Pressure Monitoring System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

 
Drive Mode Integrated Control System*

SMART, NORMAL and SPORT drive modes **A** may be changed according to the driver's preference or road conditions. To cycle through drive modes, press the DRIVE MODE button **B**.


Smart Mode* - When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, aggressive). A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator (green, blue, red) depends on the current driving style. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

NORMAL Mode - The system's default mode is NORMAL mode and is not displayed on the instrument cluster nor the audio system's screen.

SPORT Mode - A red SPORT indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

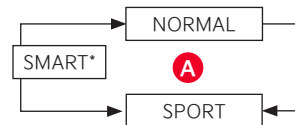

(Appears on LCD in Instrument Cluster)

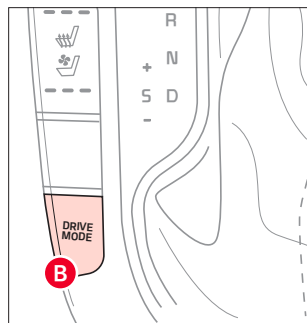 

(Located on Center Panel next to Gear Shift)*

QUICK TIPS

- In Sport mode, when engine is turned off, the system will default to NORMAL mode and SPORT mode will need to be selected again when the vehicle restarts.
- To help improve your fuel economy:
 - Drive at a moderate speed, accelerating smoothly and at a moderate rate
 - Keep tires inflated to the recommended pressure
 - Be sure the wheels are properly aligned

REMINDERS:

- When SPORT mode is selected, fuel economy may decrease
- Steering effort may be slightly increased in Sport mode

QR CODE

Drive Mode Integrated Control System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

LCD Instrument Cluster Modes*

Type B and C Clusters: Press Mode/Menu button **A** to scroll through the different LCD modes:

-  **Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.
-  **Turn-by-Turn Mode:** Displays the state of the navigation
-  **Driving Assist Mode:** Displays information about Lane Departure Warning, Lane Keeping Assist, Lane Following Assist, Smart Cruise Control, Highway Driving Assist, Driver Attention Warning
-  **User Settings Mode:** Change settings of the driver assistance features, cluster, doors, lamps, convenience and other features
-  **Information Menu:** Displays Tire Pressure information
-  **Master Warning Mode:** Displays warning messages including those related to Blind-Spot Collision Warning (BCW)* Malfunction, Cruise Control, Lamp Malfunction, LED Lamp Malfunction*, and Engine Oil Shortage

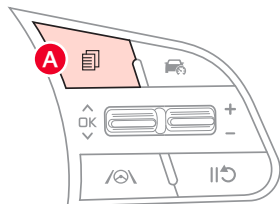

(Button panel located on Steering Wheel, Type B)

 
Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.

Refer to section 4 in the Owner's Manual for more information.


Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch or the Engine Start/Stop button* is in the ON position.

To toggle through the different modes **B**, press the Mode button **C**. When in Tripmeter, press the Mode button **C** again to select Trip A or Trip B and press OK **D**. Press and hold the Reset button (not shown - Type A Steering Wheel) to reset the Tripmeter to zero.

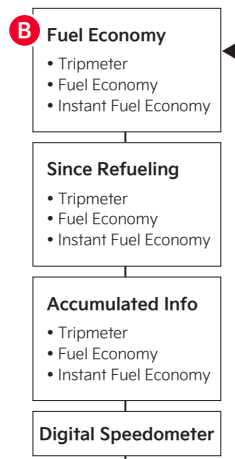

(Type B/C cluster shown)

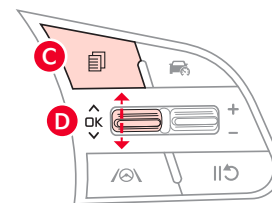 

REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Instrument Cluster's LCD Display Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

User Settings Mode* (Type B/C Cluster settings)

To enter the User Settings mode on the LCD screen, ensure vehicle is at a stand still, shift lever is in Park, and Engine Start/Stop button or Key in the ON position. Then select User Settings  by pressing the Mode/Menu button **A**.

You can navigate the selections on the display by pressing the Move button **B**, and then selecting the item by pressing the OK button **C**.

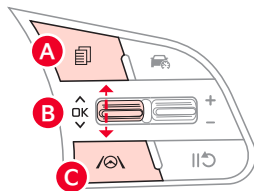

User Settings Modes

Driver Assistance*:

- Driving Convenience
- Warning Timing
- Warning Volume
- Driver Attention Warning
- Forward Safety
- Lane Safety
- Blind-Spot Safety
- Parking Safety

Cluster:

- Theme Selection
- Wiper/Lights Display
- Traffic Signs*
- Icy Road Warning
- Welcome Sound*

Doors:

- Automatically Lock
- Automatically Unlock
- Smart Trunk*
- Two Press Unlock*
- Remote Window*
- Smart Trunk*

Lights:

- One-Touch Turn Signal*
- Headlamp Delay*
- Ambient Light Brightness*
- Ambient Light Color*
- High Beam Assist

Sound:

- Parking Distance Warning* Volume
- Welcome Sound*

Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

Convenience:

- Welcome Mirror/Light*
- Wireless Charging System*
- Seat Easy Access*
- Rear Occupant Alert*
- Service Interval
- Icy Road Warning*

Units:

- Speed Unit
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit*

Reset:

- Reset Menus

Language*:

- Choose Language

Refer to section 4 in the Owner's Manual for more information.

 
 
 
Service Interval Mode (Type B/C Cluster settings)

To enter Service Interval Mode, press the Mode/Menu button **A**, scroll to the User Settings Mode . Press Move button **B** to scroll to the Service Interval menu and press OK button **C** to enter. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following screen will be displayed: Service Required.

To reset the Service Interval Mode system, press and hold the Set/Reset (OK) button **C** for more than 1 second.

To turn the Service In reminder OFF, go to User Settings.

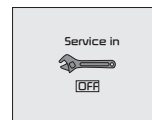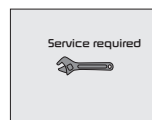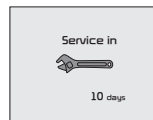

Service Interval Setting:

To set the service interval when in User Settings mode:

- Press the Move button **B** up/down and scroll to Service Interval. Press the OK button **C** to enter
- Press the Move button **B** and toggle to ON, then press the Select/Reset button **C**. Then press the Move button **B** up/down to scroll and select the desired miles or months for your next service
- Press the Select/Reset button **C** to enter

QR CODES

Vehicle & User Settings Video



LCD Display: Maintenance Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

Vehicle Settings* - Audio Head Unit

To enter the Vehicle Settings mode in the audio head unit, press the SETUP key on the audio head unit. Then press Vehicle , which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.

Vehicle Settings

Driver Assistance:

Driving Convenience*, SCC Reaction*, Warning Time*, Warning Volume*, Driver Attention Warning*, Forward Safety*, Lane Safety*, Blind-Spot Safety*, Parking Safety*

Climate*: Recirculate Air*, Automatic Ventilation*, Defog/Defrost Options*

Lights*: Ambient Light*, One Touch Turn Signal*, Headlight Display*, High Beam Assist*

Door*: Remote Window Control*, Auto Lock*, Auto Unlock*, Two-Press Unlock*, Smart Trunk*

Cluster*: Illumination*, Service Interval*, Content Selection*, Welcome Sound*

Convenience*: Rear Occupant Alert*, Wireless Charging System*

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

See section 4 in the Owner's Manual for more information.

QR CODES

Vehicle & User Settings Video



Ambient, Mood & Theme Lighting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Forward Collision-Avoidance Assist (FCA)^{†5}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, temporarily apply emergency braking. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle, pedestrian, or cyclist, emitting an audible warning and visual alert on the instrument cluster **A**.

 
 
If the system detects that the collision risk has increased, Forward Collision-Avoidance Assist (FCA) automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

FCA User Settings:

- FCA is ON by default in most Kia models. FCA can be turned ON/ OFF by going to the User Settings in the Instrument Cluster or the Audio Head Unit*
- To go to User Settings , press the Mode button  **B** on the Steering Wheel when the vehicle is at a standstill, gear shift is in Park and with the ignition on or the Engine Start/Stop button* in the ON position
- Press the OK button  **C** up/down and select User Settings  then Driver Assistance
 - In some models, go to Driving Assist, then Forward Collision-Avoidance Assist or Forward Collision Warning and press the OK button 
 - In other models, go to Forward Safety and select Active Assist, Warning Only or Off
- Then select one of the following modes:
 - Active Assist:** Vehicle will provide a warning (audible & visual) and apply the brakes if needed
 - Warning Only:** Vehicle will provide a warning only (audible & visual)
 - Off:** System is off, no warnings or braking provided
- To adjust the FCA initial warning activation time, go to User Settings , Driver Assistance, Warning Timing then select Normal or Late, depending on your Kia model:
 - Normal:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
 - Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

FCA/FCW will become active when the:

- Ignition is on or the Engine Start/Stop button* is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

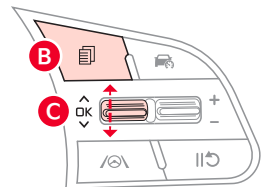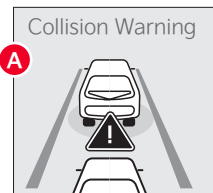

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA system is automatically turned off
- When the FCA system is off, the FCA warning indicator is on in the Instrument Cluster 

When engaged, Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.

Actual User Settings steps may vary by model. Refer to section 4 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

Forward Collision-Avoidance Assist (FCA) Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

QUICK TIP

FCA Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the audio head unit. Go to Driver Assistance, then Warning Volume

Blind-Spot Collision-Avoidance Assist (BCA)^{†5}

BCA uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes. Initially, BCA provides Blind-Spot Collision Warning (BCW) when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, Blind-Spot Collision-Avoidance Assist (BCA) automatically applies the opposite side front brake to try and mitigate a potential collision.

 
 
1st-stage warning: When another vehicle is detected within BCA warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

2nd-stage warning: When 1st stage warning is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

3rd-stage: When 1st stage warning is on and the 2nd stage warning has already occurred, and the collision risk has increased, braking may be applied to the opposite side front wheel and a visual warning occurs.

BCA User Settings:

- To turn BCA on, go to the User Settings menu  in the Instrument Cluster, press the Mode button  **C** on the Steering Wheel when the vehicle is at a standstill, gear shift is in Park and with the ignition switch or the Engine Start/Stop button* in the ON position, and select User Settings . Press the Move (OK) button  down and select Driver Assistance, Blind-Spot Safety and then press the OK button .
- Some models access settings through the Vehicle Settings in the audio head unit. Press the Setup key on the audio head unit, then **VEHICLE**  on the screen to enter Vehicle Settings
- To set BCA when in Blind-Spot Safety, select:
 - **Active Assist:** BCA will provide a warning (audible & visual) and may activate Electronic Stability Control (ESC) and temporarily apply braking power
 - **Warning Only:** Vehicle will provide a warning only (audible & visual)
 - **Off:** System is off, no warnings provided
- To set the initial warning activation time, go to User Settings , then Driver Assistance, Warning Time and press the OK button . Adjust the warning timing:
 - **Early:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - **Normal:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
 - **Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

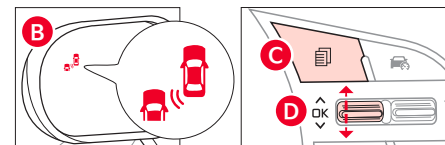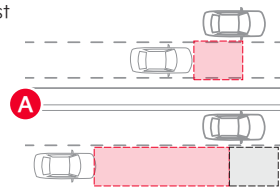

QR CODE

Blind-Spot Detection Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIPS

- BCA Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the audio head unit. Go to Driver Assistance, then Warning Volume
- BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Vehicle speed is above approximately 20 mph

REMINDERS:

- BCA will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When BCA is ON and the ignition is cycled, BCA returns to its previous state
- BCA is a supplemental system. Do not rely solely on this system. Always pay attention to the road and drive safely

When engaged, BCA is not a substitute for safe and proper driving. Always drive safely and use caution. Refer to section 5 in the Owner's Manual for more information. Images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Lane Keeping Assist (LKA)^{†5}

Lane Keeping Assist (LKA) is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, the system may give an audible warning and display Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

There are three available modes:

- **Active LKA** - Provides more frequent steering inputs than standard LKA
- **Lane Keeping Assist** - Guides driver to keep vehicle within lanes and provides steering inputs when vehicle is about to deviate from the lane
- **Lane Departure Warning** - Alerts driver when the system detects the vehicle leaving the lane. In this mode the system will not provide steering inputs

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers



When the front-view camera does not detect the lane traveled in, the lanes are not illuminated



When the front-view camera detects the lane traveled in, both lanes are illuminated



When the front-view camera detects the vehicle moving outside of the lane traveled in, a vehicle crossing lane indicator will blink, either on the left or right lane (as shown in both images above)



QR CODE

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Lane Keeping Assist and Lane Departure Warning are not substitutes for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Actual User Settings steps may vary by model. Refer to section 4 in the Owner's Manual for more information.

Lane Keeping Assist (LKA)^{†5} (continued)

LKA User Settings:

- To enable LKA, go to the User Settings menu  in the Instrument Cluster, press the Mode button  **A** on the Steering Wheel when the vehicle is at a standstill, gear shift is in Park and with the ignition on or the Engine Start/Stop button* in the ON position, and select User Settings .
- Some models access settings through the Vehicle Settings in the audio head unit. Press the Setup hard key on the audio head unit, then **VEHICLE**  on the screen to enter Vehicle Settings
- To switch between LKA modes (Lane Keep Assist, Lane Departure Warning), go to User Settings  in the Instrument Cluster. Press the Move (OK) button  **B** up/down and select desired setting and press the OK button  **B**.

QUICK TIP

 
The LKA Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the audio head unit

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

When engaged, Lane Keeping Assist and Lane Departure Warning are not substitutes for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary. Actual User Settings steps may vary by model. Refer to section 4 in the Owner's Manual for more information.

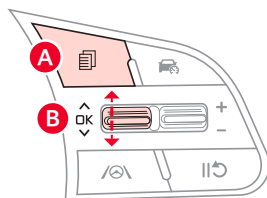


Safe Exit Warning (SEW)^{††5}

Safe Exit Warning (SEW) can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped.

To turn on SEW, go to User Settings in the Instrument cluster or the Vehicle Settings* in the audio head unit, select Driver Assistance, then Blind-Spot Safety, and select Safe Exit Warning.

To set the initial warning activation time, go to User Settings, then Driver Assistance, Warning Time and press the OK button  **B**. Adjust the warning timing to one of the following:

 - Normal:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
- Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

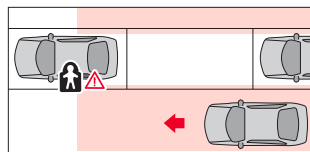

QUICK TIP

The SEW Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings* on the audio head unit.

REINDER: SEW may not detect all objects and the occupants should always be mindful of their surroundings

See section 4 in the Owner's Manual for more information.

Driver Attention Warning (DAW)*†6

Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving.

If DAW is activated, the DAW information **A** will appear on the Instrument Cluster LCD when you select the Driving Assist / Assist mode in User Settings **⚙️**. A message, "Consider taking a break," **B** appears on the LCD and a warning sounds to suggest the driver to take a break when the driver's attention level becomes low.

 
 
DAW User Settings:

To turn DAW on/off, with the ignition on, press the Mode button **C** on the Steering Wheel and go to User Settings **⚙️** in the Instrument Cluster. Then go to Driver Assistance and select Driver Attention Warning.

Some models access settings through the Vehicle Settings in the audio head unit. Press the Setup hard key on the audio head unit, then press Vehicle **🚗⚙️** on the screen to enter Vehicle Settings.

There are two modes:

- **Inattentive Driving Warning:** DAW will inform the driver of the driver's attention level and will recommend taking a break when it falls below a certain level
- **Leading Vehicle Departure Alert:** DAW will inform the driver when the front vehicle departs from a stop.

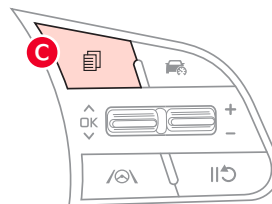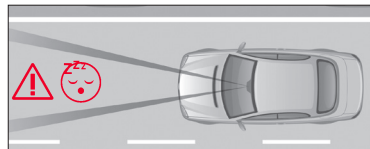

REMINDERS:

- The setup of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display "Consider taking a break" message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

QR CODE

Driver Attention Warning (DAW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

See section 5 in the Owner's Manual for more information.

Lane Following Assist (LFA)*†5

Lane Following Assist (LFA) is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The instrument cluster indicator will initially illuminate white **A** when turned ON, and on some vehicles, it will remain white when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LFA icon will illuminate green **B**. When LFA is enabled in the User or Vehicle Settings*, press the LFA button **C** to turn LFA on or off.

LFA will operate only when these conditions are met:

- LKA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 95 mph

LFA User Settings:

 
 
- To go to User Settings **D** in the Instrument Cluster, press the Mode button **D** on the Steering Wheel when the vehicle is at a standstill, gear shift is in Park and with the ignition on or the Engine Start/Stop button* in the ON position, and select User Settings **D**
- To enable LFA, when in User Settings, press the Move (OK) button **E** up/down and Select Driver Assistance then Driving Assist, Select Lane Following Assist. Press the OK button **E**
- Some models access settings through the Vehicle Settings in the audio head unit. Press the SETUP hard key on the audio head unit, then **VEHICLE** **F** on the screen to enter Vehicle Settings
- Some vehicles have a Lane Driving Assist / Lane Safety button* on the Driver's Panel or the Steering Wheel **G**. Press to activate Lane Following Assist

QUICK TIP

The LFA Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings* on the audio head unit

REMINDERS:

- If the ignition is cycled, LFA returns to its previous state, on or off, if activated in the User Settings menu **D**. If using the LFA button **C**, then LFA defaults to off
- LFA is not a substitute for safe and proper driving. Always drive safely and use caution

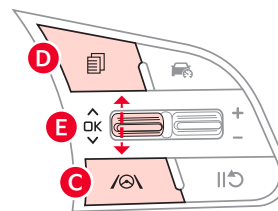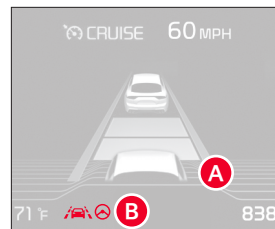

(Buttons located on steering wheel)

QR CODE

Lane Following Assist (LFA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual User Settings steps may vary by model. See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

Smart Cruise Control (SCC) with Stop & Go^{*†5}

The Smart Cruise Control with Stop & Go^{*} system is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will automatically slow to maintain a set distance between traffic without depressing the accelerator or brake pedal.

With the SCC on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

On some models, press the Driving Assist button^{*}  **A** on the Steering Wheel to activate and the speed will be set to the current vehicle speed. SCC may decrease the speed to maintain the distance with the vehicle in front.

To set/adjust the SCC speed:

- Push the Driving Assist button^{*}  **A** to turn the system ON & set the current speed (One-Touch Set). The cruise indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed and press lever **B** down to set the speed
- Press the RES+/SET- (+/-) button^{*} **B** up/down to increase/decrease the set speed
- The SET indicator light, set speed and vehicle distance will illuminate on the instrument cluster's LCD screen **C**

To set the vehicle distance^{*}: Press the button **D** on the steering wheel. The image on the LCD screen **C** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes.

To cancel or pause SCC operation: Press the pause  button^{*} **D**. The cruise indicator on the instrument cluster will turn OFF.

 
To turn SCC OFF: Press the Driving Assist button  **A**. The cruise indicator on the instrument cluster will turn OFF.

To adjust the sensitivity of the SCC system:

Press the mode button  **E** on the Steering Wheel.

With the OK button **F**, select Driver Assistance, then SCC Response or go to settings in the Audio Head Unit^{*}. Then select Fast, Normal or Slow.

See section 5 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.

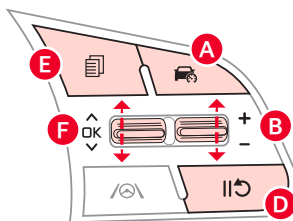

(Type B Steering Wheel shown; buttons located on right side of Steering Wheel)

C

The distance settings are approximations and may vary depending on the vehicle speed at the time. See owner's manual for more information.

CRUISE 60 MPH

Smart Cruise Control Mode

Cruise Control Mode

QR CODE

Smart Cruise Control with Stop & Go Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Smart Cruise Control (SCC) with Stop & Go*^{†5} (continued)

QUICK TIPS

 
- The speed setting for SCC can be adjusted under the following conditions:
- You must be travelling at a minimum speed of 5 mph (may vary on newer models)
- When following a vehicle, there is no minimum speed requirement
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected ahead. If the vehicle detected ahead remains at a standstill and your vehicle is also stopped for longer than 3 seconds, the system will need to be reactivated by pressing the gas pedal or pressing the RES button

REMINDERS:

- The cruise control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starts
- When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

Cruise Control (CC)*^{†5}

- A Driving Assist button:** Press to turn the Cruise Control ON/OFF. The indicator will illuminate on the instrument cluster and the set speed will automatically activate at the vehicle's current speed
- B RES+ :** Press up to resume or increase cruising speed
- SET- :** Press down to set or decrease cruising speed
- C Pause/Resume button:** Press to pause Cruise Control. Press again to resume Cruise Control

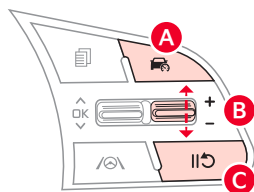

QUICK TIPS

- Cruise Control is designed to function at above 20 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDERS:

- Cruise Control is a part of Smart Cruise Control with Stop & Go* and can be set as the operating mode. To switch from SCC to Cruise Control, press and hold the Driving Assist button **A**. Repeat to switch back to SCC mode

Your vehicle's steering wheel buttons may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.

Navigation-based Smart Cruise Control (NSCC)*^{†4}

Navigation-based Smart Cruise Control can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system.

To turn on NSCC, go to the User Settings in the instrument cluster or the Vehicle Settings* in the audio head unit, by selecting Driving Assistance, Highway Auto Speed Change. When SCC is on and operating, and NSCC is turned on, then NSCC is enabled and the AUTO icon **D** will illuminate white on the Instrument Cluster.

When NSCC detects a curve ahead, NSCC activates, and reduces the vehicle speed, the AUTO icon **D** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

 
Autoset (Automatic change of set speed): NSCC automatically changes the set speed of Smart Cruise Control using the speed limit information of the navigation system* to help you drive at a safe speed.

REMINDERS:

- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways

Refer to section 5 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide.

When engaged, Cruise Control and NSCC are supplemental systems and are not substitutes for safe driving. The driver remains responsible for maintaining a proper and safe speed for the vehicle.

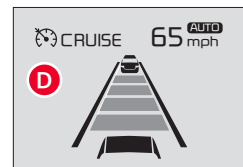

Highway Driving Assist (HDA)*†5

Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways. The system can adjust the vehicle's speed based on available highway speed information. The automatic speed setting mode is designed to set the speed automatically by adjusting to the current speed limits of the highway the vehicle is traveling on.

To activate HDA, turn Smart Cruise Control (SCC) on by pressing the Driving Assist **MODE** button* **A** on the Steering Wheel. When HDA is activated and the conditions are met, the Instrument Cluster indicator **B** will illuminate green. If proper conditions are not met, HDA will be in standby mode and the indicator light **B** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **B**.

If HDA is activated, conditions are met and the SCC speed is set by the driver (at the posted highway speed limit or slower), HDA will enter the automatic speed setting mode. The set speed and AUTO will be displayed **C** in green and an audible alert will sound.

HDA will operate only when these conditions are met:

- The vehicle is traveling slower than 110 mph or the highway speed limit
- When driving on limited/controlled access highways/freeways
- When the SCC is on and operating
- When the SCC speed is set to current posted highway speed or slower

 
HDA User Settings:

To enable HDA, press the Mode button **D** on the Steering Wheel and go to User Settings **G** in the Instrument Cluster. Press the Move (OK) button **E** up/down and press Driver Assistance, then Driving Assist, Highway Driving Assist. Then press the OK button **E** to enable.


Some models access settings through the Vehicle Settings in the audio head unit. Press the Setup hard key on the audio head unit, then press **VEHICLE** **F** on the screen to enter Vehicle Settings.

REMINDERS:

- Current highway speeds and controlled or limited access road information may vary. Future navigation updates may change this information
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode
- When the ignition is cycled, the system returns to its previous state, on or off

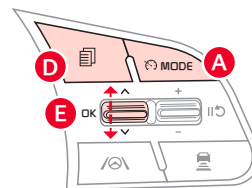

 (Buttons located on right side of the steering wheel)

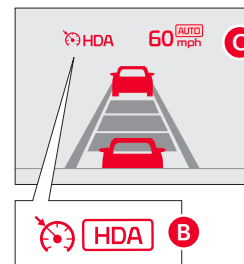

QR CODE

Highway Driving Assist (HDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

 
See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

Rear View Monitor (RVM)^{†5}

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio head unit screens while the vehicle is in Reverse.

Rear View Monitor activates when the:

1. Engine is ON
2. Gear Shift Lever is in the R (Reverse) position

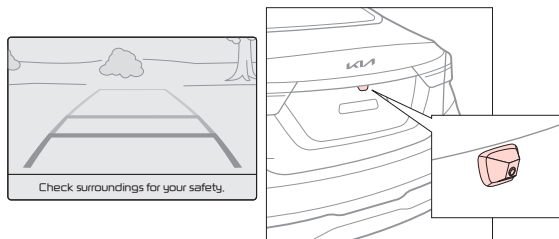

REMINDERS:

- Always drive carefully and use caution when backing up
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While Rear View Monitor is active the volume will be lowered on all audio modes
- RVM is ON by default when the ignition is cycled

When engaged, Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

Reverse Parking Distance Warning (PDW)^{*†5}

 
Reverse PDW is a supplemental system that is designed to assist the driver by chiming if an object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated, while the vehicle is in Reverse.

QUICK TIP

The PDW Warning Volume can be adjusted in the User Settings or the Vehicle Settings* on the audio head unit. When adjusted, the Warning Volume for other driver assistance systems may be adjusted.

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

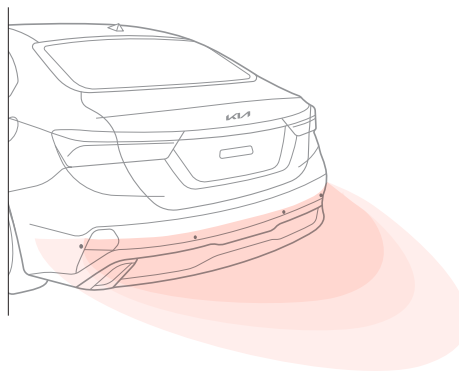

When engaged, Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Reverse Parking Distance Warning (PDW) may not detect every object behind the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Forward/Reverse Parking Distance Warning (PDW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Rear Cross-Traffic Collision Avoidance Assist (RCCA)*†5

Rear Cross-Traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver, and under certain conditions, may activate the Electronic Stability Control (ESC) and temporarily apply braking if it detects cross traffic approaching the vehicle, when vehicle is in reverse **A**.

 
 
 
RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B**. If RCCA detects that the collision risk has increased, the system automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

RCCA User Settings:

- To go to the User Settings menu  in the Instrument Cluster, press the Mode button  **C** on the Steering Wheel when the vehicle is at a standstill, gear shift is in Park and with the ignition on or the Engine Start/Stop button* in the ON position, and select User Settings .
- To turn RCCA on when in User Settings , press the Move (OK) button  **D** up/down, select Driver Assistance, Parking Safety, Rear Cross-Traffic Safety and then press OK .
- To set the initial warning activation time, go to User Settings , press the Move (OK) button  **D** up/down, then go to Driver Assistance, Warning Time and press the OK button. There are two settings:
 - **Normal:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
 - **Late:** Reduces the amount of distance between the vehicles before the initial warning occurs
- Some models access settings through the Vehicle Settings in the audio head unit. Press the Setup hard key on the audio head unit, then **VEHICLE**  on the screen to enter Vehicle Settings
- The default Warning Timing is set to Normal. If the Warning Timing is changed, the warning time of other Driver Assistance systems may also change

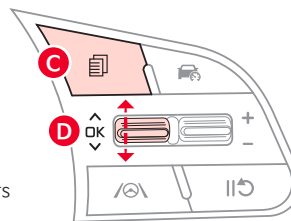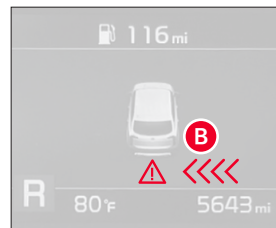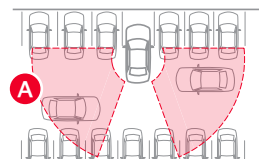

(Buttons located on steering wheel)

QUICK TIP

RCCA Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings on the audio head unit. Go to Driver Assistance, then Warning Volume.

QR CODE

Rear Cross-Traffic Collision Avoidance Assist (RCCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:

- The RCCA feature can be turned OFF/ON in User Settings, under Driver Assistance, Parking Safety
- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

Refer to section 4 in the Owner's Manual for more information.

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Rear Occupant Alert (ROA) with Door Monitoring*†13

The Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to "Check rear seats"  and a chime will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to User Settings in the Instrument cluster or Vehicle Settings*, on the audio head unit, select Convenience, then Rear Occupant Alert and check/uncheck the box.

REMINDER: Always be sure to check the passenger areas before leaving the vehicle.

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, Rear Occupant Alert is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting.



QR CODE

Rear Occupant Alert (ROA) with Door Monitoring Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Electronic Stability Control (ESC)^{†7}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible. Press ESC button **A** to turn ESC OFF/ON.

REMINDERS:

- ESC is turned ON by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will be lit momentarily whenever ESC is active

Refer to section 5 in the Owner's Manual for more information.

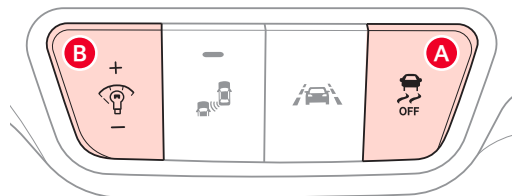

(Located left of steering wheel)

Instrument Cluster Control

With parking lights/headlights ON, press button **B** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINDER: The Instrument Cluster Control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 4 in the Owner's Manual for more information.

Hill-start Assist Control (HAC)^{†7}

HAC is designed to help prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator - this is normal HAC operation
- HAC provides a 2-second delay before the vehicle may start rolling backwards

REMINDERS:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunctions, see Authorized Kia Dealer for service

HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

 
 
Engine Start/Stop Button*†8

To start the engine:

1. Depress the brake pedal and/or clutch pedal*
2. Press the Engine Start/Stop button while the gear shift is in Park (or while in Neutral for Manual Gear Shift)

To turn the vehicle OFF, press the Engine Start/Stop button.

To use the Engine Start/Stop button, the Smart Key fob must be in the vehicle.

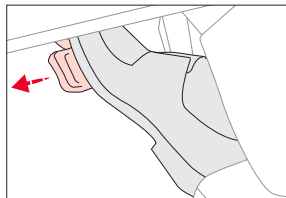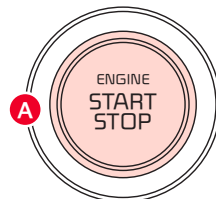

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once **A**

ON position

- When already in the ACC position and without depressing the brake pedal, press the Engine Start/Stop button again
- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button twice

Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, you can still start the engine by pressing the Engine Start/Stop button with the Lock-button end of the Smart Key. The Smart Key must contact the Engine Start/Stop button directly, at a right angle

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

Engine Start/Stop Button & Smart Key Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's & Passenger's Window Auto Up/Down*
- B** Press to Unlock/Lock All Doors
- C** Press to disable Rear Passenger Windows

QUICK TIPS

- Press button **A** again to stop Auto Up/Down function
- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDER: When button **C** is pressed, the rear window controls for the Rear Passenger Windows are disabled.

Refer to section 4 in the Owner's Manual for more information.

 
Power Folding Outside Mirrors*

- D** Press the L or R buttons to select the mirror to adjust
- E** Press button arrows left/right or up/down to adjust mirror position
- F** Toggle button to unfold/fold the outside rearview mirrors. Toggle button to automatically fold/unfold mirrors when:
 - Smart Key* lock/unlock buttons are pressed
 - Outside door handle button is pressed
 - Driver approaches the vehicle with the Smart Key*

REMINERS:

- When mirror button **F** is depressed, press the Lock button on the Smart Key to automatically fold the mirrors
- To lock position of mirrors, toggle switch to the left position
- The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle (if activated in User Settings)

Refer to section 4 in the Owner's Manual for more information.

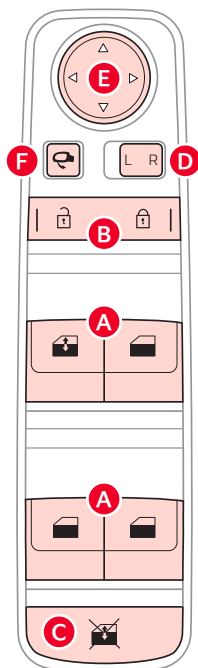

(Driver's Door)

Button configuration may vary depending on vehicle model.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

Refer to section 4 in the Owner's Manual for more information.

Heated Outside Mirrors*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button* is located on climate control system panel.

 
Refer to section 4 in the Owner's Manual for more information.

Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds.

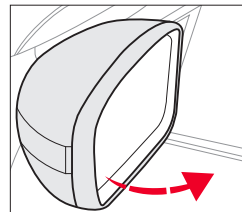

Refer to section 4 in the Owner's Manual for more information.

Headlights & High Beams

To operate:

- Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

AUTO Light* — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL)* — DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

High Beam Assist (HBA)* — High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions. To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

 
REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal lever up/down slightly for less than 1 second and then releasing.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster and select Lights, then One-Touch Turn Signal. One-Touch Lane Change Signal is located in some models in the audio head unit -> Vehicles Settings -> Lights Menu.

Refer to section 4 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

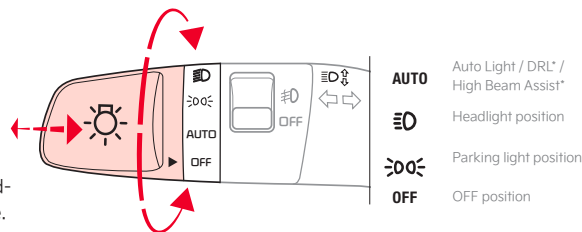


Turn Signals & Fog Lights*

To operate:

- **Turn Signals** - Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- **Fog Lights** - Press switch **A** up/down to turn Fog Lights ON/OFF

 REMINDER: Headlights must be ON for Fog Light operation.

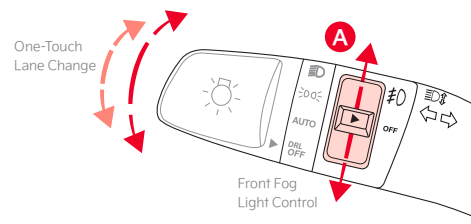


Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change Wiper modes
- Rotate switch to adjust Wiper mode
- Press INT switch up/down **A** to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

QUICK TIPS

 - Pressing INT switch up increases Intermittent wipe frequency and wipe speed. Pressing INT switch down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

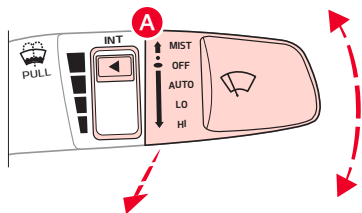

MIST: Single wipe
OFF: Wiper off
INT: Intermittent wipe
LO: Slow wipe
HI: Fast wipe

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Lifting Wipers (Wiper Service Mode) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **E**.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch to the MIST position **A** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

Refer to section 7 in the Owner's Manual for more information.

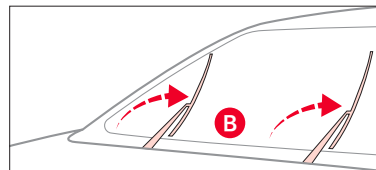

Tilt/Telescoping Steering Wheel†22

To adjust the Steering Wheel, push down the Lock-Release Lever **A** and adjust to desired angle **B** and distance **C**.

 
When finished, pull up the Lock-Release Lever **A** to lock Steering Wheel in place.

QUICK TIP

It may be helpful to pull/push bottom of the Steering Wheel towards/away from you to adjust desired distance.

Refer to section 4 in the Owner's Manual for more information.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

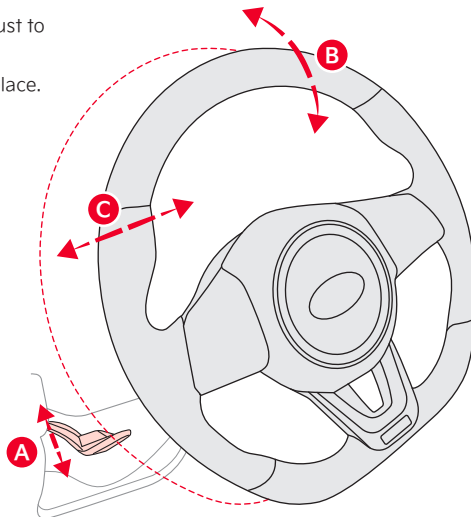

Bluetooth® Wireless Technology†4,19

A Volume button: Press up/down to raise/lower speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause *Bluetooth*® streaming media

B Talk button: Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition.

UVO link with Navigation system* - When enrolled with a UVO link subscription, press this button to activate the UVO Voice Assist to use navigation guidance and search destinations

QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

C Receive/Place Call button: Press to receive/place calls. If no phone is paired, press button to pair a phone.

 
End Call button: Press to end a call, reject an incoming call or cancel a function

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and *Bluetooth*® Wireless Technology chip programming, functionality may differ from one phone to another

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Infotainment System Quick Reference Guide. For *Bluetooth*® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for *Bluetooth*® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific *Bluetooth*® Wireless Technology phone pairing and operation instructions.

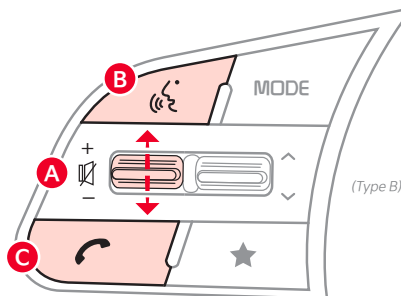

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future *Bluetooth*® connection requests.

How to Place a Call

When using the voice command feature, waiting for the system BEEP before speaking the command. There are two options for placing a call using the Steering Wheel controls:

- **Option 1:** Press the Receive/Place Call button **C** (displays the call history)
- **Option 2:** Press the Talk button **B**. Then say the command "Call {name}" or Dial {number}

REMINDER: *Bluetooth*® Wireless Technology audio and calling functions are supported when connected to a *Bluetooth*® enabled device.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Bluetooth® Wireless Technology^{†4,19} (continued)

Voice Recognition* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")

Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)

Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters

Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- The system may register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- Bluetooth® Music Streaming - If the Bluetooth® music is inaudible or too low, you may need to turn up the volume on the connected phone.
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

Audio Controls^{†19}

E Audio MODE button: Press to cycle through the FM/AM/SiriusXM®^{†18}/Media modes

Audio System ON/OFF: Press to turn power on; Press and hold to turn power off. Press and hold to go to Advanced Setting / Steering Wheel mode (UVO link with Navigation)

F Seek/Preset button:

 
Radio Mode (FM/AM/SiriusXM®^{†18}) - Press to advance through the Preset Stations.

Press and hold to Auto Seek

Media Mode - Press to move track forward/back. Press & hold to fast forward/rewind (except for Bluetooth® Audio)

G Volume button: Press up/down to raise/lower volume

Mute button: Press to mute all audio (in some Media modes the media pauses when pressed)

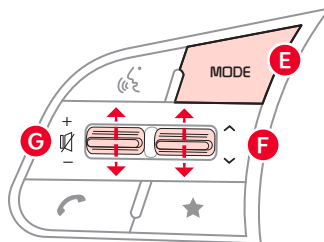

Your vehicle's steering wheel buttons may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

QR CODE

Voice Recognition Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDER: Bluetooth®

Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device.

QUICK TIP

Press and hold the Audio Mode button to turn the Audio Mode ON or OFF.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Android Auto™^{†3} / Apple CarPlay®^{†3} Setup

Android Auto™ compatible smartphone setup - Download the Android Auto™ app from the Google Play™ Store^{†3}. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Standard Audio System & Standard Audio System-Value with UVO link):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ (Standard Audio System, Standard Audio System-Value with UVO link & UVO link with Navigation):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacture for both power and data
 - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
 - The Phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Cable Connection setup for Apple CarPlay® (UVO link with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone®^{†3} with the vehicle's USB port using the manufacturer's cable provided with your iPhone®^{†3}
2. Press the SETUP key on the audio head unit
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the audio head unit home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - UVO link with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection):
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - UVO link with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (Wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

QR CODE

 
Wireless Apple CarPlay & Android Auto Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to the Car Infotainment System Quick Reference Guide for more information.

Standard Audio System* - FM/AM/Media (USB, Bluetooth® †4 Audio)*

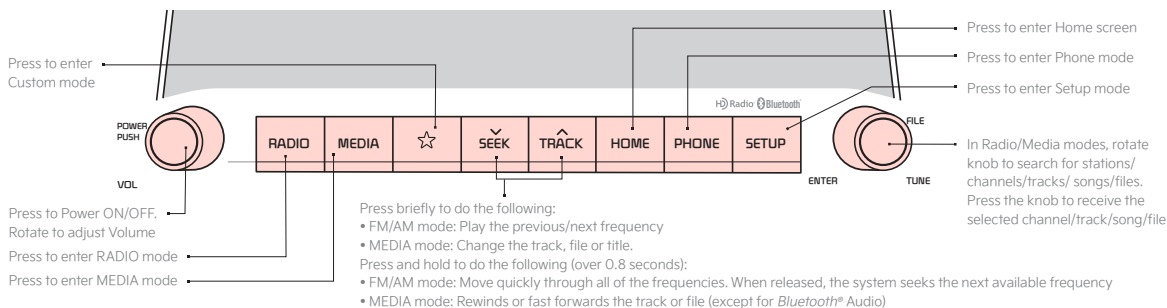

QR CODE

Standard Audio System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Sound Settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio head unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button to save settings.

Radio Presets: You can listen to FM and AM radio and save frequently used stations. To save a Preset, press and hold the desired slot. This saves the current station in the selected slot.

Custom Key ☆: A programmable key to provide quick access to one of several available system features. To program the Custom Key, press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionality has been modified while the vehicle is in Drive, Reverse or moved out of Park.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to Bluetooth® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay, on your smartphone, the smartphone's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 29-34 or see your Car Infotainment System Quick Reference Guide.

UVO link Activation*†1 (Systems equipped with UVO link only)

Follow these steps to activate your UVO link system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press UVO icon
 - c. Press Activate UVO
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter smartphone number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone text message or email:
 - a. Check your phone text message or email for verification code
 - b. Open the link in your text message or email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code

REMINDER: This vehicle is not equipped with over-the-air system updates.

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my verification code." A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

UVO link may be unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See UVO Terms of Service at owners.kia.com for more information.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

QR CODES

Kia Access with UVO link App Video



UVO Assistance Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

UVO Assistance*†1

Virtual Assistant ⓘ ⓘ - Press to connect to a virtual assistant to hear information about the UVO features

 
UVO Voice Local Search UVO ⓘ ⓘ (systems with navigation) - Press to connect to the search function to find points of interest or other locations, like "cafe"

UVO Voice Local Search UVO ⓘ ⓘ (non-navigation systems) - Press to activate phone projection with Android Auto™ or Apple CarPlay® (smartphone must be connected via wireless or USB cable — see previous page for availability and setup)

Roadside Assist†14 ⓘ ⓘ - Press to connect to a Roadside Assistant where you can request vehicle towing services

REMINDER: These buttons may be located in the rearview mirror or the overhead console.

For more information, refer to the Car Infotainment System Quick Reference Guide. On certain models, UVO Assistance buttons are located on the Rearview Mirror.



(Buttons on overhead console; In some models, the buttons are located in the Rear View Mirror)

Kia Access with UVO link^{†1} App Download

Go to an app marketplace to download the Kia Access with UVO link App. Once you download the app, make sure you register your vehicle and start an account (refer to UVO link Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use UVO. If these conditions are not met, remote command may not execute or may take a long time. It will also affect voice commands such as navigation POI or address search
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- When Remote Start is activated, if the driver does not enter the vehicle within 10 minutes, the Remote Start will turn the engine off
- When using Remote Start with Climate Control, turn on for at least a few minutes before getting into the vehicle, allowing the vehicle interior to reach your desired temperature
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, UVO will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use UVO again



Kia Access with UVO link^{†1} App Features Guide

The Kia Access with UVO link App Features Guide is a step-by-step guide that helps you utilize the app to its full potential by detailing how to use each feature and adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide.

UVO link may be unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See UVO Terms of Service at owners.kia.com for more information.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

QR CODES

 
Download the **Kia Access with UVO link App** by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access with UVO link App Features Guide. Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes.



UVO link with Navigation*†1,10 - FM/AM/SiriusXM®†18/Media (USB, Bluetooth®†4 Audio)

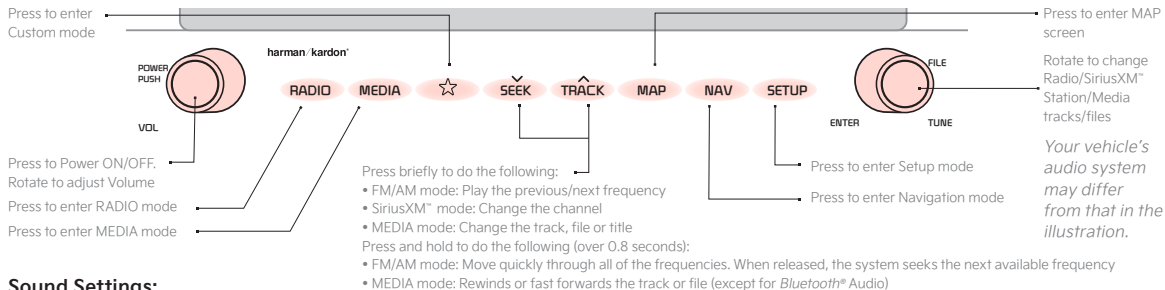

Sound Settings:

To adjust the audio system sound settings:

1. Press the SETUP key on the audio head unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Navigation, Advanced, Default)
4. Use the onscreen buttons to adjust settings.

Radio Presets: You can listen to FM, AM and SiriusXM™ radio and save frequently used stations. To save a preset, press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

SiriusXM® Smart Favorites: For the first ten favorite SiriusXM™ channels, you may play live or repeat from the beginning of a song or a program segment. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: A programmable key to provide quick access to one of several available system features. To program the Custom Key, press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

REMINDERS:

- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery
- **Map/software updates:** To keep your map and software up to date, free of charge, visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>. Note, visiting a dealer for software update may include an additional charge

QR CODE

UVO link with Navigation Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

UVO link may be currently unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See UVO Terms of Service at owners.kia.com for more information. For further UVO link with Navigation operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, see pages 29-33.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to Bluetooth® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the device's navigation system may also be available
- At any time, you can interrupt the Voice Command Feedback: Press the TALK button on the steering wheel
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command

Multimedia USB Ports, Power Outlets & USB Charger Ports*

Multimedia USB Port* **A**

Use the Multimedia USB port to connect USB audio devices and smartphones.

 
 
Power Outlets **B**

Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

USB Charger Ports* **C**

Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger Port.

(Ports and power outlets are located on lower part of Center Panel in front of gear shift and also in the back of the center console; power ports may be configured differently on your vehicle)

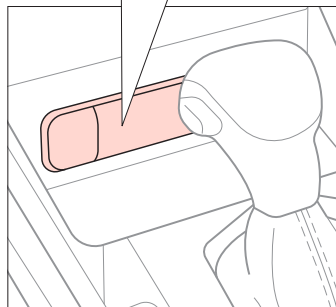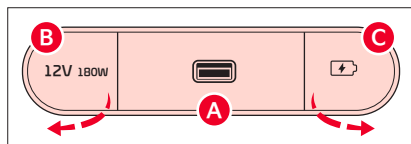

QUICK TIPS

- The power outlets are inactive when ignition is in the OFF position
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger Ports do not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time, with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to your device

For more information on the Multimedia USB Port, Power Outlets & USB Charger Ports, refer to section 4 in the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Digital Clock (Navigation System)*

 
Press the SETUP key on the audio head unit, then General. Press the onscreen Date/Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup and return to exit.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access the manual date and time setting, turn GPS Time OFF in the Clock Settings

For more information, refer to the Car Infotainment System Quick Reference Guide.

Automatic Climate Control*

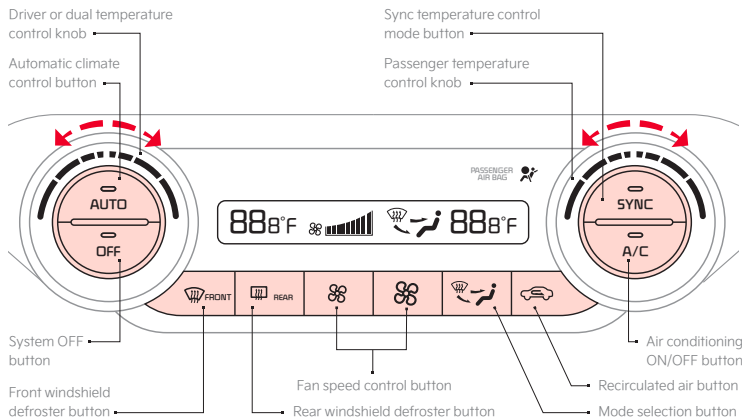

Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired **Temperature**
3. Rotate Passenger Temperature knob to select Dual Temperature Control Operation

QUICK TIPS

- Defrost Mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, airflow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

Auto Defogging System:

Auto Defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

Defrost Outside Windshield:

1. Set Temperature to Hot
2. Press the Front Defrost button

Defog Inside Windshield:

1. Set Fan Speed to highest position
2. Set Temperature to highest position
3. Press the Front Defrost button

Air Flow Modes:

To select Air Flow Modes, press the Mode selection buttons:

Face-Level Floor-Level Bi-Level Floor/Defrost-Level

REMINDERS:

- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display

QR CODES

Automatic Climate Control Operation Video

 


Auto Defogging System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Manual Climate Control*

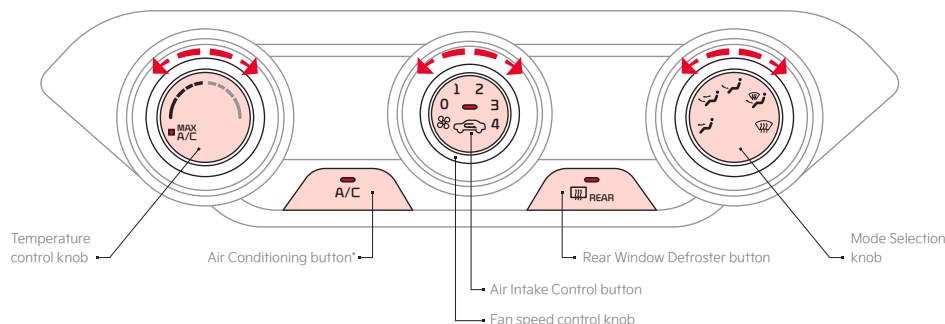

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Defrost Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button

Your Manual Climate Control system may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- Keep inside glass as clean as possible to reduce window fogging
- MAX A/C mode automatically engages Recirculated Air

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

- Face-Level
- Bi-Level
- Floor-Level
- Floor/Defrost-Level
- Defrost-Level

REMINDERS:

 
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility

Automatic Gear Shift with Sportmatic®†3 Shifting* (Manual Mode)

- P:** Park
- R:** Reverse
- N:** Neutral
- D:** Drive
- [+]:** Manual Mode Upshift
- [-]:** Manual Mode Downshift

Manual Mode: To enter Manual Mode, move shift lever from D to left gate **A**.

To shift while in Manual Mode, move shift lever up [+] to upshift or down [-] to downshift **A**.

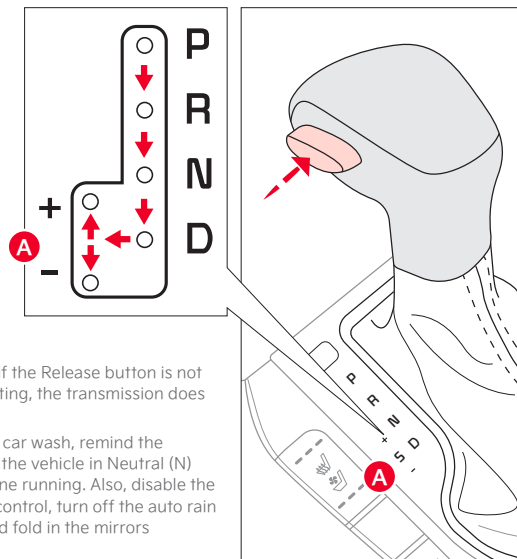

QUICK TIPS

- Press brake pedal and depress release button to move gearshift from N to P, N to R or from P to any gear
- Manual Mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

REMINDERS:

 
- When in P (Park), if the Release button is not pressed while shifting, the transmission does not shift
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

Paddle Shifters*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

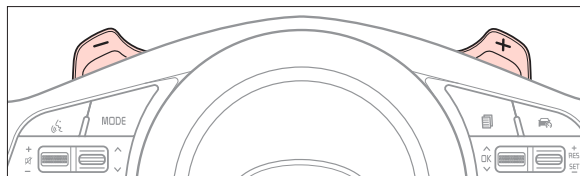

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODES

Sportmatic Shifting Video



Paddle Shifters Video



Intelligent Variable Transmission (IVT) Driving Experience Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Refer to section 5 in the Owner's Manual for more information.

 
Manual Gear Shift*

Starting the Engine

1. Apply Parking Brake **A**
2. Fully depress Clutch and Brake Pedals **B**
3. Shift into Neutral **C**
4. Turn Ignition to Start/ON





Shifting into Reverse

1. Fully depress Clutch and Brake Pedals **B**
2. Shift into Neutral **C**
3. Press Shift Lever button **D** in
4. Shift into Reverse **E**

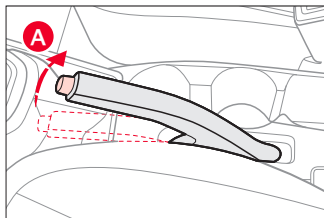

QUICK TIP

    When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever button.

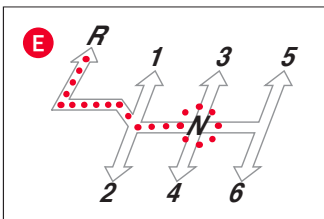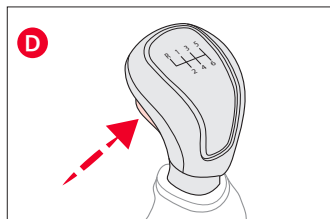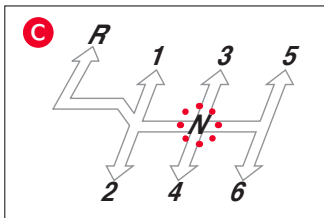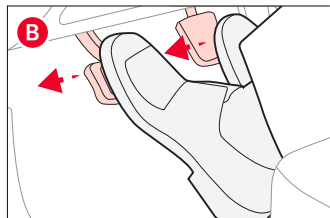

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

Dual Clutch Transmission (DCT)*

Some Kia vehicles are equipped with Dual Clutch Transmission (DCT) for automatic transmissions.

The following are unique driving tips for the Dual Clutch Transmission:

- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers

If the clutch is overheating, an amber warning light*  will be displayed in the instrument cluster. **Should this condition occur, pull over and place the vehicle in Park and idle the engine.**

QR CODE

Dual Clutch Transmission (DCT) Driving Experience Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for additional information on Automatic Gear Shift or DCT operation or call Kia Consumer Affairs for additional information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated **(P) BRAKE** on the instrument cluster.

Releasing the Parking Brake*

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIP

When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB.

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Auto Hold*

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **B** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed, and the driver's seat belt must be fastened.

 
The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - When vehicle is in Park and at a standstill, and AUTO HOLD button **B** is pressed On, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by pressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn Off when the AUTO HOLD button **B** is manually pressed Off or when the EPB is manually turned On.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

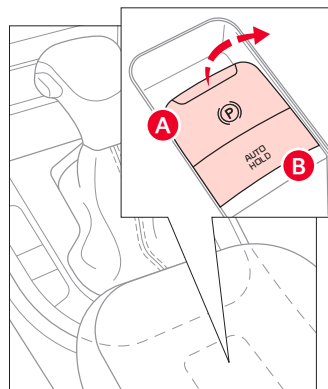

(Button on center console below gear shift;
Button location may vary by model)

QR CODE

Electric Parking Brake / Auto Hold Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information. Refer to page 4 for location of Instrument Cluster indicators.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Image is for illustrative purposes only and may not reflect actual feature or operation.

Wireless Smartphone Charging System*

Charge a compatible smartphone wirelessly by placing it on the tray **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

1. Enable Wireless Charging in the User Settings mode in the Instrument Cluster* or Vehicle Settings in the Audio Head Unit*, select Convenience then Wireless Charging System
2. Place compatible smartphone on the center of the charging pad **A**
3. All doors must be closed
4. Indicator light **B** may change to amber once the wireless charging begins
5. Once charging is complete, the amber light may change to green

QUICK TIPS

- Wireless charging must be enabled in user settings
- For wireless charging to occur, all doors (excluding trunk) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area

 
REMINDERS:

- If driver door is opened, charging will be disabled
- The smartphone must be compatible with Qi charging in order to wirelessly charge
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information
- Inductive charging systems are less efficient than conventional charging through a cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance: Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

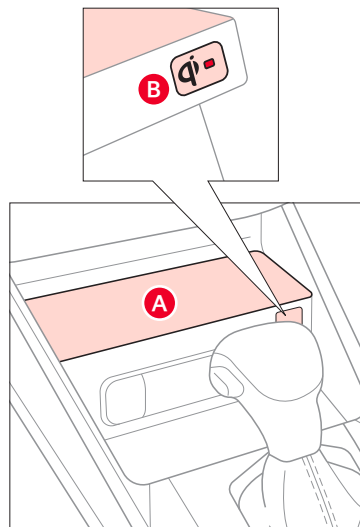

(Located in front of gear shifter)

QR CODE

Wireless Charging Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

 
6-Way Manual Adjustable Driver's Seat^{*†15}

Pull lever **A** to slide Seat forward/backward.

Pull lever **B** up several times to raise Seat Height.

Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback Recline.

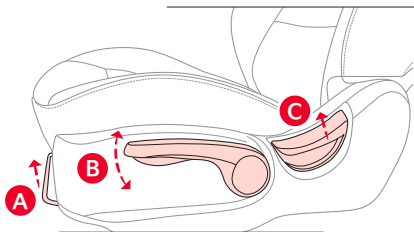

QUICK TIP

When adjusting the seat forward or backwards, ensure the seat clicks or locks into place before driving the vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

 
For more information on 6-Way Manual Adjustable Driver's Seat operation, refer to section 3 in the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Seat Warmers^{*†17} / Ventilated Seats^{*}

Seat Warmers button - Press the button once for high setting (3 LEDs lit). Press the button twice for medium setting (2 LEDs lit).

Press the button a third time for low setting (1 LED lit) and again to turn OFF. Hold button to turn off Seat Warmer.

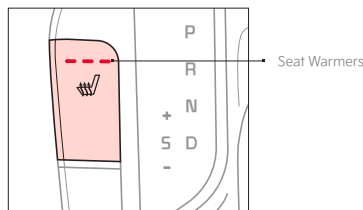


(Buttons located near Gear Shift Lever)

Seat Warmers / Ventilated Seats^{*} button - Press top/bottom of button once for high setting (3 LEDs lit).

Press button twice for medium setting (2 LEDs lit).

 Press a third time for low setting (1 LED lit) and again to turn OFF. Hold button to turn off the Seat Warmers / Ventilated Seats.

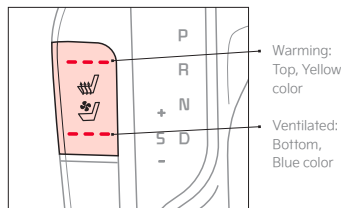

(Buttons located near Gear Shift Lever)

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Heated and Ventilated Seats Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

 
 
QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF when ignition is cycled

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

10-way Power Adjustable Driver's Seat^{**†15}

Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline and Lumbar support^{*} forward/backward.

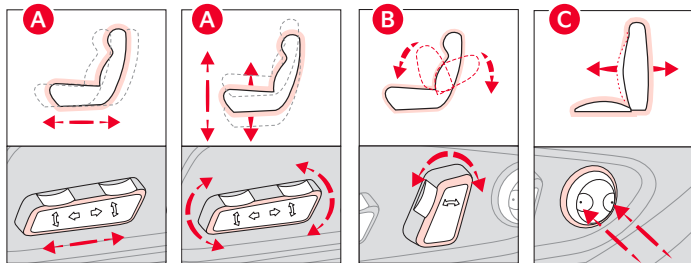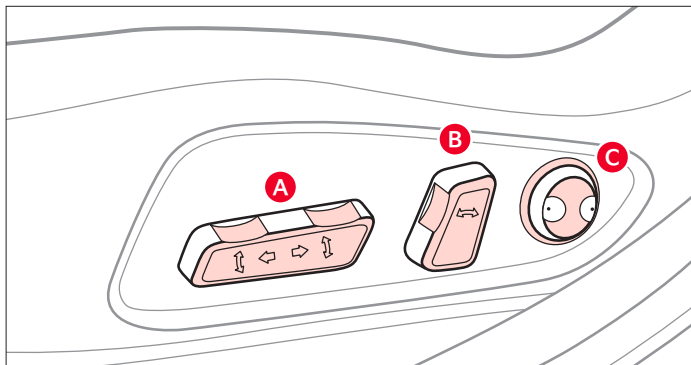

Seat forward/
backward

Seat Cushion

Seatback

Lumbar

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle. Refer to section 3 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Front Seat Headrest Adjustment^{†15}

To raise Headrest:

 
Pull Headrest up.

To lower Headrest:

Press lock, then press the Headrest down.

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

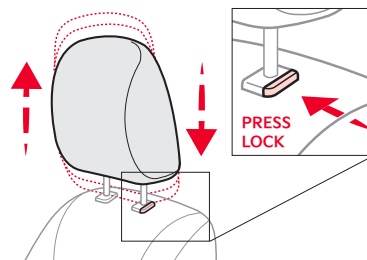

REMINDERS:

- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- The headrest only moves up and down as described above. It does not adjust forward or backward
- Button may be hard to see if headrest is in its lowest position

Refer to section 3 in the Owner's Manual for more information.

Folding Rear Seats*

1. Adjust the Front Seatback to the upright position and/or slide the Front Seat forward
2. Lower Rear Headrests to the lowest position
3. Pull Seatback Lock Release Lever **A** to release Rear Seatback (Lever located in trunk)
4. Fold Seatback **B** down
5. To return seat back, push back to its original position and ensure it latches

 
 
QUICK TIP

It may be necessary to remove the headrests and/or adjust the front seatbacks to fully lower rear seats.

REMINDER: Always make sure the Seatback is locked in place when unfolded.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.

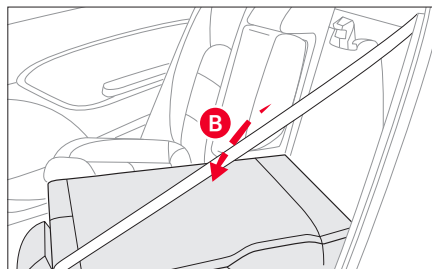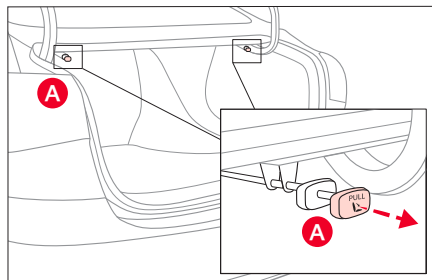

Map/Room Lamps*

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.
- Press button **D** to turn the Room Lamp ON/OFF

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunroof Operation*

 
The Sunroof and Sunshade operation is controlled by a multi-directional switch. The ignition needs to be in the ON position to operate the Sunroof and Sunshade.

Slide the Sunshade and Sunroof:

- Auto Open:** Slide lever **E** backward to the farthest position and release
- Auto Close** (Sunroof only): Slide the lever **E** forward to the farthest position and release
- Manual Open:** Slide the switch **E** backward to the first detent position
- Manual Close:** Slide the switch **E** forward to the first detent position

Tilt the Sunroof:

- Tilt Open:** Push lever **E** upward.
- Tilt Closed:** Push lever **E** forward.

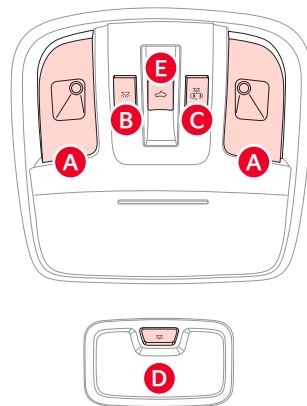

QUICK TIPS

- To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction
- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately one inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

QR CODE

Sunroof Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

REMINDERS:

- When closing, be mindful of any objects or persons
- Sunshade must remain OPEN while Sunroof is open
- If the ignition/vehicle is turned off, and the driver's door is opened, with the sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

Smart Key*†8

Smart Key Fob:

- A** Press to lock All Doors; Press and hold for more than 3 seconds to activate Remote Window Closing*. Release to stop. To enable this feature, go to User Settings in the Instrument Cluster > LCD Display > Door > Remote Window Control*
- B** Press to unlock Driver's Door; Press twice within 4 seconds to unlock All Doors; Press and hold for more than 3 seconds to activate Remote Window Opening*. Release to stop. To enable this feature, go to User Settings in the Instrument Cluster > LCD Display > Door > Remote Window Control*
- C** Press and hold to open Trunk. Then lift lid by the handle to manually open Trunk

REMINDERS:

- Trunk lid will partially open. To fully open, lift up manually
- The Trunk unlocks when the Smart Key is within close proximity of the vehicle
- D Remote Start*:** Lock the doors by pressing the door lock button **A** within 32 feet from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **D** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If driver doesn't enter vehicle within ten minutes of starting the vehicle, the engine will automatically turn off
- E** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- F** Press to release Mechanical Key

Driver's Door Lock/Unlock button **G**:

 
- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

REMINDER: Remote button configuration may vary depending on vehicle options.

Mechanical Key **H**:

- Use to unlock Driver's Door (To remove keyhole cover, insert Mechanical Key into dent under cover and pull door handle)
- Use to turn the Child-Protector Rear Door Locks on or off

REMINDER: When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound.

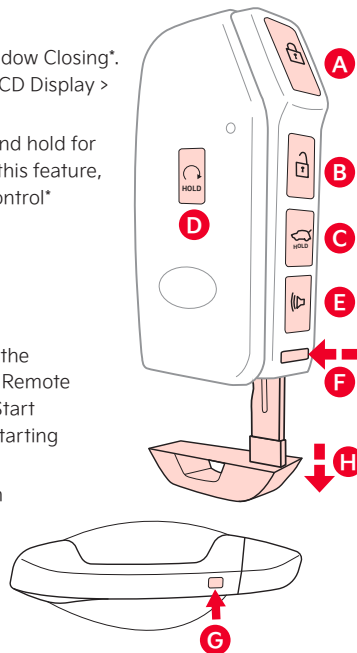

QR CODES

Kia Smart & Folding Key Fobs Video



Engine Start/Stop Button & Smart Key Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIPS

 
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately

For more information on the Mechanical Key, please refer to section 4 in the Owner's Manual. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

Remote Keyless Entry* (folding key) (Type A)

- A** Press the release button to release the key
- B** Press to lock all doors; Press twice within two seconds to sound the horn
- C** To unlock Driver's Door, press once. Press twice within 4 seconds to unlock All Doors
- D** Press and hold more than 1 second to unlock Trunk*
- E** Press and hold more than 1 second for Panic Alarm*. To turn off Alarm, press any button

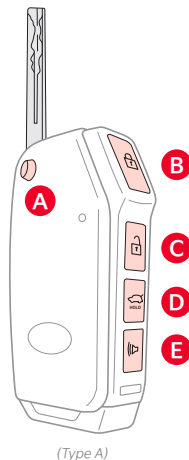


REMINDER: Remote button configuration may vary depending on vehicle options.

Refer to section 4 in the Owner's Manual for more information.

Double-Turn Lock/Unlock All

 - To remove keyhole cover, insert Mechanical Key into opening under cover and pull door handle
- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to Lock All Doors

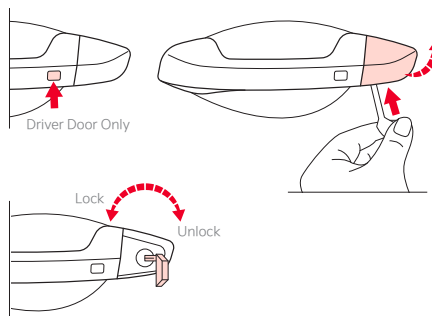

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Kia Smart & Folding Key Fobs Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
 
Smart Power Trunk^{†12}

Smart Key:

To open the Smart Power Trunk, press and hold the Trunk button **A** until the Trunk begins opening.

Outside the Vehicle:

To open the Trunk, press the Trunk Release button **B**.

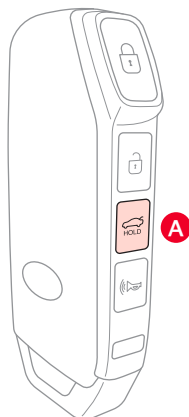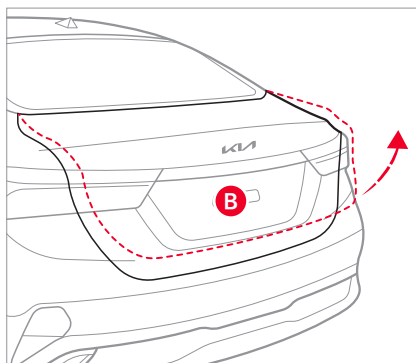

Smart Power Trunk*

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Trunk is about to open. Then the alert system will blink and chime two additional times before opening the Trunk.

The Smart Power Trunk feature is off by default. To enable the Smart Power Trunk, go to User Settings in the LCD Instrument Cluster modes.

QUICK TIP

During the Smart Power Trunk alert, the Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

REMINDERS:

- The trunk can be opened with no-touch activation after about 15 seconds of all doors being closed and locked
- The Smart Trunk feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected near the vehicle after 15 seconds or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- The Smart Key must be outside of the vehicle for the Smart Trunk to operate
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Trunk function.
- Ensure obstacles and people are out of the way of the Smart Trunk

For more information on the Smart Trunk operation, please refer to section 4 in the Owner's Manual.

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Hood Release Lever and Latch

Opening the Hood:

Pull the Hood Release Lever **A** to unlatch the Hood

In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

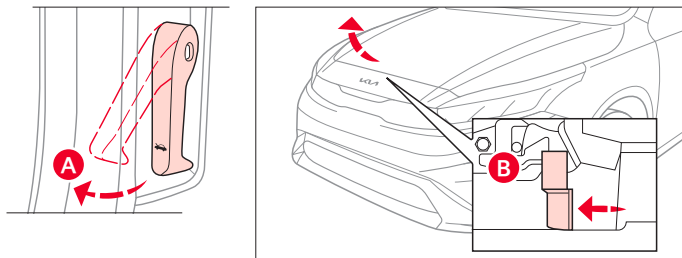

Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

 
Refer to section 4 in the Owner's Manual for more information.

Sunvisor^{†21}

Use the Sunvisor to shield direct light through the front or side windows.

REMINDERS:

- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows
- Sunvisor may impair visibility if not adjusted properly

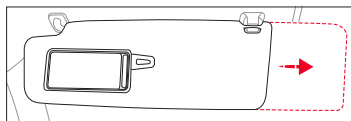


Refer to section 4 in the Owner's Manual for more information.

Trunk Release Lever and Button*

Trunk Release Lever C - To unlock the trunk from inside the vehicle, lift the Trunk Release Lever and manually open the trunk.

 Trunk Release Button* **D** - Press the Trunk Release Button and manually pull the trunk lid up (vehicles with Smart Key only).

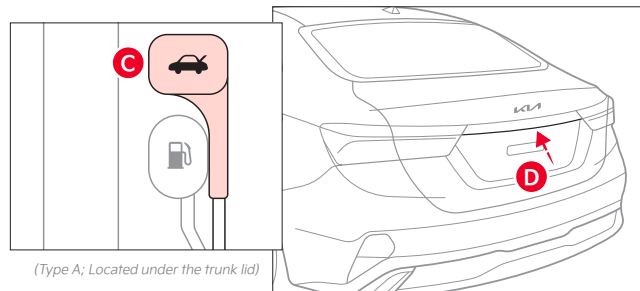


QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- Smart Key* - The Trunk unlocks automatically, and can then be opened manually when the Smart Key fob* is within close proximity to the vehicle

Refer to section 4 in the Owner's Manual for more information.

Fuel Filler Lid Release Lever

 From inside the vehicle, pull the lever **A** up to unlock and open the Fuel Filler Lid.

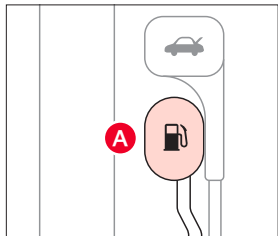

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
Refer to section 4 in the Owner's Manual for more information.

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

REMINDERS:

- The Fuel Door Release Lever is located on the lower part of the driver's door sill
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

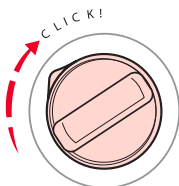


Refer to section 4 in the Owner's Manual for more information.

Tire Mobility Kit*

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage, enabling you to drive to the nearest service center. As a result, not all types of tire damage will require towing.

For operational information, please refer to section 6 of your Owner's Manual.

 - B** Sealant Bottle
- C** Compressor

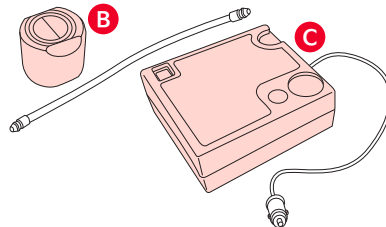

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if a tire is damaged beyond repair

REMINDERS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet/aux port area
- After the tire is properly sealed, drive cautiously, keeping vehicle speed below 50 mph and driving no more than 120 miles.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 6 in the Owner's Manual for more information.

QR CODES

One Click Fuel Cap Video



Tire Mobility Kit Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Seat Belts†2,16

To properly fasten your Seat Belts:

Insert the belt tongue plate **A** into the buckle **B** until it clicks

Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**.

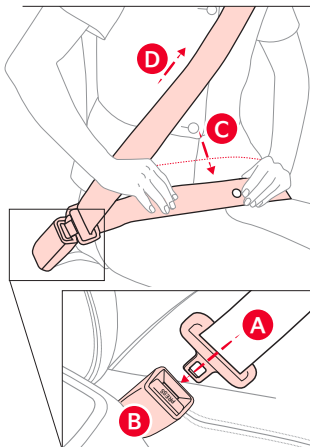

QUICK TIP

The Seat Belt warning chime operates for the driver's seat only.

REMINDER: For maximum protection, always wear your seatbelt.

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
 
Refer to section 3 in the Owner's Manual for more information.

Child-Protector Rear Door Locks

Locate these locks on the rear edge of the rear passenger doors. Move the Child-Protector Rear Door Lock located on the rear edge of the rear passenger doors to the lock position (LOCK) to disable the inner door handles from opening the rear doors.

REMINDER: Child-protector rear door lock is located on rear passenger door jamb.

Refer to section 4 in the Owner's Manual for more information.

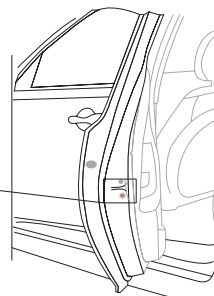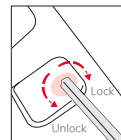

Occupant Detection System (ODS) / Passenger Airbag Off Indicator†2,16

ODS is designed to detect the presence of the front passenger. Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the Passenger Airbag Off light **E** will illuminate.



(Located above Climate Control panel)

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to section 3 in the Owner's Manual.



FORTE NORMAL MAINTENANCE SCHEDULE **TURBO**

P=Perform R=Replace I=Inspect[§]

(up to 60,000 miles)[§]

For Non-Turbo maintenance, see back cover

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)									
	6,000	12,000	18,000	24,000	30,000	36,000	42,000	48,000	54,000	60,000
Add fuel additive ^c	P	P	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P	P	P
Engine Oil & Oil Filter	R	R	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R	I	R
Battery condition	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I	I
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I	I	I
Air cleaner filter (engine)	I	I	I	R	I	I	I	R	I	I
Brake fluid	I	I	I	I	I	I	I	R	I	I
Intercooler, in/out hose, air intake hose	I		I		I		I		I	
Driveshaft and boots		I		I		I		I		I
Fuel tank air filter [†]		I		I		I		I		I
Parking brake		I		I		I		I		I
Fuel tank and fuel filler cap		I		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I		I
Cooling System				I		I		I		I
Spark Plugs							R			
Valve clearance ^f										I
Drive belts (First 60,000 miles, then every 12,000 miles) [§]										I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using UVO link account by logging into your UVO eServices / Kia Access with UVO link App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO link only - See page 32 for setup information).

- A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.
- B. And, if necessary, adjust, correct, clean or replace.
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

- E. Manual transmission fluid (or Dual clutch transmission (DCT) fluid) should be changed anytime the transmission has been submerged in water.
- F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.
- G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

† If equipped

‡ LEGAL DISCLAIMERS ON BACK INSIDE COVER



 
FORTE CUSTOMER DELIVERY CHECKLIST

KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer:

- ☐ Standard Audio System* - page 31

For further operational information, refer to the Car Infotainment System Quick Reference Guide.

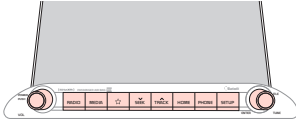

- ☐ UVO link with Navigation* - page 34

For further operational information, refer to the Car Infotainment System Quick Reference Guide.



- ☐ Android Auto™ / Apple CarPlay® Setup - page 30

 
- ☐ UVO link Activation* - page 32

- ☐ Kia Access with UVO link App Download - page 33

- ☐ Kia Access with UVO link App Features Guide - page 33


- ☐ Cruise Control (CC)* - page 17

Demonstrate operation.

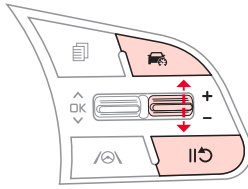

- ☐ Bluetooth® Wireless Technology* - page 28-29

 Demonstrate operation.

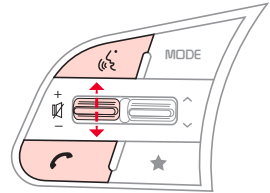

- ☐ Tire Pressure Monitoring System (TPMS) - page 5

- ☐ Engine Start/Stop Button* - page 23

- ☐ Digital Clock - page 35

- ☐ Multimedia USB Port*, Power Outlets & USB Charger Ports - page 35

- ☐ Seat Warmers / Ventilated Seat* - page 42

- ☐ Folding Rear Seats* - page 44

- ☐ Sunvisor - page 49

- ☐ Smart Key* - page 46

- ☐ Rear View Monitor (RVM) - page 19

- ☐ Passenger Air Bag Off Indicator - page 51

DURING DELIVERY

- ☐ Explain first service process and schedule first service appointment
- ☐ Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- ☐ Review recommended maintenance schedule and maintenance requirements to validate warranty
- ☐ Review business hours
- ☐ Review the Kia 10-year/100,000-mile warranty program
- ☐ Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- ☐ Confirm time and best contact number for initial dealer follow-up

*IF EQUIPPED

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



FORTE CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY

- ☐ Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- ☐ Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- ☐ Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- ☐ Ensure floor mats are snapped into place (if applicable)
- ☐ Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- ☐ Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual)


KEY FEATURE WALKTHROUGH

- ☐ Air Conditioning / Climate Control - pages 36-37
Demonstrate Air Flow Modes, Defog and Defrosting Windshield.

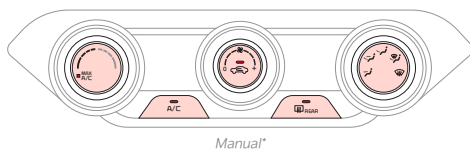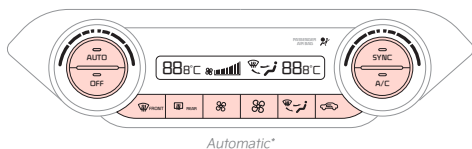

- ☐ Manual Gear Shift* - page 39

 
Demonstrate pressing button for reverse gear.

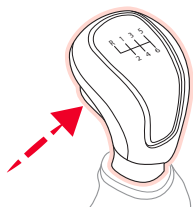

Type A

- ☐ Windshield Wipers & Washers - page 26

 Press INT switch up/down to adjust Intermittent Wipe Speed.

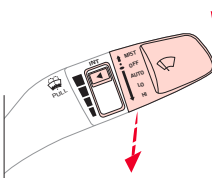

Pull to spray and wipe.

MIST: Single wipe
OFF: Wiper off
INT: Intermittent wipe
LO: Slow wipe
HI: Fast wipe

LEGAL DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. UVO link: Purchase/lease of certain 2022 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO is subject to agreement to the UVO Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary UVO link subscription is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. UVO Link may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access with UVO link app is available from the Apple® App Store® or Google Play Store®. Kia America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google® and its logos are trademarks of Google LLC.

2. Airbags: For maximum protection, always wear your seat belt.

3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®: Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.

4. Bluetooth® Wireless Technology: The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

5. Driver Assist Features - Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Blind-Spot Collision-Avoidance Assist (BCA), Safe Exit Warning (SEW), Cruise Control (CC), Smart Cruise Control (SCC) with Stop & Go, Navigation-based Smart Cruise Control (NSCC), Lane Following Assist (LFA), Highway Driving Assist (HDA), Rear View Monitor (RVM), Rear Cross-Traffic Collision Avoidance Assist (RCCA), Reverse Parking Distance Warning (PDW): When engaged, these features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

6. Driver Attention Warning (DAW): When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

7. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC): No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

8. Engine Start/Stop Button with Smart Key: Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

9. Front Seat Headrest Adjustment: Never attempt to adjust headrests when vehicle is in motion.

10. Navigation: Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

11. Occupant Detection System (ODS): Kia vehicles use a number of different ODS types that vary by model.

12. Power Trunk / Smart Trunk®: Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

13. Rear Occupant Alert (ROA) with Door Monitoring: When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.

14. Roadside Assist: 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.

15. Seat adjustments: Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

16. Seat belts: For maximum protection, always wear your seatbelt.

17. Seat warmers: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

18. SiriusXM®: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2021 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

19. Steering-wheel-mounted controls: Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

20. Sunvisors: Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.

21. Tilt/Telescoping Steering Wheel: Never attempt to adjust steering wheel position when vehicle is in motion.

22. Tire Pressure Monitoring System (TPMS): Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



FORTE NORMAL MAINTENANCE SCHEDULE **NON-TURBO**

P=Perform R=Replace I=Inspect^B

(up to 64,000 miles)^A

For Turbo maintenance, see page 52

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Add fuel additive ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Air cleaner filter (engine)	I	I	R	I	I	R	I	I
Brake fluid	I	I	I	I	I	R	I	I
Parking brake	I	I	I	I	I	I	I	I
Driveshaft and boots		I		I		I		I
Fuel tank air filter ^{†D}		I		I		I		I
Fuel tank and fuel filler cap		I		I		I		I
Fuel lines, fuel hoses and connections		I		I		I		I
Cooling System				I		I		I
Drive belts (First 64,000 miles, then every 15,000 miles) ^E								I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using UVO link account by logging into your Kia Access with UVO link App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO link only - See page 32 for setup information).

† If equipped

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2021 Kia America, Inc. All rights reserved.
Consumer - Roadside Assistance¹³: 1-800-333-4KIA (4542)

Part Number: BD220-PS-004