

Q60

2022 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to
www.infinitiquickguide.com/2022/q60
or snap this barcode with an
appropriate barcode reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

• VEHICLE OWNER'S MANUAL

• INFINITI CLIENT SUPPORT 1-800-662-6200

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

• INFINITI CONNECTION TO ROADSIDE ASSISTANCE

1-800-662-6200 (option 1)

As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

• INFINITI ELITE® EXTENDED PROTECTION PROGRAM

1-800-662-6200

Infiniti Elite® Assurance Products provide you with quality, long-term protection and enhanced peace of mind.

• INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437

For client support with your Infiniti Financial Services loan or lease.

• INFINITI FINANCIAL SERVICES www.infinitifinance.com

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

• OWNER PORTAL 1-855-444-7244

<https://www.infinitiUSA.com/owners>

Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

• INFINITI INTOUCH™ 1-855-444-7244 infinitiUSA.com/intouch

The suite of services that is your direct link to personal security, convenience and confidence.

• SiriusXM® RADIO 1-877-447-0011

For support with your SiriusXM® subscription.

• INFINITIUSA.COM www.infinitiUSA.com/bluetooth

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

• INFINITI ELECTRONIC QUICK REFERENCE GUIDE

(Use the Quick Response (QR) code or URL on this page or on the back cover.)

• GENUINE INFINITI ACCESSORIES www.infiniti-techinfo.com

Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.

Table of Contents

Cockpit Overview.....	1	FM/AM/SiriusXM® Radio (if so equipped)	17
Instrument Panel	3	Apple CarPlay®.....	18
Meters and Gauges	5	Android Auto™.....	19
Infiniti Intelligent Key System	7	Navigation System (if so equipped).....	20
Memory Seat (if so equipped).....	8	INFINITI InTouch™ Services (if so equipped).....	21
Power Folding Outside Mirrors (if so equipped).....	9	Upper Display (Shortcut Menu).....	22
Starting/Stopping the Engine.....	9	Forward Driving Aid Sensors (if so equipped).....	23
Automatic Anti-Glare Rearview Mirror with HomeLink®.....		Direct Adaptive Steering	24
Universal Transceiver (if so equipped).....	10	Cruise Control	25
Heater and Air Conditioner (automatic).....	11	Blind Spot Warning (BSW) (if so equipped)	26
Wiper and Washer Switch	12	Lane Departure Warning (LDW) (if so equipped).....	26
Vehicle Information Display.....	13		
Fuel-filler Door.....	14		
Passenger Rear Seat Entry/Exit.....	14		
Clock Set/Adjustment	14		
Connecting your Cellular Phone or Device via Bluetooth®.....	15		
Bluetooth® Hands-free Phone System.....	16		
Bluetooth® Streaming Audio.....	17		

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch™ Owner's Manual and at www.InfinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

 
Cockpit Overview



Cockpit Overview

- 1 Vehicle information display switches
- 2 Intelligent Cruise Control switches (if so equipped)
- 3 Wiper and washer switch
- 4 Paddle shifters (if so equipped)
- 5 Combined turn signal/Headlight control switch
- 6 Upper display control switches
- 7 Audio and Bluetooth® control switches
- 8 Instrument brightness control switches and Trip Reset switch (behind steering wheel)

Instrument Panel

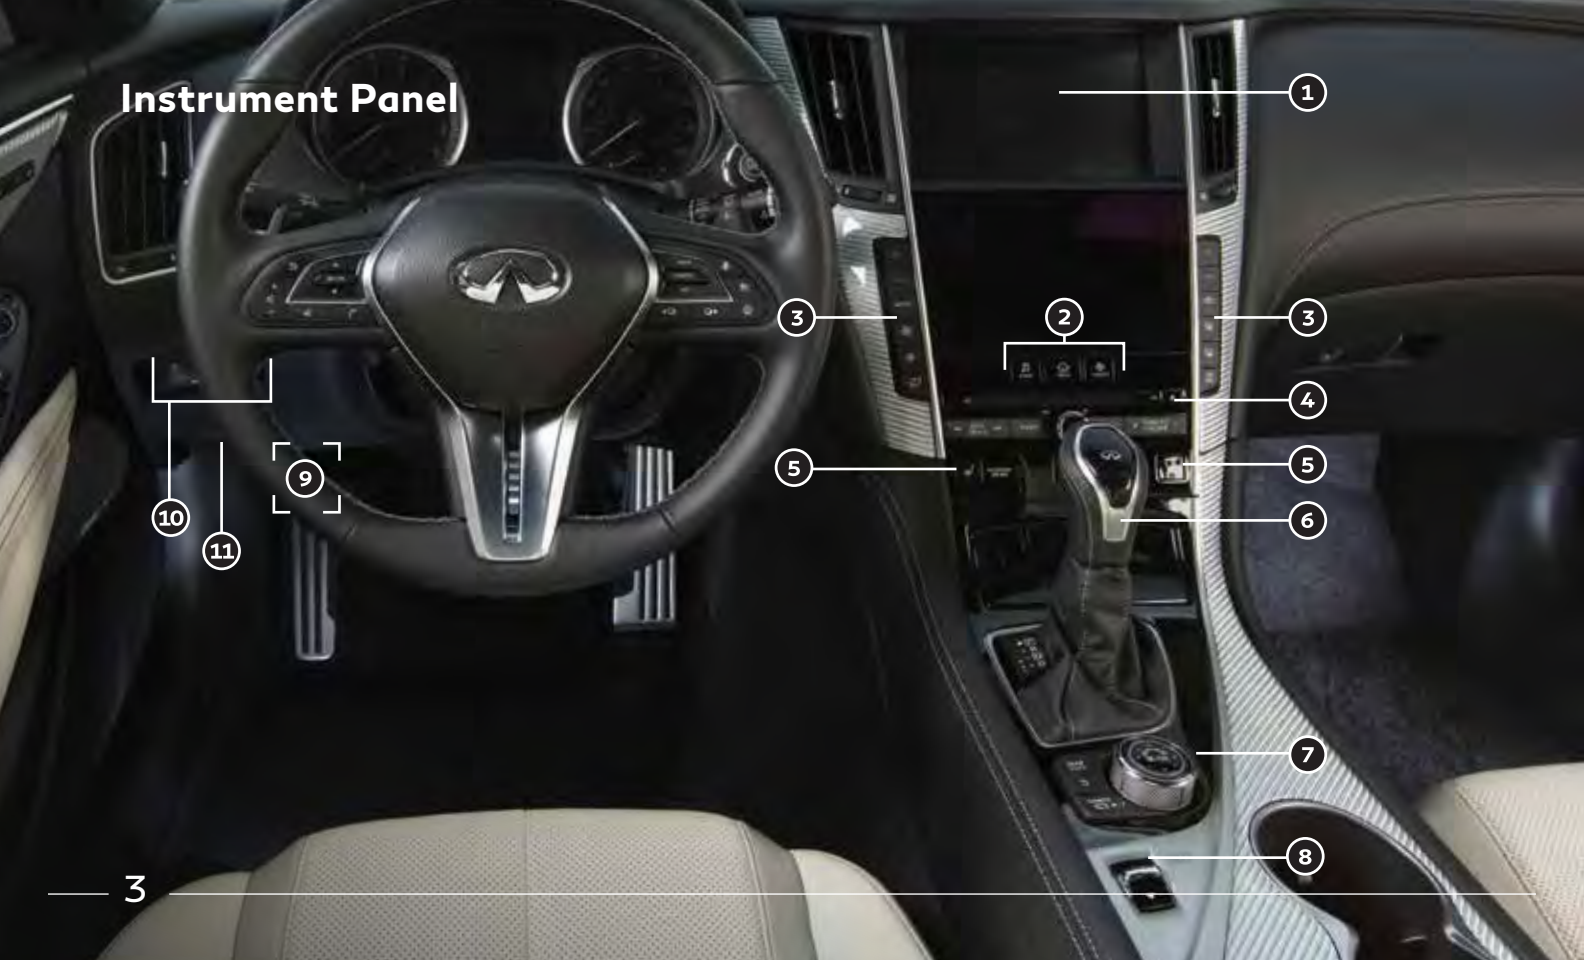

1

2

3

3

4

5

6

7

8

9

10

11

3

Instrument Panel

- ❶ Multi-function control touch-screen/Around View® Monitor display (if so equipped)
- ❷ Lower display menu buttons
- ❸ Climate control panel
 - Heater and air conditioning (automatic)
 - Front/Rear window defroster
- ❹ Audio controls
- ❺ Heated seat switches (if so equipped)
- ❻ Shift lever
- ❼ Infiniti multi-function controller
- ❽ Drive mode switch
- ❾ Parking brake (behind steering wheel)
- ❿ Lower switch bank
 - Vehicle Dynamic Control (VDC) OFF switch
 - Trunk release switch
- ⓫ Hood Release

Meters and Gauges



Meters and Gauges

- 
- 1 Tachometer
 - 2 Engine coolant temperature gauge
 - 3 Shift lever indicator
 - 4 Vehicle information display
 - 5 Speedometer
 - 6 Fuel gauge

Infiniti Intelligent Key System

REMOTE ENGINE START (IF SO EQUIPPED)

The remote engine start system must be enabled in the vehicle settings within the lower display. To start your vehicle remotely:

1. Press the lock button (1) to lock the vehicle.
2. Press and hold the remote engine start button (2) within 5 seconds of pressing the lock button (1) and the engine will start.

To start driving, depress the brake pedal and push the ignition switch to the ON position.

State laws may apply, review local laws before using.

ROLL DOWN FEATURE (IF SO EQUIPPED)

The windows can be opened remotely using your INFINITI Intelligent Key.

- With the vehicle unlocked, press and hold the unlock button (3) to open the windows and moonroof (if so equipped) remotely.
- If the unlock button (3) is released, the windows will stop. To resume the roll down feature, press and hold the unlock button (3) again.

LOCKING AND UNLOCKING THE VEHICLE

To use the door handles to lock and unlock your vehicle, make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).

- Touch the inside of the door handle (4) to unlock the corresponding front door.
- Pushing the request switch (5) while touching the inside of the door handle will unlock the rest of the doors.
- To lock the vehicle, push either door handle request switch (6) once.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Memory Seat (if so equipped)

Two positions for the driver's seat, steering column and outside mirrors can be stored in the memory seat system. To set a memory position:

1. Place the ignition switch in the ON position. (The vehicle should be stopped while setting the memory.)
2. Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
3. Push the **SET** switch ①, and within 5 seconds, push the memory switch (**1** or **2**) ②. The indicator light for the memory switch you select will illuminate for approximately 5 seconds and a chime will sound when the memory is stored.

The steering column will automatically move when the driver's side door is opened to allow the driver to get in and out of the driver's seat more easily. "Lift Steering upon Exit" and "Slide Driver Seat Back on Exit" can be adjusted in the lower touch-screen display under "Comfort & Convenience".

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Power Folding Outside Mirrors (if so equipped)

ADJUSTING THE OUTSIDE MIRRORS:

- To adjust the outside mirrors, move the switch ① right or left to select the right or left mirror.
- Adjust the position of the mirror using the directional control switch ②.

FOLDING THE OUTSIDE MIRRORS:

- To fold the mirrors closed, push the  switch ③.
- To open the mirrors, push the  switch ④.

REVERSE TILT-DOWN FEATURE (IF SO EQUIPPED)

When backing up the vehicle, the outside mirrors will turn downward automatically to provide better rear visibility. To enable the reverse tilt-down feature, move the switch ① to either the left or right position.

If the switch ① is set in the center (neutral) position, the mirror will not tilt down when reversing.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Starting/Stopping the Engine

It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).

1. Depress the brake pedal.
2. Push the ignition switch to the ON position.



TURNING THE ENGINE OFF

1. Move the shift lever to the **P (Park)** position and apply the parking brake.
2. Push the ignition switch to turn off the engine.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Automatic Anti-Glare Rearview Mirror with HomeLink® Universal Transceiver (if so equipped)

AUTOMATIC ANTI-GLARE REARVIEW MIRROR



The inside mirror is designed so that it automatically dims during night-time conditions and according to the intensity of the headlights of the vehicle following you. The automatic anti-glare feature is activated when the ignition switch is in the ON position.

- The indicator light ① will illuminate when the automatic anti-glare feature is operating.
- To turn off the anti-glare feature, press the **O** button on the rearview mirror. The indicator light will turn off.
- To turn on the anti-glare feature, press the **|** button on the rearview mirror. The indicator light ① will turn on.

PROGRAMMING THE HOMELINK® UNIVERSAL TRANSCEIVER:

1. Position the handheld transceiver 1-3 in (2-8 cm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
2. Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
3. Both buttons may be released when the indicator light flashes rapidly.
4. Press and hold the programmed HomeLink button and observe the indicator light. A solid, continuous light indicates the programming is complete. If the indicator light rapidly blinks for two seconds and then turns to a solid, continuous light, continue with steps 5-6 for a rolling code device.
5. At the receiver located on the garage door opener motor, locate the "learn" or "smart" button. If there is difficulty locating the button, reference the garage door opener's manual. Once the button is pressed, you have approximately 30 seconds to initiate the next step.
6. Press and hold the programmed HomeLink button for two seconds and release. Repeat the sequence up to three times to complete the programming process. HomeLink should now activate your rolling code equipped device.

  Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

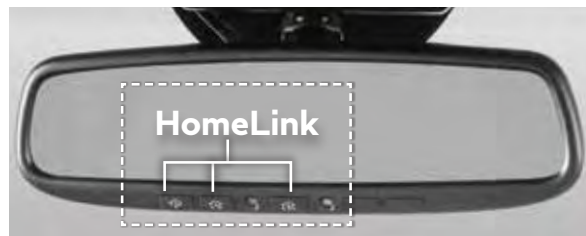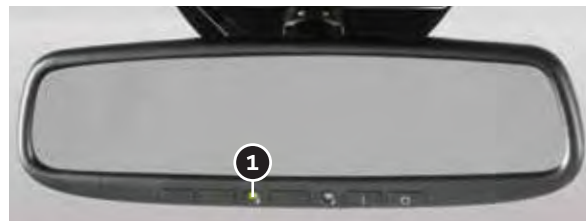

Heater and Air Conditioner (automatic)



The climate controls can be adjusted using the buttons on either side of the lower display or through the "Climate" screen (1) on the lower display.

- To access the "Climate" screen (1), press the **CLIMATE** button (2) below the lower display.

HEATED STEERING WHEEL (IF SO EQUIPPED)

- To turn the heated steering wheel on or off, touch the "Steering Heater" key (3) on the lower display.

HEATED SEATS (IF SO EQUIPPED)

The front seats can be warmed by built-in heaters. The heating system of the driver's seat and front passenger seat can be operated independently.

- Push the heated seat switches (4) on the instrument panel or to operate through the touch-screen, press the **CLIMATE** button (2) and touch the heated seat key(s) (5) on the lower display to select the seat heating mode.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Wiper and Washer Switch



Move the lever (1) up or down to one of the following positions to operate the windshield wipers:

- MIST** One sweep operation
- OFF** Wipers are OFF
- AUTO** Speed-sensing and rain-sensing automatic wipe
- LO** Continuous wipe, slow
- HI** Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring (2).

Pull the lever (1) toward you to operate the windshield washer.

To turn the rain sensor function on and off:

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key and then the "Comfort & Convenience" key (3) on the display.
3. To toggle the feature ON and OFF, touch the "Rain Sensor" key (4).

When the rain-sensing function is disabled, the **AUTO** position on the wiper stalk will work in conventional intermittent mode.

WIPER BLADE REPLACEMENT PROCEDURE

 
The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position:


- When the ignition switch is in the ON position or within 60 seconds of placing the windshield wiper washer lever to the OFF position, lift the windshield wiper and washer lever upwards twice in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Place the wiper arm in the down position and lift the wiper and washer lever up for more than 1 second, or lower the lever down to operate at any wiper speed.

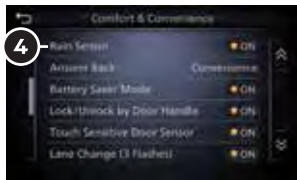

Vehicle Information Display

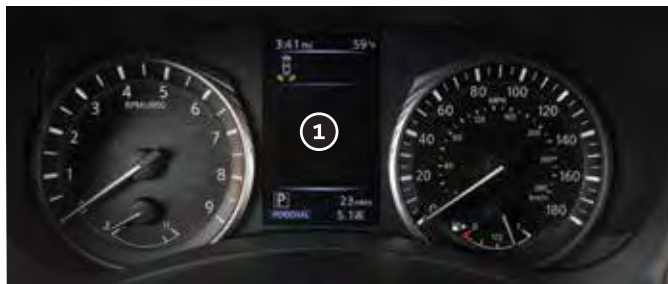 

USING THE VEHICLE INFORMATION DISPLAY

To change the displayed item on the vehicle information display (1), press the ◀ ◻ or ◻ ▶ button (2) on the steering wheel.

The odometer and twin trip odometer are displayed in the vehicle information display when the ignition switch is in the ON position.

RESETTING THE TRIP ODOMETER

 
Pushing the **TRIP RESET** switch (3) under the combination meter panel changes display to TRIP A or TRIP B.

Pushing the **TRIP RESET** switch (3) for more than 1 second resets the trip odometer to zero.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

The vehicle information display (1) will provide warnings and information for items such as the following:

- Automatic Transmission (AT)
- All-Wheel Drive (AWD)
- Cruise Control
- Intelligent Cruise Control (ICC)
- Active Lane Control
- Lane Departure Warning (LDW)/ Lane Departure Prevention (LDP)
- Blind Spot Warning (BSW)
- Blind Spot Intervention® (BSI)
- Back-up Collision Intervention (BCI)
- Distance Control Assist (DCA)
- Forward Emergency Braking (FEB)
- Predictive Forward Collision Warning (PFCW)
- Active Trace Control
- Intelligent Key System

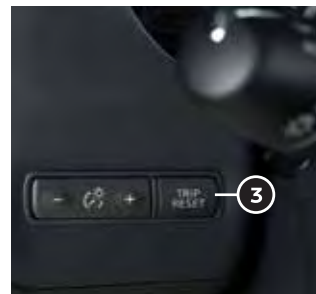

Fuel-filler Door

To open the fuel-filler door, unlock the vehicle and gently push the upper left side of the fuel-filler door.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Passenger Rear Seat Entry/Exit

To access the rear seat:

1. Pull the lever ① upward to fold the seatback forward.
2. Press the button ② to slide the front seat forward and press the button ② again to stop the seat.

 


To return the front seat to its original position:

1. Pull the lever ① upward and push the seatback to the locked, upright position.
2. Press the button ② to slide the front seat backward.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Clock Set/Adjustment

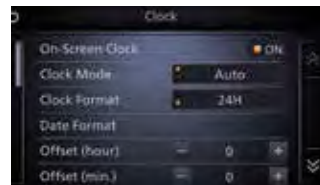

To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button ① below the lower display. Then, touch the "Settings" key on the lower display.
2. Locate and touch the "Clock" key to adjust "On-Screen Clock", "Clock Mode (Daylight Savings Time)", "Clock Format (Time Zone)".

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Connecting your Cellular Phone or Device via Bluetooth®*



Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key on the lower display.
3. Touch the "Connections" key.
4. Touch the "Devices" key.
5. Touch the "Add New" key.
6. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

The paired cellular phone will be added to the list on the "Connections" screen.

FAVORITE HANDS-FREE CELLULAR PHONE

- You can register a favorite hands-free cellular phone. The device selected as a favorite will be marked with a star.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Hands-free Phone System*

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used.
- To skip the voice prompt and give the command immediately, press the  button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button ① on the steering wheel.

MAKING A CALL

1. Press the **MENU** button below the lower display and touch the Phone key on the lower display.
2. Select one of the available keys on the "Phone" screen; including "Quick Dial", "Phonebook", "Call History", or "Dial Number" to make a call.

RECEIVING A CALL

- To answer the call, press the  button ② on the steering wheel or touch the  Answer key on the lower display.
- To reject the call, press and hold the  button ② on the steering wheel or touch the  Decline key.
- To hold the call, touch the "Hold Call" key.

 
DURING A CALL

- To hang up the cellular phone, touch the  Hang up key on the lower display.
- To answer the call from the second person and place the first caller on hold, press the  button ② on the steering wheel or touch the  Answer key.
- To reject a call from the second person and continue the conversation with the first caller, touch the  Decline key.
- To hang up the cellular phone and return to the conversation with the first caller, touch the  Hang up key.
- To switch between two calls, touch the "Switch Call" key.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

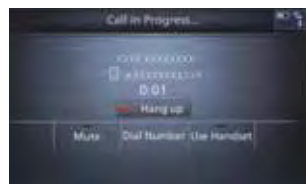

Bluetooth® Streaming Audio*



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the **DISC-AUX** button ① on the control panel to switch to Bluetooth® Streaming Audio.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

FM/AM/SiriusXM® Radio (if so equipped)



- ① The **AUDIO** button displays the audio screen.
- ② The power button turns the system on or off. Turning the knob adjusts the volume.
- ③ Change stations with the **SEEK-TRACK** buttons. This applies to satellite and CDs.
- ④ Manually tune the radio through the **TUNE-CH-FOLDER** buttons.
- ⑤ The **RADIO** button changes the radio in the order of AM, FM and satellite radio.
- ⑥ The **DISC-AUX** button changes the audio source.
- ⑦ Touch and hold the desired station to store a preset. This applies to AM, FM, or satellite radio stations.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Apple CarPlay®

Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display. The display may be different based on iOS software version.

Connect your compatible iPhone to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

While connected to Apple CarPlay, Siri® operation can be accessed.

There are two ways to start a Siri session:

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  key ① or  key ② on the lower left corner of the Apple CarPlay screen.

 
 
Press the  button on the steering wheel or touch the  key ① or  key ② on the lower left corner of the Apple CarPlay screen to end the Siri session.

Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.

When Siri finishes responding, the session will automatically end and return to the home screen.

Some Siri functions may not be available during driving. For functions that can be used with Siri, please refer to the Apple® website.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

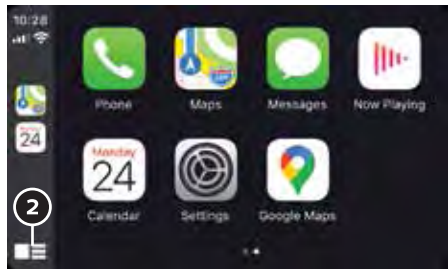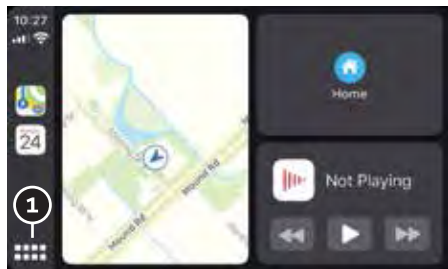

Android Auto™

Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Android Auto.
- After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system. When connected to Android Auto, Google Assistant™ can be accessed. There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key ① on the Launch Bar.
 3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

To return to the Android Auto home screen after operation, touch the  key ② on the Launch Bar.

 
To exit the Android Auto screen, touch the  key ② on the Launch Bar and then touch the exit key.

To return to the Android Auto home screen from the main menu:


1. Press the **MENU** button and touch the  key ③, or
2. Touch the "Information" key ④, touch the "Apps" key, and then select the "Android Auto" key.

If you have difficulties with connection or performance, try a different USB cable.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

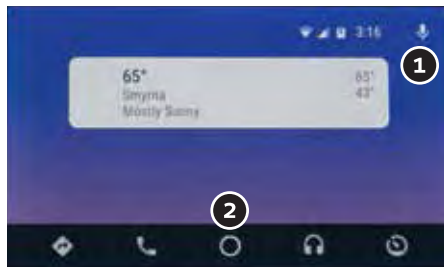

Navigation System (if so equipped)

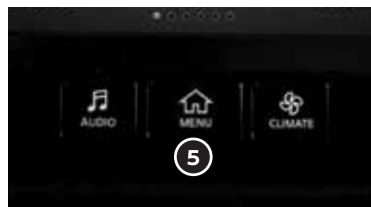 

Use the Infiniti controller ① and **OK** button ② to navigate through the upper display screens.

- Press the **Back** button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the upper display.

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Destination" key ⑥ on the lower display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.

CANCELING A ROUTE

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Cancel Route" key ⑦ on the lower display.

GUIDANCE VOLUME

- While guidance is being announced, the guidance volume can be adjusted by turning the audio system volume knob.
- The guidance volume can also be adjusted in the "Settings" menu.
 1. Press the **MENU** button ⑤ below the lower display.
 2. Touch the "Settings" key and then the "Volume & Beeps" key ⑧ on the display.
 3. Next, touch the "Guidance Volume" key. Use the "-" and "+" keys ⑨ to adjust the volume.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



INFINITI InTouch™ Services (if so equipped)

If equipped, your vehicle may include INFINITI InTouch™ Services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth and more. For complete information about your INFINITI InTouch™ Services, please visit www.infinitiusa.com/intouch.html or call **1-855-444-7244**. For frequently asked questions, please visit www.infinitiusa.com/intouch/faqs.

To access INFINITI InTouch Services:

1. Press the **MENU** button (1) under the lower display.
2. Select the "InTouch Services" key (2) on the lower display.
 - Press the in-vehicle telematics **SOS** button (3) (if so equipped) in case of an emergency, located above and in front of the rearview mirror.

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account. (<https://www.infinitiusa.com/owners>)
2. From your INFINITI Owner Portal account, enroll in INFINITI InTouch Services.
3. Download the INFINITI InTouch Services companion app from the App store and log in using your INFINITI Owner Portal ID and password.

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Available services may include:

- Automatic Collision Notification
- Emergency Calling
- Stolen Vehicle Locator
- Alarm Notification
- Maintenance Alert
- Vehicle Health Report
- Scheduled Maintenance Notification
- Remote Door Lock/Unlock
- Remote Horn & Lights
- Remote Engine Start/Stop
- Maximum Speed Alert
- Valet Alert
- Curfew Alert
- Destination Send-to-Vehicle
- Connected Search

The following services can also be accessed by touching the headset icon (4):

- Infiniti Personal Assistant
- Connection to Roadside Assistance

Upper Display (Shortcut Menu)

The upper touch-screen display (upper display) provides the information, the view monitor system or the navigation map (if so equipped).

To control the upper display, use the touch-screen, the Infiniti controller ① or the steering wheel switches ②.

WITHOUT NAVIGATION (IF SO EQUIPPED)

With no item selected, press the **OK** button ③ on the Infiniti controller ① or steering wheel switch ② to display the shortcut menu ④ on the upper display. The shortcut menu ④ will provide options such as:

- Audio Source
- Audio List
- Call History
- Phonebook
- Displayed Feature
- Customize This Menu

 
WITH NAVIGATION (IF SO EQUIPPED)

With the current vehicle location displayed on the map screen, press the **OK** button ③ on the Infiniti controller ① or steering wheel switch ② to display the shortcut menu ④ on the upper display.

Selecting the shortcut menu key ⑤ on the map screen will also display the shortcut menu ④. The shortcut menu ④ will provide options such as:

- Audio Source
- Audio List
- Call History
- Phonebook
- Cancel Route
- Points of Interest
- Save Location
- Split Map Views
- Customize This Menu
- Turn ALC ON/Turn ALC OFF
- Steering Assist

Please see your INFINITI InTouch™ Owner's Manual for important safety information, system limitations, and additional operating and feature information.

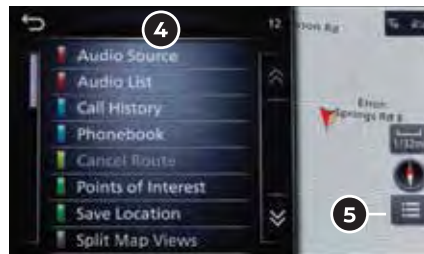

Forward Driving Aid Sensors (if so equipped)

A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror ① and the radar sensor is located on the front of the vehicle ②. Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:

- Forward Emergency Braking (FEB) with Pedestrian Detection
- Predicted Forward Collision Warning (PFCW)
- Intelligent Cruise Control (ICC)

The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" ③ warning may illuminate if the front radar sensor is obstructed.

The warning light ④ may illuminate and blink if the front camera sensor ① is obstructed. Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).

If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position, and turn off the engine. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Infiniti retailer.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Forward Driving Aids temporarily disabled
Front Sensor blocked
See Owner's Manual ③



Direct Adaptive Steering

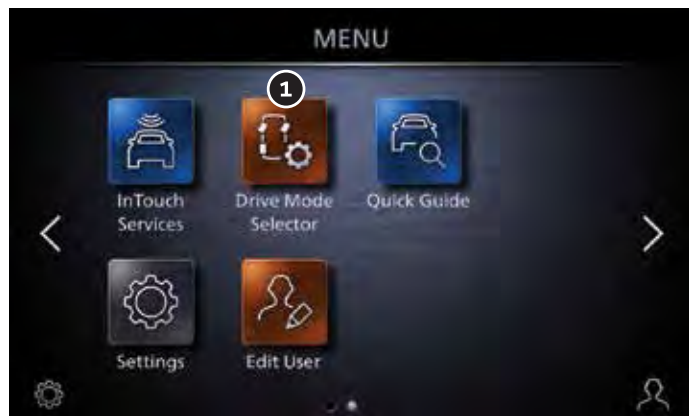

Direct Adaptive Steering is designed to control the steering force and steering angle according to the vehicle speed and amount of turning of the steering wheel.

CHANGING THE VEHICLE STEERING CHARACTERISTICS:

1. Press the **MENU** button on the lower display and select "Drive Mode Selector" ①.
2. Select "Steering" to begin customizing the vehicle's steering response using the "Steering" menu.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Cruise Control

SETTING A CRUISING SPEED

- Push the cruise control MAIN (ON-OFF) switch ① to turn on the system.
- With the vehicle at the desired speed, push down the control switch ② to **SET** — to enable cruise control.
- The cruising speed can be adjusted to a higher or lower speed by toggling the control switch ② up or down.

CANCELING THE PRESET SPEED

- Push the **CANCEL** switch ② or tap the brake pedal.

INTELLIGENT CRUISE CONTROL (ICC) (IF SO EQUIPPED)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.

- To turn on the vehicle to vehicle (ICC) cruise control mode, quickly push and release the MAIN (ON-OFF) switch ①.
- To increase the distance to the vehicle ahead to be maintained by the ICC system, push the distance switch ③ until the display shows the desired set distance, which is shown by the number of lines on the set distance indicator ④.
- When a vehicle is detected ahead, a vehicle ahead detection indicator ⑤ will illuminate and your vehicle will reduce the speed to match the slower vehicle.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



CONVENTIONAL CRUISE CONTROL



INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

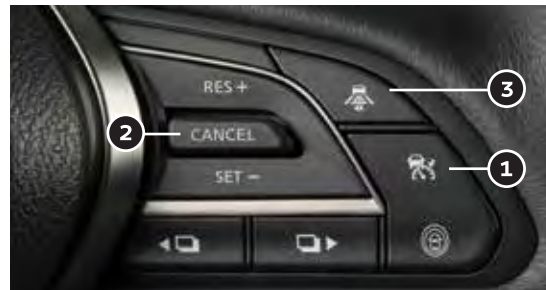

Blind Spot Warning (BSW) (if so equipped)

The Blind Spot Warning (BSW) can help alert the driver of other vehicles in the blind spot area when changing lanes.

TURNING BLIND SPOT WARNING ON OR OFF

- BSW can be turned on or off through the "Driver Assistance" section of the lower display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Lane Departure Warning (LDW) (if so equipped)

Lane Departure Warning (LDW) warns you if the vehicle is beginning to leave the driving lane.

- LDW is activated at speeds of 45 mph (70 km/h) and above and the lane markings are clear.
- If a front wheel passes over a lane marking, LDW will warn you through a visual alert ① and an intermittent vibration in the steering wheel for up to 1.5 seconds.
- The Dynamic driver assistance switch ② is located on the steering wheel.



TURNING LANE DEPARTURE WARNING ON OR OFF

- LDW can be turned on or off through the "Driver Assistance" section of the lower display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Memo



Printing December 2021
QR22EA CV37U1
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to www.infinitiquickguide.com/2022/q60 or snap this barcode with an appropriate barcode reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download in the smartphone app.



INFINITI®