

Scheduled Maintenance

Scheduled Maintenance

▼ Scheduled Maintenance (U.S.A.)

Vehicles utilizing the vehicle status monitor feature:

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on.

The display/wrench indication will come on before reaching the maximum interval of 16,000 km (10,000 miles), or 12 months (after the previous maintenance).

Refer to the Information section in the Mazda Connect Owner's Manual. Please contact an Authorized Mazda Dealer if necessary.

Reset Service Interval when the maintenance was performed regardless of the message/wrench indicator light display.

USA Residents

Maintenance Item	Number of times, maintenance was performed.							
	1	2	3	4	5	6	7	8
ELECTRIC VEHICLE SYSTEM								
Coolant level	I	I	I	I	I	I	I	I
Coolant* ¹	Replace at first 192,000 km (120,000 miles) or 180 months; after that, every 96,000 km (60,000 miles) or 60 months.							
OTHER THAN ENGINE AND ELECTRIC VEHICLE SYSTEM								
Brake lines, hoses and connections		I		I		I		I
Brake and clutch fluid level	I	I	I	I	I	I	I	I
Brake fluid		R		R		R		R
Disc brakes	I	I	I	I	I	I	I	I
Steering operation and linkages		I		I		I		I
Front and rear suspension, ball joints and wheel bearing axial play		I		I		I		I
Driveshaft dust boot		I		I		I		I
Bolts and nuts on chassis and body		T		T		T		T
Cabin air filter	Replace every 48,000 km (30,000 miles) or 24 months.							
Tire rotation	Rotate every 16,000 km (10,000 miles).							
Tire inflation pressure and tire wear* ²	I	I	I	I	I	I	I	I
Emergency flat tire repair kit (if equipped)* ³	Inspect annually.							
Function of all lights	I	I	I	I	I	I	I	I

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

R: Replace

T: Tighten

Remarks:

- *1 Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *2 Inspect a spare tire if equipped.
- *3 Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with a new one before the expiration date.

▼ Scheduled Maintenance (Canada)

Vehicles utilizing the vehicle status monitor feature:

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

The display/wrench indication will come on before reaching the maximum interval of 16,000 km (10,000 miles), or 12 months (after the previous maintenance).

Refer to the owner's manual section of mazda.ca for the Mazda Connect owner's manual or contact an Authorized Mazda Dealer if necessary.

Reset Service Interval when the maintenance was performed regardless of the message/wrench indicator light display.

Canada residents

Maintenance Interval	Number of months or kilometers (miles), whichever comes first.						
	Months	12	24	36	48	60	72
	×1000 km	16	32	48	64	80	96
	×1000 miles	10	20	30	40	50	60
ELECTRIC VEHICLE SYSTEM							
Coolant level		I	I	I	I	I	I
Coolant* ¹	Replace at first 192,000 km (120,000 miles) or 180 months; after that, every 96,000 km (60,000 miles) or 60 months.						
OTHER THAN ENGINE AND ELECTRIC VEHICLE SYSTEM							
Brake lines, hoses and connections			I		I		I
Brake fluid			R		R		R
Disc brakes		I	I	I	I	I	I
Steering operation and linkages			I		I		I
Front and rear suspension, ball joints and wheel bearing axial play			I		I		I
Driveshaft dust boot			I		I		I
Bolts and nuts on chassis and body			T		T		T

Scheduled Maintenance

Maintenance Interval	Number of months or kilometers (miles), whichever comes first.						
	Months	12	24	36	48	60	72
	×1000 km	16	32	48	64	80	96
	×1000 miles	10	20	30	40	50	60
Body condition inspection for rust, corrosion and perforation		I	I	I	I	I	I
Cabin air filter	Replace every 40,000 km (25,000 miles) or 24 months.						
Tire rotation	Rotate every 16,000 km (10,000 miles).						
Tire inflation pressure and tire wear ^{*2}		I	I	I	I	I	I
Emergency flat tire repair kit (if equipped) ^{*3}	Inspect annually.						

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

R: Replace

T: Tighten

Remarks:

^{*1} Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.

^{*2} Inspect a spare tire if equipped.

^{*3} Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with a new one before the expiration date.