



QUICK REFERENCE GUIDE

2022 **ROGUE**
SPORT

 
COCKPIT OVERVIEW



COCKPIT OVERVIEW

- 1** Vehicle Information Display
- 2** Low Tire Pressure Warning Light (!)
- 3** Headlight and Turn Signal Switch
- 4** Instrument Brightness Control
- 5** Twin Trip Odometer Reset
- 6** Wiper and Washer Switch
- 7** Steering Wheel Switches for Audio Control/ Navigation/ Vehicle Information Display
- 8** Cruise Control/ Bluetooth®/ ProPILOT Assist Switches
- 9** Vehicle Dynamic Control (VDC) OFF Switch
- 10** Steering Assist Switch
- 11** Heated Steering Wheel Switch
- 12** AWD Lock Mode Switch
- 13** SPORT Mode
- 14** ECO Mode

INSTRUMENT PANEL

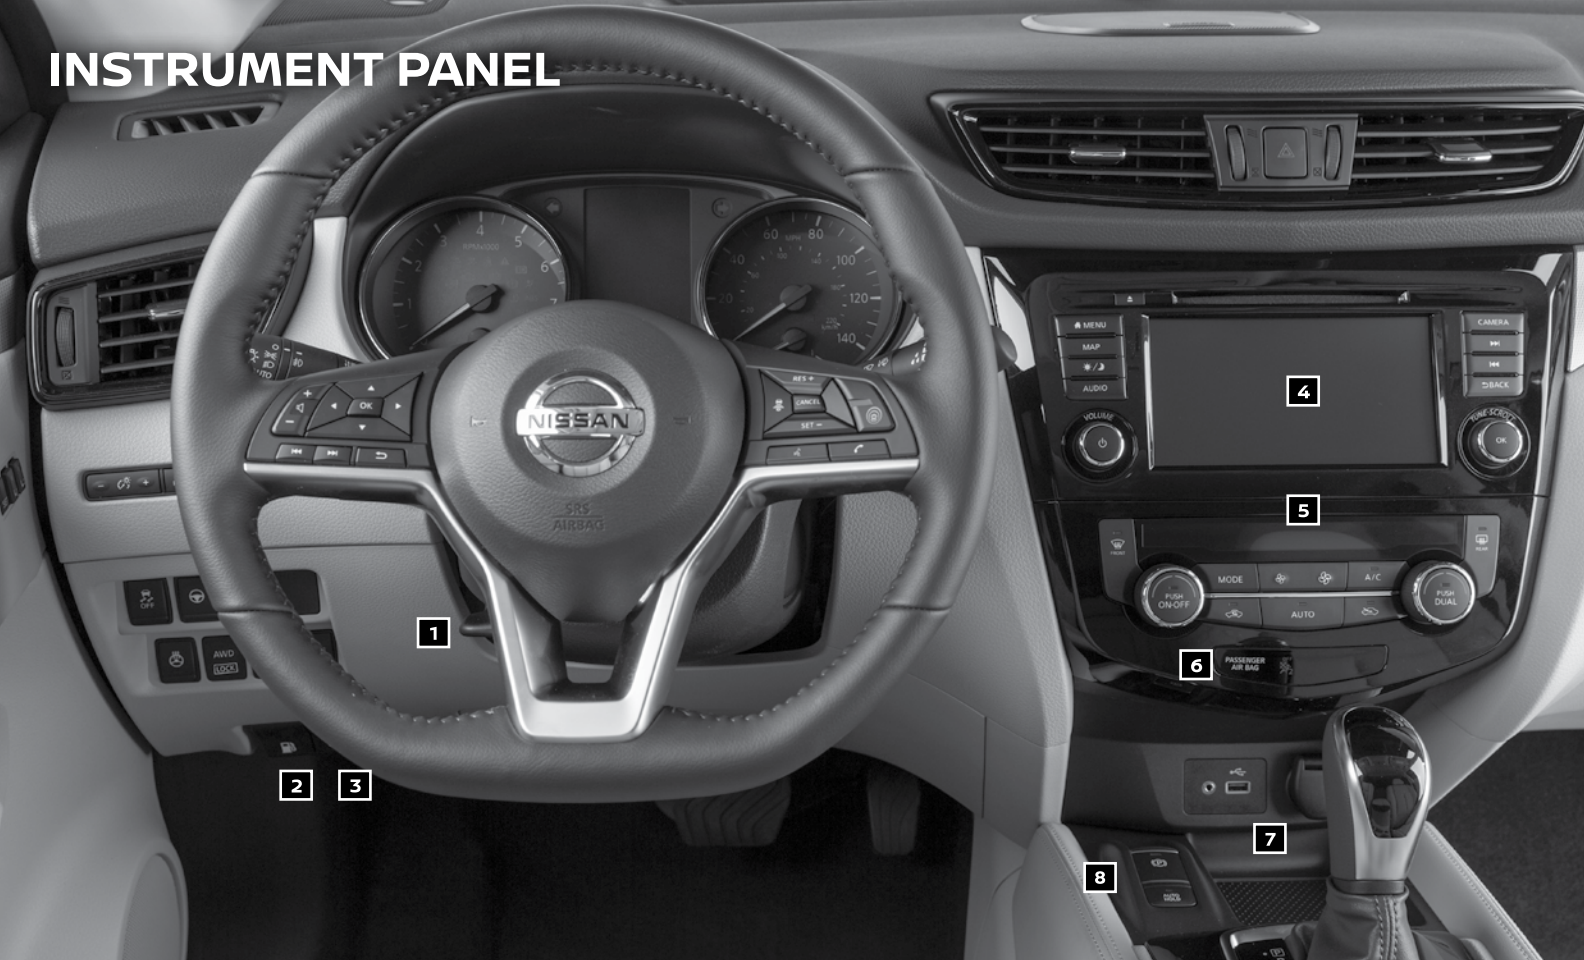

1

2

3

4

5

6

7

8

INSTRUMENT PANEL

- 1** Steering Wheel Tilt and Telescopic Adjustment
- 2** Electronic Fuel Door Release Button 
- 3** Hood Release 
- 4** Audio and Navigation System
- 5** Heater and Air Conditioner (automatic)
- 6** Front Passenger Air Bag Status Light
- 7** USB Connection Port Interface
- 8** Electronic Parking Brake and Automatic Brake Hold

TABLE OF CONTENTS

GETTING STARTED

Nissan Intelligent Key® System (if so equipped)	3
Front Power Seat Adjustments (if so equipped)	4
Memory Seat (if so equipped)	5
2 ND Row Seats	5
Rear Door Alert	6
Starting/Stopping the Engine (if so equipped)	6
Tilt and Telescopic Steering Wheel Adjustments	7
Outside Mirror Control Switch	7
HomeLink® Universal Transceiver (if so equipped)	8
Emergency Call (SOS) Button (if so equipped)	9
Heater and Air Conditioner (automatic) (if so equipped)	9
Heated Front Seats (if so equipped)	10
Headlight Control Switch	11
Wiper and Washer Switch	12
Vehicle Information Display	13
Outside Air Temperature	14
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	15
Loose Fuel Cap and Fuel-filler Door	16
Towing Your Vehicle	16
Power Moonroof (if so equipped)	16
Center Console Storage Box	17
Intelligent 4x4 (I-4x4) (if so equipped)	17

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

System Updates	18
Clock Set/Adjustment	20
USB Connection Port Interface	20
Bluetooth® Hands-free Phone System	21
• System Operating Tips	21
FM/AM/SiriusXM® Radio with CD Player (if so equipped)	23
Apple CarPlay®	24
Android Auto™	25
NissanConnect® Services Powered by SiriusXM® (if so equipped)	26
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped)	28
Hands-free Text Messaging Assistant	28
Siri® Eyes Free	29
Navigation System (if so equipped)	29



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, heater, air conditioner, audio and phone systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

TABLE OF CONTENTS

DRIVING FEATURES

Forward Driving Aid Sensors (if so equipped).....	31
Blind Spot Warning (BSW)	31
Rear Cross Traffic Alert (RCTA)	32
ProPILOT Assist (if so equipped)	32
Active Ride Control (ARC)	36
Cruise Control (if so equipped).....	36
Intelligent Engine Brake (I-EB)	37
Automatic Emergency Braking (AEB) with Pedestrian Detection System	37
Intelligent Around View® Monitor (I-AVM) (if so equipped).....	38
Hill Start Assist	40
Drive Mode	40
Rear Automatic Braking (RAB)	41
Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI)	42
Intelligent Trace Control (I-TC)	42
Traffic Sign Recognition (TSR) (if so equipped).....	43
Intelligent Driver Alertness (I-DA) (if so equipped)	43



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
 - Always wear your seat belt.
 - Supplemental air bags do not replace proper seat belt usage.
 - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
 - Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, heater, air conditioner, audio and phone systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® System allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The remote start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For the remote start to function, the vehicle must be in the **P (Park)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the remote engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside air temperature.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and press the ignition switch.



LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3**, push the liftgate request switch **4** or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once and the corresponding door will unlock. Push the request switch **3** again within 1 minute; all other doors will unlock, or
 - Press the  button **5** on the key fob to unlock the driver's side door. Press the  button **5** again; all other doors will unlock.



GETTING STARTED

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press any button on the key fob to turn the panic alarm off, or press the door request switch if the key fob is in range.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (Park)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

* State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the back end of the switch **1** up or down.

LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

MEMORY SEAT (if so equipped)

- Two positions for the driver's seat and outside mirrors can be stored in the memory seat system.
- Follow this procedure to set the memory positions:
 - Place the ignition in the ON or OFF position and confirm the shift lever is in the **P (Park)** position.
 - Adjust the driver's seat and outside mirrors to the desired position using each adjusting switch.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds and a beep will sound.
 - The driver's seat and outside mirrors are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



2ND ROW SEATS

- To fold the rear seats:
 - Lift the seatback release lever **1** to fold the seatback forward.
 - To return the seats to seating position, push up on the seatback until it latches in place.
- Pull the armrest down **2** to access the cup holders.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.



 
GETTING STARTED

REAR DOOR ALERT

The Rear Door Alert functions under certain conditions to indicate there may be an object in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes before driving.

REAR DOOR ALERT (ACTIVE)

- If the audible horn alert occurs, the **Check Back Seat For All Articles** warning will appear on the display.
- To activate Rear Door Alert, in your vehicle information display:
 - Press the ◀▶ button on the steering wheel until the “Settings” menu screen appears.
 - Using the ⬆ button, select “Vehicle Settings”, then select “Rear Door Alert” and press the **OK** button.
 - Choose from the following options: “Off”, “Horn & Alert” or “Alert Only”, and then press the **OK** button.
- To Dismiss Rear Door Alert:
 - To dismiss the warning, use the ⬆ button on the steering wheel to select “Dismiss Message” **1** and press the **OK** button. If no selection is made, this message will disappear after a period of time.
- To temporarily disable Rear Door Alert for the remainder of the current trip, use the ⬆ button on the steering wheel to select “Disable Alert” **2** and press the **OK** button.

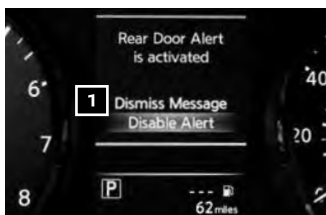

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety-Seats, seat belts and supplemental restraint system (section 1)"** and the **"Instruments and controls (section 2)"** of your Owner's Manual.

STARTING/STOPPING THE ENGINE (if so equipped)

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the ON position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch to the OFF position.



AUTO ACCESSORY

- With the vehicle in the **P (Park)** position, the Intelligent Key with you and the ignition switch placed from ON to OFF, the radio can still be used for a period of time or until the driver's door is opened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL ADJUSTMENTS

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- Move the small switch **1** to select the right or left side mirror.
- Adjust each mirror to the desired position using the large switch **2**.
- To prevent accidentally moving the mirror, move the small switch **1** to the center (neutral) position.

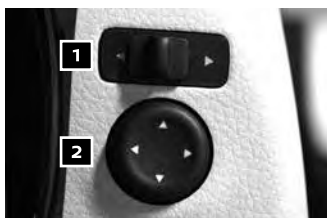

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

GETTING STARTED



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

 
- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- Place the ignition switch in the ON or ACC position (without starting the engine) when programming HomeLink.
- To program the HomeLink Universal Transceiver:
 - Position the handheld transceiver 1-3 in (2-8 cm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.


EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of emergency.
- To use this feature, press the **SOS** button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call **855-426-6628**.

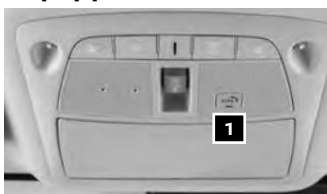

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

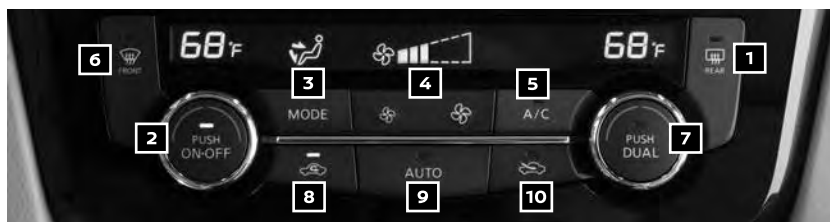

HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window defroster  switch. Push the switch again to manually turn the rear defroster off. This function automatically turns off after approximately 15 minutes.

2 ON-OFF BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **ON/OFF** button to turn the climate controls on or off. Turn the temperature control dial to the left for cooler air or right for warmer air.

3 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the front defroster and foot vents.

4 FAN SPEED CONTROL BUTTONS

- Press the fan speed control button  for low fan speeds or  for high fan speeds.

5 A/C ON-OFF BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

GETTING STARTED

6 DEFROSTING FRONT AND SIDE WINDOWS

- Press the front defroster  button. If it is difficult to defrost the windows, press the **A/C** button **5**. This feature removes humidity from the air.
- Turn the temperature control dial **2** left or right to set the desired temperature.
- To set the front defroster on high, press the fan speed  button **4** all the way up and turn the driver's side temperature control dial **2** all the way to the right.

7 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

8 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

9 AUTO BUTTON

- Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake  button to draw outside air into the passenger compartment. The fresh air intake indicator light on the button will illuminate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

HEATED FRONT SEATS (if so equipped)

- Push the  or  switch **1** to turn the heated seats on and off.
- When pushing the LO or HI position of the switch, the indicator light will illuminate. When no lights are visible the system is off.
- The heated seats turn on and off to maintain a temperature above 68°F (20°C).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTO HEADLIGHT SYSTEM

- The auto headlight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed. The headlights will turn on automatically in twilight or rainy weather (when the windshield wiper is operated continuously).
- To activate the auto headlight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to ON. To deactivate the auto headlight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

HIGH BEAM ASSIST

- The High Beam Assist system will operate when the vehicle is driven at approximately 19 mph (30 km/h) and above. If an oncoming vehicle or leading vehicle appears in front of your vehicle when the high beam is on, the headlights will automatically be switched to the low beam.
- Following the procedure below only activates the High Beam Assist system. This does not necessarily turn on the high beam even if there is no other traffic. Both ambient light and traffic conditions have to be correct for the high beam to illuminate.
- To activate High Beam Assist, turn the headlight control switch to the AUTO position **3** and push the lever **4** forward to turn on the high beam. The High Beam Assist indicator light will illuminate.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **2** or select the low beam position by placing the lever in the neutral position.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **5** to turn the fog lights on.
- Turn the switch (inside collar) to the OFF position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

GETTING STARTED

- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist  – One sweep operation of the front wipers.
- 2** Intermittent  – Operates the speed-sensing front wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 3**  – to increase or decrease wiper speed.
- 4** Low  – Front wipers operate at a continuous low speed.
- 5** High  – Front wipers operate at a continuous high speed.
- 6** Front Washer  – Pull the lever toward you to activate the front washer. The front wipers will operate several times.

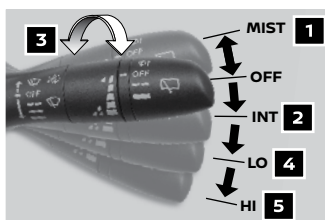

REAR WIPER AND WASHER

- 7** Intermittent  – Rear wiper operates intermittently.
- 8** Low  – Rear wiper operates at a continuous low speed.
- 9** Rear Washer  – Push the lever forward to activate the rear washer. The rear wiper will operate several times.

DRIP WIPER

- Once the wiper spray cycle is finished, there will be a short delay. Then the wipers will sweep one more time to clear off any remaining drips from the windshield.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Trip computer information
- Driver Assistance
- Audio information
- Navigation - turn by turn
- Chassis control
- ProPILOT Assist
- Cruise control system information
- Intelligent Cruise Control (ICC) system
- Intelligent Key operation information
- Indicators and warnings
- Tire pressure information
- Other information



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2** and the **▲** or **◀▶** buttons **3** located on the steering wheel.

- Press the **OK** button **2** on the steering wheel to change the display mode.
- Press the **▲** buttons **3** on the steering wheel up or down to navigate through the vehicle information display menu.
- Press the **OK** button **2** on the steering wheel to change or select an item.
- Press the **↶** button **4** on the steering wheel to go back to the previous menu.



START-UP DISPLAY

When the ignition switch is in the ON position, the vehicle information display may display the following screens if the vehicle is equipped with them:

- | | |
|--|-------------------|
| ■ Home | ■ Driving Aids |
| ■ Compass or Navigation | ■ Tire Pressures |
| ■ Drive Computer-Average Speed-Trip (Distance & Time)-Fuel Economy | ■ 4X4-i |
| ■ Audio | ■ Chassis Control |
| ■ ProPILOT Assist | ■ Warnings |
| | ■ Settings |

GETTING STARTED

ODOMETER/TWIN TRIP A & B

1. Push the **TRIP RESET** switch **5** until the desired trip odometer (either TRIP A or TRIP B) is displayed.
2. When TRIP A or B is displayed, pushing the **TRIP RESET** switch **5** for more than 1 second will reset the currently displayed trip odometer to zero.



SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- | | | |
|---|---------------------------|--------------------------|
| ■ Driver Assistance | ■ Tire | ■ Alarm (if so equipped) |
| ■ Clock Meter Settings | ■ Pressures Unit Language | ■ Tire Pressures |
| ■ Vehicle Settings | ■ Factory Reset | ■ Unit |
| ■ Maintenance Alarm
(if so equipped) | ■ Settings | ■ Language |
| | ■ Maintenance | ■ Factory Reset |

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

OUTSIDE AIR TEMPERATURE

- When the ignition switch is in the ON position, the outside air temperature **1** will appear in the vehicle information display.
- If the outside air temperature is below 37°F (3°C), the outside temperature display will have snowflake (if so equipped) **2**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** **2** warning will illuminate when one or more tires are low in pressure and air is needed. When the low tire pressure warning light **1** illuminates, you should stop and adjust the tire pressure to the recommended COLD tire pressure.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen in the vehicle information display **3** when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Move the shift lever to the **P (Park)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**", the "**In case of emergency (section 6)**", the "**Do-it-yourself (section 8)**" and the "**Technical and consumer information (section 10)**" of your Owner's Manual.

GETTING STARTED

LOOSE FUEL CAP AND FUEL-FILLER DOOR

LOOSE FUEL CAP

- A **Loose Fuel Cap** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the **OK** button, located on the steering wheel, is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



FUEL-FILLER DOOR

- The fuel-filler door is located on the passenger's side of the vehicle.
- To open the fuel-filler door, pull the  release lever **2**, located below the instrument panel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



TOWING YOUR VEHICLE

ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)

 
- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, Nissan recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "In case of emergency (section 6)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

POWER MOONROOF (if so equipped)

- To fully open or close the moonroof, push the  switch **1** to the open position or the  switch **2** to the close position. The roof will open or close all the way automatically. To stop the roof, push the switch once more while it is opening or closing.

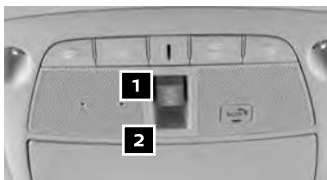

TILTING THE MOONROOF

- To tilt the moonroof up, push the ▼ tilt switch **2** to the tilt up position while it is fully closed. To tilt the moonroof down, push the switch to the ▲ tilt down position **1**.

AUTO-REVERSE

- If the auto-reverse function is activated, the moonroof will automatically open or tilt up when the control unit detects something caught in the moonroof when the moonroof is closing or tilting down.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

CENTER CONSOLE STORAGE BOX

- To access the storage bin, pull up on the lever **1**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



INTELLIGENT 4X4 (I-4X4) (if so equipped)

- Rogue Sport uses an intuitive Intelligent 4x4 (I-4x4) system.
- Push the I-4x4 **LOCK** switch **1** to select AUTO or LOCK mode.

LOCK MODE

- LOCK Mode will place the vehicle in All-Wheel Drive (AWD).
- LOCK Mode is recommended for driving at low speeds, such as during takeoff or on rough roads.
- Push the I-4x4 **LOCK** switch **1** to activate. The AWD LOCK indicator light illuminates on the instrument panel.

The LOCK mode will change to the AUTO mode automatically when the vehicle has been driven at a high speed. The AWD LOCK indicator light will turn off.

AUTO MODE

- AUTO Mode is recommended for driving on paved or slippery roads. Torque will be distributed to both the front and rear wheels automatically for stability, depending on road conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

- Yes - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- Later - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.
- No (display may vary) - Skips the software update, the pop-up message is hidden and will not be shown again for the current software update.

You can trigger the software update manually in the event that “Later” or “No” was unintentionally pressed.

- To manually update the software to the latest version:

 
1. Press the **MENU** button on the control panel.
2. Touch “Info” and then touch “System Information”
3. Touch “Software Update”
4. Touch “Start Software Update” and then “Download”

- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.


Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4 GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

- To connect to your Wi-Fi network:

1. Press the **MENU** button on the control panel.
2. Touch “Connections” and then touch “Wi-Fi”
3. Touch the  icon and then touch “Wi-Fi” to turn it on.
4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.

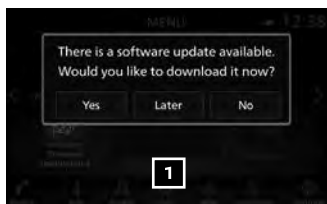

- To manually update your software using Wi-Fi:
 1. Press the **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information"
 3. Touch "Software Update", "Start Software Update" and then touch "Download"
- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.
- To turn on automatic updates of map software:
 1. Press the **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information"
 3. Touch "Map Update" and then touch "Map Update Settings"
 4. Select an area to be updated and touch "Start"
- When a map update is available for the selected region, a pop-up message **4** will be shown on the screen.
- Touch "Yes" to start the map download and update or "Later" to see the pop-up again in the next power cycle.
- To manually update the map software via Wi-Fi:
 1. Connect the vehicle to an available Wi-Fi network
 2. Press the **MENU** button on the control panel.
 3. Touch "Info" and then touch "System Information"
 4. Touch "Map Update" and then touch "Update via Wi-Fi"
 5. Select an area to be updated and touch "Start"

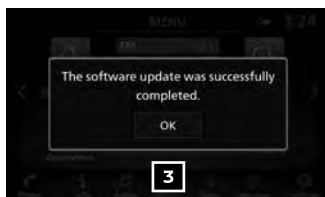 

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the  **MENU** button **1**.
2. Touch the  Settings key **2** on the launch bar.
3. Touch the "Clock" key.
4. "Set Clock Manually" **3** to manually adjust the time displayed on the clock. (Clock Mode must be set to "Manual" with navigation system).

- Touch the  key **4** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.



USB CONNECTION PORT INTERFACE

- The USB Connection Port Interface **1** is located beneath the climate controls.
- When a compatible USB memory device or auxiliary device is plugged into the USB Connection Port Interface, compatible audio files stored on the device can be played through the vehicle's audio system.



CHARGE ONLY PORT

- There is a USB charging port **2** located in the center console. This port will charge compatible devices.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the appropriate "Bluetooth® System" section within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, say "Cancel" or press and hold the  button on the steering wheel.
- To decrease or increase the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOLUME** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.
- Send predefined or custom text messages through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Once your compatible device is connected to the vehicle's audio system, the audio files will play through the vehicle's speakers.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CONNECTING PROCEDURE

1. Press the  **MENU** button on the control panel.
2. Touch the  Settings key **1** on the Launch Bar.
3. Touch the "Connections" key **2** and then select "Bluetooth".
4. Touch the "Add New" key **3**.
5. Initiate the connecting process from the handset. The system will display the message: "Is PIN XXXXXX displayed on your Bluetooth device?"
If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Touch the  Phone key on the steering wheel.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

 


MAKING A CALL

1. Touch the  Phone key on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the methods to make a call:

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  Answer key.
- To reject the incoming call, either:
 - Select the  Decline key.
- To end a call, either:
 - Press the  button on the steering wheel, or
 - Select the  Hang up key.

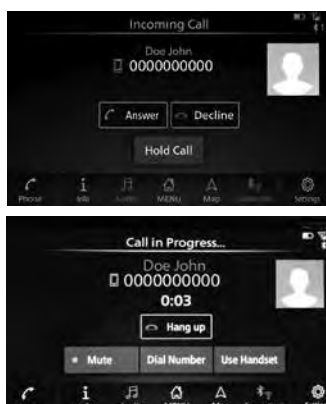

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

SWITCH TO HANDSET

- Start the call using Bluetooth® Hands-free, press the phone icon on the screen to use handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.



FM/AM/SiriusXM® RADIO WITH CD PLAYER (if so equipped)

1 VOLUME/⏻

- Press the **POWER** button to turn the system on or off.
- Turn the **VOLUME** control dial to the right or left to increase or decrease the volume.

2 OK/TUNE-SCROLL DIAL

- Press the **OK** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** dial left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- Next touch and hold the desired station select key (1-12). The channel indicator will appear on the display and the programming is now complete.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To store a station in a preset, you must first select a radio band by touching the **AM** key **5**, **FM** key **6** or **SiriusXM** key **7** then tune to the desired FM, AM or satellite radio station. Audio source icon layout in the launch bar is customizable, and your vehicle display may vary.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key (**1-12**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Audio system (section 3)" of your NissanConnect® Owner's Manual.

 
APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.

- There are two ways to start a Siri session:

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.

- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To return to the Apple CarPlay home screen after operation, touch the  key **1** on the lower left corner of the Apple CarPlay screen.
- To exit the Apple CarPlay screen, press the  **MENU** button on the control panel.

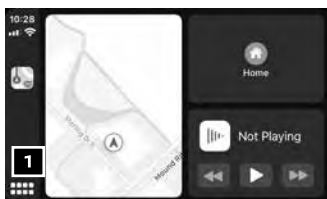

- To return to the Apple CarPlay screen from the main menu:
 - Touch the **C** Apple CarPlay key **2**, or
 - Touch the **i** Info key **3** on the Launch Bar, touch the “Smartphone Connection” key, and then select the “Apple CarPlay” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the launch bar.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the exit key.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To return to the Android Auto home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  Info key **4** on the Launch Bar, touch the "Smartphone Connection" key, and then touch the "Android Auto" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** and the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect Services can be found in your NissanConnect Owner's Manual.

- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident severe enough to deploy the air bags.
- Connection to Roadside Assistance - By touching the  headset icon **1** on the map screen, this allows you to contact a Roadside Response Specialist who can dispatch roadside assistance in non-emergency situations.
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.



To view detailed instructional videos regarding these and other features, please go to **www.nissanquickguide.com**.

- Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start with Intelligent Climate Control (if so equipped) - Start your engine remotely using the NissanConnect Services companion app or website.
- Journey Planner - With which you can send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert - Receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search - Select "Connected Search" from the Destination menu in the vehicle's Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle's location.
- Valet Alert - Use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert - Specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Press the  **MENU** button **2**.
- Touch the **i** Info key on the Launch bar, then
- Touch the "NissanConnect Services" key **3**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores, stock quotes and parking information.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** and the **"Navigation (section 6)"** of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.



- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Hands-free phone (section 4)"** of your NissanConnect® Owner's Manual.

SIRI® EYES FREE

 
If you have a compatible iPhone® with Siri®, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.

If you have a compatible iPhone connected to the system, press and hold the  button **1** on the steering wheel for a few seconds. Then press the "Settings" key. Select "Short Press" or "Long Press" for Siri Eyes Free activation mode. Switch action can also be changed from the Bluetooth® Settings menu.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** and the **"Troubleshooting guide (section 8)"** of your NissanConnect® Owner's Manual and visit www.NissanUSA.com/bluetooth.

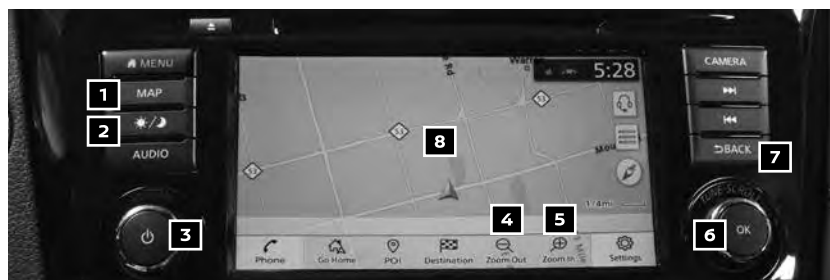

NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual.

- 1** **MAP** button – Press to display the map.
- 2**  button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE-SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 3** **VOLUME** control knob – Turn right to increase the volume or left to decrease the volume.
- 4**  – Touch to zoom the map out.
- 5**  – Touch to zoom the map in.
- 6** **TUNE-SCROLL** knob – Turn to scroll through the items in a list. Press to select a menu item.
- 7**  **BACK** button – Press to return to the previous screen.
- 8** Touch-screen display

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information. For more information, refer to your NissanConnect® Owner's Manual.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Cruise Control (ICC) (for vehicles with ProPILOT Assist)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Nissan dealer.



Forward Driving Aids **3**
temporarily disabled
Front Sensor blocked
See Owner's Manual



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and Driving (section 5)" of your Owner's Manual.

BLIND SPOT WARNING (BSW)

- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light **2** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

REAR CROSS TRAFFIC ALERT (RCTA)

- The RCTA system can help alert the driver of an approaching vehicle when the driver is backing out of a parking space.
- When the shift position is in **R (Reverse)** and the vehicle speed is less than approximately 5 mph (8 km/h), the RCTA system is operational.
- If the radar detects an approaching vehicle from either side, the system chimes (once) and the side indicator light flashes on the side the vehicle is approaching from.
- The RCTA system can be turned on or off through the Parking Aids menu in the Driver Assistance menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.



PROPILOT ASSIST (if so equipped)

ProPILOT Assist is a combination of Intelligent Cruise Control (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a "hands-on" driver assistance system and is intended for use on expressways/highways.

The driver must be prepared to steer and brake the vehicle at all times.

SETTING THE PROPILOT ASSIST SYSTEM

1. To set ProPILOT Assist, push the  ProPILOT Assist switch **1** on the steering wheel. The ProPILOT Assist system display will appear in the vehicle information display.
2. Push the **SET-** switch **2** when at the desired speed.
3. Push the distance switch **3** to select the following distance.



PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

4 Set vehicle speed indicator

- Displays the speed set by the driver.

5 Steering Assist indicator

- Shows whether Steering Assist is active or not (green-active, gray-standby).

6 Lane marker indicator

- Appears green on display when lane lines are detected and Steering Assist is active.

7 ProPILOT Assist status indicator

- Displays whether ProPILOT Assist is engaged or not.

8 Vehicle ahead detection indicator

 
- Appears on the display when a vehicle is detected ahead.

9 Set distance indicator

- Displays the selected distance set by driver.

10 ProPILOT Assist Tips

- Displays tips for using ProPILOT Assist when the system is active.

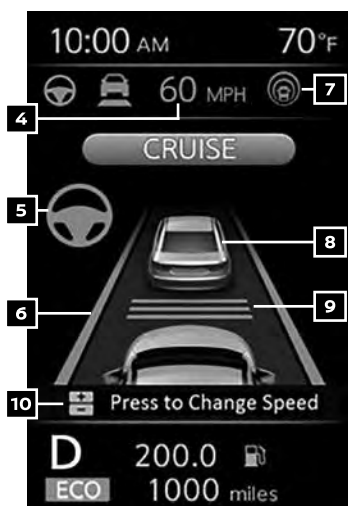

CANCELLING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
 - Push the **CANCEL** switch **11** on the steering wheel.
 - Tap the brake pedal.
 - Push the  ProPILOT Assist switch **1**.

PROPILOT ICC

- The set speed range is between approximately 20 and 90 mph (30 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch **12** or **SET-** switch **2** and release it.
- When a vehicle is detected in the lane ahead, the ICC system controls the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- For more information, refer to the ICC section in this book.

VEHICLE AHEAD DECELERATES AND/OR STOPS

- The system will not detect a vehicle that is already stopped in the traveling lane before it enters the detection zone. The driver must control the vehicle to prevent a collision.
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and apply the brakes to keep the vehicle stopped.

DRIVING FEATURES

- When the vehicle ahead accelerates, push and release the **RES+** switch **12** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.

STEERING ASSIST

- The Steering Assist system assists the driving operation to help keep the vehicle within the traveling lane.
 - Lane markers must be clear and consistent on both sides of the vehicle.
 - This feature will operate when vehicle speed is above 37 mph (60 km/h).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
- Steering Assist is cancelled or temporarily goes into standby mode under the following conditions:
 - The turn signals are activated.
 - Both hands are not detected on the steering wheel. To prevent standby mode, simply apply more pressure or a tighter grip on the steering wheel.
 - The wipers are in the HI speed position.
 - Steering Assist will not activate if the system does not detect lane markers.

To turn off Steering Assist:

- Push the  Steering Assist switch **13** on the instrument panel.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see Owner's Manual.
- If the driver lightly touches (instead of firmly gripping) the steering wheel, the steering torque sensor may not detect the driver's hand(s) on the wheel and a sequence of warnings may occur. When the driver holds and operates the steering wheel again, the warnings turn off.
- If the driver does not place their hands back on the wheel or cancel the ProPILOT, the vehicle will eventually come to a stop if the driver does not intervene.



ELECTRONIC PARKING BRAKE (if so equipped)

- To apply the parking brake, pull the electronic parking brake switch **14**, located below the center console. The electronic parking brake warning light **15** will illuminate.
- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the parking brake switch **14** down. The electronic parking brake warning light **15** will turn off.



AUTOMATIC BRAKE HOLD (if so equipped)

- Automatic brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the automatic brake hold switch **16** to activate the automatic brake hold function. The indicator light will illuminate green.

To use the automatic brake hold function, the following conditions need to be met:

- The driver's seat belt is fastened.
- The electronic parking brake is released.
- The shift lever is not in the **P (Park)** position.
- The vehicle is not parked on a steep hill.
- To cancel the automatic brake hold function push the automatic brake hold switch **16**. To deactivate while the brake force has been maintained, depress the brake pedal and push the automatic brake hold switch **16**.

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- This mode allows driving at a speed between 25 to 90 mph (40 to 144 km/h) without keeping your foot on the accelerator pedal.
- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch **1** for longer than 1.5 seconds.
- The convention (fixed speed) cruise control mode display and indicators **17** are displayed in the vehicle information display and you can now set your desired cruising speed using the **SET-** switch **2** or **RES+** switch **12**.



DRIVING FEATURES

- To use the ICC system again, press the ProPILOT Assist switch to turn off the system and then press and release the switch to turn on ProPILOT Assist ICC mode.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

ACTIVE RIDE CONTROL (ARC)

The Active Ride Control (ARC) system senses upper body motion of the vehicle based on wheel speed information. It controls engine torque and four wheel brake pressure to enhance ride comfort in effort to restrain uncomfortable upper body movement.

This function cannot be set to OFF (disabled) through the vehicle information display. This feature can be turned OFF by pressing the Vehicle Dynamic Control (VDC) **OFF** switch.

- This system will come into effect above 25 mph (40 km/h).
- When the Vehicle Dynamic Control (VDC) **OFF** switch is used to turn off the VDC system, the Active Ride Control is also turned off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the CRUISE ON/OFF switch **1** on the steering wheel. The CRUISE indicator in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. A green circle indicator light in the instrument panel will illuminate, and the set speed will display next to the indicator light. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.



 
- To turn off cruise control, push the **CANCEL** switch **4** on the steering wheel. Both the CRUISE indicator light and green circle indicator light in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

INTELLIGENT ENGINE BRAKE (I-EB)

The Intelligent Engine Brake adds subtle deceleration by controlling the Continuously Variable Transmission (CVT) in the vehicle based on the driver's steering and sensors. This allows the vehicle to easily adjust speed when braking at corners.

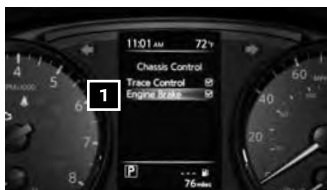

This function can be set to OFF (disabled) through the vehicle's information display, but the Vehicle Dynamic Control (VDC) function will remain on (e.g. emergency avoidance scene).

- To turn off the Intelligent Engine Brake through the vehicle information display:
 1. Select "Settings".
 2. Select "Driver Assistance".
 3. Select "Chassis Control".
 4. Select "Engine Brake" **1**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.



DRIVING FEATURES

- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **1** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

INTELLIGENT AROUND VIEW® MONITOR (I-AVM) (if so equipped)

- With the ignition switch in the ON position, activate the Intelligent Around View® Monitor by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.



Start from any Control Panel screen



Front view & bird's-eye view



Front view & front-side view



- When the shift lever is in the **P (Park)**, **N (Neutral)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Rear view & bird's-eye view



 
Press




Rear view & front-side view




Press





Rear view

 

Press

 

- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
 - Green approximately 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects:
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the I-AVM differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

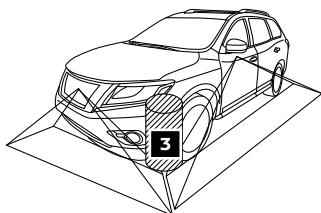  

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **P (Park)**, **R (REVERSE)**, **N (Neutral)** or **D (DRIVE)** position and the vehicle is driven at speeds of approximately 6 mph (10 km/h) or less.

DRIVING FEATURES

- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- Hill Start Assist will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

DRIVE MODE

NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- **ECO** drive mode is recommended to help maximize fuel economy. Performance may be reduced.
 - Push the **ECO** switch **1** on the instrument panel to activate.
 - The **ECO** drive mode indicator will appear on the meter.



SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
 - Push the **SPORT** mode switch **2** in the instrument panel to activate.
 - The **SPORT** mode indicator will illuminate in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching large objects directly behind the vehicle.
- The RAB system will function when the shift lever is in **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING the RAB SYSTEM ON/OFF

- The RAB system can be turned on and off through the "Driver Assistance" section of the vehicle information display.

When the RAB system is turned off, the RAB system warning light **1** illuminates.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and "**Starting and driving (section 5)**" of your Owner's Manual.

DRIVING FEATURES

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will chime and the LDW light **1** in the vehicle information display will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW system can be turned on and off through the vehicle information display. To temporarily turn off the system, push the Dynamic Driver Assistance Switch (for vehicles without ProPILOT Assist) **2** on the instrument panel.
- When the system is off, the indicator light on the switch **3** is off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT TRACE CONTROL (I-TC)

The Intelligent Trace Control function senses driving based on the driver's steering, acceleration and braking patterns. It controls brake pressure at each of the individual wheels to aid tracing at corners and help for a smooth vehicle response.

This system can be set to OFF (disabled) through the vehicle's information display, but some functions will remain on to assist the driver (e.g. emergency avoidance scenes).

- The I-TC system can be turned on and off through the "Driver Assistance" section of the vehicle information display.

If Vehicle Dynamic Control (VDC) **OFF** switch is pressed, VDC and All Chassis Control will be OFF.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

 
TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)

The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror and displays the detected signs in the vehicle information display **1**.

- The TSR system can be turned on and off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

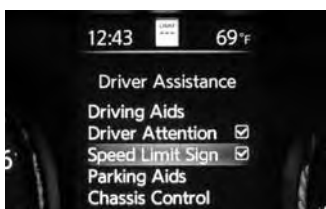


INTELLIGENT DRIVER ALERTNESS (I-DA) (if so equipped)

- When Driver Attention Alert **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break:
 - If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

- The I-DA system can be turned on and off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

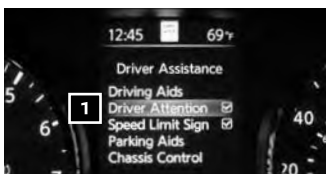

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2022/roguesport or snap this barcode with an appropriate barcode reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2021 Nissan North America, Inc.
QR22EA 0J11U1

Printing: January 2022

