



CT5

CONVENIENCE & PERSONALIZATION GUIDE

2023


[cadillac.com](https://www.cadillac.com)



Review this quick reference guide for an overview of some important features in your Cadillac CT5. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [cadillac.com/owners](https://www.cadillac.com/owners).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

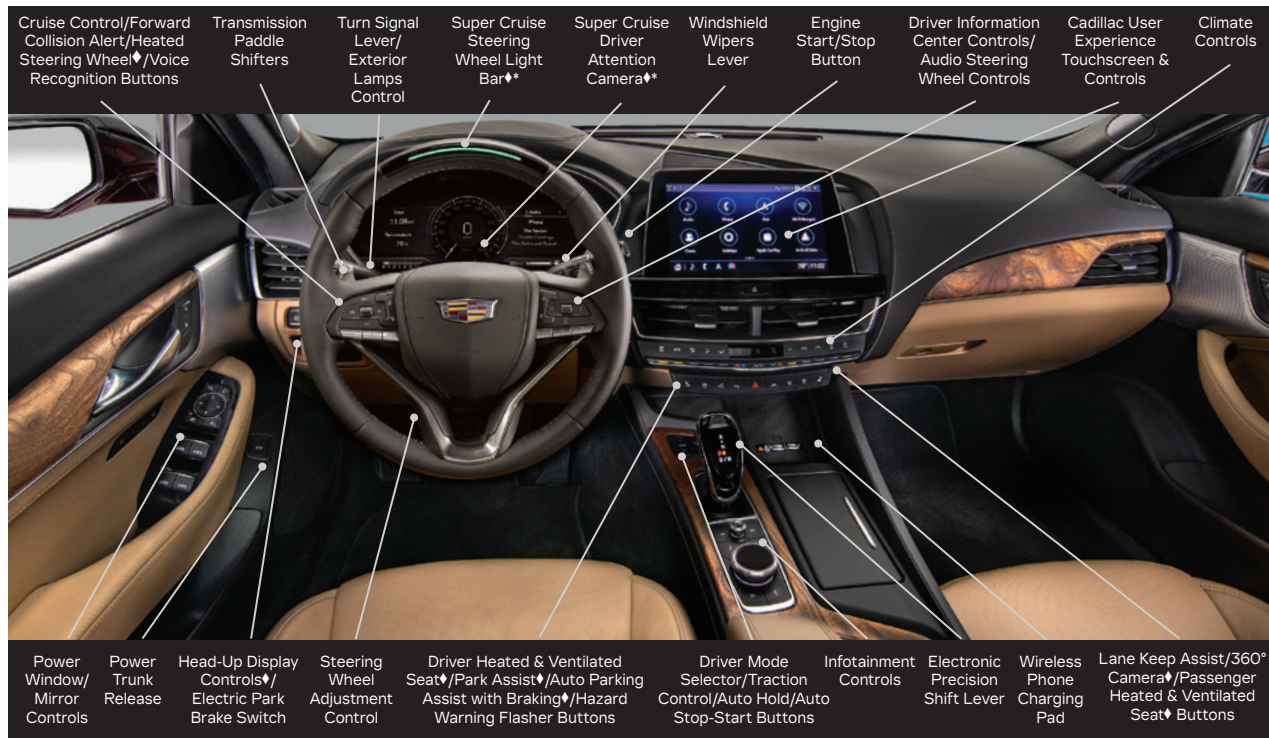

Due to current supply-chain shortages, certain features shown have limited or late availability, or are no longer available. See the window label or your dealer regarding the features on an individual vehicle.

*Refer to the Super Cruise Convenience & Personalization Guide for additional information.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors and the locking fuel door♦. Press and hold for 3 seconds to close all windows.

To enable automatic mirror-folding♦, go to Settings > Vehicle > Comfort and Convenience.

Unlock

Press to unlock the driver's door and locking fuel door♦ only or all doors. Press and hold for 3 seconds to open all windows.

Remote Start

After locking the vehicle and while in range, press twice to start the engine from outside the vehicle. After entering the vehicle, press the ENGINE START/STOP button.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.

Power Release Trunk

Press twice to open the trunk.

Door/Glovebox Key

Press the button (A) on the side of the key fob to pull out the key. Refer to your Owner's Manual for instructions on removing the key cylinder cap on the driver's door handle.

Note: To change or enable some Remote Keyless Entry settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.




KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and trunk without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The key fob must be within 3 feet of the trunk or door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the touch pad (A) on the inside of the driver's door handle to unlock the driver's door only or all doors, including the trunk and locking fuel door♦.
- ▶ Press the touch pad on the inside of a passenger door handle to unlock all doors, including the trunk and locking fuel door♦.
- ▶ Press the touch pad above the license plate to open the trunk.

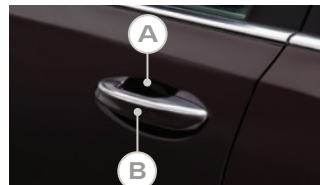

KEYLESS LOCKING

With the key fob within range:

- ▶ Press the Cadillac crest sensor (B) on the outside of either front door handle to lock all doors, the trunk and locking fuel door♦.

PASSIVE LOCKING

- ▶ To have all doors, the trunk and locking fuel door♦ lock automatically after a short delay when the ignition is off, the key fob is removed from the vehicle, and all doors are closed, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Lock.
- ▶ To have the driver's door or all doors unlock when using the touch pad on the driver's door handle, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Unlock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, press and hold the brake pedal and then press the ENGINE START/STOP button to start the engine. The green indicator on the button will illuminate.



Note: If the key fob battery is weak, place the key fob in the rearward cupholder of the center console to enable the engine to start. Replace the key fob battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and then press the ENGINE START/STOP button to turn off the engine.

Retained Accessory Power will be available after the engine is turned off for up to 10 minutes, or until the driver's door is opened, to operate the radio, power outlets, OnStar[®] and wireless phone charging system. Power window and sunroof[†] functionality will stop when any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the ENGINE START/STOP button to place the vehicle in Accessory mode to enable use of certain electronic features. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.



The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current climate control settings require the engine to run.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the (A) Auto Stop button near the front of the center console to turn off the automatic stop/start system. The button indicator turns off when the system is disabled.

The system is turned on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on the shift lever with the selected gear position illuminated in red. The shift lever always starts in the center position and, after shifting, returns to the center position.

Park – Press the button (A) on top of the lever to shift into Park. To shift out of Park, press and hold the shift lock button (B) on the side of the lever while selecting the desired gear.



Reverse – Press and hold the shift lock button (B) and move the lever forward completely (pass the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for an extended period. It will automatically shift into Park. See Automated Car Wash Mode on page 19.

Drive – Move the lever rearward to shift into Drive.

Tap Shift Mode – With the transmission in Drive, pull back on the shift lever to shift manually. Pull the left steering-wheel paddle to downshift and the right steering-wheel paddle to upshift. Pull back on the shift lever again to return to Drive.

To engage Temporary Tap Shift Mode, pull either the left (downshift) or right (upshift) steering-wheel paddle without moving the shift lever. The transmission will return to automatic shifting approximately 7–10 seconds after the last manual shift.

See Driving and Operating in your Owner's Manual.

DRIVER MODE SELECTOR

The Driver Mode Selector system can automatically adjust the steering, braking, engine sound and other tuning in real time. Pressing the MODE button on the center console displays the mode menu on the instrument cluster and activates the next available mode.

DRIVER MODES

My Mode – Allows the engine sound, steering and braking feel to be customized to your preference; go to Settings > Vehicle > My Mode.


Tour – Use in normal driving for balanced comfort and handling.

Sport – Use where road conditions or personal preference dictates a more performance-oriented response. Performance Shift Features are enabled when spirited driving is detected.

Snow/Ice – Use during slippery conditions to help control wheel speed.

The mode features vary. Not all vehicles have all features.

See Driving and Operating in your Owner's Manual.

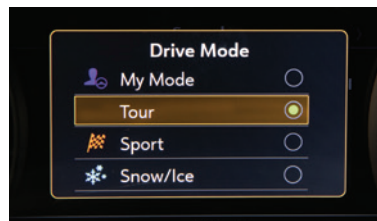

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ADAPTIVE CRUISE CONTROL

Note: Refer to the Super Cruise Convenience & Personalization Guide for information on Super Cruise[†] functionality.

 **On/Off**

SET- Set Speed

With Cruise Control on , rotate the thumbwheel down to set the current cruise speed.

RES+ Resume Speed

With Cruise Control on , rotate the thumbwheel up to resume the set speed.

Adjust Speed

With a cruise speed set, rotate the thumbwheel up or down to the first detent to increase or decrease the set speed by 1-mph increments; rotate the thumbwheel past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between regular Cruise Control  and Adaptive Cruise Control .



Follow Distance Gap (Adaptive Cruise Control[†])

Press to select a targeted gap setting of Far, Medium or Near — the time between your vehicle and a vehicle detected directly ahead.

See Driving and Operating in your Owner's Manual.

B. VOICE RECOGNITION

 **Push to Talk**

Press and release to answer an incoming call or to use voice recognition with the OnStar, Bluetooth and infotainment systems. Press and hold for 3 seconds to use Bluetooth Voice Recognition (Siri or Google Assistant).

 **End Call/Mute**

Press to end/decline a call or mute/unmute the audio system.

See Infotainment System in your Owner's Manual.

C. HEATED STEERING WHEEL[†]

 **On/Off**

See Instruments and Controls in your Owner's Manual.

D. AUDIO CONTROLS

  **Volume**

Press  or  to adjust the volume.

  **Next/Previous**

Press  or  to select the next or previous stored favorite radio station or track.

See Infotainment System in your Owner's Manual.

E. DRIVER INFORMATION CENTER CONTROLS

 **Left/Right**

Press the  or  button to move to a display zone or menu. Press  to exit a menu.

 **Up/Down**

Rotate the thumbwheel up or down to move through the menus.

 **Select**

Press the  thumbwheel to open a menu, select or reset an item, or clear a message.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information.

DIC MENUS

Use the controls on the right side of the steering wheel to view the DIC menus.

Info – Display trip, fuel range and other info pages.

Audio – Browse music and change the audio source.


Navigation ♦ – View active route and change prompts.

Phone – View active call and scroll through contacts.

Options – Change display information.

SELECT INFO PAGES

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the ✓ thumbwheel to enter the menu.
3. Use the thumbwheel to scroll through the list of items.
4. Press the ✓ thumbwheel to select or deselect an item to display in the Info menu.

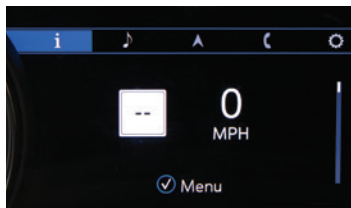

See Instruments and Controls in your Owner's Manual.

♦ Optional equipment

MULTI-COLOR HEAD-UP DISPLAY♦

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are located on the left side of the instrument panel.

HUD Position

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.

INFO

Press to change to next available display view: Speed View; Audio/Phone View; Navigation View; or Performance View.

Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.

ROTATION OPTION

- To adjust the angle of the HUD, use the DIC controls to view Options > Head-Up Display and select Adjust Rotation. Rotate the DIC thumbwheel up or down to adjust the angle. Select OK to save the setting.

See Instruments and Controls in your Owner's Manual.



CADILLAC USER EXPERIENCE FEATURES

Read your Owner's Manual for important information about using the infotainment system while driving.

Your CT5 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touchscreen or use the rotary controller and buttons on the center console to access an item. You can use simple gestures on the touchscreen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit cadillac.com/support.



Note: Infotainment buttons and configuration may vary depending on vehicle content.

CADILLAC USER EXPERIENCE FEATURES

MANAGING HOME PAGE ICONS

1. Press the  Home button.
2. To enter edit mode, touch and hold the icon to move.
3. Drag the icon to the Applications Tray or the desired position on the screen.
4. After positioning all icons as desired, select Done.

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order. Source options are on the left side of the Audio page.

1. Display the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station or channel list.

PORTABLE AUDIO DEVICES

USB ports (A) for data and charging are located in the center console storage compartment.

- ▶ Connect an iPod[®], iPhone[®], MP3 player, USB flash drive or USB mass storage device to the USB port.
- ▶ Touch Audio, and then touch More, if necessary, to select the USB device. Search for music on-screen or by voice commands.
- ▶ For convenient storage, place the device in the pocket (B) in the front of the center console storage compartment.



Note: A charge-only USB port is located on the rear of the center console for rear-seat passengers.

SIRIUSXM[®] WITH 360L[♦]

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and the Cadillac Connected Access plan. See siriusxm.com and onstar.com for details.

APPLE CARPLAY[®] AND ANDROID AUTO^{™†}

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment screen and phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- ▶ To exit Apple CarPlay or Android Auto, press the  Home button. To return to Apple CarPlay or Android Auto, press and hold the  Home button.

See Infotainment System in your Owner's Manual.

[†]Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

CADILLAC USER EXPERIENCE FEATURES

IN-VEHICLE APPS[†]

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-in, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps require internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

VOICE RECOGNITION

Control the music source, enter a navigation destination[†], make phone calls hands-free, and perform other tasks using the natural voice-recognition system.

1. Press and release the  Push to Talk button on the steering wheel.
2. The system will play a prompt.
3. After the prompt, say what you want it to do.
 - Examples: "Call Dave" or "Tune to 99.5 FM"
 - Say "Help" for voice-recognition assistance



BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice-recognition commands on a compatible, paired phone; e.g., Siri[®] or Google Assistant.

- To activate Bluetooth Voice Recognition, press and hold the  Push to Talk button for a few seconds.

See Infotainment System in your Owner's Manual.

BLUETOOTH[®] SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit cadillac.com/support.

PAIR A PHONE

1. To use voice recognition, press the  Push to Talk button; after the prompt, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, select the Phone icon > Phones and then the  Information icon.

STREAMING AUDIO

With a device connected via Bluetooth, touch the Audio icon, and then touch More, if necessary, to select Bluetooth as the audio source.

See Infotainment System in your Owner's Manual.

VALET MODE

Valet Mode can be used to provide only authorized users with access to personalized features.

- ▶ To lock/unlock the infotainment screen, select Settings > Vehicle > Valet Mode and enter a passcode.

See Instruments and Controls in your Owner's Manual.

WIRELESS PHONE CHARGING

The Wireless Phone Charging system is located at the front of the center console. To check mobile device compatibility, visit cadillac.com/support. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The ⚡ battery charging symbol will display in green on the infotainment screen when the phone is charging. If not charging, remove the phone for 3 seconds and rotate it 180 degrees before placing it on the charging pad again.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT♦

With the vehicle's available built-in 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. Some services require a data plan.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

For more information on use and system limitations, visit cadillac.com/support.

See Infotainment System in your Owner's Manual.

VEHICLE CUSTOMIZATION

Many features, including Remote Start, Auto Heated/Ventilated Seats♦, Safety Alert Seat, Mirror-Folding♦, Wiper function and others, can be turned on/off or customized using the Settings menus on the infotainment screen.



1. Touch Settings on the Home page.
2. Select the System, Apps, or Vehicle menu.
3. Select the desired feature and setting.
4. Touch < Back to exit each menu.

See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows the setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See Infotainment System in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

ULTRAVIEW SUNROOF



OPEN/CLOSE THE SUNSHADE

- Press the  Sunshade switch to express-open both sunshades. Pull the  switch to express-close both sunshades. Press or pull the switch again to stop movement.


OPEN/CLOSE THE SUNROOF

- Press the  TILT switch to vent the sunroof. Pull the  switch to close the sunroof.
- Press the  SLIDE switch to express-open the front sunroof. Pull the  switch to express-close the front sunroof. Press or pull the switch again to stop movement.

See Keys, Doors and Windows in your Owner's Manual.

CLIMATE CONTROLS

The climate settings can be adjusted using the climate control buttons or by selecting Climate on the Home page of the infotainment system.

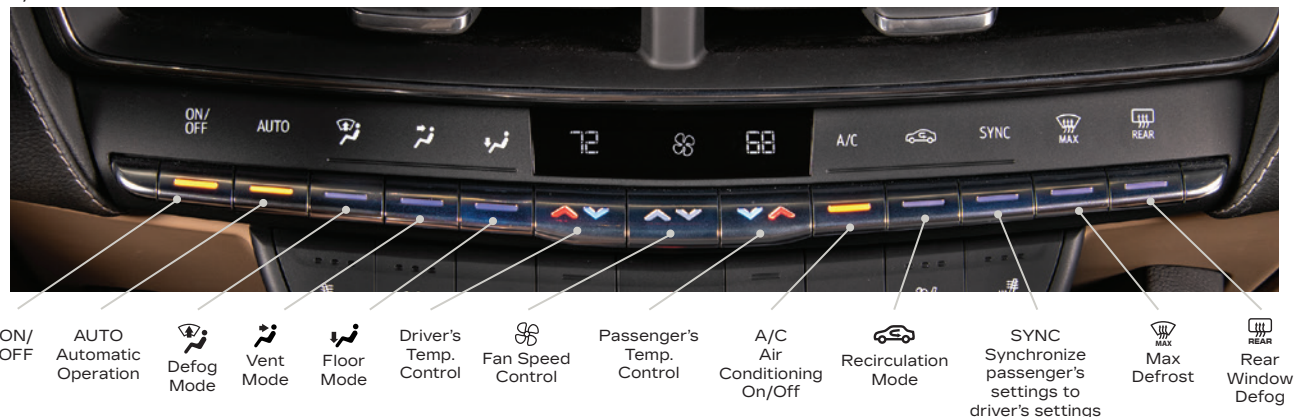

AUTOMATIC OPERATION

- Press AUTO. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If a function is manually adjusted, the auto indicator turns off and automatic operation for that function is disabled. Functions that have not been adjusted will stay in auto mode.

SYNC TEMPERATURE SETTINGS

- Press SYNC to synchronize all climate zone settings to the driver's settings.

CABIN AIR CLEANING IONIZER[♦]

The ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system. The ionizer status is shown on the climate control display on the infotainment screen.

- To turn on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the control band to activate the exterior lamps.

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps, depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

IntelliBeam System*

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night. Press the button on the end of the lever with the lamp control in the AUTO or  Headlamps position to turn the system on or off. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS



Move the lever up or down to activate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes/AUTO Rainsense™ Sensitivity

Rotate the band up for more frequent wipes or down for less frequent wipes.

To turn Rainsense mode on or off, go to Settings > Vehicle > Comfort and Convenience > Rainsense Wipers.

Note: When entering an automatic car wash, turn off the Rainsense windshield wipers.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to spray washer fluid on the windshield.

See Instruments and Controls in your Owner's Manual.

FRONT SEAT FEATURES

POWER SEAT ADJUSTMENTS

Note: Seat controls and appearance may vary depending on vehicle content.

A. Thigh Support[♦]

Pull up and slide the lever to adjust the thigh support.

B. Seat Position

Move the horizontal control to slide the seat forward or rearward, and to tilt[♦], raise or lower the seat.

C. Seatback Recline

Move the vertical control to recline or raise the seatback.

D. Lumbar Support

Press the round control or turn the feature select knob[♦] (not shown) to adjust the amount and position of lumbar support.



FRONT SEAT LUMBAR MASSAGE[♦]

With the ignition On, turn the feature select knob on the side of the seat (not shown) to view and select the massage settings displayed on the infotainment screen. Press the massage recall button (E) on the side of the seat to activate the most recent massage setting.

AUTOMATIC HEATED/VENTILATED FRONT SEATS[♦]

When the vehicle is turned on, the heated or ventilated front seats may automatically activate based on the vehicle's interior temperature.

- ▶ To turn the automatic heated and ventilated front seats on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats and Auto Cooled Seats.

SET SEAT MEMORY POSITIONS[♦]

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power steering column[♦] and power outside mirrors to the desired positions.
 2. Press and release the SET button on the driver's door. A beep will sound.
 3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- ▶ To store seat and power steering column[♦] positions for more clearance when exiting the vehicle, repeat the steps using the Exit button.



RECALL SEAT MEMORY POSITIONS[♦]

- ▶ Press and hold button 1, 2 or Exit until the set position is reached.
- ▶ To set the memory/exit positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat pulses (left, right or both sides) to alert you of the direction of potential hazards. Audible alerts may be selected instead of seat-pulsing alerts.

- ▶ To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.


LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT

– While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator on the instrument cluster is green when a vehicle is detected ahead that you're following and is amber when following a detected vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  Forward Collision Alert button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control  Follow Distance Gap setting.

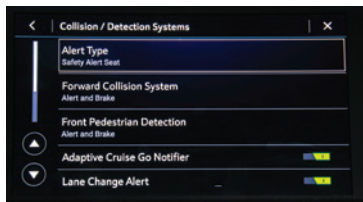

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING

– The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- ▶ Press the  Lane Keep Assist button (A) on the instrument-panel center controls to turn the system on or off.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking, if you have not already done so. Nighttime and low-visibility performance are limited.

- ▶ To set to Alert and Brake, Alert or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

DRIVER ASSISTANCE SYSTEMS

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

REVERSE AUTOMATIC BRAKING – In detected, potentially imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ Press the  Park Assist button (B) on the instrument-panel center controls to turn Reverse Automatic Braking and Park Assist on or off.

FRONT[♦] AND REAR PARK ASSIST –

During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses and a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the  Park Assist button (B) on the instrument-panel center controls to turn Park Assist and Reverse Automatic Braking[♦] on or off.



REAR PEDESTRIAN ALERT[♦] – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.

- ▶ To set to Alert or Off, go to Settings > Vehicle > Collision/Detection Systems > Rear Pedestrian Detection.

REAR CROSS TRAFFIC ALERT – When in Reverse, the system warns of detected cross-traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

HD REAR VISION CAMERA – When in Reverse below 8 mph, a view of the area behind the vehicle displays on the infotainment screen.

HD SURROUND VISION[♦] – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. The system operates when in Reverse or Drive while moving less than 8 mph.

- ▶ The Surround Vision camera also can be activated by selecting the Camera icon on the Home page or by pressing the  Surround Vision button (C) on the instrument-panel center controls.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

AUTOMATIC PARKING ASSIST WITH BRAKING*

The Automatic Parking Assist with Braking system steers the vehicle at idle speed and applies the brakes to help you park the vehicle while you follow commands and control the gear selection.

1. While driving below 18 mph, press the **P** with a car icon Park Assist button on the instrument-panel center controls. A parking-assist display is shown on the infotainment screen.

2. To switch between parallel and perpendicular parking, touch the Parking Type screen button. To search for a parking spot to the right or left, touch the Parking Side screen button.



3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

AUTOMATIC VEHICLE HOLD

Automatic Vehicle Hold will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The indicator illuminates in green on the instrument cluster when the system is holding the vehicle.

- ▶ To turn the system on or off, press the AUTO HOLD button on the center console.

TRACTION CONTROL

The traction control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the **Traction Control** button at the front of the center console to turn the system off or on again. The **Traction Control Off** light will illuminate on the instrument cluster when the system is off.

See **Driving and Operating in your Owner's Manual**.

REAR CAMERA MIRROR*

The Rear Camera Mirror uses a camera mounted in the roof antenna to provide a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.



A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.

See **Keys, Doors and Windows in your Owner's Manual**.

POWER FOLDING MIRRORS◆

- Press the  button on the driver's door to power-fold the mirrors. Press the  button again to unfold the mirrors.

The power mirrors may automatically unfold when the vehicle is driven above 12 mph.

See Keys, Doors, and Windows in your Owner's Manual.

ELECTRIC PARK BRAKE

- To apply the park brake, press the (P) Park Brake switch on the left side of the instrument panel.
- To release the park brake, turn on the ignition, press the brake pedal, and then press the (P) switch.



See Driving and Operating in your Owner's Manual.

AUTOMATED CAR WASH MODE

When using an automatic car wash, there are different procedures for placing the automatic transmission in Neutral with the engine on or off, and when the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

◆ Optional equipment

TIRE PRESSURE MONITORING SYSTEM

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

With the ignition On or in Accessory mode, the Tire Fill Alert will provide visual and audible alerts when inflating a tire. When the recommended tire pressure is reached, the horn sounds and the turn signal changes from a flashing to a solid light.

See Vehicle Care in your Owner's Manual.

POWER RELEASE TRUNK

HANDS-FREE OPERATION◆

- To open the trunk hands-free, kick your foot straight in and out under the center of the rear bumper, indicated by the Cadillac logo projected on the ground. The Remote Keyless Entry transmitter (key fob) must be within 3 feet of the trunk.



Note: To change the power release trunk settings, go to Settings > Vehicle > Comfort and Convenience > Hands-Free Trunk Control.

See Keys, Doors, and Windows in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400
TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump starts, lock-out service, fuel delivery and flat-tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security Plan, press the blue OnStar button or red Emergency button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CADILLAC ACCOUNT

Create an account at cadillac.com/owners to access personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service account required); and more.

We recommend always using ACDelco or GM Genuine Parts.

84946631 A

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2022 General Motors LLC. All Rights Reserved.



84946631