



XT4

CONVENIENCE & PERSONALIZATION GUIDE

2023

[cadillac.com](https://www.cadillac.com)



Review this quick reference guide for an overview of some important features in your Cadillac XT4. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [cadillac.com/owners](https://www.cadillac.com/owners).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL



Due to current supply-chain shortages, certain features shown have limited or late availability, or are no longer available. See the window label or your dealer regarding the features on an individual vehicle.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.

Press and hold for 1 second to fold the power mirrors♦. To enable operation, go to Settings > Vehicle > Comfort and Convenience.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Press and hold for 1 second to unfold the power mirrors♦.

Press and hold to open all windows.



Remote Start

Press and release the Lock button and then immediately press and hold the button to start the engine.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.



Power Liftgate

Press twice to open or close the power liftgate. Press once to stop power operation.

Door/Glove Box Key

Press the button (A) on the side of the key fob to pull out the door/glove box key. Refer to your Owner's Manual for instructions to remove the key cylinder cap on the driver's door handle.

Note: To change or enable some Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

♦ Optional equipment



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The transmitter must be within 3 feet of the door being unlocked/locked or within 3 feet of the liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the Keyless Unlocking and Locking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry (RKE) transmitter (key fob) must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the ENGINE START/STOP button to start the engine. The green indicator on the button will illuminate.



Note: If the RKE transmitter battery is weak, place the transmitter in the forward cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOP/OFF

- ▶ Shift to Park and then press the ENGINE START/STOP button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the ENGINE START/STOP button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop has reached the maximum allowed time.



AUTO ENGINE STOP/START DISABLE

- ▶ Press the  Auto Stop button on the center console when the engine is running to turn off the stop/start system. The button indicator is not illuminated when the system is off.

The system automatically turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on the shift lever with the selected gear position illuminated in red. The shift lever always starts in the center position and, after shifting, returns to the center position.



Park – Press the button (A) on top of the lever to shift into Park.

Reverse – Press and hold the shift-lock button (B) on the side of the lever and move the lever forward completely (past the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for an extended period. It may automatically shift into Park. See Automated Car Wash Mode.

Drive – Move the lever rearward to shift into Drive. If the vehicle is in Park, press and hold the shift-lock button (B) while moving the lever rearward.

TAP SHIFT MODE

- ▶ With the transmission in Drive, pull back on the shift lever to activate Manual mode. Pull the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull back on the shift lever again to return to Drive.

AUTOMATED CAR WASH MODE

There are different procedures for placing the transmission in Neutral with the engine on or off, and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

◆ Optional equipment

DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the steering, suspension and powertrain tuning in real time. Pressing the MODE button on the center console displays the mode menu on the instrument cluster and activates the next available mode.



ALL-WHEEL-DRIVE (AWD) OPERATION◆

On all-wheel-drive models, the vehicle can operate in front-wheel drive or all-wheel drive.

- ▶ Press the MODE button (A) to select Tour (front-wheel drive), AWD, Sport, or Off-Road mode.

If the vehicle is turned off in any mode other than AWD mode, it defaults to Tour mode the next time the vehicle is started.



FRONT-WHEEL-DRIVE (FWD) OPERATION

- ▶ Press the MODE button (A) on the center console to select Tour, Snow/Ice, or Sport mode.

The vehicle defaults to Tour mode each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ ADAPTIVE CRUISE CONTROL

 On/Off

SET- Set Speed

With Cruise Control on, rotate the thumbwheel down to set a speed.

RES+ Resume Speed

With Cruise Control on, rotate the thumbwheel up to resume the set speed.

Adjust Speed

With a cruise speed set, rotate the thumbwheel up or down to the detent to increase or decrease the set speed by 1-mph increments; rotate past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between  Cruise Control and  Adaptive Cruise Control.



Follow Distance Gap (Adaptive Cruise Control)

Press to select a targeted gap setting (the time between your vehicle and a vehicle detected directly ahead) of Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.

B. VOICE RECOGNITION

 Push to Talk

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

 End Call/Mute

Press to end/decline a call or mute/unmute the audio system.

See Infotainment System in your Owner's Manual.



C. HEATED STEERING WHEEL

 On/Off

See Instruments and Controls in your Owner's Manual.

D. AUDIO CONTROLS

 +  Volume

Press  + or  - to adjust the volume.

  Next/Previous

Press  or  to go to the next or previous favorite radio station or track.

See Infotainment System in your Owner's Manual.

E. DRIVER INFORMATION CENTER CONTROLS

 Left/Right

Press the  or  button to move to a display zone. Press  to exit a menu.

 Up/Down

Rotate the thumbwheel up or down to move through the menus.

 Select

Press the  thumbwheel to open a menu, select or reset an item, or clear a message.

See Instruments and Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information.

DIC MENUS

Use the controls on the right side of the steering wheel to view the DIC menus.

Info – display trip and fuel information

Audio – browse music and change the audio source

Navigation – view active route and change prompts

Phone – view active call and scroll through contacts

Options – change display information



SELECT INFO PAGES

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the ✓ thumbwheel to enter the menu.
3. Use the thumbwheel to scroll through the list of items.
4. Press the ✓ thumbwheel to select or deselect an item to display on the Info menu.



See Instruments and Controls in your Owner's Manual.

MULTI-COLOR HEAD-UP DISPLAY



The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.

HUD HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

± Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.

ROTATION OPTION

- To adjust the angle of the HUD, use the DIC controls to view Options > Head-Up Display and select Adjust Rotation. Rotate the DIC thumbwheel up or down to adjust the angle. Select OK to save the setting.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS

Read your Owner's Manual for important information about using the infotainment system while driving.

Your XT4 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the screen or use the rotary infotainment controller and buttons on the center console to access an item. You can use simple gestures on the touch screen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit cadillac.com/support.



Applications♦:
Touch a screen
icon to access
an app

Additional Pages:
Swipe to view the
overview page or
additional pages of apps
(if available)

Applications Tray:
Shortcuts to commonly
used apps

Home Page



Audio
menu

Rotate to adjust
volume/Press to mute
audio/Press and hold
to turn system on-off

Press to seek the
previous or next
radio station or track

Navigation
menu♦ or
Phone menu

Controller:
Rotate to move on the screen/
Move knob (left, right, up, or down)
to go to the next item or group on
the screen/Press to select an item

Return to
previous
menu

Phone
menu or
Home page

See Infotainment System in your Owner's Manual.

CADILLAC USER EXPERIENCE FEATURES

MANAGING HOME PAGE ICONS

1. Press the  Home button.
2. To enter edit mode, touch and hold the icon to move.
3. Continue holding the icon and drag it to the Applications Tray or the desired position on the screen, and then release.
4. To move an icon to another page, drag the icon to the edge of the screen.

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Display the desired radio station. Audio sources are on the left side of the page.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station list.



SIRIUSXM[®] WITH 360L[♦]

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and the Cadillac Connected Access plan. See siriusxm.com and onstar.com for details.

IN-VEHICLE APPS[♦]

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-in, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

PORTABLE AUDIO DEVICES

USB-A and USB-C ports for data and charging and an accessory power outlet are located in the forward center console storage compartment.

- ▶ Connect an iPod[®], iPhone[®], MP3 player, a USB flash drive or a USB mass storage device to a USB port.
- ▶ Touch Audio, and then touch More, if necessary, to select the USB device as the audio source. Search for music on-screen or by voice commands.



There are 2 charge-only USB ports located on the rear of the center console for the convenience of rear seat passengers.

See Infotainment System in your Owner's Manual.

CADILLAC USER EXPERIENCE FEATURES

APPLE CARPLAY AND ANDROID AUTO†

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
2. There are two ways to set up device projection while parked:
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with the phone. Aftermarket USB cables may not work.
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
3. Follow the instructions on the infotainment system and the phone.
4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
 - ▶ To automatically launch Apple CarPlay or Android Auto when a Bluetooth-paired phone is connected, select the Phone icon > Phones > ⓘ Information. Turn Apple CarPlay or Android Auto on or off.
 - ▶ To exit Apple CarPlay or Android Auto, press the  Home button. To return to Apple CarPlay or Android Auto, press and hold the  Home button.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  Push to Talk button on the steering wheel.
2. The system will play a prompt.
3. After the prompt, say what you want it to do.
 - Example hands-free calling command: "Call Dave" or "Dial 555-1212."
 - Example connected music device search command: "Play artist [name]" or "Play song [name]."
 - Example radio control command: "Tune to 99.5 FM."
 - Help: Say "Help" for voice recognition assistance.



BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired phone; e.g., Siri or Google Assistant.

- ▶ To activate Bluetooth Voice Recognition, press and hold the  Push to Talk steering wheel button for a few seconds.

See Infotainment System in your Owner's Manual.

†Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The vehicle must be stopped to pair a device. For more information, visit cadillac.com/support.

PAIR A PHONE

1. To use voice recognition, press the  Push to Talk button; after the prompt, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, select the Phone icon > Phones >  Information by the phone name.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The Wireless Phone Charging system is located under the center console armrest. To check phone compatibility, visit cadillac.com/support. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The  charging symbol will display on the infotainment screen. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees, before placing it on the charging pad again.



See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Many vehicle features can be turned on/off or customized using the Settings menus on the infotainment system. The Settings menus may include System, Apps and Vehicle.

1. Touch Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch  Back to exit each menu.

See Instruments and Controls in your Owner's Manual.



4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit cadillac.com/support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

ULTRAVIEW SUNROOF

OPEN/CLOSE THE SUNSHADE

- ▶ Press the rear or front of the  Sunshade switch to express-open or express-close the sunshade.



OPEN/CLOSE THE SUNROOF

- ▶ Press the rear of the  Sunroof switch to vent the sunroof. Press the switch again to express-open the sunroof.
- ▶ Press the front of the  Sunroof switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.


UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or select Climate on the Home page of the infotainment screen.

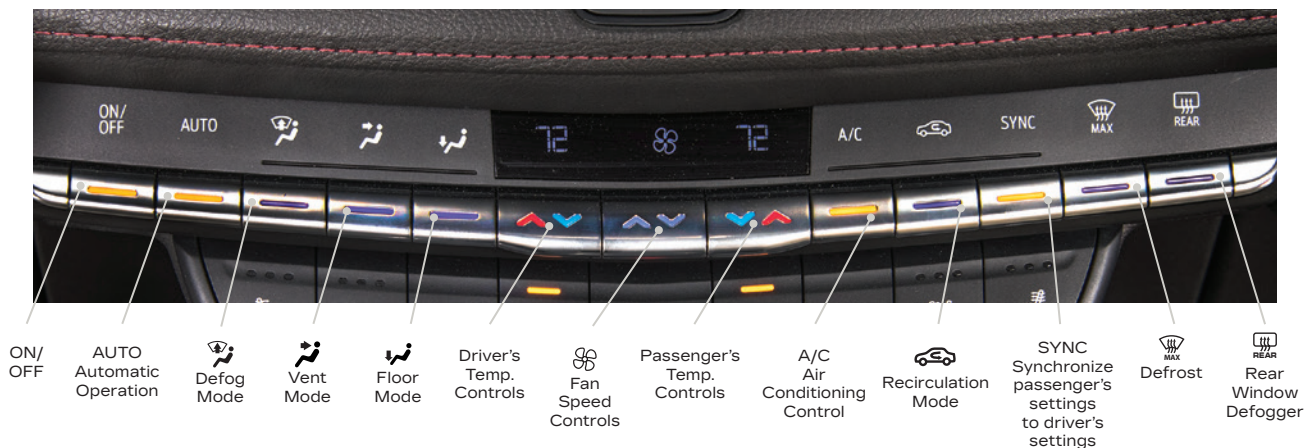

AUTOMATIC OPERATION

- ▶ Press the AUTO button. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If a function is manually adjusted, the auto indicator turns off and automatic operation for that function is disabled. Functions that have not been adjusted remain in auto mode.

SYNC TEMPERATURE SETTINGS

- ▶ Press the SYNC button to synchronize all climate zone settings to the driver's settings.

CABIN AIR IONIZER◆

The ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system. The ionizer status is shown on the climate control display on the infotainment screen.

- ▶ To turn on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

SEAT FEATURES

SET FRONT SEAT MEMORY◆ POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power steering column◆ and power outside mirrors to the desired positions.
 2. Press and release the SET button on the driver's door. A beep will sound.
 3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- To store seat and power steering column positions for more clearance when exiting the vehicle, repeat the steps using the  Exit button instead of button 1 or 2.



RECALL FRONT SEAT MEMORY◆ POSITIONS

- Press and hold button 1, 2 or  Exit until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off. For exit recall, the driver's door must be opened.

- To set the automatic recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

FRONT SEAT LUMBAR MASSAGE◆

- With the ignition On, press the  Massage button (A) on the side of the seat to select the massage setting.
- Use the Feature Select knob (B) to display seat adjustment features on the infotainment screen and adjust the massage type and intensity.



AUTOMATIC HEATED/VENTILATED FRONT SEATS◆

Anytime the vehicle is on, the heated or ventilated front seats will automatically activate based on the vehicle's interior temperature. The seat button indicators will illuminate when the heated or ventilated seats are on. You may manually turn off the heated or ventilated seats using the  Heated or  Ventilated Seat button.

- To turn the automatic heated or ventilated front seats feature on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats or Auto Cooled Seats.

FOLDING THE REAR SEATBACK

1. Press the button (A) on the side of the head restraint. It will fold rearward automatically.
2. Pull the lever (B) on top of the seatback and fold the seatback forward.



See Seats and Restraints in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the control to activate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

IntelliBeam System

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night. With the lamp control in the AUTO or  Headlamps position, press the button on the end of the lever to turn the system on or off.

A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS



Move the lever up or down to activate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes/AUTO Rainsense™ Sensitivity

Rotate the band up for more frequent wipes or down for less frequent wipes. To turn Rainsense on/off, go to Settings > Vehicle > Comfort and Convenience > Rainsense Wipers.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to spray washer fluid on the windshield.

REAR WIPER

 **OFF-INT-ON**

Rotate the end of the lever to activate the rear wiper.

 **Rear Washer Fluid**

Push the lever to spray washer fluid on the rear window and the rear camera lens, if equipped.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards.

- Audible alerts may be selected instead of seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green when a vehicle that you're following is detected ahead and is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- Press the  Forward Collision Alert button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control  Following Gap setting.

FOLLOWING DISTANCE INDICATOR  – The following distance to a vehicle detected ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT

– While driving, the system displays a  symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone area. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING

– The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- Press the  Lane Keep Assist button (A) on the center of the instrument panel to turn the system on or off.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

- To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

REAR PEDESTRIAN ALERT♦ –


During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.

- ▶ To set to Alert or Off, go to Settings > Vehicle > Collision/ Detection Systems > Rear Pedestrian Detection.

REVERSE AUTOMATIC BRAKING♦ – In detected, potentially imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

FRONT♦ AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the  Park Assist button (B) on the center of the instrument panel to turn Reverse Automatic Braking and Park Assist on or off.

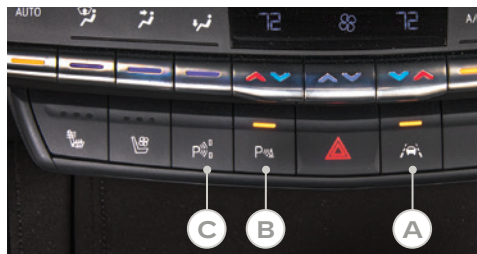

REAR CROSS TRAFFIC ALERT – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red triangle with directional arrow alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/ Detection Systems > Rear Cross Traffic Alert.

AUTOMATIC PARKING ASSIST WITH BRAKING♦ – The Automatic Parking Assist with Braking system steers the vehicle at idle speed and applies the brakes to help you park the vehicle while you follow commands and control the gear selection.

1. While driving below 18 mph, press the  Parking Assist button (C) on the center of the instrument panel. A parking-assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button. To search for a parking spot to the right or left, touch the Parking Side screen button.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

HD REAR VISION CAMERA – When the vehicle is in Reverse below 8 mph, a high-resolution view of the area directly behind the vehicle displays on the infotainment screen.

HD SURROUND VISION – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph. Camera view buttons are at the bottom of the screen.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR – The Rear Camera Mirror provides a wider, less obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment

Press and release either button to adjust the selected setting.



TRACTION CONTROL

The traction control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  Traction Control button on the center console to turn traction control off or on again. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the  Parking Brake switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal and then press the  switch.



Note: The parking brake will automatically release if the vehicle is running, placed into gear, and an attempt is made to drive away.

See Driving and Operating in your Owner's Manual.

See Keys, Doors and Windows in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  Power Liftgate button on the Remote Keyless Entry (RKE) transmitter (key fob) twice.
- ▶ Press the  Power Liftgate knob (A) on the driver's door.
- ▶ Press the touchpad under the liftgate handle to open the liftgate.
- ▶ Press the  button (B) next to the pull handle to close the liftgate.

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob (A) to the 3/4 mode position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button (B) next to the pull handle for 3 seconds. The turn signals flash and a beep sounds when the setting is saved.
4. With the knob in the 3/4 mode, the liftgate will open to the saved position.




POWER LIFTGATE

HANDS-FREE OPERATION♦

- ▶ To open or close the liftgate hands-free, kick your foot straight under the left corner of the rear bumper (A), indicated by the Cadillac logo projected on the ground (B).

The projected logo is shown for 1 minute, depending on operating conditions. The RKE transmitter must be within 3 feet of the liftgate for hands-free operation.

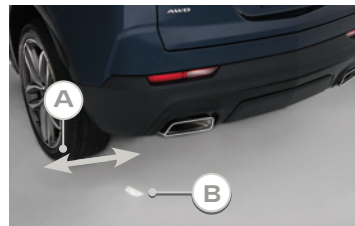

See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. With the vehicle On, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump starting, lock-out service, fuel delivery and flat-tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, press the blue OnStar button or red Emergency button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CADILLAC ACCOUNT

Create an account at cadillac.com/owners to access personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service account required); and more.

We recommend always using ACDelco or GM Genuine Parts.

84807762 A

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2022 General Motors LLC. All Rights Reserved.



84807762