

Features & Functions Guide

KVA

Carnival

WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area — with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader App. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos

QUICK TIPS

If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal

After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODE

Carnival Walkaround Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key with Remote Start	52
2	Fuel Filler Door Release	58
3	Power Adjustable Driver's Seat*.	46
4	Front Seat Headrest Adjustment	45
5	2nd-Row / 3rd-Row Seats	47-50
6	Windshield Wipers & Washers.	29
7	Smart Cruise Control (SCC)* / Navigation-based Smart Cruise Control (NSCC)* / Cruise Control (CC)*.	18-19
8	Normal Maintenance Schedule	Back Cover
9	User Settings* - Instrument Cluster.	08
10	Vehicle Settings* - Infotainment System	09
11	Bluetooth® Wireless Technology	30-31
12	Kia Connect Activation* / Kia Connect Assistance*.	34
13	Standard Audio System* / Kia Connect with Navigation*	33, 36
14	Kia Access App Download	35
15	Kia Access App Features Guide	35
16	Android Auto™ / Apple CarPlay® Setup.	32

www.kia.com

Consumer Affairs - Roadside Assistance¹¹¹:
1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete
operating information and safety warnings.

QR CODE

Your New Kia Important
Care Tips Video



Vehicle Cameras
Important Tips Video



Navigation System
Important Tips Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

*Driving while distracted can
result in a loss of vehicle
control that may lead to an
accident, severe personal
injury and death. The driver's
primary responsibility is in
the safe and legal operation
of a vehicle, and handheld
devices, other equipment or
vehicle systems which take
the driver's eyes, attention
and focus away from the safe
operation of a vehicle or that
are not permissible by law
should never be used during
operation of the vehicle.*

VIDEOS & QR CODES Inside Cover

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy / Tips for Economical Driving... ..	05
Drive Mode Integrated Control System	06
ECO Mode (Active ECO)	06

VEHICLE SETTINGS

Instrument Cluster LCD Modes	07
Trip Modes / Trip Computer	07
User Settings* - Instrument Cluster	08
Vehicle Settings* - Infotainment System.....	09
Service Interval Mode	10
Vehicle Auto Shut-Off*	10

ADVANCED DRIVER ASSISTANCE SYSTEM (ADAS)

Forward Collision-Avoidance Assist (FCA)	11
Lane Keeping Assist (LKA)	12
Blind-spot Collision-Avoidance Assist (BCA) ..	13
Blind-spot View Monitor (BVM).....	14
Safe Exit Assist (SEA).....	14
Lane Following Assist (LFA)	15
Driver Attention Warning (DAW).....	16
Leading Vehicle Departure Alert (LVDA)*.....	17
Smart Cruise Control (SCC)*	18
Navigation-based Smart Cruise Control (NSCC)*.	19
Cruise Control (CC)*	19
Intelligent Speed Limit Assist (ISLA)*.....	20
Highway Driving Assist (HDA)*	21
Rear View Monitor (RVM)	22
Surround View Monitor (SVM)*	22
Rear Cross-traffic Collision-Avoidance Assist (RCCA).....	23
Forward*/Reverse Parking Distance Warning (PDW).....	24

DRIVER'S PANEL

Instrument Cluster Control	25
Electronic Stability Control (ESC).....	25
Hill-start Assist Control (HAC).....	25
Power Windows, Window Lock & Central Door Lock	26
Power Folding Outside Mirrors*	26
Heated Outside Mirrors	26
Automatic Door Lock/Unlock	26
Manual Folding Mirrors*	26
Reverse Parking Aid Function*	27
Engine Start/Stop Button	27

STEERING WHEEL CONTROLS

Tilt/Telescoping Steering Wheel.....	28
Headlights & High Beams.....	28
High Beam Assist (HBA)	28
Turn Signals & Fog Lights*	29
Windshield Wipers & Washers.....	29
Lifting Wipers (Wiper Service Mode).....	29
Rear Wiper & Washer.....	29

INFOTAINMENT SYSTEM

Bluetooth® Wireless Technology.....	30
Audio Controls.....	31
Android Auto® / Apple CarPlay® Setup.....	32
Standard Audio System - Value*.....	33
Kia Connect Activation* / Kia Connect Assistance*	34
Kia Access App Download	35
Kia Access App Features Guide	35
Kia Connect with Navigation*	36

CENTER PANEL

Digital Clock - Infotainment System	37
USB Charger Ports, Multimedia USB Port, Power Outlets & AC Inverter	37
Automatic Climate Control*	38
Manual Climate Control*.....	40
Wireless Smartphone Charging System*	41
Electronic Parking Brake (EPB) / Auto Hold ...	42

CENTER PANEL (CONTINUED)

Automatic Gear Shift / Sportmatic® Shifting* ..	43
Heated Steering Wheel*	44
Seat Warmers / Ventilated Seats*.....	44

SEATING

Front Seat Headrest Adjustment	45
Driver Position Memory System*	45
Power Adjustable Driver's Seat*	46
Manual Adjustable Driver's Seat*.....	46
2nd-Row VIP Seats with Relaxation Mode*	47
Unfastening Center Seat Belt	47
2nd-Row Removable Seats*.....	48
2nd-Row Tumble (Center) Seat*	49
3rd-Row Seat - Access, Folding and Stowing*..	50

OTHER KEY FEATURES

Rear Occupant Alert (ROA) with Ultrasonic Sensors.....	51
Smart Key with Remote Start	52
Lock/Unlock All Doors.....	52
Power Liftgate*	53
Smart Liftgate with Auto Open & Close*.....	54
Power Sliding Doors.....	55
Smart Sliding Door with Auto Open*.....	55
Passenger View* / Passenger Talk*	55
Map/Room Lamps / Sunvisor	56
Sunroof Operation	57
Hood Release Lever and Latch	58
Fuel Filler Door Release.....	58
Fuel Cap/Malfunction Indicator	58
HomeLink® w/Auto-Dimming Rearview Mirror*	59

 
SAFETY FEATURES

Seat Belts	60
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	60
Child-Protector Rear Door Lock	60

LEGAL DISCLAIMERS Inside Back Cover

MAINTENANCE SCHEDULE .. Back Cover

Instrument Cluster Overview

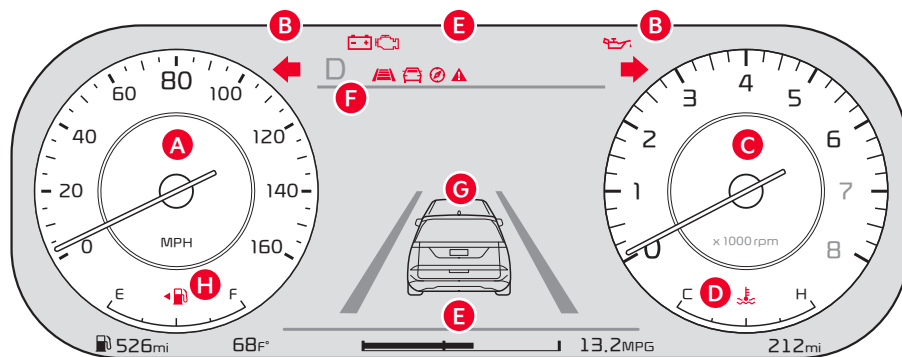

(Type A Cluster)

- A** Speedometer
- B** Turn Signal Indicators
- C** Tachometer
- D** Engine Temperature Gauge
- E** Indicators & Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer / Trip Computer / Tripmeter
- H** Fuel Gauge

↩️ Arrow direction indicates the side of the vehicle the fuel door is located on

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

 
QR CODE

Instrument Cluster's LCD Display Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Indicators & Warning Lights

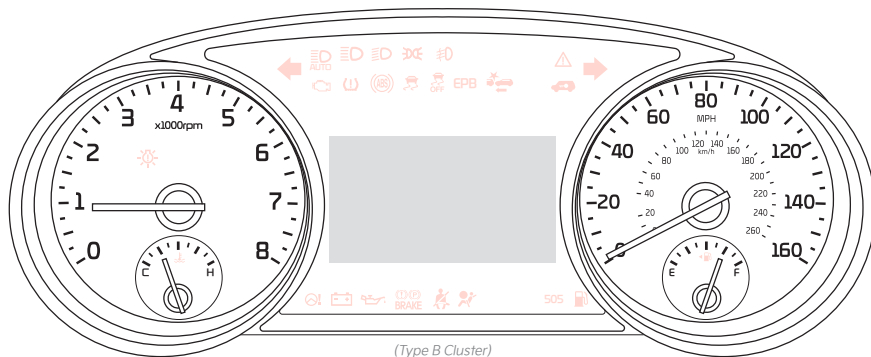

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

ECO ECO Mode Indicator Light*

Malfunction Indicator Lamp (MIL)

Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator

Engine Oil Pressure Warning Light

EPB Electric Parking Brake (EPB) Warning Light*

Master Warning Light

Parking Brake & Brake Fluid Warning Light

Front Fog Light Indicator*

Light ON Indicator Light

Washer Fluid Warning Light*

High Beam Indicator

AUTO HOLD AUTO HOLD Indicator*

High Beam Assist Indicator

Seat Belt Warning Light

Airbag Warning Light

Charging System Warning Light

Electronic Power Steering (EPS) Warning Light*

Immobilizer Indicator Light*

Anti-Lock Braking System (ABS) Warning Light

Electronic Brake Force Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)

KEY OUT KEY OUT Indicator*

Lane Safety Indicator

Forward Safety Light

Electronic Stability Control (ESC) Indicator Light

Electronic Stability Control (ESC) OFF Indicator Light

Low Fuel Level Warning Light

CRUISE Cruise Indicator Light*

Door Ajar Warning Light*

Liftgate Open Warning Light*

Sunroof Open Warning Light*

COMFORT COMFORT Mode Indicator Light*

Icy Road Warning Indicator Light*

LED Headlamp Warning Indicator*

Tire Pressure Monitoring System (TPMS)^{†20}



The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

 
The indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

Inflate tire to specifications using an accurate digital tire pressure gauge to turn off the Low Tire Pressure Light . See the front driver's door jamb for PSI specification.

The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

Refer to section 6 in the Owner's Manual for more information.

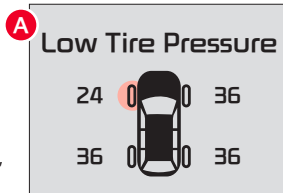

This illustration is for demonstration purposes only. Actual image on vehicle may vary.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude.

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

QR CODES

Tire Pressure Monitoring System Video



Tips for Economical Driving Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

 
- Use the climate control system less often. Use the Driver Only* setting as much as possible
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

Refer to section 4 in the Owner's Manual for more information or snap the QR Code above to view a video.

Drive Mode Integrated Control System

The Drive Mode may be selected depending on the driver's preferences and road conditions.

To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The Instrument Cluster will display ECO, SPORT or SMART when selected. When in Normal mode, it will not display in the Instrument Cluster.

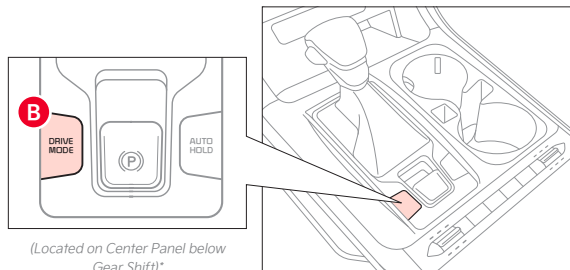

REMINDERS:

- NORMAL mode is the default mode when ignition is cycled, except when in ECO mode, Drive Mode will return to ECO mode
- The system is turned ON and in NORMAL mode when the ignition is in the ON position
- When ECO mode is selected, the indicator will display and the system remains on, even when the ignition is cycled
- Steering effort may be slightly increased in SPORT or SMART mode

Your vehicle's buttons may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.

ECO Mode (Active ECO)*

The Active ECO system is designed to help improve fuel economy by controlling several vehicle components. When activated, it can help optimize drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **B** and scroll through the options until in the ECO mode. The green ECO indicator light **ECO** in the instrument cluster will illuminate, indicating that Active ECO is operating.

The Active ECO system will remain on even when the ignition is cycled.

To turn Active ECO OFF, press the DRIVE MODE button **B** again and change to another mode.

QUICK TIPS

- To help improve your fuel economy:
 - Drive at a moderate speed, accelerating smoothly and at a moderate rate
 - Keep tires inflated to the recommended pressure
 - Be sure the wheels are properly aligned

Image is for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.

QR CODE

Drive Mode Integrated Control System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Instrument Cluster LCD Modes

Press the Mode button **A** to cycle through different Instrument Cluster LCD Modes:



Trip Computer Mode: Displays driving information for drive info, accumulated info, digital speedometer, etc.



Turn-by-Turn Mode*: Displays the state of info on route guidance and destination



Driving Assist*: Displays info on Blind-spot Collision-Avoidance Assist, Forward Collision Avoidance-Assist, Lane Safety, Smart Cruise Control, Highway Driving Assist*



User Settings*: Change settings for the Driver Assistance, cluster, lights, door, convenience, units, language & reset



 
Information: Displays digital speedometer, TPMS information



Master Warning Mode: Displays warning messages related to the vehicle when one or more systems is not operating normally

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Refer to section 4 in the Owner's Manual for more information.

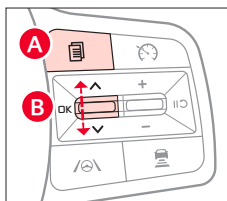

(Type A; Buttons located on Steering Wheel)

Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

To cycle through the Instrument Cluster LCD modes, press the Mode button **A**.

Trip Computer:

- To select and enter Trip Computer mode , press the Select/Reset (OK) button **B** up or down and then press again to enter
- To cycle through and select the different screens (Fuel Economy, Accumulated Info, Drive Info, Digital Speedometer), press the Select/Reset (OK) button **B** up or down and then press again to enter
- When displaying Tripmeter screens, press and hold the Select/Reset (OK) button **B** to reset the Tripmeter to zero

REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Your vehicle's steering wheel buttons may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

QR CODE

 
Instrument Cluster's LCD Display Video



Steering Wheel Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

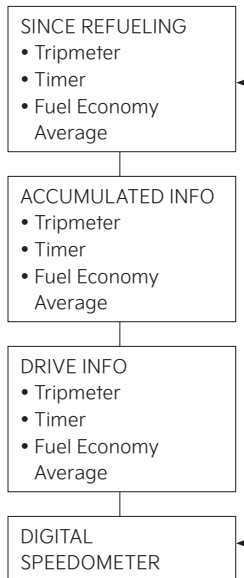

User Settings* - Instrument Cluster

To enter the User Settings mode in the Instrument Cluster, press the Mode button **A** when the vehicle is at a standstill and with the Engine Start/Stop button in the ON position and select User Settings  by pressing the OK button **B**.

You can navigate the selections on the display by pressing the OK button **B** up or down, and then selecting the item by pressing the OK button **B** again.

User Settings Modes:

Driver Assistance*

- Driving Convenience
- Speed Limit: Speed Limit Offset/ Speed Limit Assist/Speed Limit Warning/Off
- Warning Timing: Standard/Late
- Warning Volume: High/Medium/Low
- Driver Attention Warning: Leading Vehicle Departure Alert/Inattentive Driving
- Forward Safety: Active Assist/ Warning Only/Off
- Lane Safety: Assist/Warning Only/Off
- Blind-spot Safety: Blind-spot View, Safe Exit Assist, Safe Exit Warning, Active Assist/Warning Only/Off
- Parking Safety: Surround View Monitor Auto On, Parking Distance Warning Auto On, Rear Cross-traffic Safety, Rear Active Assist/Rear Warning Only/Off

Cluster

 
- Wipers/Lights Display
- Traffic Signs
- Ice Road Warning
- Cluster Voice Guidance System
- Welcome Sound
- Wallpaper: A/B/C

Lights

- Illumination
- One-Touch Turn Signal: 3/5/7 flashes/off
- Headlight Delay
- High Beam Assist

Door

- Automatically Lock
- Automatically Unlock
- 2-Press Unlock
- Horn Feedback
- Power Liftgate Opening Speed
- Power Liftgate Opening Height
- Liftgate Auto Close
- Smart Liftgate
- Smart Sliding Door
- Remote Power Doors & Liftgate*

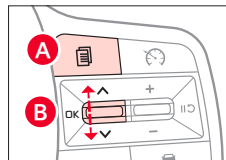

(Buttons located on right side of steering wheel)

Convenience

- Seat Easy Access*
- Rear Occupant Alert
- Welcome Mirror/Light
- Vehicle Auto Shut-off*
- Wireless Charging System*
- Auto Rear Wiper (in R)
- Service Interval
- Oil Change Reminder

Units

- Speedometer Unit*
- Fuel Economy Unit
- Temperature Unit*
- Tire Pressure Unit

Language

- To select the language

Reset

- Reset to factory defaults (except language and service interval)

QR CODES

Vehicle & User Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Some settings in certain models may be available through the audio head unit screen. See section 4 in the Owner's Manual or the Car Infotainment System Quick Reference Guide.

Vehicle Settings* - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System, press the **SETUP** key on the Infotainment System or the **SETUP** icon onscreen. Then press **VEHICLE** , which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.

Vehicle Settings:

Driver Assistance

- Driving Convenience
- Speed Limit
- Warning Timing
- Warning Volume
- Driver Attention Warning
- Forward Safety
- Lane Safety
- Blind-spot Safety
- Parking Safety

Drive Mode

- Drive Mode Alert*

Climate*

- Recirculate Air*
- Automatic Ventilation*
- Defog/Defrost Options*
- Climate Features*

Lights*

- Ambient Light*
- One Touch Turn Signal*
- Headlight Display*,
- High Beam Assist*

Door*

- Auto Lock*
- Auto Unlock*
- Walk-Away Lock*
- Two-Press Unlock*
- Smart Trunk*

Cluster*

- Service Interval*
- Energy Consumption Reset*
- Content Selection*
- Cluster Voice Guidance Volume*
- Welcome Sound*
- Theme Selection*
- Oil Change Reminder

Convenience*:

- Rear Occupant Alert*
- Welcome Mirror Light*
- Wireless Charging System*
- Vehicle Auto Shut-Off*

Seat*:

- Seat Position Change Alert*
- Smart Posture Care*
- Heated/Ventilated Features*
- Seat Easy Access*
- Rear Seat Heating Control*

Reset

- Reset Vehicle Settings to Factory Defaults

QR CODES

Vehicle & User Settings Video



Ambient, Mood & Theme Lighting Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Some settings in certain models may be available through User Settings in the Instrument Cluster LCD. See section 4 in the Owner's Manual or the Car Infotainment System Quick Reference Guide.

Service Interval Mode

To enter Service Interval Mode, press the Mode button **A**, and scroll to User Settings  on the Instrument Cluster by pressing the OK button **B** up or down. Then press the OK button **B** again to enter. Then scroll to Service Interval. System will display the number of miles remaining until next service is due, as well as the type of service due. When service is required, the following will be displayed: Service Required.

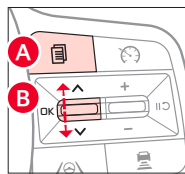

(Buttons located on right side of steering wheel)

 
 
 
To reset the Service Interval Mode system, press and hold the Select/Reset button **B** for more than one second.

Press the Mode button **A** to go back to the previous mode/item. To turn **Service In** OFF, go to User Settings.

Service Interval Setting

To set the service interval in User Settings mode:

- Press the Mode button **A** to cycle to User Settings and press the Select/Reset button **B** to enter
- If Service Interval is OFF, press the Select/Reset button **B** to turn ON
- Press the Select/Reset button **B** up/down to select/change the interval setting
- Press the Select/Reset button **B** again to select the interval

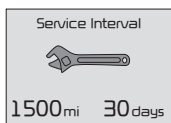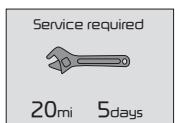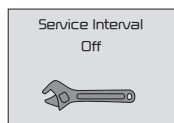

For illustrative purposes only. Your vehicle's information may differ.

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder in User Settings*. Go to Convenience, then Oil Change Reminder, then press and hold the OK button **B** for more than 1 second.

Refer to section 4 in the Owner's Manual for more information.

Vehicle Auto Shut-Off*

The Vehicle Auto Shut-Off, when certain conditions are met, will turn the vehicle off automatically after a pre-set time (30 or 60 minutes) in the Instrument Cluster User Settings .

A warning on the Instrument Cluster LCD will appear stating the "Vehicle will be turned off automatically in..." and a chime will sound when the timer starts **C**.

QUICK TIP

The timer that appears on the Instrument Cluster's LCD can be reset using the OK button on the right side of the Steering Wheel.

When the timer ends, a continuous beep sounds for one minute before the vehicle shuts off.

Auto Shut-Off Settings: The system is on by default and the timer is pre-set to 30 minutes. To change the pre-set time settings, go to User Settings  on the Instrument Cluster LCD by pressing the Mode button  **A** on right side of the Steering Wheel. Select Convenience, then Vehicle Auto Shut-Off. Move through the selections by pressing the OK button **B** on the Steering Wheel. Select 30 minutes, 60 minutes or Off to disable **D**.

REMINDERS:

- When the vehicle is turned OFF then ON again, the system defaults to on (30-minute pre-set time)
- The system will activate when the vehicle is on and these conditions are met:
 - The vehicle is in (P) Park
 - The driver's seat belt is unfastened
 - The driver's door is opened

Refer to section 5 in the Owner's Manual for more information.

QR CODES

Vehicle Auto Shut-off Video



Kia Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Vehicle will be turned off automatically in

C 59:01

 : Reset

Vehicle Auto-Shut Off

D  Back
60 min. ☒
30 min. ☐
Off ☐

Forward Collision-Avoidance Assist (FCA)^{†3}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian or cyclist in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, temporarily apply emergency braking. If FCA detects a potential collision, FCA emits an audible warning and visual alert on the instrument cluster **A**.

If the system detects that the collision risk has increased, Forward Collision-Avoidance Assist (FCA) automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

With the left turn signal on, if it detects a potential collision, Junction Turning **B** may help to avoid the collision with an oncoming vehicle in an adjacent lane when turning left by applying emergency braking.

 
 
 
FCA Settings:

- FCA is ON by default in most Kia models. FCA can be enabled or disabled in the User Settings  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Make sure the vehicle is at a standstill, gear shift in Park and the Engine Start/Stop button in the on position
- Instrument Cluster User Settings***  - Press the Mode button  **C** on the Steering Wheel. Press the OK button **D** up/down and select User Settings then Driver Assistance. Select Forward Safety and then Active Assist, Warning Only or Off
- Infotainment System Vehicle Settings*** - Press the **SETUP** key on the Infotainment System. Press the onscreen **VEHICLE**  button then Driver Assistance. Select Forward Safety and then Active Assist, Warning Only or Off
- FCA Modes** - Select one of the following:
 - Active Assist:** Vehicle will provide a warning (audible & visual) and apply the brakes if needed
 - Warning Only:** Vehicle will provide a warning only (audible & visual)
 - Off:** System is off, no warnings or braking provided

FCA will become active when the:

- Ignition is on or the Engine Start/Stop button* is ON
- Vehicle is traveling faster than 6 mph
- Electronic Stability Control (ESC) is ON

When engaged, Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.

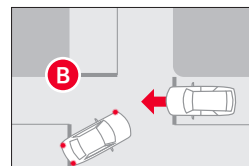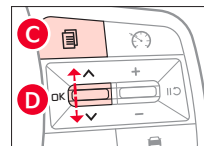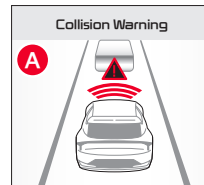

QR CODE

Forward Collision-Avoidance Assist (FCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Actual User Settings steps may vary by model. For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.

QUICK TIP

FCA Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the audio head unit. Go to Driver Assistance, then Warning Volume.

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the Forward Safety warning indicator is on in the Instrument Cluster 

Lane Keeping Assist (LKA)^{†3}

Lane Keeping Assist is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to help keep the vehicle in the lane. When turned on, the instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green.

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA may provide steering, trying to prevent the vehicle from moving outside its lane.

LKA Settings:

- Press and hold the Lane Safety button  **A** to turn LKA on or off, when it is first enabled in the User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings*  in the Instrument Cluster - Press the Mode button  **B** on the Steering Wheel to toggle to User Settings . Press the OK button  up/down to toggle to Driver Assistance and then Lane Safety
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance and then Lane Safety
- LKA Modes - Select one of the following:
 - **Assist:** LKA will automatically assist the driver's steering when lane departure is detected to help prevent the vehicle from moving out of its lane
 - **Warning Only:** LKA will warn the driver with an audible warning when lane departure is detected. The driver must steer the vehicle
 - **Off:** LKA will turn off. The  **D** indicator light will turn off on the cluster

All systems will operate under the following conditions:

 
- The vehicle speed exceeds approximately 40 mph
- LKA recognizes one side of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers

REMINDERS:

- LKA may not detect lane markers in certain environment conditions
- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state



(Located on Driver's Panel to the left of the steering wheel)

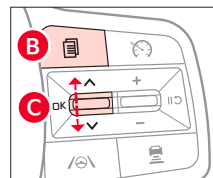

(Button located on right side of steering wheel)

QUICK TIP

The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the Infotainment System.

QR CODE

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Actual User Settings steps may vary by model. Refer to section 5 in the Owner's Manual for more information.



When the front-view camera does **not** detect the lane traveling in, the lanes are not illuminated gray



When the front-view camera detects the lane traveling in, both lanes are illuminated gray



When the front-view camera detects the vehicle moving outside of the lane it is traveling in, a vehicle crossing lane indicator will blink, either on the left or right lane (as shown in both images above)

Blind-spot Collision-Avoidance Assist (BCA)^{†3}

BCA uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes. Initially, BCA provides Blind-spot Collision Warning (BCW) when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, Blind-spot Collision-Avoidance Assist (BCA) automatically applies the opposite side front brake to try and mitigate a potential collision.

 
 
 
Vehicle detection warning: When another vehicle is detected within collision warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

Collision-Avoidance Assist: When collision warning has already occurred, and the collision risk has increased, braking is applied to the opposite side front wheel and a visual warning occurs.

BCA Settings:

- BCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is turned on or the Engine Start/Stop button* in the ON position
- To access User settings*  in the Instrument Cluster - Press the Mode button  **C** on the Steering Wheel to toggle to User Settings . Press the OK button **D** up/down to toggle to Driver Assistance, then Blind-spot Safety and select a BCA mode
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Blind-spot Safety and select a BCA mode
- **BCA Modes** - Select one of the following:
 - **Active Assist:** BCA will provide a warning (audible & visual) and braking assist depending on the collision risk levels
 - **Warning Only:** Vehicle will provide a warning only (audible & visual)
 - **Off:** System is off, no warnings provided
- **BCA Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - **Normal:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - **Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

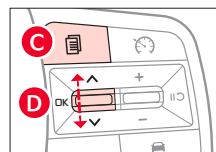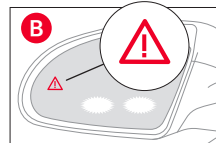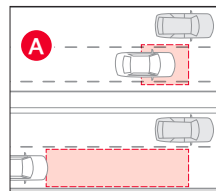

(Buttons located on right side of steering wheel)

QUICK TIPS

- Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the audio head unit. Go to Driver Assistance, then Warning Volume
- BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - A Collision Warning can be issued when the vehicle speed is above approximately 12 mph
 - A Collision-Avoidance Assist can be issued when the vehicle speed is above approximately 40 mph

QR CODE

Blind-spot Collision-Avoidance Assist (BCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 5 in the Owner's Manual for more information.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

REMINDERS:

 
- BCA may sound when making a left turn. Maintain a proper distance from oncoming vehicles
- BCA will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When BCA is ON and the ignition is cycled, BCA returns to its previous state

Blind-spot View Monitor (BVM)^{†3}


When the system is enabled and activated by operating a turn signal, BVM is designed to display the rear and side of the vehicle blind spot areas for the direction indicated, in the Instrument Cluster LCD **A**.

BVM Settings:

- BCA can be turned on/off by going to the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Blind-spot Safety and select Blind-spot View

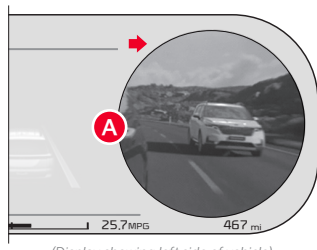

(Display showing left side of vehicle)

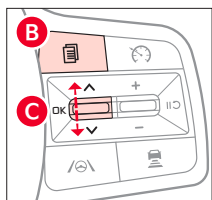 

(Buttons located on right side of the steering wheel)

See section 5 in the Owner's Manual for more information.

 
Safe Exit Assist (SEA)^{†3}

Safe Exit Assist (SEA) can help prevent passengers from opening their door by sounding an audible warning when a vehicle is detected, approaching from behind, after your vehicle has stopped.


SEA keeps the sliding doors closed. When pressing the Power Sliding Door lock button **D**, SEA warns the driver of the risk of collision with a vehicle approaching the blind spot area.

SEA Settings:

- SEA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* ⚙️ in the Instrument Cluster - Press the Mode button **B** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **C** up/down to toggle to Driver Assistance, then Blind-spot Safety and select Safe Exit Assist
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Blind-spot Safety and select Safe Exit Assist

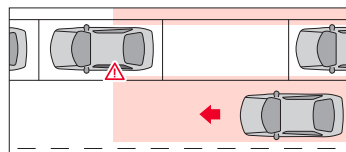

 When engaged, BCA and SEA are supplemental systems. Do not solely rely on the systems and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation. See section 5 in the Owner's Manual for more information.



(Buttons located on panel to the left of the steering wheel)

QR CODES

Blind-spot View Monitor (BVM) Video



Safe Exit Assist (SEA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Lane Following Assist (LFA)^{†3}

Lane Following Assist is designed to help the vehicle stays centered in its driving lane by monitoring the detected lane markings ahead and adjusting the steering. When driving, LFA can be switched ON and OFF by pressing the Lane Driving Assist button **A**. When turned ON, the instrument cluster indicator will initially illuminate white . It will remain white when the system does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon  will illuminate green **B**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. And if hands on the Steering Wheel is not detected continually, LFA will be turned off with additional emergency warning.

 
LFA will operate only when these conditions are met:

- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph


LFA Settings:

- Press the Lane Driving Assist button **A** on the Steering Wheel to turn LFA ON or OFF
- **Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - **Normal:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - **Later:** Reduces the amount of distance between the vehicles before the initial warning occurs

REMINDER: LFA is not a substitute for safe and proper driving. Always drive safely and use caution.

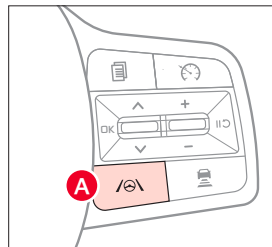

 (Button located on right side of steering wheel)

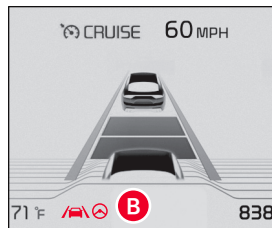

QR CODE

Lane Following Assist (LFA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions.

See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

 
 
Driver Attention Warning (DAW)^{†4}

Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving.

If DAW is activated, the DAW information will appear on the Instrument Cluster LCD when you select the Driving Assist menu in User Settings . A message, "Consider taking a break," appears on the LCD and a warning sounds to suggest the driver take a break when the driver's attention level becomes low .

DAW Settings:

- DAW can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* in the Instrument Cluster - Press the Mode button on the Steering Wheel to toggle to User Settings . Press the OK up/down to toggle to Driver Assistance, then Driver Attention Warning and select Inattentive Driving
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Inattentive Driving
- **DAW Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - **Normal:** DAW warns the driver of his/her inattentive driving practices
 - **Late:** DAW warns the driver of his/her inattentive driving practices later than Normal mode

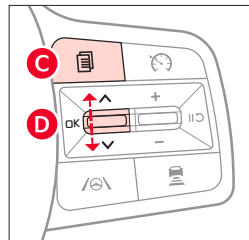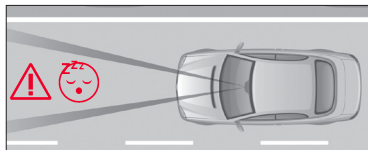

REMINDERS:

- The setup of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display "Consider taking a break" message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes

QR CODE

Driver Attention Warning (DAW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

See section 5 in the Owner's Manual for more information.

Leading Vehicle Departure Alert (LVDA)*†‡

 
 
Leading Vehicle Departure Alert is designed to inform the driver when the vehicle in front starts moving or departs from a stop. When LVDA is on, your vehicle is stopped, and it detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster LCD.

LVDA Settings:

- LVDA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* ⚙️ in the Instrument Cluster - Press the Mode button **B** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **C** up/down to toggle to Driver Assistance, then Driver Attention Warning and select Leading Vehicle Departure Alert
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Leading Vehicle Departure Alert
- **LVDA Warning Timing** - When in Driver Assistance menu, select Warning Timing and select one of the following:
 - **Normal**: This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
 - **Late**: Reduces the amount of distance between the vehicles before the initial warning occurs

REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

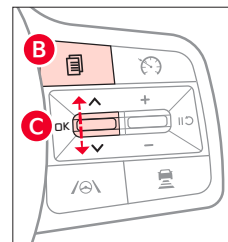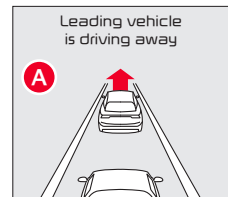

QR CODE

Leading Vehicle Departure Alert (LVDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, LVDA is not a substitute for safe and proper driving. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information

Smart Cruise Control (SCC)*†3

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal.

With SCC on and activated, and the vehicle distance set, when SCC detects a vehicle slowing or stopping, it can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than three seconds, press the accelerator pedal or press the **+/-** or **II** buttons on the Steering Wheel to start moving the vehicle.

Smart Cruise Control will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

 
To set/adjust the set speed:

- Push the Driving Assist button* **A** to turn SCC on and set the current speed (One-Touch Set). The SCC indicator will illuminate on the instrument cluster. SCC may decrease the speed to maintain the distance with the vehicle in front
- Press the **+/-** button **B** up/down to increase/decrease the set speed


To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. The image on the LCD screen **D** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes.

To pause/resume SCC operation: Depress the brake pedal or press the Pause/Resume **II** button **B**. The SCC indicator on the instrument cluster will change.


To turn SCC off: Press the Driving Assist button* **A**. The SCC indicator on the instrument cluster will turn OFF.

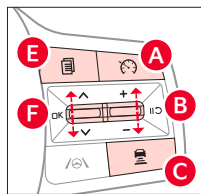

 (Type B Steering Wheel shown; buttons located on right side of Steering Wheel)



 The distance settings are approximations and may vary depending on the vehicle speed at the time. See Owner's Manual for more information.

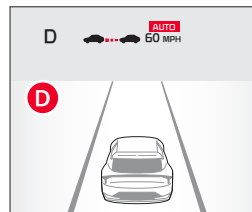

Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Smart Cruise Control with Overtaking Acceleration Assist Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn SCC on, the set speed will be set to 20 mph.

When engaged, SCC is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See section 5 in the Owner's Manual for more information.

REMINDERS:

- SCC will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starting
- When following a vehicle, SCC will automatically adjust your vehicle speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep SCC off when not in use to avoid setting a speed that the driver is not aware of
- It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

Navigation-based Smart Cruise Control (NSCC)*†‡

Navigation-based Smart Cruise Control can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system.

To turn on NSCC, go to User Settings in the instrument cluster or the Vehicle Settings* in the infotainment system, by selecting Driving Convenience,* Highway Auto Speed Change. When SCC is on and operating, the vehicle is driving on limited/controlled access highways, and NSCC is turned on, NSCC is enabled and the AUTO icon **A** will illuminate white on the instrument cluster.

 
When NSCC detects a curve ahead, activates, and reduces the vehicle speed, the AUTO icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

Highway Set Speed Auto Change: If the speed is set to the current speed limit on the highway during NSCC operation, the set speed is changed automatically whenever the speed limit changes.

REMINDER: NSCC is only available on controlled access roads and highways.

See section 5 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide.

NSCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

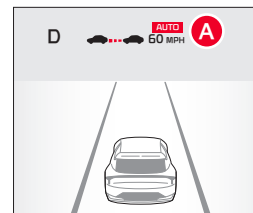

(Display on LCD screen)

QR CODE

 
Navigation-based Smart Cruise Control (NSCC) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Cruise Control (CC)†‡

- B** Driving Assist button: Press to turn the Cruise Control On/Off. The indicator will illuminate on the instrument cluster and the set speed will automatically activate at the vehicle's current speed
- C** **+** button: Press up to increase Set speed
- button: Press down to set or decrease Set Speed
- II** **Pause/Resume button:** Press to pause Cruise Control. Press again to resume Cruise Control

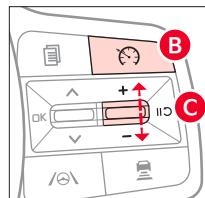

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 5 in the Owner's Manual for more information.

QUICK TIPS

- Cruise Control is designed to function at above 20 mph
- Cruise Control will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not automatically apply brakes.

Intelligent Speed Limit Assist (ISLA)*†3

Intelligent Speed Limit Assist monitors the vehicle speed and warns the driver when the vehicle surpasses the posted speed limit. ISLA is designed to use the information from the posted speed limit and the navigation system to also inform the driver to change the set speed for the Manual Speed, Limit Assist or Smart Cruise Control.

When ISLA is on and active, the system will display an alert on the Instrument Cluster LCD **A** of the detected speed limit. If the vehicle's current speed exceeds the detected speed limit, a warning will sound and a warning indicator and the vehicle's current speed will blink on the LCD until the vehicle speed returns to or is below the posted speed limit.

ISLA User Settings:

To turn ISLA on, press the Mode button **B** on the Steering Wheel and go to User Settings **C** on the Instrument Cluster LCD. Press the Move (OK) button **C** up/down and select Driver Assistance by pressing the OK button **C**, then Intelligent Speed Limit Assist.

 
 
Select one of the three modes:

- Speed Limit Assist: To help the driver stay within the posted speed limit, ISLA informs the driver of the detected speed limit, displays a message to change the set speed of the SCC
- Speed Limit Warning: Informs the driver of the detected speed limit and warns the driver when the vehicle is traveling faster than the posted speed limit
- Off: ISLA is disabled

QUICK TIP

You can set a speed limit offset to the posted speed limit by going to User Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the detected speed limit, when ISLA is on

REMINDER: Additional information may be displayed if additional road sign information is detected.

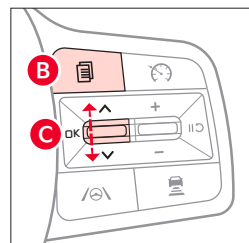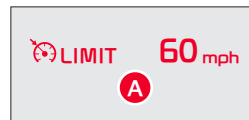

QR CODES

Intelligent & Manual Speed Limit Assist Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, ISLA is not a substitute for safe and proper driving. Always drive safely and use caution.

Refer to section 5 in the Owner's Manual for more information

Highway Driving Assist (HDA)*†‡

Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways.

When HDA is activated and the conditions are met, the Instrument Cluster indicator **A** will illuminate green. If the conditions are not met, HDA will be in standby mode and the indicator light **A** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **A**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands on the Steering Wheel is not detected, HDA will cancel.

HDA settings:


- HDA can be turned on/off by going to the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Convenience. Select Highway Driving Assist to activate

REMINDERS:

- Limited access roads information may vary. See owner's manual for more information
- When the ignition is cycled, the system returns to its previous state, on or off
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 5 in the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.

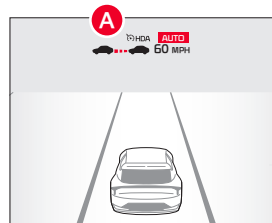 

QR CODE

Highway Driving Assist (HDA) Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Rear View Monitor (RVM)^{†3}

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio control head unit screens while the vehicle is in Reverse.

Rear View Monitor activates when the:

- Ignition or the Engine Start/Stop button* is in the ON position (Green Light)
- Gear Shift Lever is in the **R** (Reverse) position

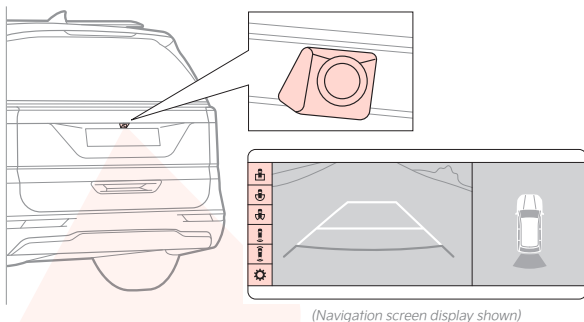

REMINDER: The screen image on the right is for illustration purposes only. The actual image or graphics may differ in your vehicle.

The Rear View Monitor is not a substitute for proper and safe backing-up procedures. The Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

 
 
Refer to section 4 in the Owner's Manual for more information.

Surround View Monitor (SVM)*

Surround View Monitor (SVM) is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the audio head unit screen.

- Press the Parking/View button **A** to turn on Surround View Monitor. Press the button again to turn off the function
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen
- **Surround View Monitor Auto On:** With Driver Assistance → Parking Safety → Surround View Monitor Auto On selected from the Settings menu, the front parking assist view screen is displayed when Parking Distance Warning warns the driver while driving in **D** (Drive)

To change the SVM settings, press the onscreen settings icon **C**, while SVM is operating.

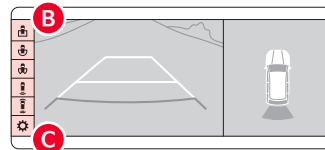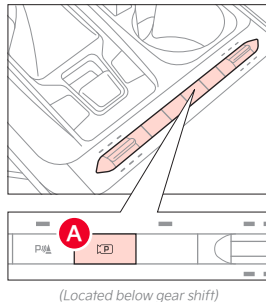

QUICK TIP

The Front View of SVM will turn off when the gear shift is moved into Park or Reverse or the Parking/View button is pressed.

REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance.

The Surround View Monitoring (SVM) is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Surround View Monitor (SVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 4 in the Owner's Manual for more information.

Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†3}

Rear Cross-traffic Collision-Avoidance Assist is designed to detect vehicles approaching from the left and right side while your vehicle is reversing, and warning the driver that a collision is imminent with a warning message and an audible warning. Also, to help prevent collision braking assist is applied.

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the audio head unit*. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph

 
 
 
RCCA Settings:

- RCCA can be turned on/off by going to the User Settings* ⚙️ in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is ON or the Engine Start/Stop button* in the ON position
- To access User settings* ⚙️ in the Instrument Cluster - Press the Mode button **C** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK button **D** up/down to toggle to Driver Assistance, then Parking Safety. Select Rear Cross Traffic Safety and press the OK button **D**
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross Traffic Safety
- **Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:

- **Normal:** Maximizes the amount of distance between the vehicles before the initial warning occurs
- **Later:** Reduces the amount of distance between the vehicles before the initial warning occurs

QUICK TIP

Warning Volume can be adjusted in the User Settings ⚙️ in the Instrument Cluster or the Vehicle Settings on the audio head unit. Go to Driver Assistance, then Warning Volume.

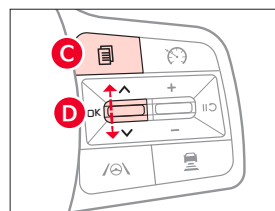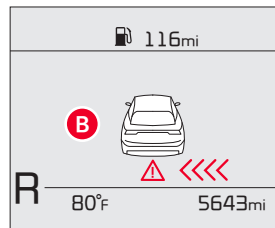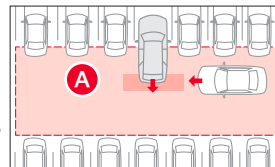

(Buttons located on right side of steering wheel)

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

QR CODE

Rear Cross-traffic Collision-Avoidance Assist (RCCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions

Refer to section 5 in the Owner's Manual for more information.

Forward*/Reverse Parking Distance Warning (PDW)^{†‡}

Forward/Reverse Parking Distance Warning (PDW) is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the front, rear and side of the vehicle when moving forward or backing up.

To activate PDW, press button **A** (LED illuminated). PDW is also activated when the ignition is ON and the gear shift is moved into R (Reverse). To deactivate PDW, press Reverse/Parking Safety button **A** (LED not illuminated).

 
REMINDERS:

- If the vehicle is moving at speeds over 6 mph, PDW may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

Forward/Reverse Parking Distance Warning is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Forward*/Reverse Parking Distance Warning (PDW) may not detect every object in front of or behind the vehicle.*

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 5 in the Owner's Manual for more information.

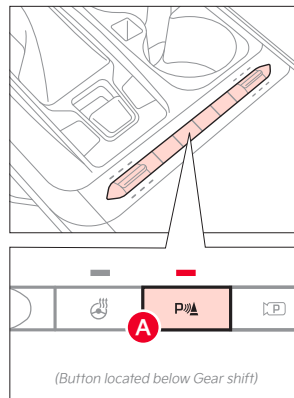

QR CODE

Forward/Reverse
Parking Distance
Warning (PDW) Video

 


Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Instrument Cluster Control

With parking lights/headlights ON, press button **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINDER: The Instrument Cluster Control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

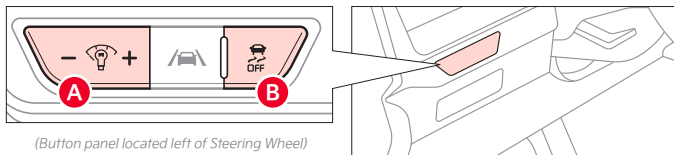

(Button panel located left of Steering Wheel)

Refer to section 4 in the Owner's Manual for more information.

Electronic Stability Control (ESC)^{†5}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press the ESC OFF button **B** to turn Traction Control OFF/ON. Press again to turn on.

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press again to turn ON.

REMINDERS:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the instrument cluster will be lit momentarily whenever the ESC is active

Refer to section 5 in the Owner's Manual for more information.

Hill-start Assist Control (HAC)^{†5}

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

QUICK TIPS

- HAC provides a two second delay before the vehicle may start rolling backwards
- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator — this is normal HAC operation

REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an authorized Kia dealer for service

Refer to section 5 in the Owner's Manual for more information.

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Front Windows Auto Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows and Rear Sunroof* passenger controls

REMINDER: When **C** is pressed, window controls for the Rear Passenger Windows are disabled.

QUICK TIPS

- Auto Door Lock/Unlock* will engage when the gear shift is moved into or out of the P (Park) position
- To turn Auto Door Lock/Unlock* OFF, go to User Settings* in the LCD Instrument Cluster modes

Refer to section 4 in the Owner's Manual for more information.

Power Folding Outside Mirrors*

Press the L or R buttons **D** to select the mirror to adjust.

Press button arrows **E** left/right or up/down to adjust mirror position.

Toggle button **F** left/right to unfold/fold the outside rearview mirrors.

Toggle button **F** to center to automatically fold/unfold mirrors when:

 
- The Smart Key Lock/Unlock buttons are pressed
- The door outside handle button is pressed

QUICK TIPS

- The mirrors will automatically unfold when the Smart Key is within close proximity to the vehicle
- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

Refer to section 4 in the Owner's Manual for more information.

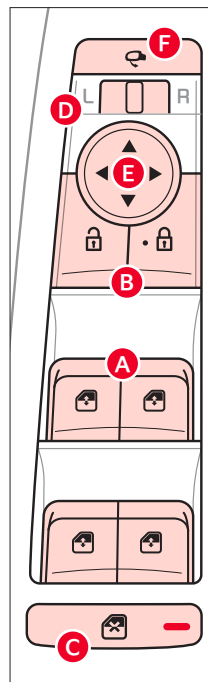

(Button/switch panel located on Driver's Door)

Button configuration may vary depending on vehicle model.

Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button* is located on the climate control system panel.

Refer to section 4 in the Owner's Manual for more information.

Automatic Door Lock/Unlock

When the gear shift is moved into or out of P (Park), all doors will Lock/Unlock. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

 
Refer to section 4 in the Owner's Manual for more information.

Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds.

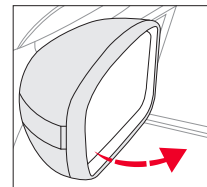

Refer to section 4 in the Owner's Manual for more information.

Reverse Parking Aid Function*

 
Reverse Parking Aid Function will rotate the side-view mirrors downward to help visibility when backing up. The button **A** needs to be depressed for the Reverse Parking Aid Function to operate.

When the gear shift lever is moved into R (Reverse) and while the vehicle is moving backwards, the outside rearview mirrors **B** will rotate downward to aid in reverse parking.

To turn OFF the function, press the button again.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop Button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- Outside rearview mirror switches are not depressed

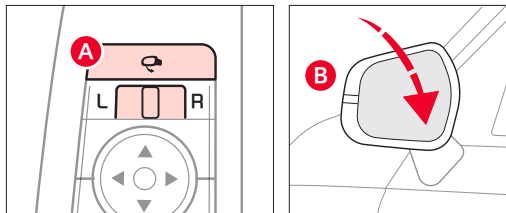

(Button/switch panel located on Driver's Door)

REMINDER: When the button **A** is not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward

Refer to section 4 in the Owner's Manual for more information.

 
Engine Start/Stop Button^{†6}

To start the engine:

- Press the brake pedal
- Press the ENGINE START/STOP button while the gear shift is in P (Park)

To turn the engine OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob inside the vehicle.

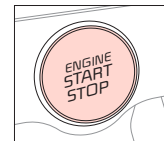

(Button located above center console)

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light)

ON position

- When already in the ACC position (orange light) and without depressing the brake pedal, press the ENGINE START/STOP button again (reddish orange light)

When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (reddish orange light) Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the ENGINE START/STOP button, hold the fob up against the ENGINE START/STOP button and press to start the engine while pressing the brake pedal

QR CODE

Start/Stop Button Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

Tilt/Telescoping Steering Wheel†19

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust **B** to the desired angle and **C** to the desired distance.

When finished, pull the Lock-Release Lever **A** up to lock the Steering Wheel in place.

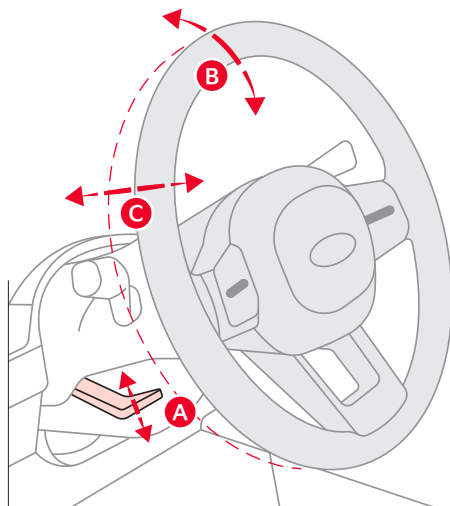

QUICK TIP

It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust the desired distance prior to adjusting the angle.

 
Refer to section 4 in the Owner's Manual for more information.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

Headlights & High Beams

To operate:

- Rotate the switch to change the Headlight function
- Push the lever to turn High Beams ON
- Pull the lever to flash Headlights / High Beams

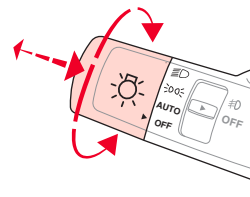

	Headlight position
	Parking light position
AUTO	Auto Light / HBA / DRL
OFF	OFF position

AUTO Light function - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Engine is turned off
- Parking brake is applied
- Headlight switch is in the OFF position

High Beam Assist (HBA)

The High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

QR CODE

Tilt/Telescoping/Heated Steering Wheel Video



High Beam Assist (HBA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams

 
Refer to section 4 in the Owner's Manual for more information.

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

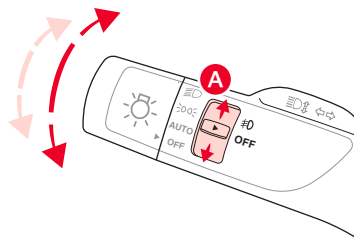

The **One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to the User Settings Mode in the LCD Instrument Cluster modes.

 
Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 4 in the Owner's Manual for more information.

Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change wiper modes
- Press button **B** Up/Down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

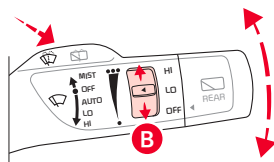

MIST: Single wipe
OFF: Wiper off
INT: Intermittent wipe
LO: Slow wipe
HI: Fast wipe

 
QUICK TIPS

- Pressing button **B** up increases Intermittent wipe frequency and wipe speed. Pressing the button down decreases the frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Rear Wiper & Washer

To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

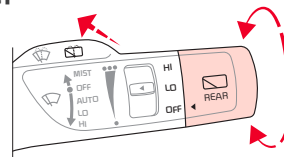

HI: Fast wipe
LO: Slow wipe
OFF: Wiper off

QUICK TIP

LO and HI sets the wiper speed. There is no intermittent wipe function on the Rear Wipers

 
Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **C** to prevent damaging the hood.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch (above) to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

Refer to section 7 in the Owner's Manual for more information.

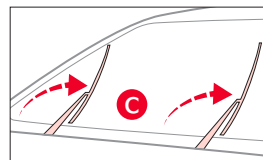

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Wipers and Wiper Stalk Video



Lifting Wipers / Wiper Service Mode Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Bluetooth® Wireless Technology†2,17

 
A Talk button: Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition

Kia Connect with Navigation* - When enrolled with a Kia Connect subscription, press this button to activate the Kia Connect Voice Assist to use navigation guidance and search destinations

B Volume button: Press up/down to raise/lower the speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media

C Receive/Place Call button: Press to receive/place/transfer calls. If no phone is paired, press the button to pair a phone

D Custom button: Press to access programmed feature. Press and hold the button to program it to one of several features

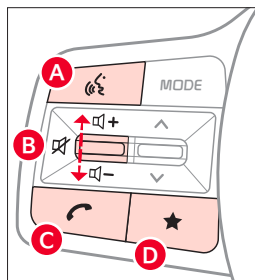

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with the number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- The system can register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests

How to Place a Call

Below are methods for placing a call using the Steering Wheel controls:

When using the voice command feature,* waiting for the system BEEP before speaking the command.

- Option 1: Press the Talk button* **A**. Then say the command "Call {name}" or "Dial {number}" followed by contact name or number
- Option 2: Press the Call button **C** (displays the phone screen with call history)

For more information, refer to the Car Infotainment System Quick Reference Guide.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, if equipped, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

QR CODE

Star, Favorite & Radio Presets Buttons Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Bluetooth® Wireless Technology*†2,17 (continued)

Voice Recognition* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

Audio Controls†17

- A Audio MODE button:** Press to cycle through the FM/AM/SiriusXM®†20 Media Modes; Audio System ON: Press to turn the power on

QUICK TIPS

- MODE button Initial setting is in radio mode
- In the SETUP menu on the audio head unit screen, select which Media Modes to include in the MODE button menu rotation. Press and hold the MODE button to enter this setting menu

- B Seek/Track button:** FM/AM/SiriusXM®** Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek

 
Media Modes: Press up/down to move the track up/down. Press and hold to fast forward/rewind (except for *Bluetooth®* Audio)

- C Volume button:** Press up/down to raise/lower the volume

Mute button: Press to mute all audio (in some Media Modes the media pauses when pressed)

QUICK TIPS

- *Bluetooth®* Music Streaming - If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C. Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

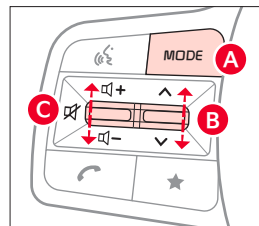

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. For further audio system operation, refer to pages 30-36.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Voice Recognition Tips Video



Steering Wheel Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Android Auto™^{†2} / Apple CarPlay®^{†2} Setup

Android Auto™ compatible smartphone setup — Download the Android Auto™ app from the Google Play™ Store.^{†2} Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Standard Audio System & Standard Audio System-Value with Kia Connect):

1. Press the **SETUP** key on the audio head unit
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ (Standard Audio System, Standard Audio System-Value & Kia Connect with Navigation):

1. Press the **SETUP** key on the audio head unit
2. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturers website for Android Auto™ / Apple CarPlay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Refer to the Car Infotainment System Quick Reference Guide for more information.

QR CODE

Wireless Apple CarPlay® & Android™ Auto Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Cable Connection setup for Apple CarPlay® (Kia Connect with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone®^{†2} with the vehicle's USB port using the manufacturer's cable provided with your iPhone®^{†2}
2. Press the **SETUP** key on the audio head unit
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the audio head unit home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection)
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

Standard Audio System - Value* — FM/AM/Media (USB, *Bluetooth*® Audio)

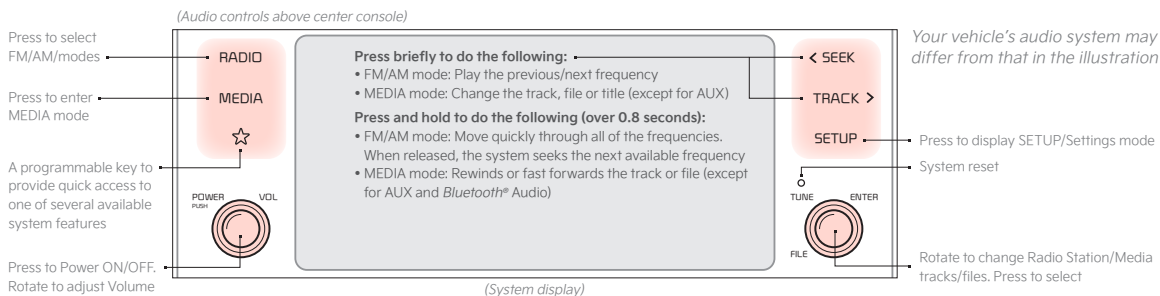

Sound Settings: To adjust the sound settings:

1. Press the **SETUP** key on the Infotainment System or the onscreen MENU button, when in MEDIA mode. Select the onscreen SOUND button, or SOUND SETTINGS
2. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default, FM Radio Noise Cancel*)
3. Use the onscreen buttons to adjust settings. Press the return button **↵** to save settings

Presets: Press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up

Custom Key ☆: To program the Custom Key, press and hold the Custom key, then select one of the available features you would like the Custom key to open.

Software updates - To keep your software up to date, Kia provided over-the-air updates, free of charge. You can also snap the QR code to watch the video, or visit the official Kia update webpage at <https://update.kia.com>. **Note**, visiting a dealer for software update may include an additional charge.

For more information, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 30-36.

- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)
- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- Voice Recognition function is available when connected to Android Auto™ and Apply CarPlay®
- At any time, you can interrupt Command Feedback by pressing the TALK button; when using the voice command feature, wait for the system to BEEP before speaking the command
- A warning screen may appear periodically to remind users that the system should be operated when the engine is running to prevent battery discharge

QR CODE

Standard Audio System - Value Video



Standard Audio System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:

- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery

Kia Connect Activation*†1

(Systems equipped with Kia Connect only):

Follow these steps to activate your UVO link system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press Kia Connect icon
 - c. Press Activate Kia Connect
 2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
 3. Enter number or email address to receive a verification code, then press SUBMIT
 4. Follow these steps to receive your verification code using your phone text message or email:
 - a. Check your phone text message or email for verification code
 - b. Open the link in your text message or email. A page will open requesting that you create your account
- Note:** If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code
- c. Enter your first name, last name, email, phone number, and account password, and click CREATE ACCOUNT. A page will open displaying your verification code
 - d. Enter the code in the head unit and press ACTIVATE
 - e. Go back to the page with your verification code and press "I have entered my PIN." A link will be provided to download the Kia Access app from your app store. After installing the app, log in and enjoy

REMINDER: This vehicle is not equipped with over-the-air system updates.

 
Kia Connect Assistance*

Virtual Assistant ⓘ ⓘ — Press to connect to a virtual assistant to hear information about the Kia Connect features

Kia Connect ⓘ (non-navigation systems) — Press to activate phone projection with Android Auto™ or Apple CarPlay® (smartphone must be connected via wireless or USB cable — see previous page for availability and setup)

Kia Connect Voice Local Search ⓘ (systems with navigation) — Press to connect to the search function to find points of interest or other locations, like "cafe"

Roadside Assist ⓘ ⓘ — Press to connect to a Roadside Assistant where you can request vehicle towing services

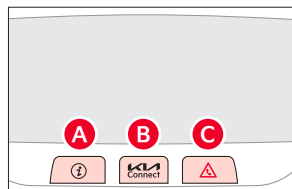

(Buttons on rearview mirror: Kia Connect button may be located on the overhead console area)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See UVO Terms of Service at owners.kia.com for more information.

QR CODE

Kia Connect Activation Video



Kia Access app Video



Kia Connect Assistance Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Kia Access App Download

Go to an app marketplace to download the new Kia Access App. Once you download, make sure you register your vehicle and start an account (refer to Kia Connect Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect. If these conditions are not met, remote command may not execute or takes a long time. It will also effect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Connect will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Connect again



QR CODES

Download the Kia Access App
by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access Features Guide.
Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access with UVO link App Features Guide

The Kia Access App Features Guide is a guide helping you utilize the app to its full potential by detailing how to set up and use each feature and adjust various settings. Below are some of the topics included:

 
- Remote Commands
- Set Climate
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

Kia Connect⁺1 with Navigation⁺8 - FM/AM/SiriusXM[®]+15/Media (USB, Aux, *Bluetooth*[®] Audio)

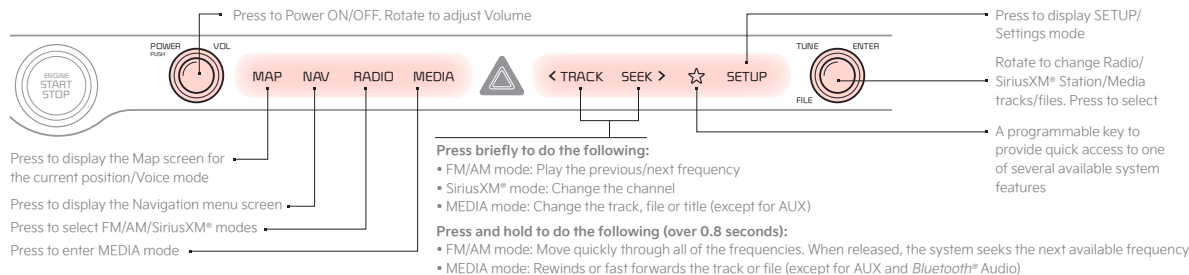

To adjust the sound settings from any audio mode: Press the SETUP button on the Audio Head Unit, then the onscreen SOUND button. Select the menu item to change settings, then use the onscreen buttons to adjust settings.

Presets: To Save a Preset, press and hold the desired slot. This saves the current station in the selected slot.

SiriusXM[®] Smart Favorites: In Radio mode, choose SiriusXM[®], then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: To program a custom key, press and hold the Custom Key, then select one of the available features you would like the Custom Key to open.

Software updates - To keep your software up to date, Kia provided over-the-air updates, free of charge. You can also snap the QR code to watch the video, or visit the official Kia update webpage at <https://update.kia.com>. Note, visiting a dealer for software update may include an additional charge.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
- When connected to Android Auto[™] or Apple CarPlay[®] on your smart-phone, the smartphone's navigation system may also be available
- This system supports Android Auto[™] and Apple CarPlay[®] (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt Kia Connect Command Feedback by pressing the TALK button on the steering wheel

REMINDERS:

- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery

Your vehicle's audio system may differ from that in the illustration.

For further Kia Connect with Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

QR CODE

Kia Connect with Navigation Video



Navigation System Important Tips Video



Navigation System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For other audio system information, see pages 30-35.

Digital Clock - Infotainment System

Infotainment System:

Press the SETUP key **A** then press GENERAL, then DATE/TIME button to display the Time and Date setting screen. Then use the onscreen buttons to adjust time and date.



QUICK TIPS

- Press the RETURN button on the navigation screen to ensure changes are saved
- When needed, Daylight Savings must be enabled in the Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect with Navigation System*)

 
For more information, refer to the Car Infotainment System Quick Reference Guide.

USB Charger Ports, Multimedia USB Port, Power Outlets, & AC Inverter

USB Charger Ports* **B** are located in the center panel and in the back of the seats **B** and center console.

Multimedia USB Port **C**: Use the Aux port to connect audio devices and the Multimedia USB port to connect USB audio devices and smartphones.

AC Inverter*: 115V/100 watt power inverters are located in the back of the center console and in the luggage zone* (See page 8 for ON/OFF button information).

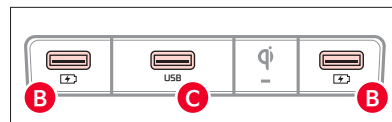

(Located in the center console in front of gear shift)

QUICK TIP

The power outlets are inactive when the Engine Start/Stop* button is OFF.

REMINDERS:

- Using the power outlets (accessory plugs) and AC Inverter for prolonged periods of time with the ENGINE START/STOP button in the ACC position (Engine OFF) may cause the battery to discharge
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to your device
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer

 
 
Refer to section 4 in the Owner's Manual for more information.

QR CODE


Automatic Climate Control Operation Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

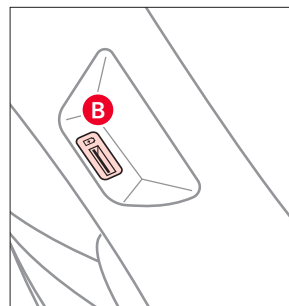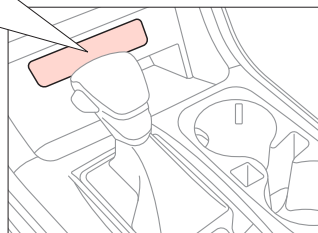


Automatic Climate Control*

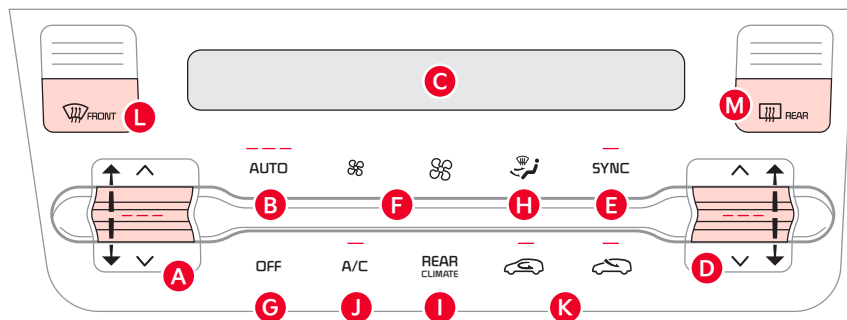 

- A** Driver's temperature control
- B** AUTO (automatic control) button
- C** Climate information screen
- D** Passenger's temperature control
- E** SYNC temperature control selection button
- F** Front fan speed control buttons
- G** Front air conditioning off button
- H** Front mode selection button
- I** Rear climate control on/off button
- J** A/C on button
- K** Air intake control buttons
- L** Front windshield defroster button
- M** Rear window defroster button

 Rear Climate Control*

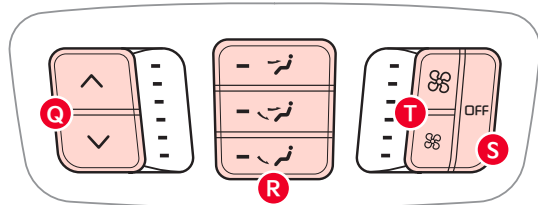

- Q** Rear temperature control buttons
- R** Rear mode selection button
- S** Rear air conditioning off button
- T** Rear fan speed control buttons

Your Automatic Climate Control system may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

Automatic Climate Control* (Continued)

Climate Control Auto Function

1. Press AUTO **B** to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired Temperature **A**
3. Press SYNC **E** to select Sync Temperature Control operation, which synchronizes the passenger's temperature to the driver's setting

Defrost Outside Windshield:

1. Set Fan Speed **F** to the highest position
2. Set Temperature **A** to Hot
3. Press the Front Defrost button  **L**

Defog Inside Windshield:

1. Set Front Fan Speed **F** to the highest position
2. Set Temperature **A** to the highest position
3. Press the Front Defrost button  **L**

QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach the desired temperature and reduce humidity
- Keep the inside glass as clean as possible to reduce window fogging

Auto Defogging System

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button  for three seconds when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

Air Flow Modes

To select Air Flow Modes, press the MODE button **H** to cycle through to desired mode:



REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

QR CODE

Automatic Climate Control Operation Video



Auto Defogging System (ADS) Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Your Automatic Climate Control system may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

Manual Climate Control*

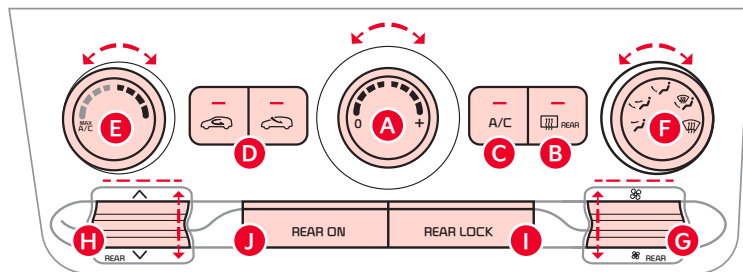

- A** Front fan speed control knob
- B** Rear window defroster button
- C** Air conditioning on/off button
- D** Air intake control buttons
- E** Front temperature control knob
- F** Front mode selection buttons
- G** Rear fan speed control
- H** Rear temperature control
- I** Rear control lock button
- J** Rear control on button

Defrost Outside Windshield:

Set Fan Speed **A** to the highest position

Set desired Temperature **E**

Rotate to the Front Defrost mode  **F**

Defog Inside Windshield:

Set Fan Speed **A** to desired position

 
Set desired Temperature **E**

Rotate to the Front Defrost mode  **F**

REMINDER: Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

Rear Climate Control*

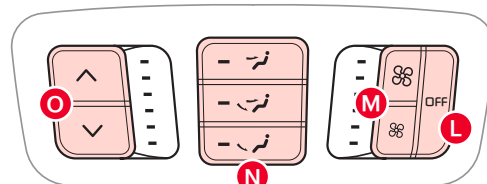

- L** Rear air conditioning OFF button
- M** Rear fan speed control buttons
- N** Rear mode selection buttons
- O** Rear temperature control buttons

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons **G**:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level (front only)
-  Front Windshield Defrost

Wireless Smartphone Charging System^{*†21}

Charge a Qi Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

 
1. Enable Wireless Smartphone Charging System in the User Settings* in the Instrument Cluster LCD or the Vehicle Settings* in the infotainment system, select Convenience then Wireless Charging System
2. Place a compatible smartphone on the center of the charging pad **B**
3. The indicator light **A** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

QUICK TIPS

- The smartphone must be a Qi certified compatible phone with QI function available. Some smartphone models are not QI certified, which may affect the availability, speed or performance of the wireless charging
- Wireless charging must be enabled in user settings
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area
- For wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle

REMINDERS:

- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance - Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness
- If the driver door is opened, charging will be disabled

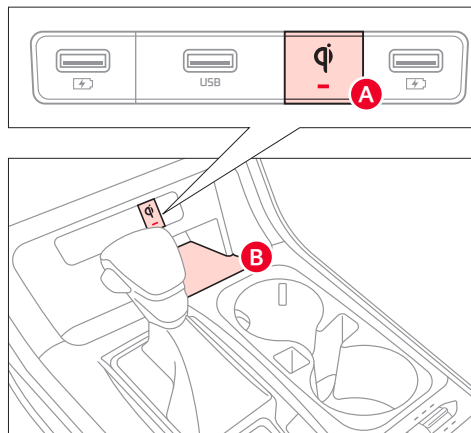

Requires QI-enabled device or QI-enabled case

QR CODE

Wireless Charging Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal and then press the EPB switch **A** with the ignition switch in the ON position. Ensure that the indicator light **EPB BRAKE** is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold the EPB switch a second time to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to section 5 in the Owner's Manual for more information.

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto Hold can be turned ON/OFF using the AUTO HOLD switch **B** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator has four states:

Standby (white): With vehicle in Park and at a standstill, and AUTO HOLD switch **B** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

 
Engaged (green): When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.

OFF (not illuminated): The indicator will turn OFF when the AUTO HOLD switch **B** is turned OFF or when the EPB is manually turned ON.

Malfunction (yellow): When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold turns off when ignition is cycled

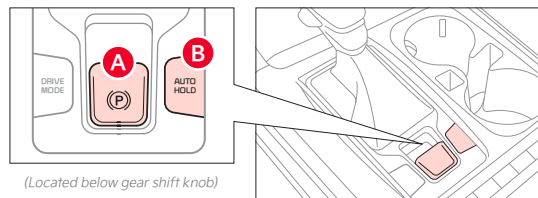

(Located below gear shift knob)

QR CODE

Electric Parking Brake / Auto Hold Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Automatic Gear Shift with Sportmatic®* Shifting

P: Park

R: Reverse

N: Neutral

D: Drive

[+]: Manual Mode Upshift

 
[-]: Manual Mode Downshift

Manual Mode: To enter Manual mode, move shift lever from D to left gate **A**.

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift **A**.

QUICK TIPS

- Press brake pedal and depress release button to move the gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

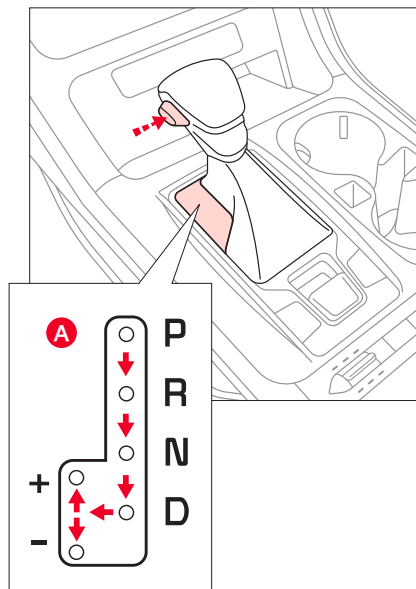

QR CODE

Automatic Transmission - Sportmatic Shifting with Gear Shift Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Refer to section 5 in the Owner's Manual for more information.

Heated Steering Wheel*

Press the Heated Steering Wheel button **A** to turn the Steering Wheel Heater on/off while the ENGINE START/STOP button is in the ON position. The Steering Wheel Heater will turn off automatically in 30 minutes, or when the button is pressed again to deactivate.

QUICK TIPS

- If the ignition is turned OFF and then ON again within 30 minutes of the Steering Wheel Heater being turned ON, the system will remain in the ON position
- The system does NOT turn off when the ignition is cycled. To turn off the system, press the Heated Steering Wheel button

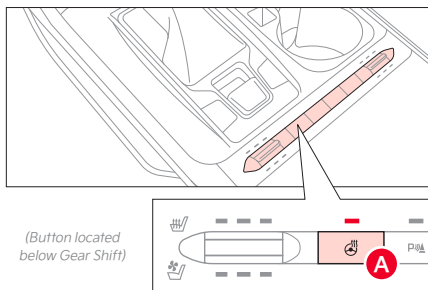


REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Refer to section 4 in the Owner's Manual for more information.


Seat Warmers / Ventilated Seats*†14

 Seat Warmers button B: Press the button once for high setting (3 LEDs lit). Press the button twice for medium setting (2 LEDs lit). Press the button a third time for low setting (1 LED lit) and again to turn OFF. Hold the button to turn off Seat Warmer.

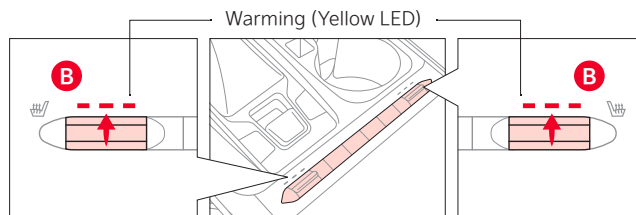

(Buttons located below Gear Shift) (Type A shown)

 Seat Warmers / Ventilated Seats* button C: Press top/bottom of the button once for high setting (3 LEDs lit). Press the button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF. Hold the button to turn off the Seat Warmers / Ventilated Seats.

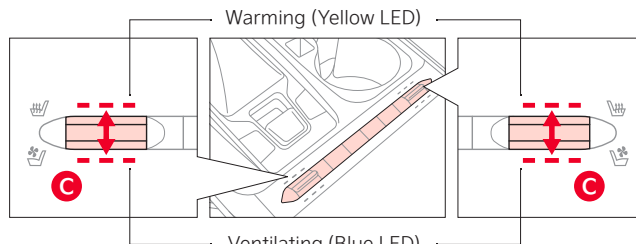

(Buttons located below Gear Shift) (Type A shown)

QR CODE

Seat Warmers and Ventilated Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

These illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 4 in the Owner's Manual for more information.

QUICK TIPS

 
- With the Seat Warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default. To turn the system ON, press the button to turn ON

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

Front Seat Headrest Adjustment^{†7}

To raise headrest: Pull headrest up.

To lower headrest: Press lock button **A** and then press the headrest down.

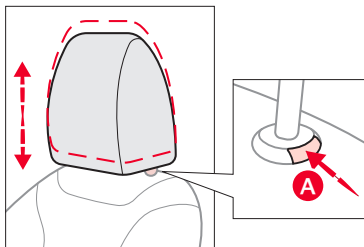

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDER: Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

These illustrations are for demonstration purposes only. Actual features on vehicle may vary.

 
Refer to section 3 in the Owner's Manual for more information.

Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store positions into memory, first place the Gear Shift into **P** (Park) while the Engine Start/Stop button* is in the ON position. Then:

1. Adjust the Driver's Seat and the Outside Rearview Mirrors
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons **C** within 5 seconds. The system will beep twice when memory has been stored

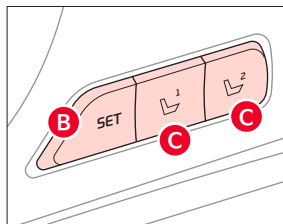

(Buttons located on Driver's Door Panel)

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Easy Access Function*

- The system will automatically move the driver's seat forward when the ignition or the Engine Start/Stop button is pressed to ON or the ACC position
- The system will automatically move the driver's seat rearward when the ignition or the Engine Start/Stop button is pressed to OFF
- To activate or deactivate the Easy Access Function, go to User Settings in the LCD Instrument Cluster modes

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 3 in the Owner's Manual for more information.

QR CODE

 
 
Power Adjustable Driver's Seat with Memory Settings Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Power Adjustable Driver's Seat^{*†12}

Move/press controls to adjust Seat forward/backward, Seat Cushion up/down, Seatback recline or Lumbar up/down/forward/backward*.

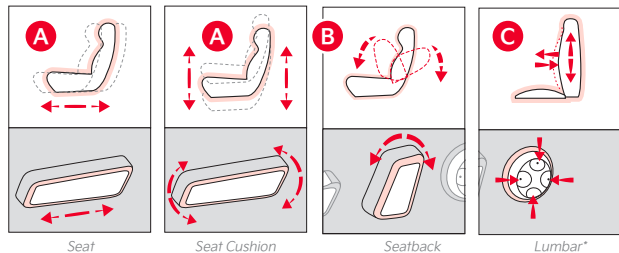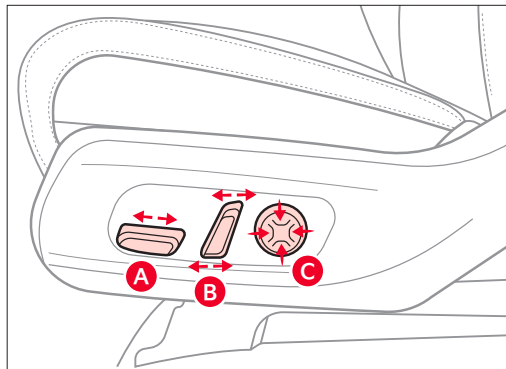

REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 3 in the Owner's Manual for more information.

Manual Adjustable Driver's Seat^{*†12}

 
Pull lever **D** to slide the Seat forward/backward

Pull lever **E** up several times to raise the Seat Height

Push lever **E** down several times to lower the Seat Height

Pull lever **F** to adjust the Seatback recline

Press **G** to adjust the Lumbar support

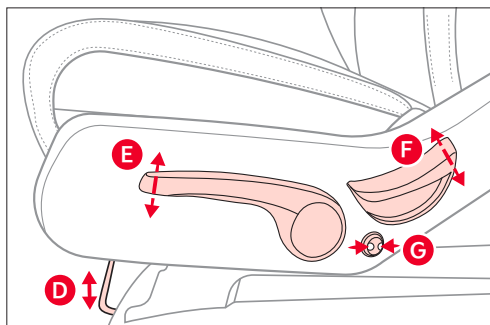

QUICK TIP

When adjusting the seat forward or backward, ensure the seat clicks or locks into place before driving the vehicle.

QR CODE

Power Adjustable Driver's Seat with Memory Settings Video



Manual Seat Adjustment Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 3 in the Owner's Manual for more information.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

These illustrations are for demonstration purposes only. Actual features on vehicle may vary.

2nd-Row VIP Seats with Relaxation Mode*†12

Forward/backward: Pull up on the lever **A** to manually move the VIP Seat forward or backward.

 
Inward/Outward: Pull up on the lever **B** to manually move the VIP Seat inward or outward. Moving the seat inward allows more space for 3rd-Row access.

Relaxation Mode


Press and hold the front auto-control button **C** for the VIP Seat to move into relaxation mode. The seatback angles back and the seat cushion tilts up.

Press and hold the rear auto-control button **D** to move the VIP seat back to its original upright position.


The buttons under the auto-control buttons move the various parts of the seat — seatback forward and backward **E**, tilt the entire seat **F**, retract or extend the leg extension **G**, and seat cushion height adjustment **H**.

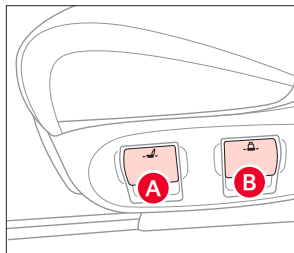

 (VIP Seat controls located on the outboard side of seat)



 (Auto-control buttons located on the inboard side of the VIP Seats)

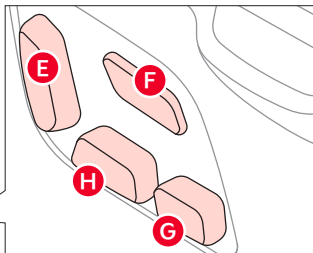

(VIP Seat adjustment controls located on the inboard side of the VIP Seats)

QUICK TIPS

 
 
- Make sure the VIP seats are moved all the way inward to clear the seatbacks when adjusting and before actuating the relaxation mode
- You may need to move the front passenger seat forward to make room for the leg extension
- The relaxation mode does not function fully when the seats are in the outward position

REMINDER: VIP Seats* are not removable.

Unfastening Center Seat Belt

If the Seat Belt is buckled, press the release button on the buckle.

To retract the center seatbelt webbing **I** in the 2nd and/or 3rd rows, use the lap belt tongue plate **J** to push the “release button” in the small slot on the center belt buckle **K**.

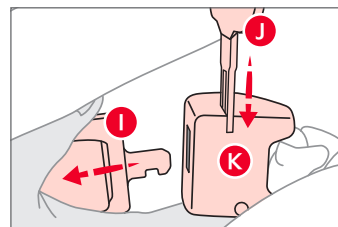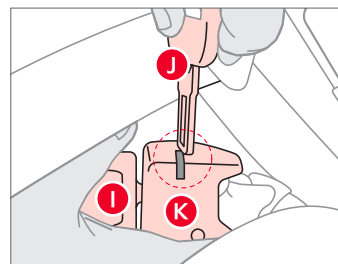

QR CODE

Carnival 2nd and 3rd Row Seats Video



Unfastening Center Seat Belt Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 3 in the Owner's Manual for more information.

2nd-Row Removable Seats*†12

Sliding the 2nd-Row Seat forward/backward: Pull the lever **A** under the front of the seat to adjust seat forward or backward.

Folding the Seatback: Pull the lever **B** to fold the seatback flat.

 
Folding and Sliding 2nd-Row Seat for 3rd-Row Access: Pull lever **C** to fold the seatback and slide the seat forward.

REMINDER: The lever must return to its original position for the seatback to lock.


Passenger Walk-In Switch*

To adjust the front passenger seat for easier 2nd-Row Seat access, press the Passenger Walk-in Switches (located on the inside of the front passenger's seatback) to do the following:

- D** Adjust the front passenger seatback forward/backward
- E** Slide the front passenger seat forward/backward

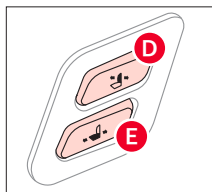

 REMINDER: Do not use the button while front passenger seat is occupied.

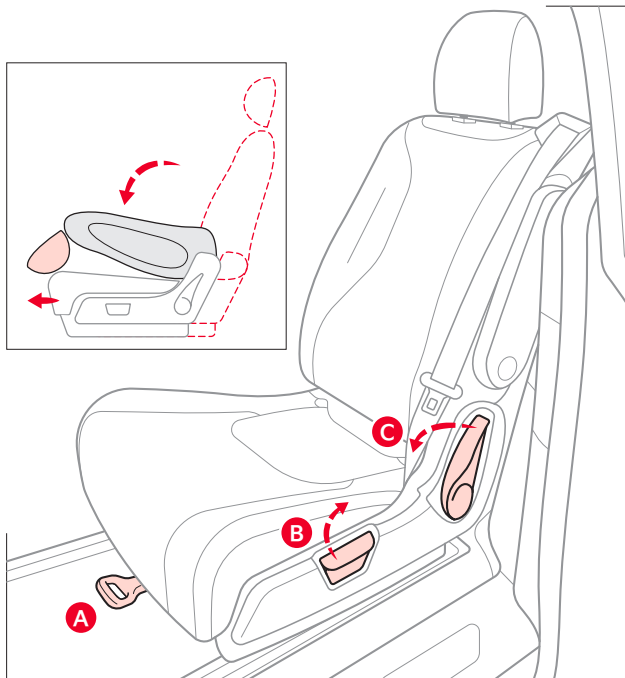

QUICK TIPS

- When you return the seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front seat forward and adjust the front seatbacks to fully lower the rear seats
- Lower rear headrests to the lowest position

QR CODE

Carnival 2nd and 3rd Row Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 3 in the Owner's Manual for more information.

2nd-Row Removable Seats**12

 
 
 
Removing the Outboard Seats

1. Move the front seats forward to allow for clearance
2. Push the seat belt buckle down into the recession
3. To provide more clearance, remove the headrest by pressing the release button **A** and pulling up the headrest up and out of the seat
4. Pull lever **B** to fold the seatback flat; slide the seat forward or backward to ensure the seat is in the middle position by pulling on the lever **C**
5. At the rear of the seat, reach under the seat and pull the release bar **D** and lift the seat up out of the anchors. Remove the seat

Removing the Center Seat


1. To provide more clearance, remove the headrest by pressing the release button **A** and pulling up the headrest up and out of the seat
2. At the rear of the center seat, pull on the center seat left strap **E** to slide the seat forward
3. To fold the seatback flat, pull on the strap **F** on the front of the seat
4. Pull on the bottom center strap **G** to release the seat and tumble forward. Remove the seat

Refer to section 3 in the Owner's Manual for more information.

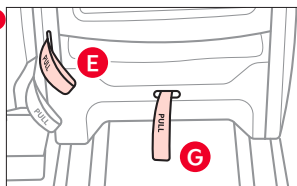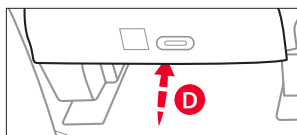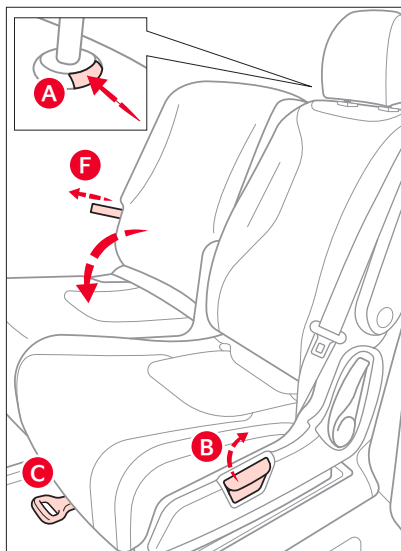


Reinstalling the Seats

 1. Make sure the front seats are all the way forward
2. Place and align the seat properly on the floor anchors **H**
3. Lower the seat and push down firmly until it clicks into place
4. Ensure the seat is latched securely by the green indicator **I**
5. **Outboard Seats** - Pull on the lever **B** to move the seatback to its original position
6. **Center Seat** - Pull up the center seatback recline straps **F** or **E**, lift the seatback backward until it locks (clicks) into place
7. Replace the headrest and return the seat belt to its proper position

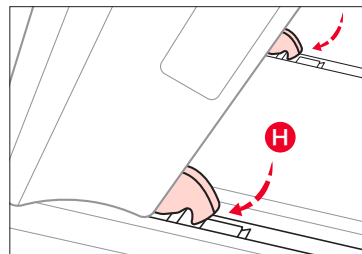

 (Hooks highlighted are inserted into channel between bar and white adjustment device)

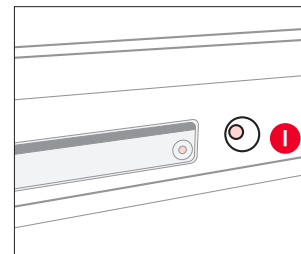

(Secure seat indicator on outside of outboard seats)

QR CODE

Carnival 2nd and 3rd Row Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:

 
- Never install or remove the seats while there are occupants in the 3rd-Row Seat
- VIP Seats* are not removable

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

3rd-Row Seat - Access, Folding and Stowing^{*†12}

3rd-Row Seat Access



To access the 3rd-Row Seat, pull on the 2nd-Row Seat lever **A** to fold the seatback and slide the seat forward.

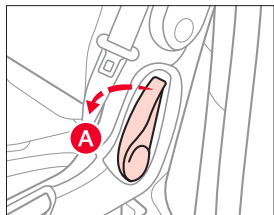

(Second Row Seat)

Folding 3rd-Row Seat

  1. Fully lower headrest by pressing the lock release button **B** recessed in the seatback (raise headrest to access lock release button)
2. Pull seat folding strap located in the front of the seatback **C**

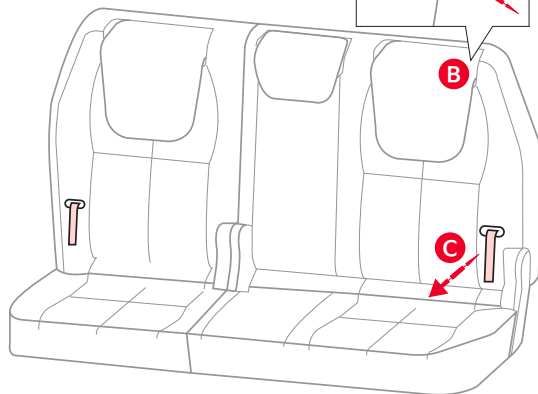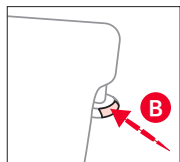

(Third Row Seat)

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 3 in the Owner's Manual for more information.

Folding and Stowing 3rd-Row Seats

The rear seats can be folded and stowed in the luggage compartment for additional cargo space.

 
 
1. Fully lower headrests by pressing the lock release button **B** recessed in the seatback
2. Pull release handle **D** in the middle of seatback
3. The seat will fold down backwards towards the stow space. Push the seat down **E** to stow

Raising the 3rd-Row Seat

1. Pull up on the release handle **D** to move the seat back to original position
2. Press seat down to ensure it is locked into place (click)
3. Pull on the strap **F** to raise the seatback

REMINDERS:

- The seat straps on the front and back of the 3rd-Row Seat are for folding only
- Do not stow the seat while the seatback is folded down as this may cause damage to the mechanism

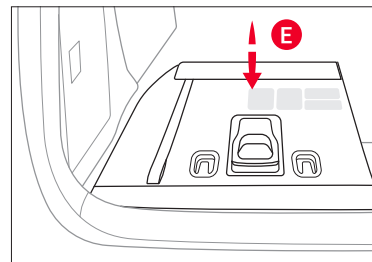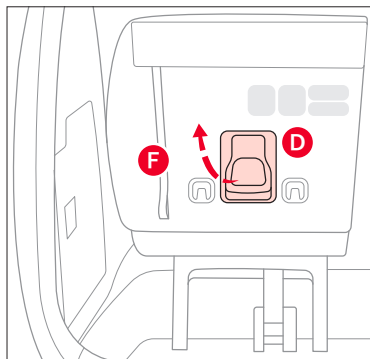

QR CODE

Carnival 2nd and 3rd Row Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Rear Occupant Alert (ROA) with Ultrasonic Sensors^{†9}

Rear Occupant Alert (ROA) with Ultrasonic Sensors can help alert the driver when rear passengers are left in the rear seats using the ultrasonic sensors and door monitoring. The system is designed to provide three separate alerts:

- The first alert is a message on the Instrument Cluster, "Check Rear Seats" **A**, and a chime will sound. After the first alert, when the doors are locked and there is movement detected in the rear seats, the horn will sound for about 25 seconds. This alert may activate up to eight times within 24 hours if movement is still detected and system has not been disabled.
- If you have installed the Kia Access app on your smartphone, logged in and activated the Rear Occupant Alert notification, a third alert (notification) will be sent to your phone.

To turn the system on or off, in the Instrument Cluster, go to User Settings, select Convenience, and then Rear Occupant Alert.

 
 
Rear Occupant with Ultrasonic Sensors activates under the following conditions:

- A rear passenger door is opened and closed
- The ignition has been turned off
- The driver's door has been opened, then closed
- The doors are locked with the Smart Key or the door lock button on the door handle

QUICK TIPS

- The first alert message will not display on Instrument Cluster if the rear doors are never opened. Either rear door must be opened after unlocking the vehicle before the system will activate.
- To temporarily disable alerts, press the OK button **B** on the Steering Wheel while the message is displayed.
- To turn the alert off while sounding, press the unlock button on the Smart Key or press the door lock button on the door handle.
- Must be enrolled in Kia Connect and Kia Access app installed on the phone to receive ROA alert notifications on your smartphone.

See section 4 in the Owner's Manual for more information.

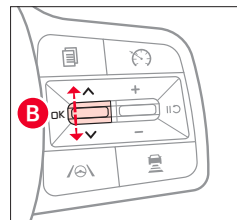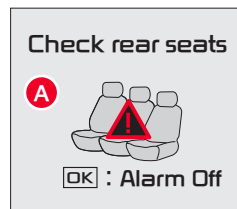

Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Rear Occupant Alert (ROA) with Ultrasonic Sensors Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

This system is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting.

REMINDERS:

- To avoid false alerts, make sure the vehicle's windows are rolled up.
- If objects such as boxes are stacked in front of the ultrasonic sensors, the system may not detect any movement.
- The ultrasonic sensors may occasionally detect movement in the vehicle and cause false alerts when there are no rear occupants present. False alerts can occur due to:
 - The presence of insects near the system sensor
 - Rushing air from a window that is rolled down
 - Movement around the exterior of the vehicle
 - Surrounding noise or vibration
 - Vehicle passing through a car wash
 - Movement in the driver or front passenger seat being detected
- The Rear Occupant Alert with Ultrasonic Sensors system may fail to detect movement and activate an alarm if:
 - Movement is subtle or does not continue
 - A small child sits directly in a seat without a car seat
 - A rear passenger is covered with an object such as a blanket, obstructing the sensor's view

Smart Key with Remote Start^{†6}

 
 
- A Press to lock All Doors; Sliding Doors / Liftgate*:** Press and hold for more than 3 seconds to simultaneously close the sliding doors and the liftgate
- B** Press to unlock the Driver's Door. Press twice within 4 seconds to unlock All Doors and the Liftgate. **Sliding Doors / Liftgate*:** Press and hold for more than 3 seconds to simultaneously open the sliding doors and the liftgate (enable in User Settings / Vehicle Settings*)
- C Manual Liftgate*:** Press and hold for more than 1 second to unlock the Liftgate. Then lift by the handle to manually open the Liftgate

REMINDERS:


- The Liftgate does not automatically open when the **C** button is pressed
- The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle
- C Power Liftgate*:** Press and hold for the Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close
- D Remote Start*:** First, lock the doors by pressing the door lock button **A** within 32 feet from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **D** for more than two (2) seconds to start the vehicle. Press **D** again to turn off. If driver does not enter vehicle within three minutes of starting the vehicle, the engine will automatically turn off
- E Power Sliding Doors*:** Press and hold to open the Power Sliding Doors
- F** Press and hold for more than a half second for the Panic Alarm. To turn OFF the Alarm, press any button
- G** Press to release Mechanical Key
- H** Mechanical Key

Mechanical Key **H**:

- Press the button **G** on the back of the key fob to release the Mechanical Key
- Use to lock/unlock the Driver's Door **I**
- Use to lock the glove box

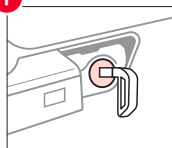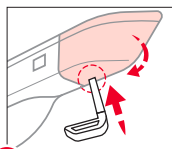

 Remote button configuration may vary depending on vehicle options.

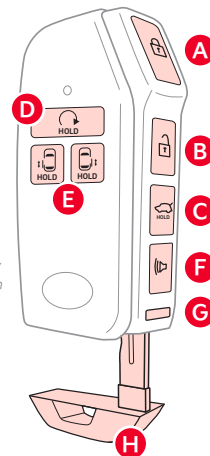

QR CODE

Kia Smart & Folding Key Fobs Video



Remote Start - Smart Key Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Refer to section 4 in the Owner's Manual for more information.

QUICK TIPS

- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start the engine

Lock/Unlock All Doors

- Press once to unlock the Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press once to lock All Doors

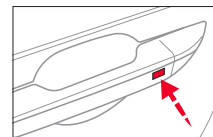

Power Liftgate*†16

Opening from Inside the Vehicle:

Press and hold the Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.

Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

Auto Open/Close*: To automatically open and close the Power Liftgate / Sliding Doors, press and hold buttons **C** (close) or **D** (open) for more than 3 seconds.

REMINDER: Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

Opening/Closing from Outside the Vehicle:

To open the Power Liftgate automatically, press the Rear Hatch Release button **E** on the exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **F**.

To turn off the Power Liftgate Close button function, press button **G**.

 
 
Power Liftgate Opening Height Adjustment

The height setting of a fully opened liftgate (tailgate) can be adjusted by the following steps:


1. Position the liftgate manually to the preferred height
2. Press the Power Liftgate Close button **F** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.


See section 4 in the Owner's Manual for more information.

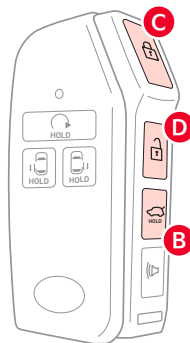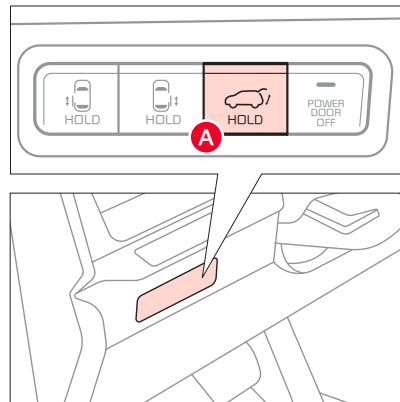

 Remote button configuration may vary depending on vehicle options.

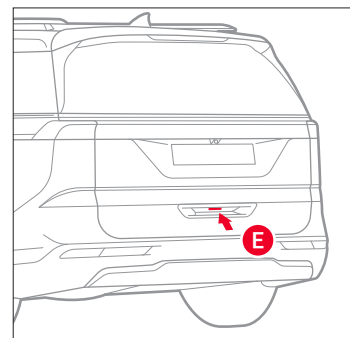

(Located on lower liftgate exterior)

 

(Button located on inside edge of liftgate)

QR CODE

Carnival Power/Smart Liftgate & Sliding Doors Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Smart Liftgate with Auto Open & Close*†16

The Smart Liftgate with Auto Open & Close can open or close the Liftgate automatically when the driver approaches or leaves the vehicle. For Smart Liftgate with Auto Open & Close to operate, the Smart Key must be enabled.

Automatically open: When the Smart Key is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Liftgate.

 
 
Automatically close: When the Smart Key fob is on your person and you leave the vehicle, the chime will sound three times as an alert that the Smart Liftgate is about to close. Then the alert system will chime two additional times before closing the Smart Liftgate.

The Smart Liftgate with Auto Open & Close feature is off by default. To enable on some models, go to User Settings in the LCD Instrument Cluster modes. On other models, press the Setup key on the audio head unit, followed by pressing VEHICLE on the screen. Then press DOOR and SMART LIFTGATE.

OFF button: To turn off the Power Liftgate Close button function, press button **A**.

QUICK TIPS

- During the Smart Liftgate with Auto Open & Close alert, the Smart Liftgate with Auto Open & Close can be deactivated with the Smart Key by pressing any button on the key fob or moving away from the detection area
- The open height and speed can be adjusted. For information on how to set the open height and speed, see your owner's manual

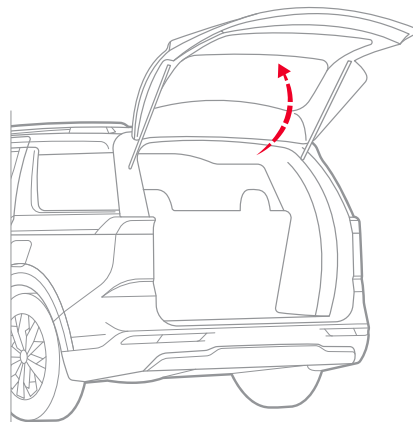

(Button located on inside edge of liftgate)

QR CODE

Carnival Power/Smart Liftgate & Sliding Doors Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
See section 4 in the Owner's Manual for more information.

REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Liftgate with Auto Open & Close feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage, or move out of the detection area, to deactivate the Smart Liftgate with Auto Open & Close function
- When the ignition is on, the Smart Liftgate with Auto Open & Close will only operate with the gear shift in the Park (P) position
- The Smart Key must be outside of the vehicle for the Smart Liftgate with Auto Open & Close to operate
- Ensure obstacles and people are out of the way of the Liftgate

Power Sliding Doors

Using the driver's panel controls, press the left/right Power Sliding Door buttons **A**, on the driver's panel controls, on the center pillars **B** or on the key fob **C** to automatically open/close the sliding doors.

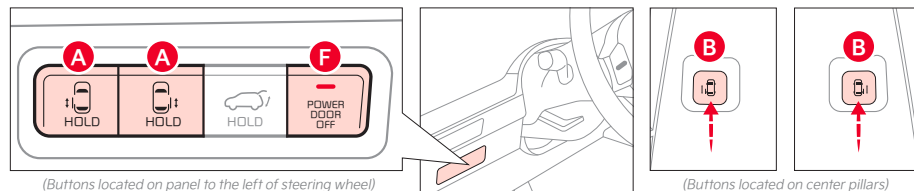

REMINDER: If the POWER DOOR OFF button **F** is depressed, the Smart Power Liftgate* will not operate.

Smart Key Auto Open/Close*: To automatically open and close the Power Liftgate / Sliding Doors, press and hold buttons **D** (close) and **E** (open) for more than 3 seconds.

Power Door OFF Button: When button **F** is ON (not depressed), the power sliding doors and power liftgate can be controlled with the buttons on the center pillar trim or liftgate **B**. Also, the doors will open/close automatically when pulling the handles from the inside or outside.

 
Smart Sliding Door with Auto Open

The sliding doors can be opened hands-free if the Smart Key is detected within the system range. The hazard warning lights will flash and a chime will sound two times and the door nearest the Smart Key will open. To activate the Smart Sliding Door with Auto Open, on some models, go the User Settings in the Instrument Cluster and select Smart Liftgate. On other models, press the SETUP key on the audio head unit. Then press VEHICLE, DOOR and SMART SLIDING DOOR.

Passenger View* / Passenger Talk*

Passenger View, an in-cabin camera, helps the front passenger talk with rear passengers while viewing them on the audio head unit screen. On the head unit screen, press the Passenger View icon **G**.

Passenger Talk: Press the button **H** located on the overhead console to use the Passenger Talk, cabin intercom, function.

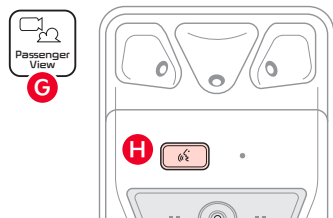


QR CODE

Carnival Power/Smart Liftgate & Sliding Doors Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 Refer to section 4 in the Owner's Manual for more information.

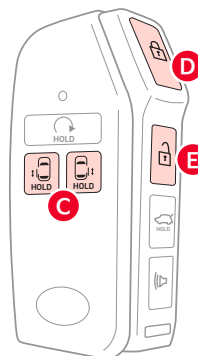

REMINERS:

- The system will not operate when the Smart Key is detected continuously near the vehicle after the doors are locked, or when a door is not locked or closed
- Automatic stop and reversal will not activate in all situations
- The auto-reverse feature is a supplemental feature and should never be relied upon as a primary safety device
- To prevent injury, make sure no body parts are in the way of the sliding door when closing
- Do not leave children or animals unattended in the vehicle as they may operate the power sliding door in a manner that could result in injury to themselves or others
- If you are present but unable to quickly respond or attend to children or animals in the vehicle, deactivate the power sliding door by pressing the POWER DOOR OFF button **F** on the driver's panel to the left of the steering wheel

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map/Room Lamp Operation

Press the buttons **A** to turn the Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

When the  button **B** is pressed, the following occurs:

- When any door or the liftgate is opened, the Map and Room Lamps turn ON
- When doors are unlocked from the Smart Key or key removed from ignition, the Map and Room Lamps turn ON for approximately 30 seconds or until a door is opened
- When doors are closed, the lamps will gradually turn OFF after approximately 30 seconds
- When all doors are locked or the ignition is turned ON, the Map Lamp will turn OFF immediately

 
 
When the  button **C** is pressed, the lamps stay ON continuously.

Room Lamp - Press the lens **D** to turn the Room Lamp ON/OFF.

QUICK TIPS

- When the doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in the armed stage
- Using interior lights for an extended period of time may cause battery discharge

REMINDER: When the Room Lamp lens is pressed ON it will remain ON, even when the Map Lamp switch is in the OFF position.

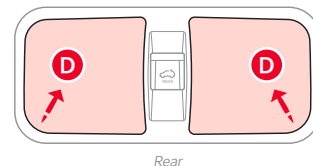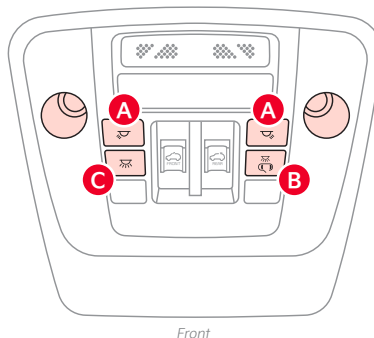


(Lamp controls located in the overhead consoles). Type A shown.

Refer to section 4 in the Owner's Manual for more information.

Sunvisor†24

 Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

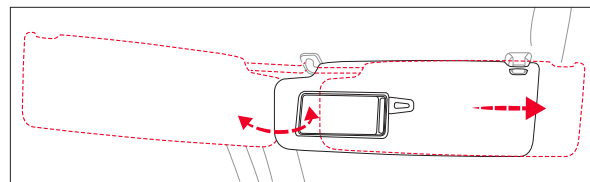

REMINERS:

- The Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly
- Be aware of the seating position when adjusting or swinging Sunvisor around to or from the front or side windows
- Do not operate the vehicle if the Sunvisor is impairing your visibility

Refer to section 4 in the Owner's Manual for more information.

Sunroof Operation

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever. The ignition needs to be in the ON position to operate the Sunroof/Sunshade.

The front and rear Sunroof/Sunshade are operated from separate controls.

Front Sunshade and Sunroof Controls:

Auto Open: Slide lever **A** backward to the farthest position and release.

Auto Close (Sunroof only): Slide the lever **A** forward to the farthest position and release.

Slide the Sunroof (with Sunshade open):

Open: Press the Sunroof lever **A** backward and press again forward/backward until you reach the desired detent position (manual slide feature).

Close: Press the Sunroof lever **A** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

Tilt the Sunroof:

To raise, push the lever **A** upward; to lower, push the lever **A** forward.

REMINDER: The Front Sunroof will automatically open all the way. The Rear Sunroof will only partially open. To open all the way, slide the Rear Sunroof lever again.

Rear Sunshade and Sunroof Controls:

 
Auto Open: Slide lever **B** backward to the farthest position and release.

Auto Close (Sunroof only): Slide the lever **B** forward to the farthest position and release.


Slide the Sunroof (with Sunshade open):

Open: Press the Sunroof lever **B** backward and press again forward/backward until you reach the desired detent position (manual slide feature).

Close: Press the Sunroof lever **B** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

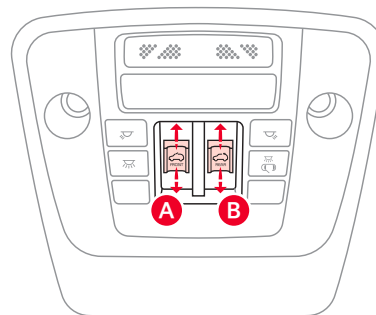

 (Front overhead console for Front & Rear Sunroof controls)

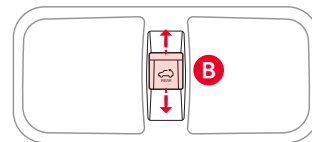

(Rear overhead console for Rear Sunroof controls)

QR CODE

Sunroof Operation Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.

REMINDERS:

 
- When the Power Window Lock is depressed, the Rear Sunroof controls cannot operate the Rear Sunroof
- The Sunshade needs to remain OPEN while the Sunroof is open and the vehicle is moving
- Do not adjust the Sunroof or Sunshade while driving. This could result in loss of control of the vehicle

Hood Release Lever and Latch


Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood
3. Pull out the support rod from the Hood and set into place to hold the Hood open

REMINDER: Open the Hood only after turning the engine off, on a flat surface, with the gear shift in **P** (Park) position and setting the parking brake.

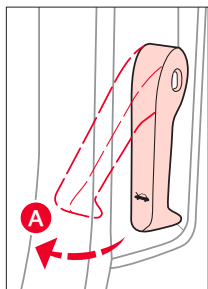

 (Lever located near floor below Driver's Panel)

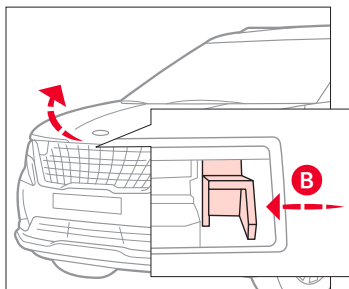

(Secondary latch located inside lip of Hood)

Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINERS:

 
 
- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in **P** (Park) position and setting the parking brake

Refer to section 4 in the Owner's Manual for more information.

Fuel Filler Door Release

To open the Fuel Filler door:

1. Ensure Driver's door is unlocked. Then press the right center edge of the Fuel Filler door **C**
 2. Pull the Fuel Filler door out to fully open **D**
- To open the Fuel Cap, turn it counterclockwise **E**.

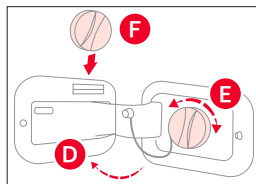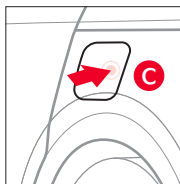

QUICK TIP

Place the Fuel Cap on the inside of the Fuel Filler Door when fueling **F**.

REMINERS:

- The fuel filler door will unlock when Driver's door is unlocked
- To unlock fuel filler door:
 - Press the unlock button on your smart key
 - Press the Central Door unlock button on armrest trim of driver's door
 - Pull the driver's inside door handle outward
 - The fuel filler door will lock when all doors are locked
- To lock fuel filler door:
 - Press the lock button on your smart key
 - Press the Central Door lock button on armrest trim of driver's door
 - All doors and fuel filler door will automatically lock after the vehicle speed exceeds 9 mph

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

Refer to section 4 in the Owner's Manual for more information.

REMINERS:

- Vehicle must be unlocked first before attempting to open fuel door
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

QR CODE

Kia Fuel Cap Video



Fuel Filler Door Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

HomeLink® †2 with Auto-Dimming Rearview Mirror*

The HomeLink® / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- | | |
|---|---|
| A HomeLink® Channel 1 | E HomeLink® Operation Indicator |
| B HomeLink® Channel 2 | F Garage Door Opener Status Indicator: Opening or Open |
| C HomeLink® Channel 3 | G HomeLink® User Interface Indicator |
| D Garage Door Opener Status Indicator: Closing or Closed | |

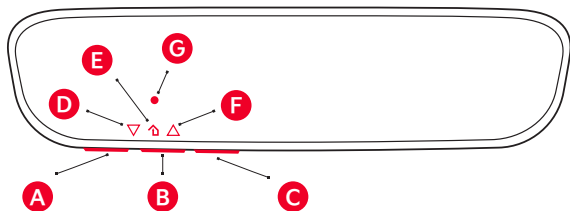 

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters

How to Sync Transmitter with HomeLink®*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **C** buttons simultaneously until the indicator light **G** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A B C** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the **A** and **C** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink® Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

QR CODE

Homelink® Support Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Seat Belts^{†13}

 
To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

Seat Belt Retractor Locks^{†18}

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

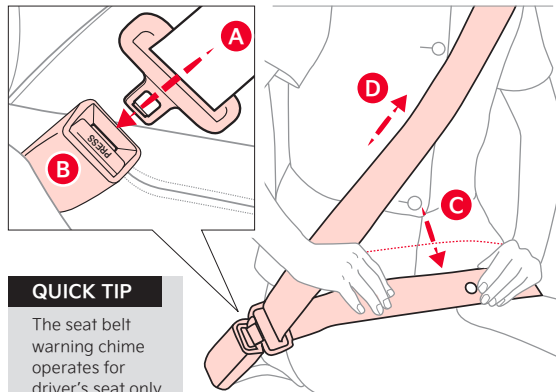

QUICK TIP

The seat belt warning chime operates for driver's seat only.

Refer to section 3 in the Owner's Manual for more information.

 
Occupant Detection System (ODS)^{†10} / Passenger Airbag Off Indicator^{†10}

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate.

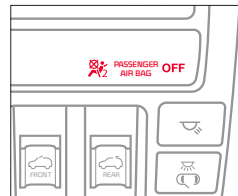

(Indicator displays on overhead panel)

Child-Protector Rear Door Lock (Manual)*

Located on the front edge of the rear passenger doors, move the Child-protector rear door lock to the lock position  to disable the inner door handles from opening the rear passenger doors.

Refer to section 4 in the Owner's Manual for more information.

 
QR CODE

LATCH Anchors for the Child Restraint System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 3 in the Owner's Manual for more information.

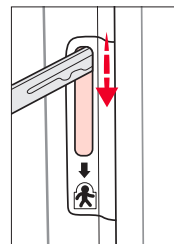

(Located on the front edge of the rear passenger doors)



CARNIVAL NORMAL MAINTENANCE SCHEDULE

(up to 64,000 miles)*

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Rotate tires (Every 8,000 miles)	P	P	P	P	P	P	P	P
Add fuel additive ¹	P	P	P	P	P	P	P	P
Engine oil and filter (Full Synthetic Oil)	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Air cleaner filter	I	I	R	I	I	R	I	I
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hoses	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Steering gear rack, linkage and boots	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Brake fluid	I	I	I	I	I	R	I	I
Parking brake (foot type)	I	I	I	I	I	I	I	I
Driveshaft and boots		I		I		I		I
Fuel tank and fuel cap		I		I		I		I
Fuel tank air filter ¹²		I		I		I		I
Vapor hose and fuel filler cap		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I
Cooling system				I		I		I
Drive belts ³						I	I	I

P=Perform R=Replace I=Inspect**

* See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule

** And, if necessary, adjust, correct, clean or replace

† If equipped

1. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives

2. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

3. The drive belt should be replaced when cracks occur or tension is reduced excessively
See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

QR CODE

Kia Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect account by logging into your Kia Access App or your account on <https://owners.kia.com/> (Vehicles equipped with Kia Connect only - See page 34 for setup information)

© 2022 Kia America, Inc.
All rights reserved.

Part Number: KA230-PS-004

Consumer - Roadside Assistance¹¹:
1-800-333-4KIA (4542)

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **Kia Connect:** Purchase/lease of certain 2022 and newer Kia vehicles with Kia Connect includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access app is available from the Apple® App Store® or Google Play Store®. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.

2. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.

3. **Driver Assist Features: Blind-Spot Collision-Avoidance Assist (BCA), Blind-Spot View Monitor (BVM), Safe Exit Assist (SEA), Rear Cross-Traffic Collision Avoidance Assist (RCCA), Lane Following Assist (LFA), Lane Keeping Assist (LKA), Forward Collision-Avoidance Assist (FCA), Highway Driving Assist (HDA), Intelligent Speed Limit Assist (ISLA), Forward/Reverse Parking Distance Warning (PDW), Rear View Monitor (RVM), Surround View Monitor (SVM), Rear Occupant Alert with Ultrasonic Sensors (ROA), Leading Vehicle Departure Alert (LVDA), Blind-Spot View Monitor (BVM), Smart Cruise Control (SCC) with Stop & Go, Navigation-based Smart Cruise Control (NSCC), Cruise Control (CC):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

4. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

5. **Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

6. **Engine Start/Stop Button Smart Key with Remote Start:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

7. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.

8. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

9. **Rear Occupant Alert (ROA) with Ultrasonic Sensors:** When engaged, ROA with Ultrasonic Sensors is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.

10. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.

11. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.

12. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

13. **Seat belts/Airbags:** For maximum protection, always wear your seatbelt.

14. **Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

15. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2022 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

16. **Smart Power Liftgate®:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

17. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

18. **Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.

19. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.

20. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

21. The **myQ logo** is a registered trademark of The Chamberlain Group, Inc.