



GETTING TO KNOW YOUR **2023 BLAZER**




chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Blazer. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

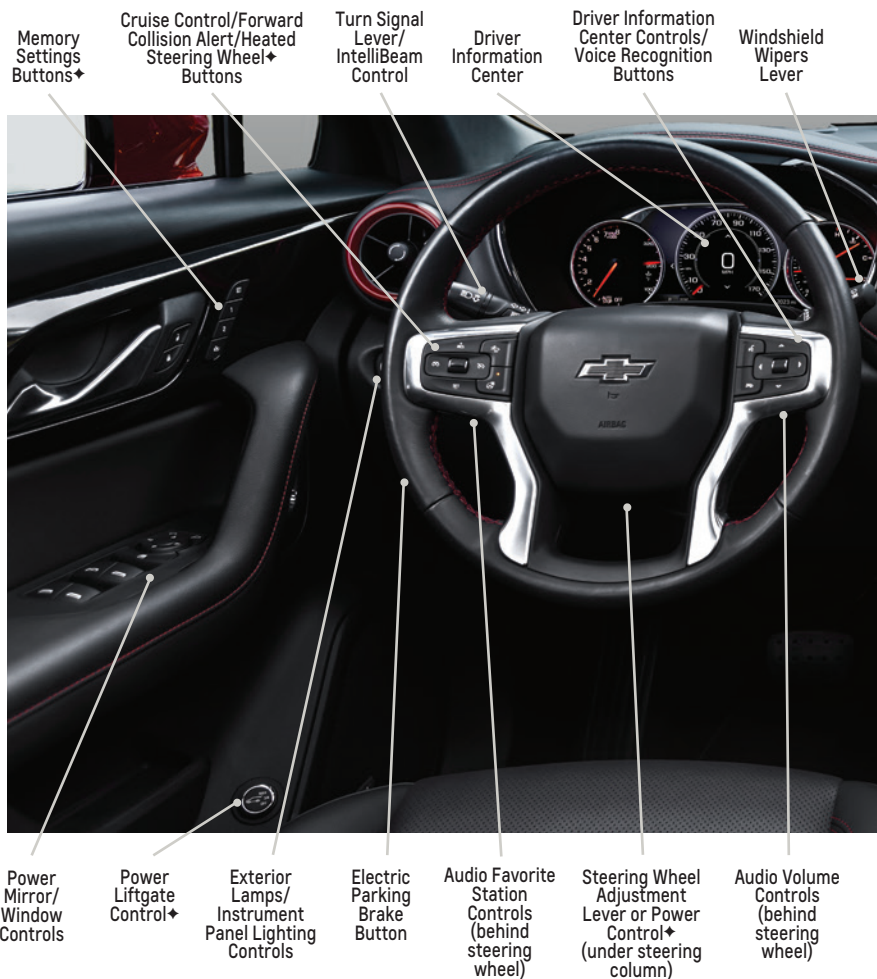

SYMBOLS

	Low Fuel		Lane Keep Assist		Electric Parking Brake
	Brake System		Vehicle Ahead		Check Engine
	Cruise Control Set		Airbag Readiness		Traction Control Off
	Security		Engine Oil Pressure		Lights On Reminder



RS model shown

-  Antilock Brake System
-  Charging System
-  Seat Belt Reminder

-  Door Ajar
-  Low Tire Pressure

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Press and hold to lower all windows[♦], if enabled in the Vehicle Settings.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The horn will sound 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.



Power Liftgate[♦]

Press twice to open or close the liftgate.

Press once to stop power liftgate operation.



Remote Vehicle Start[♦]

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.
- The heated/ventilated seats[♦] will turn on, if enabled in the Vehicle Settings.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and liftgate.
- ▶ Press the button on a passenger door handle to unlock all doors and liftgate.
- ▶ Press the touchpad on the bottom of the liftgate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the front cupholder of the center console to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate.

See *Driving and Operating* in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.



The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current climate control settings require the engine to run.
- The Auto Stop has reached the maximum allowed time.

DISABLING AUTO ENGINE STOP/START

- ▶ Press the  **Auto Stop** button on the center of the instrument panel to turn off the engine stop/start system. The button indicator turns off when the system is disabled.

The system automatically turns on each time the vehicle is started.

See *Driving and Operating* in your Owner's Manual.

POWER FRONT SEATS◆

POWER SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the control to slide the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the top of the control to recline or raise the seatback.

C. Lumbar Adjustment (Driver's Seat Only)

Move the control to adjust the lumbar support.



MEMORY SETTINGS◆

1. With the vehicle in Park, adjust the driver's seat, power steering column◆, and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** or **2** until two beeps sound.

To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.



RECALL MEMORY SETTINGS◆

- ▶ Press and hold button **1**, **2**, or  **Exit** until the set position is reached.
- ▶ To enable the memory settings to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

REAR SEAT ADJUSTMENTS

- ▶ Pull the lever (A) on the side of the seat and move the seatback to the desired position. Release the lever.
- ▶ Lift up the bar (B) under the seat and slide the seat to the desired position.



FOLDING THE REAR SEAT

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever (A) on the side of the seat and fold the seatback forward. From the cargo area, pull the lever on each side of the cargo area to fold the driver-side rear seatback or passenger-side rear seatback.

See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, pull the lever under the steering column to adjust the steering wheel up or down, and closer or farther away. Push up the lever to lock the steering wheel in place.
- ▶ With the vehicle parked, press the power control[◆] under the steering column to adjust the steering wheel up or down, and closer or farther away.



Power control[◆] shown

See Instruments and Controls in your Owner's Manual.

POWER LIFTGATE[◆]

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the  **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the  button (C) left of the liftgate latch to close the liftgate.




PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the  **Power Liftgate** knob (A) to the 3/4 mode.
2. Open the liftgate and adjust it manually to the desired position.
3. To save the setting, press and hold the  button (C) left of the liftgate latch until the turn signals flash and a beep sounds.
4. With the knob in the 3/4 mode, the liftgate will open to the saved position.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. Depending on operating conditions, the Chevrolet logo is projected on the ground near the rear bumper to indicate the kicking motion location.

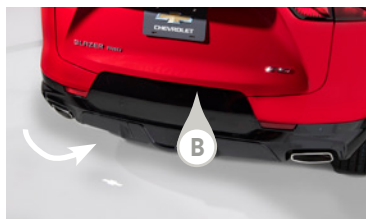

See Keys, Doors and Windows in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view the Info and Options menus (with base infotainment system) or the Info, Audio, Navigation, Phone and Options menus (with uplevel infotainment system[♦]).

- ▶ Press the ◀ or ▶ button to move to a display zone or menu.
- ▶ Rotate the thumbwheel up or down to move through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

SELECT INFO PAGES[♦]

1. Use the controls to open the Options menu.
2. Scroll to Info Pages. Press the ▶ button to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.



TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

BUCKLE TO DRIVE

When enabled in the Teen Driver settings, Buckle to Drive prevents the vehicle from shifting out of Park if the engine is running, the brake pedal is pressed, and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park after several seconds. Shifting from Park is prevented once each ignition cycle.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures, such as tap, drag and swipe, on the touchscreen to interact with the system. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See *Infotainment System* in your Owner's Manual.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order. The source options are on the left side of the audio page.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.



Note: To change the number of favorites displayed, go to *Settings > System > Favorites*.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech. Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

SIRIUSXM[®] WITH 360L⁺

The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

APPLE CARPLAY[®] AND ANDROID AUTO[™]

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection:
 - **Wireless Connection** – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and the phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the  **Home** button.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit chevrolet.com/support for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, select the Phone icon > Phones >  Information.

See Infotainment System in your Owner's Manual

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Voice Recognition (Siri or Google Assistant) on a paired mobile phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

+ - Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station **(behind left side of steering wheel)**

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station buttons shown

See Infotainment System in your Owner's Manual.

PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to the USB data ports located on the center of the instrument panel.

- ▶ To play a device, touch Audio, and then touch More, if necessary, on the infotainment screen to select USB from the sources list.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT◆

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit **chevrolet.com/support**.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING◆

The Wireless Phone Charging system is located at the front of the center console. Visit **chevrolet.com/support** to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The ⚡ charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.


1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press < to exit each menu.



See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

CLIMATE CONTROLS

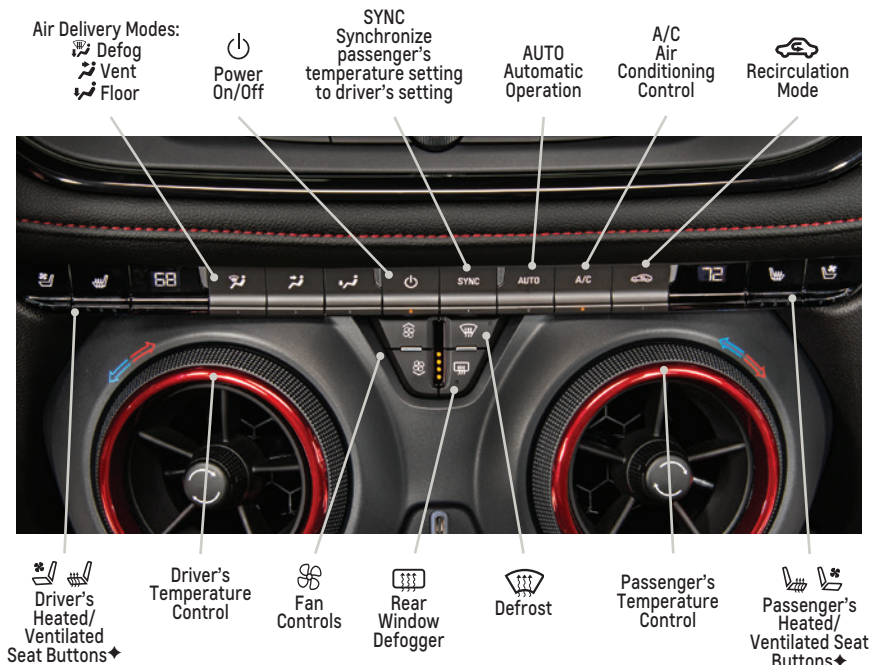

AUTOMATIC OPERATION

- ▶ Press **AUTO**.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If a function is manually adjusted, the Auto indicator turns off and automatic operation for that function is canceled.

See Climate Controls in your Owner's Manual.

AUTO HEATED/VENTILATED SEATS ♦

When the vehicle is on, the heated seats and heated steering wheel, or ventilated seats, will activate automatically based on the vehicle's interior temperature. Manually turn off the heated or ventilated seats using the seat controls. Manually turn off the heated steering wheel using the steering wheel control.

- ▶ To turn the auto heated seats and auto ventilated seats on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats or Auto Cooled Seats.

See Seats and Restraints in your Owner's Manual.

LIGHTING

LAMP CONTROLS

Rotate the knob (A) to activate the exterior lamps.

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Instrument Panel Brightness**

Press the knob (B) to extend it. Rotate the knob to adjust the instrument panel lighting.



INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ With the lamp control in the AUTO or  Headlamps position, press the  button on the turn signal lever to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to wash the windshield.



REAR WINDOW WIPER

Turn the end of the wiper lever to activate the rear wiper.

OFF

INT Intermittent Wipes

ON

 **Rear Washer Fluid**

Push the lever to wash the rear window and Rear Camera Mirror♦ lens.

See Instruments and Controls in your Owner's Manual.

DRIVER MODE CONTROL

The Driver Mode Control automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions on Front-Wheel-Drive (FWD) and All-Wheel-Drive (AWD) models.

- ▶ Rotate the Driver Mode Control knob on the center console to select the desired mode.

FWD MODELS

-  **Tour** – Use for normal driving.
-  **Snow/Ice** – Use for enhanced acceleration on snowy roads.
-  **Sport** – Use for enhanced handling and acceleration on dry pavement.
-  **Tow/Haul** – Use to reduce shift cycling when towing or hauling heavy loads.

AWD MODELS

-  **Tour** – Use for normal driving.
-  **All-Wheel Drive** – Use for enhanced responsiveness.
-  **Sport** – Use for enhanced handling and acceleration on dry pavement.
-  **Off-Road** – Use for enhanced driving on unpaved roads.
-  **Tow/Haul** – Use to reduce shift cycling when towing or hauling heavy loads.



FWD model shown



AWD model shown

See *Driving and Operating* in your Owner's Manual.

TRACTION CONTROL

The traction control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control** button on the center of the instrument panel to turn traction control off or on again. The  Traction Control Off light illuminates on the instrument cluster when the system is off.



See *Driving and Operating* in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

CHEVY SAFETY ASSIST PACKAGE

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle that you're following is detected ahead and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat  pulses or rapid beeps sound (if selected).

- Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control  gap setting.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center, if selected in the Info Pages. If no vehicle is detected ahead, dashes are displayed.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat  may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- To turn on or off, press the  **Lane Keep Assist** button (A) on the center console.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat  pulses or rapid beeps sound (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

- To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

Note: IntelliBeam automatic high-beam headlamps are included with the Chevy Safety Assist Package. See Lighting on page 14.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

SAFETY ALERT SEAT ♦ – The driver's seat pulses – left side, right side or simultaneously – to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat-pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT ♦ – While driving, the system displays a ⚠ symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR PARK ASSIST ♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ To turn on or off, press the  **Park Assist** button (B) on the center console.



REAR CROSS TRAFFIC ALERT ♦ – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

REAR VISION CAMERA – When in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph.

SURROUND VISION ♦ – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front and rear camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph.

- ▶ Touch one of the Camera View buttons on the infotainment screen to change the view.
- ▶ Touch the Guidance Lines button to change the guidelines.
- ▶ Touch the Top Down View button to display an image of the area surrounding the vehicle along with the front or rear camera view.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR◆

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull/push the lever at the bottom of the mirror to turn the video display on/off.

B. Selection Control

Press and release the button to select the brightness, tilt or zoom setting.

C. Adjustment

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the **On/Off** button. The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the thumbwheel down to the SET position to set the speed. The symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

+ RES Resume/Accelerate

Press the thumbwheel up to resume a set speed. When active, press up to increase speed 1 mph; press and hold to continue increasing speed.

- SET Set/Coast

When active, press the thumbwheel down to decrease speed 1 mph; press and hold to continue decreasing speed.

Cancel

Press the button, or press the brake pedal, to cancel Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL◆

The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the **Following Gap** button to select a targeted following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the **Cancel** button to switch between regular Cruise Control and Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

SUNROOF

The sunroof has a comfort stop feature that stops the sunroof from fully opening to reduce potential wind noise.

- ▶ Press and release the rear of the  **Sunroof** switch (A) to vent the sunroof. Press the rear of the switch again to express-open the sunroof to the comfort stop position. Press it again to fully open the sunroof.
- ▶ Press and release the front of the  **Sunroof** switch (A) to express-close the sunroof.
- ▶ Press and release the rear or front of the  **Sunshade** switch (B) to express-open or express-close the sunshade. Press it again to stop the sunshade.



See *Keys, Doors and Windows* in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See *Instruments and Controls* in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) **Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) button.

See *Driving and Operating* in your Owner's Manual.



TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

With the ignition On or in Accessory mode, the Tire Fill Alert will provide visual and audible alerts to help when inflating a tire to the recommended tire pressure (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

See *Vehicle Care* in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CHEVROLET ACCOUNT

Get to know your vehicle as well as view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at chevrolet.com/owners.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2022 General Motors LLC. All Rights Reserved.



84909241

**We recommend always using
ACDelco or GM Genuine Parts.**



84909241 A