



GETTING TO KNOW YOUR **2023 EQUINOX**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Equinox. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Power Mirror/
Window
Switches

Heated Steering Wheel*
Cruise Control/Forward
Collision Alert/Lane Keep
Assist Buttons

Turn Signal
Lever/
IntelliBeam
Control

Driver
Information
Center

Windshield
Wipers Lever

Voice Recognition
Buttons/Driver
Information Center
Controls



Memory Seat
Buttons*

Power
Liftgate
Control*

Instrument
Panel/Exterior
Lamp Controls

Audio Next/Previous
Favorite Station
Controls (behind
steering wheel)

Steering
Wheel
Adjustment
Lever

Audio Volume
Controls (behind
steering wheel)

Engine
Start/Stop
Button

SYMBOLS



Low Fuel



Traction Control Off

BRAKE

Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security

PARK

Electric Parking Brake



Electric Parking Brake Service



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist

Driver's Heated/Ventilated Seat Buttons ♦ Infotainment System Touchscreen Infotainment System Controls Auto Engine Stop-Start Disable/Hazard Warning Flashers Buttons Climate Controls Passenger's Heated/Ventilated Seat Buttons ♦



AWD Control ♦ Electric Parking Brake Switch Shift Lever Rear Park Assist ♦ / Automatic Parking Assist ♦ Buttons Wireless Phone Charging Pad ♦ USB Ports/Accessory Power Outlet

-  Vehicle Ahead
-  Antilock Brake System
-  Low Tire Pressure
-  Door Ajar
-  Charging System

-  Driver Seat Belt Reminder
-  Passenger Seat Belt Reminder

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.



Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The horn will sound 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the key fob to pull out the door lock key from the key fob. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or purse. The key fob must be within 3 feet of the liftgate or door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on the front passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

KEYLESS LOCKING

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any front door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.

Note: If the key fob battery is weak, place the key fob in the front cupholder of the center console to enable the engine to start. Replace the key fob battery as soon as possible.


STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button. The button indicator will be amber.

See Driving and Operating in your Owner's Manual.

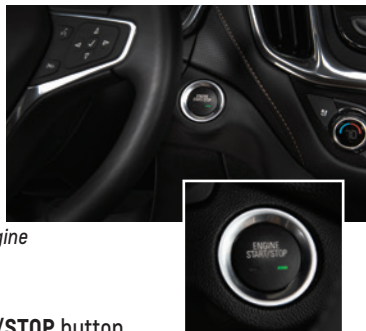

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF. The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current climate control settings require the engine to run.
- The Auto Stop time has reached the maximum allowed time.

DISABLING AUTO ENGINE STOP/START

- ▶ Press the  button, located below the infotainment screen, when the engine is running to disable the automatic engine stop/start system. When the system is disabled, the button indicator will not be illuminated.

The stop/start system is enabled each time the vehicle is started.



See Driving and Operating in your Owner's Manual.

BUCKLE TO DRIVE

Buckle to Drive prevents the vehicle from shifting out of Park if the engine is running, the brake pedal is pressed, and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park once the Driver Information Center message turns off after several seconds. Shifting from Park is prevented once each ignition cycle.

- ▶ To turn Buckle to Drive off or on again, go to Settings > Vehicle > Buckle to Drive on the infotainment screen. The vehicle may need to be restarted to register the setting change.

See Seats and Restraints in your Owner's Manual.

POWER SEATS

POWER SEAT ADJUSTMENTS

A. Seat Adjustment

Move the horizontal control to slide the seat forward or rearward, and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the amount of lumbar support.



SET MEMORY SEAT POSITIONS

1. Adjust the seat and power outside mirrors.
 2. Press and release the **SET** button; a beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound.
- ▶ To store a seat position for exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.



RECALL MEMORY SEAT POSITIONS


- ▶ Press and hold button **1**, **2**, or  **Exit**.
- ▶ For automatic recall, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

RECLINING THE REAR SEAT

- Pull the lever (A) on top of the seatback and move the seatback to the desired position. Release the lever.

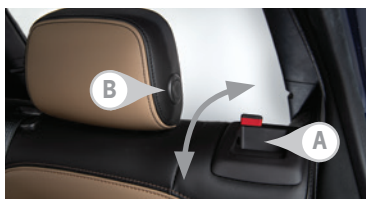

FOLDING THE REAR SEAT

1. Press the button on the head restraint (B). It will fold automatically.
2. Pull the lever (A) on top of the seatback – a tab near the lever is visible when the seatback is unlatched – and fold the seatback forward.

From the cargo area, pull the top lever♦ (C) (passenger-side seat) or bottom lever♦ (D) (driver-side seat) located on the passenger's side of the cargo area to fold either seatback.

3. Stow the seat belt in the belt clip.



See Seats and Restraints in your Owner's Manual.

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Always check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.



See Seats and Restraints in your Owner's Manual.

ELECTRIC PARKING BRAKE

- To apply the parking brake, pull the (P) Parking Brake switch on the center console.
- To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear, and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.


DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.


Use the controls on the right side of the steering wheel to select the Trip, Vehicle, or Eco menus (base DIC) or the Home, Info (includes trip and fuel information), Audio, Navigation, Phone, and Options menus (midlevel and uplevel DIC*). Go to Options > Info Page Options to select the pages to display in the Info menu.

DIC CONTROLS

- ▶ Press the ◀ or ▶ button to move to a display zone.
- ▶ Press the ▲ or ▼ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.

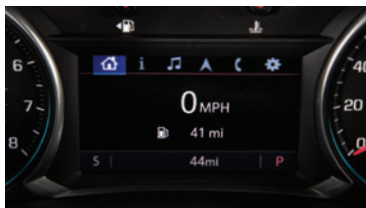

Uplevel DIC shown

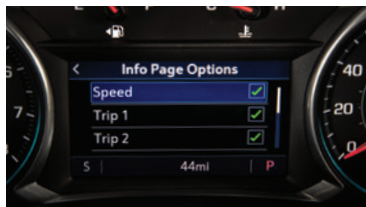

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Voice Recognition/Siri® Eyes Free on a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

+ - Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Applications[✦]:
Touch a
screen icon
to access
an app

Applications
Tray:
Shortcuts to
commonly
used apps

Home
page

SEEK
Previous
station or
track

Power/
Volume

SEEK
Next station
or track

Press to
answer a call
or view Phone
screen
(7-inch*
screen)

<BACK
Return to
previous screen
(8-inch*
screen[✦])

8-inch* screen shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For assistance, call 1-855-478-7767 or visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. Press the  Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

SETTING THE TIME

1. Touch Settings on the Home page.
 2. Select the System tab > Time/Date.
 3. Select Set Time.
 4. Touch the arrows to adjust the hours and minutes.
 5. Touch <BACK to exit the menu.
- Turn on Automatic Time and Date to have the time/date updated automatically.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order. Sources are on the left side of the Audio page.

1. Tune in the desired radio station.
2. Select the desired page of favorite buttons.
3. Touch and hold one of the favorite buttons until a beep is heard.



NATURAL VOICE RECOGNITION⁺

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech.
Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

IN-VEHICLE APPS⁺

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

PORTABLE AUDIO DEVICES

An iPod[®], iPhone[®], MP3 player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console or inside the center console storage compartment.

- Touch Audio, and then touch More, if necessary, to select the USB device.

The USB ports on the rear of the center console are for charging only.



INFOTAINMENT SYSTEM

APPLE CARPLAY® AND ANDROID AUTO™

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection while parked:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and the phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit chevrolet.com/support for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded, depending on the phone.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, select the Phone icon > Phones >  Information.


See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the Home page or go to Settings > System > Wi-Fi.

For more information on use and system limitations, visit chevrolet.com/support.

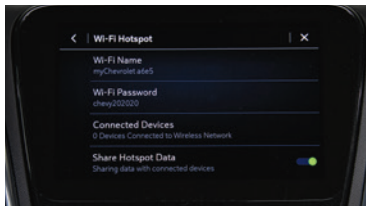

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The Wireless Phone Charging system is located at the front of the center console. Visit chevrolet.com/support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad, and align it against the back of the bin.
4. The ⚡ charging symbol will display on the infotainment screen when charging. If not charging, remove the phone for 3 seconds and rotate it 180 degrees before placing it on the pad again.



See Instruments and Controls in your Owner's Manual.


TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See Infotainment System in your Owner's Manual.

CLIMATE CONTROLS

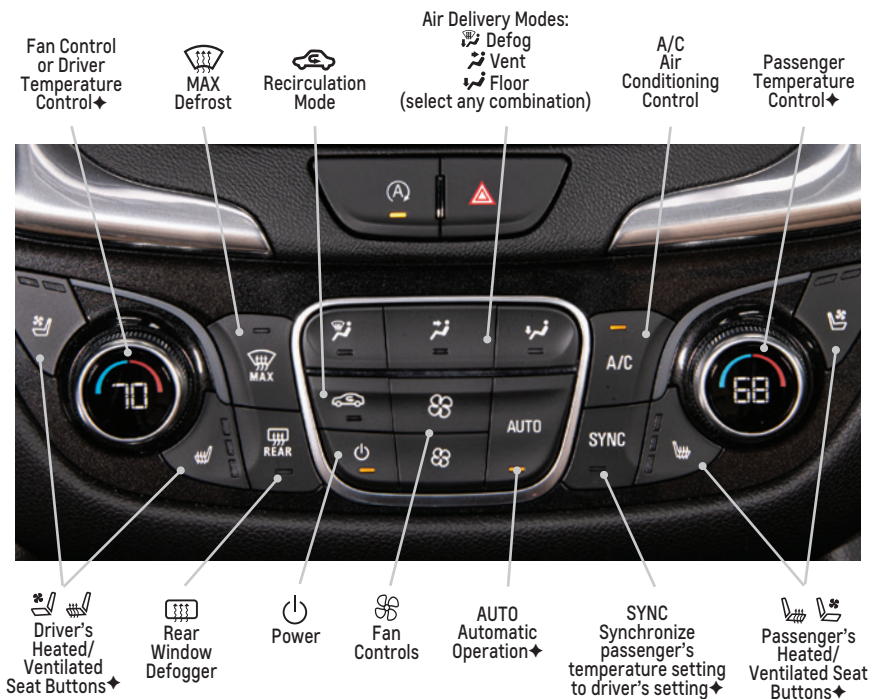

Dual automatic climate controls shown

AUTOMATIC OPERATION

- Press **AUTO**.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator turns off and automatic operation for that function is canceled.

AUTO DEFOG AND AUTO REAR WINDOW DEFOGGER

Auto Defog and Auto Rear Defog automatically turn on when the engine is started.

- Go to Settings > Vehicle > Climate and Air Quality to turn the Auto Defog and Auto Rear Defog settings on or off.

AIR VENTS

- Use the vent louvers to change the direction of the airflow. Move the slider knobs to open or close the vent.

See Climate Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT⁺ – The driver's seat may pulse on the left side, right side, or simultaneously, to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat-pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

TRACTION CONTROL AND STABILITRAK[®] – The full-time Traction Control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction Control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn Traction Control off or on, use the DIC controls to display the Vehicle menu > TCS (base DIC) or Options menu > Traction & Stability (midlevel and uplevel DIC⁺).

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat⁺ may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- ▶ To turn on or off, press the  Lane Keep Assist button (A) on the steering wheel.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected ahead that you're following and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat⁺ pulses (if selected).

- ▶ Press the  Forward Collision Alert button (B) on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.



FOLLOWING DISTANCE INDICATOR – The following distance is shown in seconds under the Driver Information Center Info menu. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

DRIVER ASSISTANCE SYSTEMS

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat[♦] pulses (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low visibility performance is limited.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT[♦] – While driving, the system displays a  warning symbol on the left- or right-side mirror when a vehicle is detected rapidly approaching or is in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR VISION CAMERA – When the vehicle is in Reverse, a view directly behind the vehicle is displayed on the infotainment screen.

HD SURROUND VISION[♦] – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph.



- ▶ Touch one of the Camera buttons on the infotainment screen to change the camera view.
- ▶ To turn the guidance lines on or off, touch the Guidance Lines button.

REAR CROSS TRAFFIC ALERT[♦] – When the vehicle is in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and directional beeps sound or the Safety Alert Seat[♦] pulses (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

FRONT AND REAR PARK ASSIST[♦] – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and beeps sound or the Safety Alert Seat[♦] pulses (if selected). When an object is very close, 5 beeps sound or the Safety Alert Seat[♦] pulses (if selected).

- ▶ To turn on or off, press the  Park Assist button on the center console.



See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **-SET** button to set the speed. The  symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

+ RES Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

- SET Set/Coast

When the system is active, press to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL⁺

The system enhances regular Cruise Control to maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a targeted following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

ALL-WHEEL DRIVE⁺

The vehicle can operate in two-wheel drive (2WD) or all-wheel drive (AWD). In 2WD, power is sent to the front wheels only and the vehicle may have better fuel economy. In AWD, power is sent to all four wheels for better traction.

- ▶ Press the **AWD** button in front of the shift lever to switch to AWD. The button indicator will flash when engaging AWD and stay illuminated when AWD is active. Press the button again to return to 2WD.



See Driving and Operating in your Owner's Manual.

EXTERIOR LIGHTING

EXTERIOR LAMP CONTROLS

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps** 

INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- Press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph. The system is turned off if the fog lamps are turned on.

See Lighting in your Owner's Manual.



WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to wash the windshield.

REAR WINDOW WIPER

Turn the end of the wiper lever.


OFF

INT Intermittent Wipes

ON

 **Rear Washer Fluid**

Push the lever to wash the rear window.

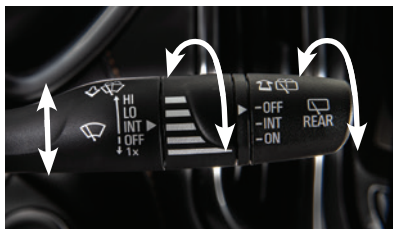

See Instruments and Controls in your Owner's Manual.

SUNROOF

The sunroof has a comfort stop feature that stops the sunroof from fully opening to reduce potential wind noise.

- ▶ From the closed position, press and release the rear of the  switch (A) to vent the sunroof. Press and release again to express-open the sunroof to the comfort stop position. Press it again to fully open the sunroof.
- ▶ Press and release the front of the  switch (A) to express-close the sunroof.
- ▶ Press the rear or front of the  switch (B) to open or close the sunshade.



See Keys, Doors and Windows in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

CARGO STORAGE FEATURES

UNDERFLOOR REAR CARGO STORAGE

Lift up the rear cargo floor (A) for additional storage space. Use the pull tabs to open or close the floor cover.



UMBRELLA STORAGE IN FRONT DOORS

The cargo bins in the front doors feature an upper storage area (B) designed to store an umbrella.

CARGO COVER

Extend the cargo cover to cover items in the rear of the vehicle. Remove the cover if more space is needed for stowing items. Store the cover under the cargo floor.

See Storage in your Owner's Manual.



POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the pull handle to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob (A) to the 3/4 mode.
2. Open the liftgate and adjust it manually to the desired position.
3. To save the setting, press and hold the button next to the pull handle (C) until the turn signals flash and a beep sounds.
4. With the knob in the 3/4 mode, the liftgate will open to the saved position.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. Depending on operating conditions, the Chevrolet logo is projected on the ground near the rear bumper to indicate the kicking motion location for hands-free operation.



See Keys, Doors and Windows in your Owner's Manual.

REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

Note: When using a portable gas can, insert the funnel adapter, stored under the spare tire, into the capless fuel fill.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ROADSIDE ASSISTANCE AND ONSTAR®

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CHEVROLET ACCOUNT

Get to know your vehicle as well as view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at chevrolet.com/owners.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2022 General Motors LLC. All Rights Reserved.



84895940

We recommend always using
ACDelco or GM Genuine Parts.



84895940 A