



GETTING TO KNOW YOUR **2023** **TRAILBLAZER**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Trailblazer. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Cruise Control+/
Forward Collision
Alert /Heated Steering
Wheel+ Buttons

Turn Signal
Lever/IntelliBeam
Control

Driver
Information
Center

Driver Information
Center Controls/
Voice Recognition
Buttons

Windshield
Wipers
Lever



Exterior Lamps/
Instrument
Panel Lighting
Controls

Power
Liftgate
Control+

Audio Favorite
Station or Seek
Controls (behind
steering wheel)

Steering Wheel
Adjustment Lever
(under steering
column)

Audio Volume
Controls
(behind
steering wheel)

Engine Start/
Stop Button+
(on instrument
panel)

SYMBOLS



Low Fuel



Traction Control Off

BRAKE



Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



Electric Parking Brake



Service Electric Parking Brake



Lights On Reminder



Airbag Readiness



 
Engine Oil Pressure



Check Engine



Lane Keep Assist

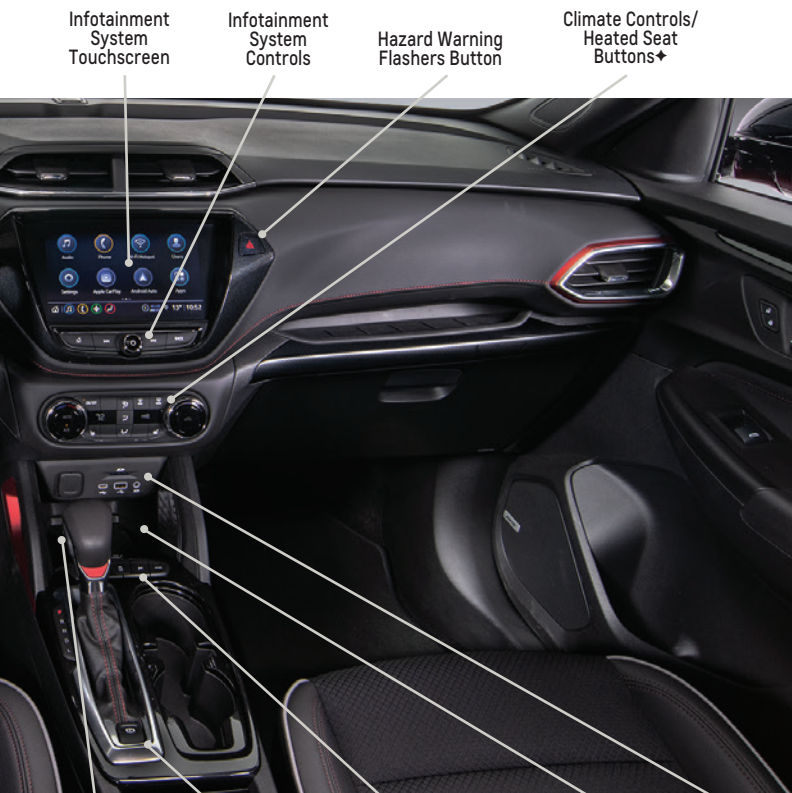

Vehicle Ahead



Charging System



Pedestrian Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Driver Seat Belt
Reminder



Passenger Seat Belt
Reminder

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.



Power Liftgate*

Press twice to open or close the liftgate.
Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
The horn sounds and lights flash 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start* on the infotainment screen.



Remote Vehicle Start*

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the key fob to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See *Keys, Doors and Windows* in your Owner's Manual.

KEYLESS ACCESS SYSTEM*

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or purse. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on the front passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the lock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start* on the infotainment screen.

See *Keys, Doors and Windows* in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

 
KEYED IGNITION (LS MODEL ONLY)

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

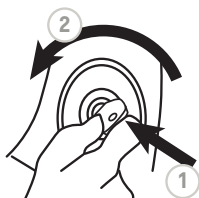

See *Driving and Operating* in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.



Note: If the key fob battery is weak, place the key fob in the pocket at the back of the small storage compartment in the center console to enable the engine to start. Replace the key fob battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate.

See *Driving and Operating* in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See *Instruments and Controls* in your Owner's Manual.

POWER FRONT SEATS

POWER SEAT ADJUSTMENTS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad (B) above the license plate to open the liftgate.
- ▶ Press the button (C) on the bottom edge of the liftgate to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button (C) on the bottom edge of the liftgate until the turn signals flash and a beep sounds.

HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. The Chevrolet logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

FOLDING FRONT PASSENGER SEATBACK ♦

The front passenger seatback can be folded flat for additional cargo space.

- ▶ With the head restraint lowered and the seat moved as far back as possible, lift the seatback adjustment lever at the base of the seatback to fold the seatback forward.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

FOLDING THE 40/60 REAR SEATBACKS

1. Press the button on the head restraint. The head restraint will fold automatically.
 2. Make sure the seat belt is in the retainer hook.
 3. Pull the lever on top of the seatback (A) and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
- ▶ To raise each seatback, lift it up until it locks in place.



See Seats and Restraints in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF. The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **Stop/Start** button on the center console to turn off the automatic engine stop/start system. The button indicator is illuminated when the system is off. The system turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle messages and information.

DIC CONTROLS

If equipped with the base DIC, use the controls on the right side of the steering wheel to select the Trip and Vehicle menus.

If equipped with the color DIC⁺, use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Navigation, Phone, and Options menus.

 
- ▶ Press the ◀ or ▶ button to move between the display zones. Press the ◀ button to exit a display menu.
- ▶ Rotate the thumbwheel up or down to scroll through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

SELECT INFO PAGES (COLOR DIC⁺)

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display in the Info menu.



Color DIC⁺ shown

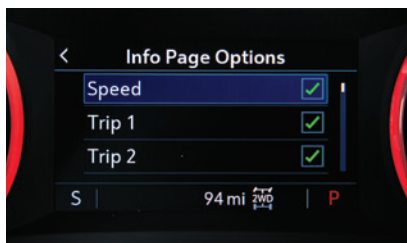

See Instruments and Controls in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) Parking Brake switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear, and an attempt is made to drive.

See Driving and Operating in your Owner's Manual.

CLIMATE CONTROLS



AUTOMATIC OPERATION

- Press AUTO.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

CLIMATE DISPLAY

- Select the Climate icon on the Home page of the infotainment screen to view the current operation of the Climate Controls.



See Climate Controls in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

Washer Fluid

Pull the lever to wash the windshield.

REAR WINDOW WIPER

Turn the end of the wiper lever.

 
OFF

INT Intermittent Wipes

ON

Rear Washer Fluid

Push the lever to wash the rear window.

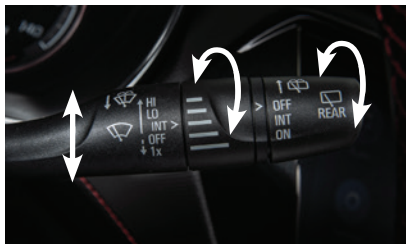

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition[♦] with the Bluetooth or OnStar[®] system.

Press and hold to activate Phone Assistant Voice Recognition (Siri or Google Assistant) on a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Seek

Rotate the thumbwheel to seek the next radio station when viewing the Audio display on the Driver Information Center.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station/Seek (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track, or to seek the next available station or track.

- To set the next/previous button to select favorites or activate the seek function, go to Audio menu > Favorite Button Setting on the Driver Information Center.



See Infotainment System in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag, and swipe, to interact with the system. For additional information, visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

STORING FAVORITES

 
Radio stations from all bands (AM, FM or SiriusXM[†]) can be stored in any order. The audio source options are on the left side of the Audio page.

1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.

BLUETOOTH VOICE RECOGNITION

Bluetooth voice recognition allows access to the voice recognition commands on a compatible, paired phone; e.g., Siri or Google Assistant.

- To activate Bluetooth Voice Recognition, press and hold the  **Push to Talk** button for a few seconds.

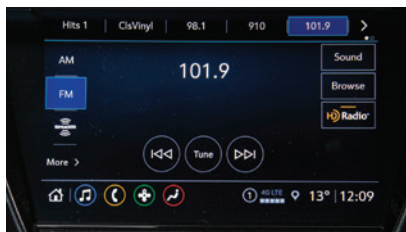

NATURAL VOICE RECOGNITION[†]

Control the music source, make phone calls hands-free (after pairing your Bluetooth-enabled phone), and perform other tasks using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. After the radio plays a prompt, say what you want it to do using natural speech. Examples: "Call Dave" or "Tune 99.5 FM." Say "Help" for assistance.

APPLE CARPLAY[®] AND ANDROID AUTO^{™†}

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection while parked:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and the phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the  **Home** button.

See Infotainment System in your Owner's Manual.

[†]Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

INFOTAINMENT SYSTEM

SIRIUSXM® WITH 360L ♦

The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

IN-VEHICLE APPS ♦

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-in, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

PORTABLE AUDIO DEVICES

USB ports (Type A and Type C) for data and charging are located near the front of the center console. Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB data port.

- ▶ Touch the Audio icon and then touch More, if necessary, to select the USB device as the audio source.

USB ports ♦ on the rear of the center console are for charging only.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING ♦

The Wireless Phone Charging system is located at the front of the center console. Visit chevrolet.com/support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad. There should not be any objects between the phone and the charging pad.
3. Place the phone, screen up, on the charging pad.
4. The ⚡ charging symbol will appear on the infotainment screen when charging.



See Instruments and Controls in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

 
PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Phone icon > Phones and select the  information icon.

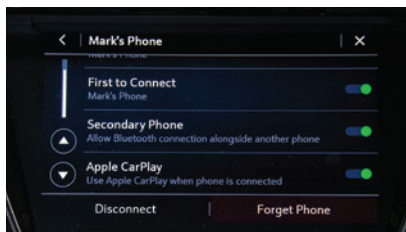

See Infotainment System in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the Settings menus and the touchscreen buttons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press  Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

ONSTAR® 4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit chevrolet.com/support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

LIGHTING

EXTERIOR LAMP CONTROLS

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps**▶

Press the button (A) to turn the fog lamps on or off.



INSTRUMENT PANEL LIGHTING

 **Instrument Panel Illumination**

Press and release the knob (B) to extend it. Turn the knob to adjust the instrument panel lighting.

INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions to provide enhanced visibility while driving at night. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ With the lamp control in the AUTO or  Headlamps position, press the  button (C) on the turn signal lever to turn the IntelliBeam system on or off.



Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

 
FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle that you're following is detected ahead and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle detected ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System on the infotainment screen.

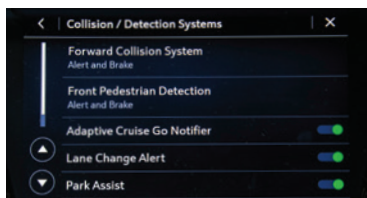

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

- To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection on the infotainment screen.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.



- To turn on or off, press the  **Lane Keep Assist** button (A) on the center console.

See *Driving and Operating* in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

DRIVER ASSISTANCE SYSTEMS

TRACTION CONTROL AND STABILITRAK – The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn on or off, press the  **Traction Control/StabiliTrak Off** button on the center console. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

 
LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert on the infotainment screen.

REAR CROSS TRAFFIC ALERT – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and sounding beeps.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert on the infotainment screen.

REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center. A beep sounds when an object is detected and 5 beeps sound when an object is very close.

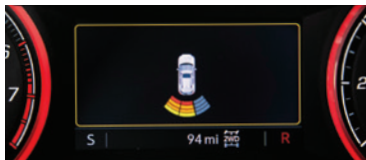

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.

REAR VISION CAMERA – When in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen.

- ▶ To turn the guidelines on or off, touch the Guidelines button at the bottom of the infotainment screen.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated (excluding the spare tire). Fill the tires to the recommended pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended cold tire pressure (excluding the spare tire). With the vehicle On, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

CRUISE CONTROL ♦

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the SET- position to set the speed. The  symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press up to resume a set speed. When active, press up to increase speed.

SET- Set/Coast

When active, press down to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL ♦

The system enhances regular Cruise Control to maintain a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  Cancel button to switch between  regular Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION MANUAL MODE

Manual mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving downhill or towing a trailer.

1. Move the shift lever to L (Low).
2. Press the + (plus) or – (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or low for the requested gear, the shift will not occur.



See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL ♦

The Driver Mode Control automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions on Front-Wheel Drive (FWD) and All-Wheel Drive (AWD) models. The Driver Mode Control buttons are located on the center console.

FWD MODELS

❄️ **Snow** – Provides more progressive throttle input for improved acceleration on snow- and ice-covered roads.

🏎️ **Sport** – Modifies steering effort and shifting for a sportier feel and response.

AWD MODELS

AWD All-Wheel Drive – Adds unique calibrations for more rear-wheel torque at lower speeds to improve the driving experience on moderately steep and unpaved surfaces.

🏎️ **Sport** – Modifies steering effort and shifting for a sportier feel and response.



 
AWD model shown

See *Driving and Operating* in your Owner's Manual.

CARGO STORAGE

ADJUSTABLE CARGO FLOOR

- ▶ Lift up the cargo floor for access to additional storage space.
- ▶ Remove and reinstall the cargo floor on the upper or lower floor brackets (A) to adjust the height of the floor. Use the upper brackets to create a flat load floor when folding the rear seat.

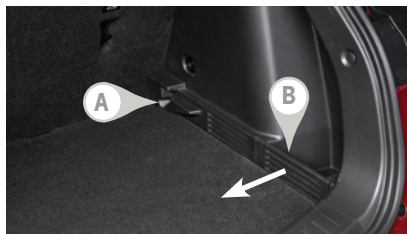

REVERSIBLE CARGO FLOOR

- ▶ Turn over the cargo cover floor for a rugged, easy-to-clean surface that provides convenient storage for dirty or damp items.

CARGO SIDEWALL STORAGE

- ▶ Detach the lower storage dividers (B) on either side of the cargo area for additional storage space for longer items. To remove a storage divider, pull outward to unsnap the tabs securing the divider.

See *Storage* in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security Plan, press the blue **OnStar** button or red **Emergency button** (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

*The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.*

MY CHEVROLET ACCOUNT

Get to know more about your vehicle and view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **chevrolet.com/owners**.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2023 General Motors LLC. All Rights Reserved.



84883546

We recommend always using
ACDelco or GM Genuine Parts.



84883546 C