



GETTING TO KNOW YOUR **2023** **TRAVERSE**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Traverse. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Memory
Seat
Buttons


Cruise Control/
Forward Collision
Alert/Heated Steering
Wheel Buttons

Turn Signal
Lever/
IntelliBeam
Control

Driver
Information
Center

Windshield
Wipers
Lever

Voice Recognition
Buttons/Driver
Information Center
Controls

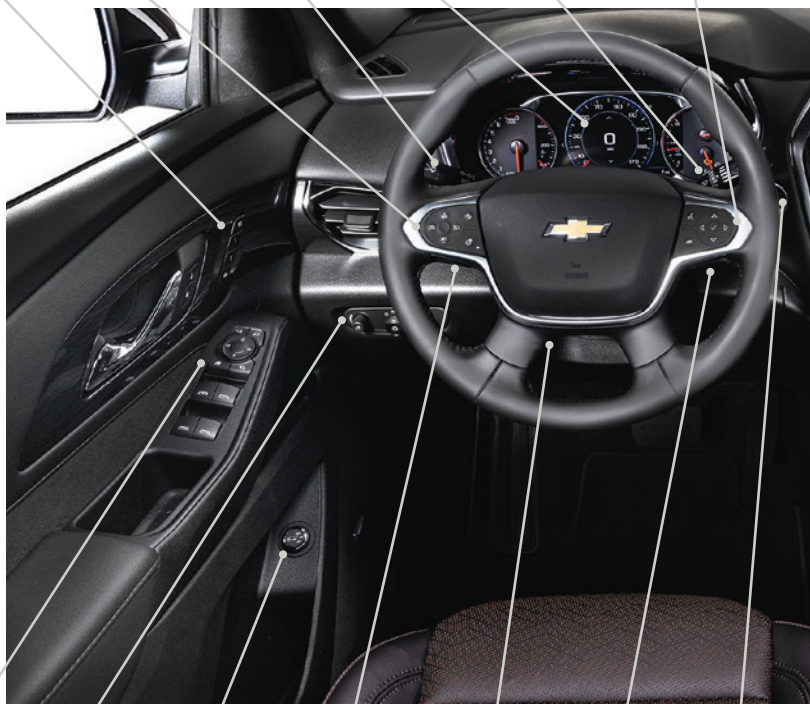

Power
Mirror/
Window
Switches

Instrument
Panel/
Exterior
Lamp
Controls

Power
Liftgate
Control

Audio Next/
Previous Favorite
Station Controls
(behind steering
wheel)

Steering
Wheel
Adjustment
Control

Audio Volume
Controls
(behind
steering wheel)

Engine
Start/Stop
Button

SYMBOLS



Low Fuel



Traction Control Off

BRAKE

Brake System



Cruise Control



Adaptive Cruise Control



StabiliTrak Off



Forward Collision Alert



Security

PARK

Electric Parking Brake



Service Electric Parking
Brake



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist

Hazard
Warning
Flashers
Button

Infotainment
System
Touchscreen

Infotainment
System
Controls

Storage
Compartment
(behind
touchscreen)

Climate
Controls



Driver's
Heated/
Ventilated
Seat Buttons

Electric
Parking
Brake
Switch

Driver Mode
Selector/Auto
Stop-Start Disable
Button/Lane Keep
Assist Button

Shift
Lever

Wireless
Phone
Charging
Pad

USB Ports/
Accessory
Power Outlet

Passenger's
Heated/
Ventilated Seat
Buttons



Vehicle Ahead



Pedestrian Ahead



Antilock Brake System



Low Tire Pressure



StabiliTrak Active



Auto Stop Disable



Door Ajar



Charging System



Driver Seat Belt
Reminder



Front Passenger Seat
Belt Reminder

Certain features shown not available with all configurations. See dealer for details.

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.



Power Liftgate*

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm.

Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.



Remote Vehicle Start*

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or purse. The key fob must be within 3 feet of a door or within 3 feet of the liftgate.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad on the handle at the bottom of the liftgate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.

Note: If the key fob battery is weak, place the key fob in the pocket of the center console storage compartment to enable the engine to start. Replace the key fob battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The button indicator will be amber.

See Driving and Operating in your Owner's Manual.



AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions.

- ▶ Press the **Auto Stop** button on the center console to turn off the engine stop/start system. The button indicator turns off when the system is disabled.

The system automatically turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

BUCKLE TO DRIVE

Buckle to Drive prevents the vehicle from shifting out of Park if the engine is running, the brake pedal is pressed, and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park once the Driver Information Center message turns off after several seconds. Shifting from Park is prevented once each ignition cycle.

- ▶ To turn off or on again, go to Settings > Vehicle > Buckle to Drive on the infotainment screen. The vehicle may need to be restarted to register the setting change.

See Seats and Restraints in your Owner's Manual.

POWER FRONT SEATS

SEAT CONTROLS

A. Seat Adjustment

Move the horizontal control to slide the seat forward or rearward, and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



MEMORY SEATS

1. Adjust the seat, power outside mirrors and power steering column. ♦
2. Press and release the **SET** button; a beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound.



- ▶ To save a seat position for more clearance when entering or exiting the vehicle, repeat these steps using the  **Exit** button instead of button 1 or 2.

RECALL MEMORY POSITIONS

- ▶ Press and hold button 1, 2, or  **Exit** until the saved position is reached.
- ▶ To set the memory/exit positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever or use the power control ♦ under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.



See Instruments and Controls in your Owner's Manual.

REAR SEATS

ENTER OR EXIT THE 3RD-ROW SEATS

1. Remove anything on the 2nd-row seat or the floor in front of, or behind, the seat.
2. On the passenger-side seat, pull the handle on top of the seatback (bench seat only) or on the side of the seatback (A) and pull the seat forward.
3. After entering/exiting, move the seatback rearward until it locks in place.

Note: The 2nd-row passenger-side seat can be moved for 3rd-row entry/exit with a forward-facing child seat installed. Remove a rearward-facing child seat before moving the 2nd-row seat.



RECLINE THE 2ND-ROW SEATBACKS

- While seated, pull the lever on the side of the seat cushion (B) and move the seatback to the desired position.



SLIDE THE 2ND-ROW SEATS

- Lift the bar under the seat cushion (C) to slide the seat forward or rearward.

FOLD THE 2ND-ROW SEATS

1. Pull the lever on the side of the seat cushion (B) and fold the seatback forward.
2. To raise the seatback, lift it up until it locks in place.



FOLD THE 3RD-ROW SEATS

1. Adjust the 2nd-row seat to allow the 3rd-row seat to fold fully flat.
2. Remove anything on or under the 3rd-row seat.
3. Use the Remote Keyless Entry transmitter door key in the mini-buckle slot to disconnect the mini-latch of the center seat belt and stow the mini-latch in the headliner.
4. Pull the release strap to release the seatback and fold the seatback forward or press the power seatback switches (D) on the passenger's side of the rear cargo area.



REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Always check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.

See Seats and Restraints in your Owner's Manual.

AUTO HEATED/VENTILATED SEATS ♦

When the vehicle is started, the auto heated seats and auto heated steering wheel, or auto ventilated seats, will activate automatically based on the vehicle's interior temperature. Manually turn off the heated or ventilated seats using the seat controls. Manually turn off the heated steering wheel using the steering wheel control.

- ▶ To turn the auto heated seats and auto ventilated seats on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats or Auto Cooled Seats.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE ♦

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the  **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the  button (B) next to the liftgate latch to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the  **Power Liftgate** knob (A) to the 3/4 mode.
2. Open the liftgate and adjust it manually to the desired position.
3. To save the setting, press and hold the  button (B) next to the liftgate latch until the turn signals flash and a beep sounds.
4. With the knob in the 3/4 mode, the liftgate will open to the saved position.



HANDS-FREE OPERATION ♦

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. Depending on operating conditions, the Chevrolet logo is projected on the ground near the rear bumper to indicate the kicking motion location.



See Keys, Doors and Windows in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view the Info and Options menus (with base infotainment system); Info, Audio, Phone and Options menus (with mid-level infotainment system); or Info, Audio, Phone, Navigation and Options menus (with up-level infotainment system).

- ▶ Press the ◀ or ▶ button to move to a display zone or menu.
- ▶ Press the △ or ▽ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.



INFO PAGES MENU

1. Use the controls to display the Options menu. Press ✓.
2. Scroll to display Info Pages. Press ▶ to view the items.
3. Press △ or ▽ to scroll through the list of items.
4. Press ✓ to select or deselect an item to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Voice Pass-Thru (Siri or Google Assistant) on a paired, compatible phone.



End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.



+ - Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

△ ▽ Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Applications:
Touch a screen icon to access an app

Applications Tray:
Shortcuts to commonly used apps

Home page

SEEK
Previous radio station or track

Power/
Volume

SEEK
Next radio station or track

Press to answer a call or view Phone screen (7-inch* screen)

Press to open storage compartment* (8-inch* screen)

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For additional information, visit chevrolet.com/support.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM*) can be stored in any order.

1. Tune in the desired radio station. Sources are on the left side of the Audio page.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

NATURAL VOICE RECOGNITION♦

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech. Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

IN-VEHICLE APPS♦

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-in, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to **onstar.com** for data plan information.

APPLE CARPLAY® AND ANDROID AUTO™

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and the phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the  Home button.

PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console.

- To play a device, touch Audio on the infotainment screen; and then touch USB from the Sources list or touch More to view the USB option.

The USB ports on the rear of the center console are for charging only.

4G LTE WI-FI HOTSPOT♦

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit chevrolet.com/support for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, select the Phone icon > Phones or Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, select the Phone icon > Phones and then the  Information icon next to the phone name.

See Infotainment System in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.

- To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.


See Infotainment System in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus on the infotainment screen.

1. Select Settings on the Home page.
2. Select the System, Apps or Vehicle menu.
3. Select the desired feature and setting.
4. Press < to exit each menu.

See Infotainment System in your Owner's Manual.

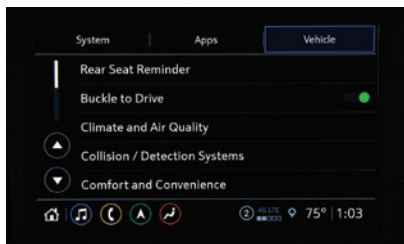

Some equipment shown may not be included in your vehicle.

WIRELESS PHONE CHARGING♦

If equipped, the Wireless Phone Charging system is located at the front of the center console. Visit chevrolet.com/support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The ⚡ charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

SUNROOF/SUNSHADE♦

- ▶ Press and release the rear of the  **TILT** switch to vent the sunroof. Press the front of the switch to close the sunroof.
- ▶ Press and release the rear of the  **SLIDE** switch to express-open the sunroof. Press the front of the switch to express-close the sunroof.
- ▶ Press up the handle on the front sunshade and slide it back to open the sunshade. Pull the handle forward until it latches to close the sunshade.
- ▶ Press and hold the rear or front of the  **Sunshade** switch to open or close the rear sunshade.



See Keys, Doors and Windows in your Owner's Manual.

AUTOMATIC TRANSMISSION

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. Move the shift lever to L (Low).
2. Press the + (plus) or - (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.



If vehicle speed is too high or too low for the requested gear, the shift will not occur.

See Driving and Operating in your Owner's Manual.

DRIVER MODE SELECTOR

The Driver Mode Control system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions on Front-Wheel-Drive (FWD) and All-Wheel-Drive (AWD) models.

- ▶ Rotate the Driver Mode Selector knob on the center console to select:

- /1\ Tour (FWD models) or
- /2\ Tour (AWD models)
- /4\ All-Wheel Drive (AWD models)
- ❄ Snow (FWD models)
- 🏔 Off-Road (AWD models)
- 🚛 Tow/Haul

The AWD indicator will illuminate when an all-wheel-drive mode is selected.

Note: The modes displayed vary depending on vehicle equipment.



See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green.

ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When active, press to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL

The system enhances regular Cruise Control to maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a targeted gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between  regular Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

EXTERIOR LIGHTING

EXTERIOR LAMP CONTROLS

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- To turn the IntelliBeam system on or off, press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.



WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to wash the windshield.



REAR WINDOW WIPER

Turn the end of the wiper lever.

OFF

INT Intermittent Wipes

ON

 **Rear Washer Fluid**

Push the lever to wash the rear window and Rear Camera Mirror lens*.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

CHEVY SAFETY ASSIST PACKAGE

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle that you're following is detected ahead and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat[♦] pulses or rapid beeps sound (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control[♦] gap setting.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center, if selected in the Info Pages. If no vehicle is detected ahead, dashes are displayed.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat[♦] may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- ▶ To turn on or off, press the  **Lane Keep Assist** button on the center console.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat[♦] pulses or rapid beeps sound (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

Note: IntelliBeam automatic high-beam headlamps are included with the Chevy Safety Assist Package. See Exterior Lighting on page 15.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

SAFETY ALERT SEAT♦ – The driver's seat pulses – left, right, or both sides – to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat-pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT♦ – While driving, the system displays a ⚠ warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR PEDESTRIAN ALERT♦ – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat♦ pulses or rapid beeps sound (if selected). Nighttime and low visibility performance are limited.

- ▶ To set to Alert or Off, go to Settings > Vehicle > Collision/Detection Systems > Rear Pedestrian Detection.

REAR PARK ASSIST♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat♦ pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat♦ pulses or 5 beeps sound (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.

REAR CROSS TRAFFIC ALERT♦ – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat♦ or sounding beeps (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

REAR VISION CAMERA – When in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph. Camera View buttons are at the bottom of the screen.

HD SURROUND VISION♦ – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. It works at low speeds and can help when parking.

- ▶ Touch one of the Camera View buttons on the bottom of the screen to change the view.
- ▶ Touch the Hitch View button for a view of the hitch area and guidance lines.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR◆

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull/push the lever at the bottom of the mirror to turn the video display on/off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS

Air Delivery Modes:



Driver's
Temperature
Control



A/C
Air Conditioning
Control

Passenger's
Temperature
Control



Driver's Heated/
Ventilated Seat
Buttons◆

REAR
Rear Window
Defogger

Recirculation
Mode

Power

Fan
Controls

AUTO
Automatic
Operation

SYNC
Synchronize
all settings to
driver's settings

Passenger's
Heated/
Ventilated
Seat Buttons◆

AUTOMATIC OPERATION

► Press **AUTO** and set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning, and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, automatic operation for that function is turned off.

REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the control panel on the rear of the center console or the rear climate display on the infotainment screen.

See Climate Controls in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) **Parking Brake** switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.

See *Driving and Operating* in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See *Instruments and Controls* in your Owner's Manual.

HIDDEN STORAGE

REAR CARGO STORAGE

- ▶ Lift up the rear cargo floor for additional storage space.

Remove the storage bin to access the spare tire. Refer to your Owner's Manual for instructions.



INFOTAINMENT SCREEN STORAGE♦

- ▶ Press the  Storage Compartment button to access the storage area behind the infotainment screen.

See *Storage* in your Owner's Manual.



TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The (T) Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

With the ignition On or in Accessory mode, the Tire Fill Alert will provide visual and audible alerts to help when inflating a tire to the recommended tire pressure (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from a flashing to a solid light.

See *Vehicle Care* in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CHEVROLET ACCOUNT

Get to know your vehicle and view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at chevrolet.com/owners.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2023 General Motors LLC. All Rights Reserved.



84999705

We recommend always using
ACDelco or GM Genuine Parts.



84999705 B