



GETTING TO KNOW YOUR 2023 TERRAIN



gmc.com

Review this quick reference guide for an overview of some important features in your GMC Terrain. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at gmc.com/owners.


For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

- Power Mirror/Window Controls
- Memory Seat Buttons
- Cruise Control/Forward Collision Alert/Heated Steering Wheel Buttons
- Turn Signal Lever/Exterior Lamp Controls
- Driver Information Center
- Windshield Wipers Lever
- Driver Information Center Controls/Voice Recognition Buttons

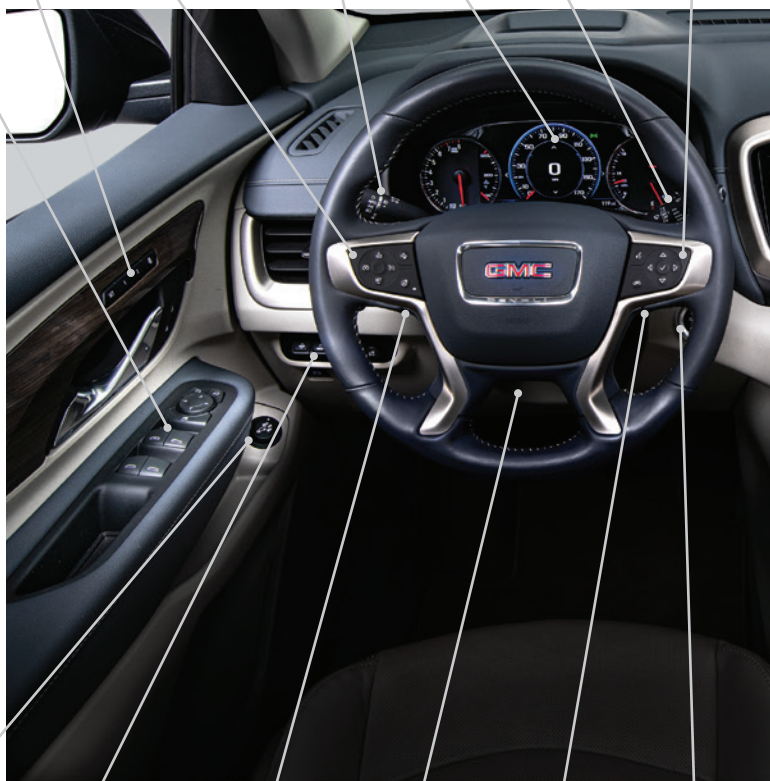

- Power Liftgate Control
- Head-Up Display Controls/Interior Lamp Control/Electric Parking Brake Switch
- Audio Next-Previous Favorite Station Controls (behind steering wheel)
- Tilt/Telescoping Steering Wheel Adjustment Lever
- Audio Volume Controls (behind steering wheel)
- Engine Start-Stop Button (on instrument panel)

Symbols

- | | | | | | |
|--|--------------------------|--|-------------------------------------|--|------------------------|
| | Check Engine | | Cruise Control Set | | Security |
| | Engine Oil Pressure | | Service Electric Parking Brake | | Seat Belt Reminder |
| | Lane Keep Assist Warning | | Traction Control/StabiliTrak Active | | Brake System Warning |
| | Airbag Readiness | | Charging System | | Electric Parking Brake |

Infotainment
System
Touchscreen

Infotainment
System
Controls

Auto Engine Stop-Start
Disable/Hazard Warning
Flashers Buttons

Climate
Controls



USB Ports/
Auxiliary Input/
Accessory
Power Outlet

Driver's
Heated♦/
Ventilated Seat
Buttons♦

Driver Mode Control/
Hill Descent Button/
Lane Keep Assist
Button

Passenger's
Heated♦/
Ventilated Seat
Buttons♦

Park Assist/
Automatic
Parking Assist
Buttons♦

Electronic
Precision Shift
Transmission
Controls



IntelliBeam Lighting



Lights On Reminder



Antilock Brake
System Warning



Low Tire Pressure



Power Steering Warning



Vehicle Ahead



StabiliTrak Off



Passenger Seat Belt
Reminder

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.



Power Liftgate*

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps will flash and the horn will sound 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start*

Press and release the Lock button and then immediately press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat these steps to run the engine for an additional 15 minutes. A remote start can be extended once.
- Press and hold the button until the parking lamps turn off to cancel a remote start.

Remote Start Heated/Ventilated Seats*

Select the Remote Start Auto Heat Seats or Remote Start Auto Cool Seats option in the Vehicle Settings to have the heated or ventilated seats turn on during a remote start. The seat button indicators do not illuminate and the temperature performance of the unoccupied seats may be reduced during a remote start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. **The key fob must be within 3 feet of the door being unlocked/locked or within 3 feet of the liftgate.**

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on any passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: If the key fob battery is weak, place the key fob in the driver-side cupholder of the center console to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION


The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The transmission is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.

DISABLING AUTO ENGINE STOP/START

- ▶ Press the (A) Auto Stop button (A), located below the infotainment screen, when the engine is running to disable the stop/start system. When the system is disabled, the button indicator will not be illuminated. The system is enabled each time the vehicle is started.

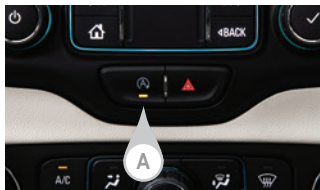

See Driving and Operating in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

FRONT SEATS

POWER SEAT ADJUSTMENTS♦

A. Seat Adjustment

Move the horizontal control to slide the seat forward or rearward, and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the top of the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the rear control to adjust the lumbar support.



SET MEMORY SEAT POSITIONS♦

With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound.
- ▶ To store a seat position for when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.



RECALL MEMORY SEAT POSITIONS♦

- ▶ Press and hold button **1**, **2** or  **Exit** until the seat and mirrors reach the set position. The memory/exit positions can be programmed to be recalled automatically.
- ▶ To set Seat Entry Memory and Seat Exit Memory, go to Settings > Vehicle > Seating Position.

FOLD-FLAT FRONT PASSENGER SEATBACK

1. Lower the head restraint and move the seat as far back as possible.
 2. Lift the recline lever (D) and fold the seatback forward.
- ▶ To raise the seatback, lift the recline lever and fully raise the seatback.



See Seats and Restraints in your Owner's Manual.

Some equipment shown may not be included in your vehicle.


REAR SEATS

RECLINE THE REAR SEAT

- Pull the lever (A) on the top of the seatback and move the seatback to the desired position. Release the lever.

FOLD THE REAR SEATBACK

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever (A) on the top of the seatback and fold the seatback forward. A tab near the lever is visible when the seatback is unlatched.
3. To fold a rear seatback from the cargo area, pull the top lever♦ (B) (passenger-side seat) or bottom lever♦ (C) (driver-side seat) located on the passenger's side of the rear cargo area.

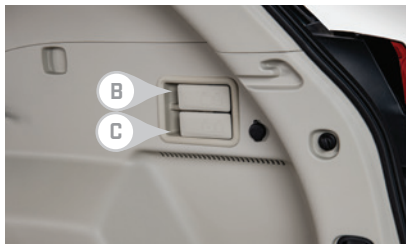

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Always check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed during a trip, indicating that there may be something in the rear seat.

See Seats and Restraints in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. For detailed videos and instructions on how to program the Universal Remote System, go to homelink.com. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

ELECTRIC PARKING BRAKE

- To apply the parking brake, press the (P) **Parking Brake** button on the left side of the instrument panel.
- To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) button.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The Electronic Precision Shift transmission control switches are located on the front console. The selected gear position illuminates in red on the switch. Bring the vehicle to a complete stop before shifting the transmission.

Park – Press the **P** button to shift to Park.

Reverse – Pull the **R** switch to shift to Reverse.

Neutral – Press the **N** button to shift to Neutral.

Drive – Pull the **D** switch to shift to Drive.



ELECTRONIC RANGE SELECT (MANUAL) MODE

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade.

1. Press the **L (Low)** button.

2. Press the **+** (plus) or **-** (minus) button to increase or decrease the gear range available.

The current gear is displayed on the Driver Information Center.

If vehicle speed is too high or low for the requested gear, the shift will not occur.

CAR WASH MODE

The Car Wash Mode enables the vehicle to remain in Neutral when using automatic car washes. Refer to your Owner's Manual for more information.

See Driving and Operating in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to wash the windshield.



REAR WIPER

Turn the end of the lever.

OFF

INT Intermittent Wipes

ON

 **Rear Washer Fluid**

Push the lever to wash the rear window.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY ♦

The Head-Up Display (HUD) projects some key information, such as speed, audio/phone information, navigation directions, performance information, and other indicators on the screen on top of the instrument panel. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.

INFO

Lift up to turn the HUD on/off and raise/lower the screen. Press down to select from four display views.

Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

LIGHTING

EXTERIOR LAMP CONTROL

Rotate the outer band on the turn signal lever to activate the exterior lamps.

Off/On

AUTO

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps/exterior lamps depending on outside light conditions.

Parking Lamps

Headlamps

Fog Lamps ♦

Rotate the inner band down to turn the fog lamps on or off.



INTELLIBEAM SYSTEM


The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions while driving at night. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Press the  button on the end of the turn signal lever with the exterior lamp control in the AUTO or  Headlamps position to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph. The IntelliBeam system is turned off if the fog lamps are on.

See Lighting in your Owner's Manual.

CLIMATE CONTROLS

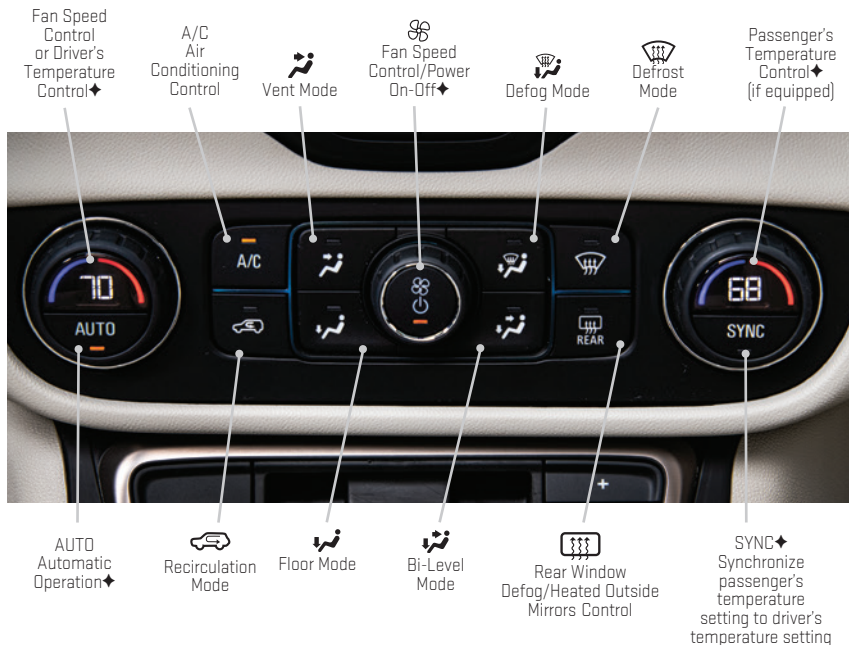

Dual Automatic Climate Controls ♦ shown

AUTOMATIC OPERATION ♦

- Press AUTO.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions to maintain the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, the Auto indicator turns off and automatic operation for that function is canceled.

AUTO DEFOG ♦ AND AUTO REAR WINDOW DEFOG ♦

Auto Defog and Auto Rear Defog automatically turn on based on temperature and humidity conditions.

- Go to Settings > Vehicle > Climate and Air Quality to turn the Auto Defog and Auto Rear Defog settings on or off.

See Climate Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages. Use the DIC controls on the right side of the steering wheel to view the available menus and customize the settings.

DIC CONTROLS

- ▶ Press the ◀ or ▶ button to move to a display zone. Press the ◀ button to go back to the previous menu.
- ▶ Press the ▲ or ▼ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or select or reset an item.



Uplevel DIC ♦ shown

SELECT INFO PAGES♦

1. Use the controls to display the Options menu. Press ✓.
2. Select Info Pages. Press ▶ to view the items.
3. Press ▲ or ▼ to scroll through the list of items.
4. Press ✓ to select or deselect an item to display in the Info menu.

CHANGING DISPLAY THEMES♦ (DENALI MODEL)

The DIC features 2 reconfigurable display themes: Sport and Touring.

1. Use the controls to display the Options menu. Press ✓.
2. Select Display Theme. Press ▶ to view the themes.
3. Select the desired theme. Press ✓.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth voice recognition with a paired, compatible phone.

End Call/Mute

Press the button to end or decline a call.
Press to mute/unmute the vehicle speakers.

Volume

(behind right side of steering wheel)
Press to adjust the volume.

Next/Previous Favorite Station

(behind left side of steering wheel)

Press the button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station buttons shown

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Uplevel radio with 8-inch diagonal screen ♦ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or go to gmc.com/support.

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. Press the  Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

INFOTAINMENT SYSTEM

SETTING THE TIME

1. Select Settings on the Home page.
 2. Select System tab > Time/Date > Set Time.
 3. Touch the arrows to adjust the hours and minutes.
 4. Press the <BACK button to exit the menu.
- Turn on Automatic Time and Date to have the time updated automatically as the system obtains information from the cellular network.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.

Note: To change the number of favorites displayed, go to Settings > System > Favorites.



NATURAL VOICE RECOGNITION♦

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  Push to Talk button on the steering wheel.
2. The radio will play a prompt.

3. After the prompt, say what you want it to do using natural speech.

Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

IN-VEHICLE APPS♦

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

PORTABLE AUDIO DEVICES

The front USB ports are for data and charging. Other USB ports are for charging only.

- Connect an iPod®, iPhone®, MP3 player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands.
- With a portable device connected, touch Audio, and then touch More, if necessary, to select the USB device.



See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

APPLE CARPLAY® AND ANDROID AUTO™

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection while parked:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and your phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit gmc.com/support for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button on the steering wheel; after the prompt, say "Pair Phone."
To use the infotainment screen, select the Phone icon > Connect Phones > Add Phone.
2. Start the pairing process on your phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- To set the first and secondary phones, select the Phone icon > Phones >  Information.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (phones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit gmc.com/support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the Home page or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The Wireless Phone Charging system is located in front of the center console armrest. To check phone compatibility, visit gmc.com/support. See your phone retailer for required phone accessories or charging adapters.



1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the phone, screen facing rearward, in the pocket.
4. The ⚡ charging symbol will display on the infotainment screen when charging.

See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home screen.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press <BACK to exit each menu.



See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle tab > Teen Driver.

See Infotainment System in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT[♦] – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat-pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected ahead that you're following and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat[♦] pulses (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control[♦] following gap setting.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat[♦] may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- ▶ To turn on or off, press the  **Lane Keep Assist** button on the center console.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and display an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat[♦] pulses (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low visibility performance is limited.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT[♦] – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected rapidly approaching or is in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

DRIVER ASSISTANCE SYSTEMS

REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph.

HD SURROUND VISION – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front and rear camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph.

- ▶ Touch one of the **Camera** buttons on the infotainment screen to change the camera view.
- ▶ Touch the **Guidance Lines** button on the infotainment screen to turn the guidelines on or off.



FRONT AND REAR PARK ASSIST –

During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and beeps sound or the Safety Alert Seat pulses (if selected). When an object is very close, 5 beeps sound or the Safety Alert Seat pulses (if selected).

- ▶ To turn on or off, press the **P** Park Assist button on the center console.



REAR CROSS TRAFFIC ALERT – When the vehicle is in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and directional beeps sound or the Safety Alert Seat pulses (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

AUTOMATIC PARKING ASSIST – Automatic Parking Assist steers the vehicle to help you park in parallel or perpendicular spaces while you follow commands and control the gear selection, acceleration and braking. The system works at speeds below 18 mph.

1. Press the **P** Automatic Parking Assist button on the center console. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. Once a space is found, shift the vehicle into Reverse or Drive as directed, follow the commands on the infotainment screen and apply the accelerator or brake as needed. The steering wheel will briefly vibrate as a reminder to remove your hands. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When the system is active, press to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.



ADAPTIVE CRUISE CONTROL

The system enhances regular Cruise Control to maintain a driver-selected following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a targeted following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

TRACTION SELECT SYSTEM

The Traction Select system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions.

- ▶ Rotate the Driver Mode Control knob on the center console to the desired mode.

FWD Models:

-  Tour
-  Snow

AWD Models:

-  Tour
-  All-Wheel Drive
-  Off-Road

The AWD indicator will illuminate when an all-wheel-drive mode is selected.



See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a very steep incline in a forward or reverse gear.

- ▶ Press the  **Hill Descent Control** button on the center console. Vehicle speed must be below 31 mph to turn on the system.
- ▶ Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes on the instrument cluster when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

See Vehicle Care in your Owner's Manual.

POWER PROGRAMMABLE LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button twice on the Remote Keyless Entry transmitter (key fob).
- ▶ Press the  knob (A) on the driver's door.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the  button (C) next to the pull handle to close the liftgate.

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the  knob to the 3/4 mode.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the  button (C) next to the pull handle until a beep sounds.
4. In the 3/4 mode position, the power liftgate will open to the programmed height.

HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. Depending on operating conditions, the GMC logo is projected on the ground near the rear bumper to indicate the kicking motion location for hands-free operation.

See Keys, Doors and Windows in your Owner's Manual.

Some equipment shown may not be included in your vehicle.



ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The GMC Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

ONSTAR ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY GMC ACCOUNT

Get to know your vehicle as well as view your plans, services and rewards with your GMC account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at gmc.com/owners.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2022 General Motors LLC. All Rights Reserved.



84895939

We recommend always using
ACDelco or GM Genuine Parts.



84895939 A