

Features & Functions Guide

KW

KG

WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area — with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader App. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos

QUICK TIPS

If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal

After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODES

Your New Kia Important
Care Tips Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key with Remote Start	47
2	Fuel Filler Door Release	48
3	Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	44-45
4	Seat Warmers* / Ventilated Seats*	43
5	Lifting Wipers (Wiper Service Mode)	27
6	Windshield Wipers & Washers	27
7	Idle, Stop & Go (ISG) System*	38
8	Smart Cruise Control (SCC)	16
9	Highway Driving Assist (HDA)*	19
10	Rear Occupant Alert (ROA) with Door Monitoring	45
11	Smart Trunk with Auto Open*	49
12	Normal Maintenance Schedule	Back Cover
13	User Settings - Instrument Cluster	09
14	Vehicle Settings* - Infotainment System	10
15	Bluetooth® Wireless Technology	30
16	Standard Audio System - Value*	33
17	Kia Connect Activation* / Kia Connect Assistance*	34
18	Kia Connect with Navigation*	36
19	Android Auto™ / Apple CarPlay® Setup	32

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

www.kia.com
 Consumer Affairs - Roadside Assistance^{†12}:
 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

QR CODES

Your New Kia Important
Care Tips Video



Navigation System
Important Tips Video



Vehicle Cameras
Important Tips Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

VIDEOS & QR CODES Inside Cover

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights.....	04
Tire Pressure Monitoring System (TPMS)	05
Instant Fuel Economy / Fuel Economy	06
Drive Mode Integrated Control System	07

VEHICLE SETTINGS

LCD Instrument Cluster Modes.....	08
Trip Modes / Trip Computer.....	08
User Settings - Instrument Cluster	09
Service Interval Mode	09
Vehicle Settings - Infotainment System*	10
Vehicle Auto-Shut Off	10

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Forward Collision-Avoidance Assist (FCA).....	11
Lane Keeping Assist (LKA)	12
Blind-spot Collision-Avoidance Assist (BCA)	13
Safe Exit Assist (SEA)*	14
Driver Attention Warning (DAW).....	14
Leading Vehicle Departure Alert (LVDA)	15
Smart Cruise Control (SCC)*	16
Navigation-based Smart Cruise Control	
- Curve (NSCC-C)*	17
Cruise Control (CC)*	17
Lane Following Assist (LFA)	18
Highway Driving Assist (HDA)*	19
Rear View Monitor (RVM).....	20
Surround View Monitor (SVM)*	20
Rear Cross-traffic Collision Avoidance	
Assist (RCCA).....	21
Reverse Parking Collision-Avoidance	
Assist (PCA)*	22
Forward/Reverse Parking Distance Warning	
(PDW)*	22

DRIVER'S PANEL

Instrument Cluster Illumination Control*	23
Electronic Stability Control (ESC)	23
Hill-start Assist Control (HAC).....	23
Engine Start/Stop Button	24
Manual Folding Mirrors*	24
Electronic Child Safety Lock System*	24
Power Windows, Window Lock	
& Central Door Lock.....	25
Automatic Door Lock/Unlock	25
Power Folding Outside Mirrors*	25
Power/Heated Outside Mirrors*	25

STEERING WHEEL CONTROLS

Headlights & High Beams.....	26
High Beam Assist (HBA)*	26
Turn Signals & Fog Lights*	27
Windshield Wipers & Washers.....	27
Lifting Wipers (Wiper Service Mode).....	27
Heated Steering Wheel*	28
Tilt/Telescoping Steering Wheel.....	28

INFOTAINMENT SYSTEM

Audio Controls	29
Bluetooth® Wireless Technology	30
Android Auto™ / Apple CarPlay® Setup.....	32
Standard Audio System - Value*.....	33
Kia Connect Activation*.....	34
Kia Connect Assistance*	34
Kia Access App Download	35
Kia Access App Features Guide	35
Kia Connect with Navigation*	36

CENTER PANEL

Multimedia USB Port & Power Outlets	37
USB Charger Ports*	37
Digital Clock (Infotainment System)	37
Idle, Stop & Go (ISG) System*.....	38
Wireless Smartphone Charging System*	39

CENTER PANEL CONTINUED

Automatic Climate Control.....	40
Electronic Parking Brake (EPB).....	41
Auto Hold	41
Automatic Gear Shift with Sportmatic® Shifting ..	42
Paddle Shifters*.....	42
Dual Clutch Transmission (DCT)*	43
Seat Warmers* / Ventilated Seats*	43

SEATING

Driver Position Memory System*	44
Power Adjustable Driver's Seat*	44
6-Way Manual Adjustable Driver's Seat*	45
Rear Occupant Alert (ROA)	
with Door Monitoring.....	45
Front Seat Headrest Adjustment	45

OTHER KEY FEATURES

Map/Room Lamps	46
Panoramic Sunroof with Power Sunshade*	46
Smart Key with Remote Start	47
Double-Turn Lock/Unlock All.....	48
Fuel Cap / Malfunction Indicator	
(Check Engine Light).....	48
Fuel Filler Door Release.....	48
Trunk Release Buttons	49
Smart Trunk with Auto Open.....	49
Sunvisor.....	50
Hood Release Lever and Latch.....	50

 
SAFETY FEATURES

Occupant Detection System (ODS) /	
Passenger Airbag Off Indicator	51
Child-Protector Rear Door Locks (Manual)*	51
Seat Belts	51

LEGAL DISCLAIMERS Inside Back Cover

MAINTENANCE - TURBO Back Cover

Instrument Cluster Overview

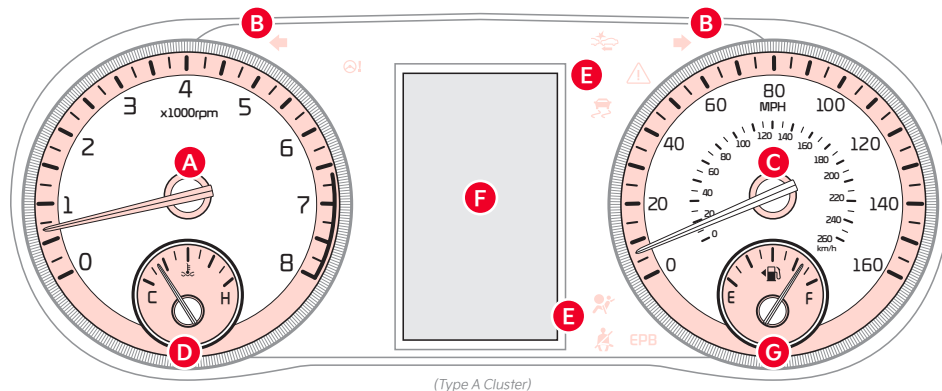

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicators & Warning Lights
- F** LCD - Gear Shift Position, Odometer, Trip Modes / Trip Computer, Driving Assist
- G** Fuel Gauge

↖ Arrow direction indicates the side of the vehicle the fuel door is located on

QR CODES

Instrument Cluster's LCD Display Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

INSTRUMENT CLUSTER

Indicators & Warning Lights

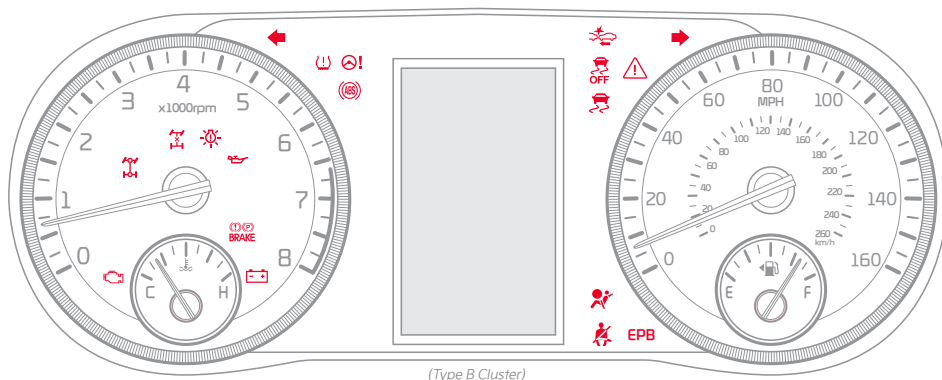

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.



Immobilizer Indicator Light*



SPORT Mode Indicator Light*



High Beam Assist Indicator*



High Beam Indicator



Low Beam Indicator Light*



Light ON Indicator Light



Parking Brake & Brake Fluid Warning Light



Engine Oil Pressure Warning Light



Motor Driven Power Steering (MDPS) Warning Light



Charging System Warning Light



Airbag Warning Light



Seat Belt Warning Light



Malfunction Indicator Lamp (MIL)



Low Tire Pressure Indicator / TPMS Malfunction Indicator



Anti-lock Braking System (ABS) Warning Light



Electronic Stability Control (ESC) Indicator Light



Electronic Stability Control (ESC) OFF Indicator Light



Electronic Parking Brake (EPB) Warning Light*



LED Headlamp Warning Light*



Forward Collision-Avoidance Assist Warning Light*



Lane Keeping Assist Indicator Light*



Low Fuel Level Warning Light



Electronic Brake force Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)



Cruise Indicator Light



Cruise SET Indicator Light*



AUTO HOLD Indicator Light*



Front Fog Light Indicator



Master Warning Light*

Tire Pressure Monitoring System (TPMS)^{†20}

 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator .

The indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated. Inflate tire(s), using an accurate digital tire pressure gauge, to specifications to turn off the Low Tire Pressure Position Indicator ; see the front driver's door jamb for PSI specification.

 
When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

QUICK TIPS


- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 3 hours or more, and are not hot from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended specification pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) can interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

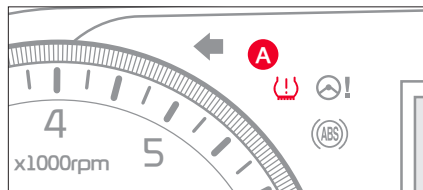

 (Indicator located on Instrument Cluster)

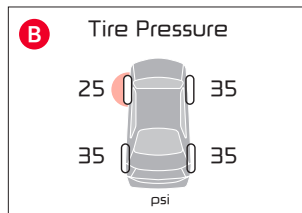

QR CODES

Tire Pressure Monitoring System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
For illustrative purposes only.
Your actual display, buttons and/or features may vary.

Refer to section 6 in the Owner's Manual for more information.

Instant Fuel Economy

Press the Mode button **A** to cycle to the Trip Computer mode , then toggle up or down with the OK button **B** to cycle to the Fuel Economy screen. The bar at the bottom of the screen displays the calculated Fuel Consumption during the past few seconds when the vehicle speed is more than approximately 6 mph.

1. Keep your vehicle in good condition with regular maintenance
2. Travel lightly, without carrying unnecessary weight in your vehicle
3. Don't let the engine idle longer than necessary

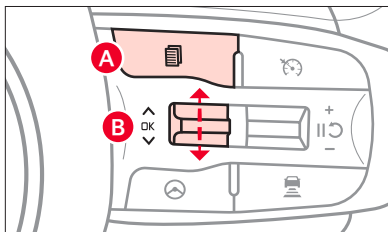

(Type A - Buttons located on Steering Wheel)

REMINDERS:

- Not to be used in calculating or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 mph after being refueled with more than 1.6 gallons, the average fuel economy will be cleared to zero (----

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Use the climate control system less often. Use the Driver Only* setting
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to section 4 in the Owner's Manual.

QR CODES

Tips for Economical Driving Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System

 
The drive modes may be changed according to the driver's references or road conditions. To cycle through the drive modes **A** or deactivate a drive mode, rotate the DRIVE MODE knob **B**.

When a drive mode is selected, the drive mode indicator will illuminate in the Instrument Cluster or the Infotainment System* screen (except for COMFORT). The system's default mode is COMFORT mode and when selected, the indicator will not be illuminated.


- **COMFORT** Mode
- **SPORT** Mode
- **SPORT+*** Mode (2.5 Turbo)
- **SNOW*** Mode* (All Wheel Drive)
- **SMART** Mode* - When the SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). The color of the SMART mode indicator (green, white, red) depends on the current driving style
- **CUSTOM** Mode* - When CUSTOM mode is selected, on the Infotainment System* the driver can select separate modes with different combinations of drive modes

REMINDERS:

- When SPORT mode is selected, fuel economy may decrease
- The system defaults to COMFORT mode when the ignition is turned on
- Steering effort may be slightly increased in Sport mode
- When vehicle is shut down while in SPORT Mode, the system will default to NORMAL mode when the engine is turned off. SPORT mode would need to be selected again once the vehicle is restarted

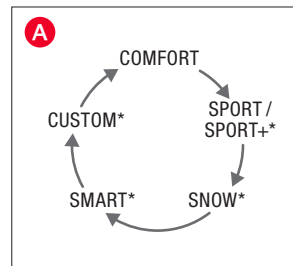

 For illustrative purposes only. Actual vehicle operation or display may vary.

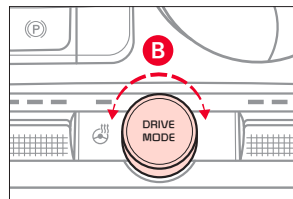

(Dial located on center console below gear shift)

QR CODES

Drive Mode Integrated Control System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

For illustrative purposes only. Actual displays, buttons and/or features may vary.

LCD Instrument Cluster Modes

Press the Mode button **A** to cycle through different LCD Instrument Cluster Modes.

Type B Cluster:



Trip Computer Mode: driving information for Fuel Economy, Accumulated Info, Drive Info, Transmission Temperature



Turn-by-Turn Mode*: Displays information on Route Guidance, Destination Info



Driving Assist Mode: Displays information for Forward Collision-Avoidance Assist, Lane Keeping Assist, Blind-spot Collision-Avoidance Assist*, Smart Cruise Control*, Lane Following Assist, Driver Attention Warning



User Settings* Mode: Change settings for Driver Assistance, Door, Lights, Convenience, Service Interval, Language, Other Features, Reset



 
Information/Master Warning Mode: Informs of Drive Force Distribution and warning messages related to the vehicle, TPMS[†], Driver Assist systems

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Refer to section 4 in the Owner's Manual for more information.

Trip Modes / Trip Computer

The Trip Computer is a system to relay pertinent driving information. It appears on the display when the ignition switch or the Engine Start/Stop button is in the ON position.

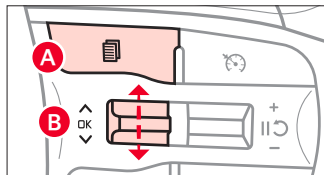

(Buttons located on Steering Wheel)

To cycle through the Trip Modes, press the Mode button **A**.

 
To select and enter Trip Computer mode , press the OK button **B** up or down and then press the OK button **B** to enter.

To cycle through different screens (Fuel Economy, Drive Info, Digital Speedometer, etc.), press the OK button **B** up and then press to enter.

When displaying the Tripmeter screens, press and hold the OK button **B** to reset the Tripmeter to zero.

REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

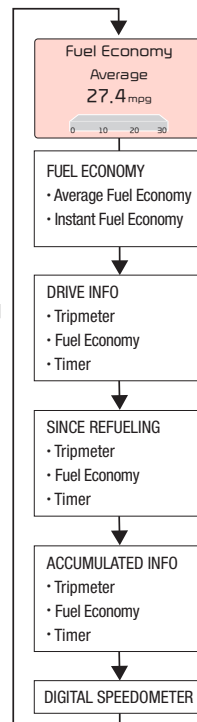

QR CODE

Instrument Cluster's LCD Display Video



Steering Wheel Controls Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Your vehicle's steering wheel buttons may differ from those in the illustrations.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

User Settings* ⚙️ - Instrument Cluster

To enter the User Settings mode in the Instrument Cluster, press the Mode button **A** when the vehicle is at a standstill, shift lever is in Park and with the ignition switch or the Engine Start/Stop button* in the ON position, select User Settings ⚙️ by pressing the OK button **B**.

You can navigate the selections on the display by pressing the OK button **B** up and down, and then selecting the item by pressing the OK button **B** again.

User Settings:

Driving Assistance*:

- Warning Time
- Warning Volume
- Driver Attention Warning
- Forward Safety
- Lane Safety
- Blind-spot Safety
- Parking Safety

Door/Trunk:

 
- Automatically Lock
- Automatically Unlock
- Two-Press Unlock
- Smart Trunk with Auto Open*

Lights:

- Ambient Light
- One-Touch Turn Signal
- Headlamp Delay
- High Beam Assist

Convenience:

- Welcome Mirror/Light
- Wireless Charging System

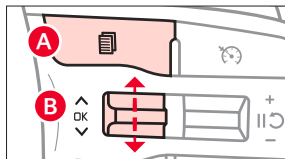

(Buttons located on Steering Wheel)

Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

Other Features:

- Fuel Economy Auto Reset
- Speedometer Units
- Fuel Economy Units
- Temperature Units
- Tire Pressure Units

Reset:

- Reset User Setting menus

Language:

- Choose the language

Some settings in certain models may be available through the Infotainment System* screen. Refer to section 4 in the Owner's Manual or the Car Infotainment System Quick Reference Guide.

Refer to section 5 in the Owner's Manual for more information.

Service Interval Mode

To enter Service Interval mode, press the Mode button **A**, scroll using the OK button **B** to User Settings ⚙️ and press the OK button **B** to enter. Then scroll to Service Interval and press the OK button **B** again. The System will display number of miles remaining until the next service is due, as well as type of service.

When service is required, the following will be displayed: **Service Required**.

To reset the Service Interval mode system, press and hold the OK button **B** for more than 1 second.

To turn Service In OFF, go to User Settings again and turn off.

Service Interval Setting

To set the service interval when in User Settings mode:

- Press the OK button **B** up/down and scroll to Service Interval. Press the OK button **B** again to enter
- Press the OK button **B** and toggle to ON, then press the OK button **B** again to set. Then press the OK button **B** up/down to scroll and select the desired miles or months for your next service
- Press the OK button **B** again to enter

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder. Go to User Settings*, Convenience, then Oil Change, or go to Vehicle Settings* in the Infotainment System, Cluster, then Oil Change Reminder.

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Vehicle & User Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Service required

 


0 mi
0 day

(Type B cluster)

Vehicle Settings* - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System **A**, press the **SETUP** key on the Infotainment System. Then press the Vehicle icon, which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.

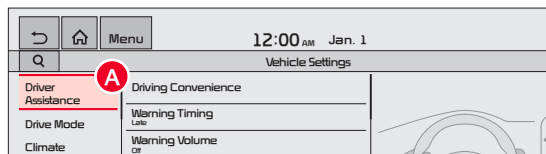

Vehicle Settings:

Driver Assistance: Driving Convenience*, Warning Time*, Warning Volume*, Driver Attention Warning*, Forward Safety*, Lane Safety*, Blind-spot Safety*, Parking Safety*

Drive Mode: Drive Mode Alert*

Climate*: Recirculate Air*, Automatic Ventilation*, Defog/Defrost Options*, Climate Features*

Lights*: Ambient Light*, One Touch Turn Signal*, Headlight Display*, High Beam Assist*

Door*: Auto Lock*, Auto Unlock*, Walk-Away Lock*, Two-Press Unlock*, Smart Trunk*

Cluster*: Select Theme, Service Interval, Energy Consumption Reset, Content Selection, Welcome Sound

Convenience*: Rear Occupant Alert*, Welcome Mirror Light*, Wireless Charging System*, Vehicle Auto-Shut Off*

Active Sound Design*: Strong, Normal, Soft, Off

Seat*: Seat Position Change Alert*, Smart Posture Care*, Seat Easy Access*, Rear Seat Heating Control*

Reset: Reset Vehicle Settings to Factory Defaults

Refer to the Car Infotainment System Quick Reference Guide for more information.

Vehicle Auto-Shut Off

The Vehicle Auto-Shut Off, when certain conditions are met, will turn the vehicle off automatically after a pre-set time (30 or 60 minutes) in the User Settings **A** on the Instrument Cluster LCD.

 
 
A warning on the Instrument Cluster LCD will appear stating the "Vehicle will be turned off automatically in..." and a chime will sound when the timer starts **B**.

QUICK TIP

The timer that appears on the Instrument Cluster's LCD can be reset using the OK button on the right side of the Steering Wheel.

When timer ends, a continuous beep sounds for one minute before the vehicle shuts off.

Auto-Shut Off Settings - The system is on by default and timer is pre-set to 30 minutes. To change the pre-set time settings, go to User Settings* **A** on the Instrument Cluster LCD or the Infotainment System Vehicle Settings* and select 30 minutes, 60 minutes or off **C**.

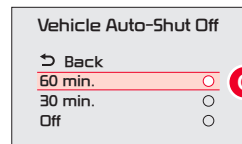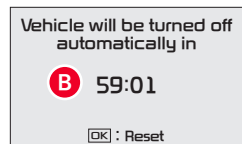

REMINDERS:

- When the vehicle is turned off then on again, the system defaults to on (30-minute pre-set time)
- The system will activate when the vehicle is on and these conditions are met:
 - The vehicle is in (P) Park
 - The driver's seat belt is unfastened
 - The driver's door is opened
 - The passenger seat is not occupied

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

Vehicle & User Settings Video



Vehicle Auto Shut-off Video



Ambient, Mood & Theme Lighting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

*IF EQUIPPED

Forward Collision-Avoidance Assist (FCA)^{†3}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, temporarily apply emergency braking. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle, pedestrian, or cyclist, emitting an audible warning and visual alert on the instrument cluster.

If the system detects that the collision risk has increased, Forward Collision-Avoidance Assist (FCA) automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

With the turn signal on, if it detects a potential collision, Junction Turning **D** may help to avoid the collision with an oncoming vehicle in an adjacent lane when turning left by applying emergency braking.

FCA Settings:

- FCA is on by default in most Kia models. FCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings*  in the Instrument Cluster - Press the Mode button  **B** on the Steering Wheel to toggle to User Settings . Press the OK  up/down to toggle to Driver Assistance and select an FCA mode
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance and select an FCA mode
- FCA Modes** - Select one of the following:
 - Active Assist:** Vehicle will provide a warning (audible & visual) and apply the brakes if needed
 - Warning Only:** Vehicle will provide a warning only (audible & visual)
 - Off:** System is off, no warnings or braking provided
- Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - Normal:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - Later:** Reduces the amount of distance between the vehicles before the initial warning occurs

FCA will become active when the:

 
 
- Ignition is on or the Engine Start/Stop button* is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

When engaged, Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle or alert the driver when the vehicle is approaching another vehicle.. Always drive safely and use caution.

Actual User Settings steps may vary by model. For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.



A

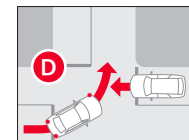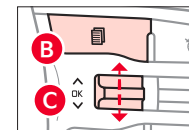

(Junction Turning)

QR CODE

Forward Collision-Avoidance Assist (FCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the Infotainment System. Go to Driver Assistance, then Warning Volume.

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster 

Lane Keeping Assist (LKA)^{†3}

Lane Keeping Assist is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

When LKA is enabled, LKA will turn on when the Lane Safety/LKA button*  is depressed to ON.

 
LKA Settings:

- Press and hold the Lane Safety button  to turn LKA on or off, when it is first enabled in the User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings*  in the Instrument Cluster - Press the Mode button   on the Steering Wheel to toggle to User Settings . Press the OK  up/down to toggle to Driver Assistance and then Lane Safety
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance and then Lane Safety
- **LKA Modes** - Select one of the following:


- **Assist:** LKA will automatically assist the driver's steering when lane departure is detected to help prevent the vehicle from moving out of its lane
- **Warning Only:** LKA will warn the driver with an audible warning when lane departure is detected. This mode does NOT provide any steering assist
- **Off:** LKA will turn off. The indicator light  will turn off on the cluster

All systems will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

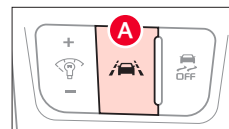

 (Located to the left of the steering wheel)

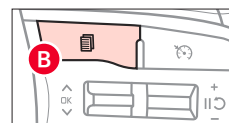

(Steering Wheel button on right side)

QUICK TIP

The Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings* on the Infotainment System.

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Actual User Settings steps may vary by model. Refer to section 5 in the Owner's Manual for more information.

QR CODE

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.



When the front-view camera does **not** detect the lane traveled in, the lanes are not illuminated gray



When the front-view camera detects the lane traveled in, both lanes are illuminated gray



When the front-view camera detects the vehicle moving outside of the lane it is traveled in, a vehicle crossing lane indicator will blink, either on the left or right lane (as shown in both images above)



Blind-spot Collision-Avoidance Assist (BCA)^{†3}

BCA uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes. Initially, BCA provides Blind-spot Collision Warning (BCW) when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, Blind-spot Collision-Avoidance Assist (BCA) automatically applies the opposite side front brake to try and mitigate a potential collision.

 
 
 
Vehicle detection: When another vehicle is detected within BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

Collision-Avoidance Assist: When collision warning has already occurred, and the collision risk has increased, braking is applied to the opposite side front wheel and a visual warning occurs.

BCA Settings:

- BCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* in the Instrument Cluster** - Press the Mode button  **C** on the Steering Wheel to toggle to User Settings . Press the OK **D** up/down to toggle to Driver Assistance, then Blind-spot Safety and select a BCA mode
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Blind-spot Safety and select a BCA mode
- **BCA Modes** - Select one of the following:
 - **Active Assist:** BCA will provide a warning (audible & visual) and may activate Electronic Stability Control (ESC) and temporarily apply braking power
 - **Warning Only:** Vehicle will provide a warning only (audible & visual)
 - **Off:** System is off, no warnings provided
- **Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - **Normal:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - **Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

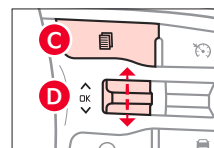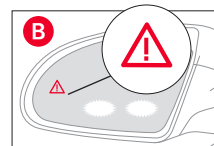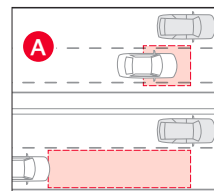

(Buttons located on right side of steering wheel)

QUICK TIPS

- The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to Driver Assistance, then Warning Volume
- BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Vehicle speed is above approximately 20 mph

QR CODE

Blind-spot Collision-Avoidance Assist (BCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

REMINDERS:

- BCA will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When BCA is ON and the ignition is cycled, BCW returns to its previous state
- BCA may sound when making a left turn. Maintain a proper distance from oncoming vehicles

 
Refer to section 5 in the Owner's Manual for more information.

Safe Exit Assist (SEA)*†3

Safe Exit Assist can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, after your vehicle has stopped.

SEA keeps the sliding doors closed. When pressing the Power Sliding Door lock button, SEA warns the driver of the risk of collision with a vehicle approaching the blind spot area.

To turn on SEA, go to User Settings* ⚙️ in the Instrument Cluster LCD or press **SETUP** in the Vehicle Settings* in the Infotainment System, then select Driver Assistance, Blind-spot Safety, and select Safe Exit Assist.

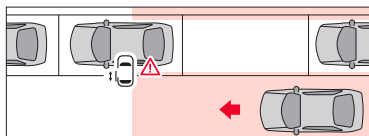

REMINDERS:

- The setup of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display "Consider taking a break" message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes

When engaged, SEA is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle. Refer to section 4 in the Owner's Manual for more information.


Driver Attention Warning (DAW)†4

Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving. If DAW is activated, the DAW information **A** will appear on the Instrument Cluster LCD when you select the Assist mode in the Instrument Cluster User Settings ⚙️. A message, "Consider taking a break," **B** appears on the LCD and a warning sounds to suggest the driver take a break when the driver's attention level becomes low.


DAW Settings:

- DAW can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* ⚙️ in the Instrument Cluster - Press the Mode button  **C** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **D** up/down to toggle to Driver Assistance, then Driver Attention Warning and select Inattentive Driving
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Inattentive Driving
- **Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - **Normal:** DAW warns the driver of his/her inattentive driving practices
 - **Late:** DAW warns the driver of his/her inattentive driving practices later than Normal mode

Images are for illustrative purposes only and may not reflect actual feature or operation.

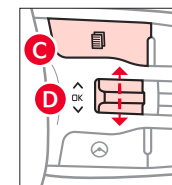 

(Steering Wheel buttons on right side)

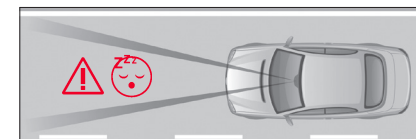 

Refer to section 5 in the Owner's Manual for more information.

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

QR CODES

Safe Exit Assist (SEA) Video



Driver Attention Warning (DAW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Leading Vehicle Departure Alert (LVDA)*†3

Leading Vehicle Departure Alert is designed to inform the driver when the vehicle in front starts moving or departs from a stop. When LVDA is on, your vehicle is stopped, and it detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster LCD.

LVDA Settings:

 
 
- LVDA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings*  in the Instrument Cluster - Press the Mode button  **B** on the Steering Wheel to toggle to User Settings . Press the OK  **C** up/down to toggle to Driver Assistance, then Driver Attention Warning and select Leading Vehicle Departure Alert
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Leading Vehicle Departure Alert
- **Warning Timing** - When in Driver Assistance menu, select Warning Timing and select one of the following:
 - **Normal:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
 - **Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

QUICK TIP

The Warning Volume can be adjusted in the User Settings* in the Instrument Cluster or the Vehicle Settings* on the Infotainment System.

REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

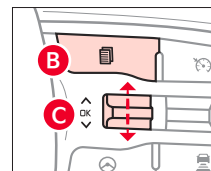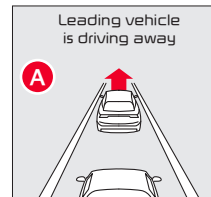

QR CODE

Leading Vehicle Departure Alert (LVDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, LVDA is not a substitute for safe and proper driving. Always drive safely and use caution. See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Smart Cruise Control (SCC)*†3

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal.

With SCC on and activated, and the vehicle distance set, when SCC detects a vehicle slowing or stopping, it can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than three seconds, press the accelerator pedal or press the **+II↺** - button on the Steering Wheel to start moving the vehicle.

Smart Cruise Control will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

To set/adjust the SCC speed:

- Press the Driving Assist button*  **A** on the Steering Wheel to activate and the speed will be set to the current vehicle speed. SCC may decrease the speed to maintain the distance with the vehicle in front.
- Accelerate/decelerate to the desired speed
- Push the Driving Assist button*  **A** to turn SCC on and set speed. The CRUISE indicator will illuminate on the instrument cluster and the set speed will automatically activate at the vehicle's current speed
- Press the **+II↺** - button **B** inward to pause/resume the cruise control
- Press the **+II↺** - button* **B** up/down to increase/decrease the set speed. The SET indicator light, set speed and vehicle distance will illuminate on the instrument cluster's LCD screen

 
To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. The image on the LCD screen will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **D**.

To pause/resume SCC operation: Depress the brake pedal or press the Pause/Resume **+II↺** - button* **B**. The cruise indicator on the instrument cluster will change.

To turn SCC off: Press the Driving Assist  button **A**. The cruise indicator on the instrument cluster will turn OFF.

When engaged, SCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.


Refer to section 5 in the Owner's Manual for more information.

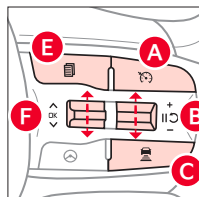

(Type B Steering Wheel shown; buttons located on right side of Steering Wheel)



 The distance settings are approximations and may vary depending on the vehicle speed at the time. See Owner's Manual for more information.

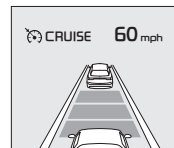

Images are for illustrative purposes only and may not reflect actual feature or operation.

QUICK TIPS

- Pressing the brake pedal cancels the SCC operation
- For SCC to operate:
 - When no vehicle is in front, you must be traveling at a minimum speed of 5 mph
 - When following a vehicle, there is no minimum speed requirement

REMINDERS:

- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See Owner's Manual for other conditions

QR CODE

Smart Cruise Control with Overtaking Acceleration Assist Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Navigation-based Smart Cruise Control - Curve (NSCC-C)*†3

Navigation-based Smart Cruise Control can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system.

 
To turn on NSCC, go to the User Settings* in the instrument cluster or the Vehicle Settings* in the Infotainment System, by selecting Driving Assistance, Highway Auto Speed Change. When SCC is on and operating, and NSCC is turned on, then NSCC is enabled and the AUTO icon **A** will illuminate white on the Instrument Cluster LCD.

When NSCC detects a curve ahead, activates, and reduces the vehicle speed, the AUTO icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

Autoset (Automatic change of set speed): NSCC automatically changes the set speed of Smart Cruise Control using the speed limit information of the navigation system* to help you drive at a safe speed.

REMINDERS:

- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways
- The navigation part of Smart Cruise Control does not function when a destination is not set on the infotainment navigation system

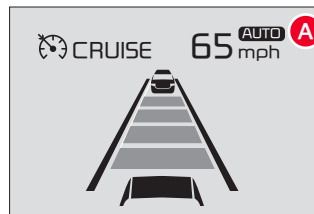

(Display on LCD screen)

Refer to section 5 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide.

When engaged, NSCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

QR CODE

 
Navigation-based Smart Cruise Control (NSCC) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Cruise Control (CC)†17

- B Driving Assist button:** Press to turn the Cruise Control On/Off. The indicator will illuminate on the instrument cluster and the set speed will automatically activate at the vehicle's current speed
- C + button:** Press up to increase Set speed
- button:** Press down to set or decrease Set Speed
- D Pause/Resume button:** Press to pause Cruise Control. Press again to resume Cruise Control

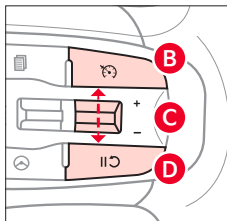

QUICK TIPS

- Cruise Control is designed to function at above 20 mph
- Cruise Control will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not automatically apply brakes.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 5 in the Owner's Manual for more information.

When engaged, SCC and Cruise Control are supplemental systems and are not substitutes for safe driving.

Lane Following Assist (LFA)^{†3}

Lane Following Assist is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjust the steering. When driving, LFA can be switched on and off by pressing the LFA button **B**. When turned on, the instrument cluster indicator will initially illuminate white **C**. It will remain white when the system does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon **C** will illuminate green **C**.

 
 
Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. And if hands on the Steering Wheel is not detected continually, LFA will be turned off with additional emergency warning.

LFA will operate only when these conditions are met:

- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph

LFA Settings:

- LFA can be enabled by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* in the Instrument Cluster** - Press the Mode button **D** on the Steering Wheel to toggle to User Settings **G**. Press the OK **E** up/down to toggle to Driver Assistance, select Lane Following Assist and press the OK button **E**
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Lane Following Assist and press the OK button **E**
- **Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - **Normal:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - **Later:** Reduces the amount of distance between the vehicles before the initial warning occurs
- Some vehicles have a Lane Driving Assist / Lane Safety button* on the Driver's Panel or the Steering Wheel **B**. When LFA is enabled, press button to activate LFA

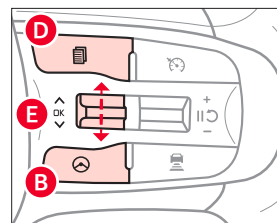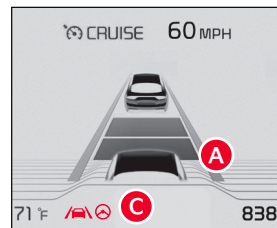

(Buttons located on steering wheel)

QR CODE

Lane Following Assist (LFA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions.

See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

QUICK TIP

The Warning Volume can be adjusted in the User Settings **G** in the Instrument Cluster or the Vehicle Settings* on the Infotainment System.

REMINDERS:

- LFA is not a substitute for safe and proper driving. Always drive safely and use caution
- If the ignition is cycled, LFA returns to its previous state, on or off, if activated in the User Settings **G** menu and when combined with SCC. If using the Steering Wheel LKA button, then LKA defaults to off

Highway Driving Assist (HDA)*†3

Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways. The system can adjust the vehicle's speed based on available highway speed information. The automatic speed setting mode is designed to set the speed automatically by adjusting to the current speed limits of the highway vehicle is traveling on.

When HDA is activated and the conditions are met, the Instrument Cluster indicator **A** will illuminate green. If the conditions are not met, HDA will be in standby mode and the indicator light **A** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **A**.

If HDA is activated, conditions are met and the SCC speed is set by the driver (at the posted highway speed limit or slower), HDA will enter the automatic speed setting mode. The set speed and AUTO will be displayed **B** in green and an audible alert will sound.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands on the Steering Wheel is not detected, HDA will cancel.

HDA settings:

- HDA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings*  in the Instrument Cluster - Press the Mode button  **C** on the Steering Wheel to toggle to User Settings . Press the OK  up/down to toggle to Driver Assistance, then Driving Assist. Select Highway Driving Assist and press the OK button  **D**
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Convenience. Select Highway Driving Assist to activate

REMINDERS:

- Current highway speeds and controlled or limited access roads information may vary. Future navigation updates may change this information. See owner's manual for more information
- When the ignition is cycled, the system returns to its previous state, on or off
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode

 
When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 5 in the Owner's Manual for more detailed information, limitations and conditions.

QR CODE


Highway Driving Assist (HDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

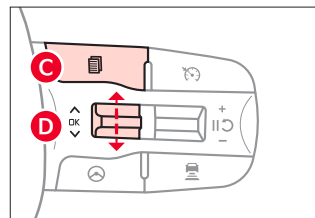

(Type B Steering Wheel controls)

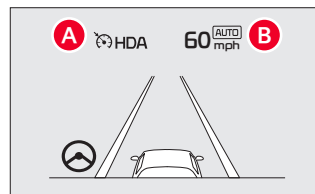 


Images are for illustrative purposes only and may not reflect actual feature or operation.

Rear View Monitor (RVM)*†3

RVM is a supplemental system that displays the view behind the vehicle through the Infotainment System screen while the vehicle is in Reverse.

RVM activates when the:

 - Ignition is on or the Engine Start/Stop button* is in the ON position
- Gear Shift Lever is in the R (Reverse) position

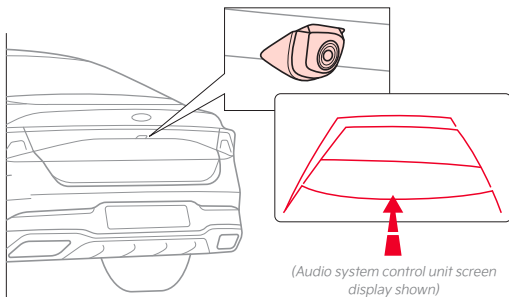

REMINDERS:

- Rear View Monitor is ON by default when the ignition is cycled
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While the Rear View Monitor is active the volume will be lowered on all audio modes

Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle.

The screen image above is for illustration purposes only. The actual image or graphics may differ in your vehicle. Your actual display, buttons and/or features may vary.

 
Refer to section 4 in the Owner's Manual for more information.

Surround View Monitor (SVM)*†3


Surround View Monitor (SVM) is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the Infotainment System screen.

- Press the Parking/View button **A** to turn on Surround View Monitor. Press the button again to turn off the function
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen
- **Surround View Monitor Auto On:** With Driver Assistance → Parking Safety → Surround View Monitor Auto On selected from the Settings menu, the front parking assist view screen is displayed when Parking Distance Warning warns the driver while driving in **D** (Drive)

To change the SVM settings, press the onscreen settings icon **C**, while SVM is operating.

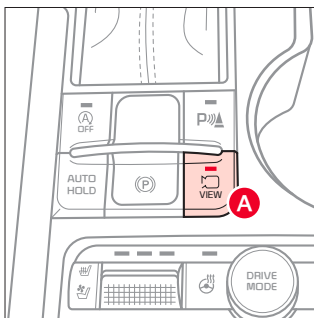

(Button located below gear shift)

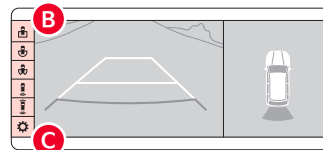 

Images are for illustrative purposes only and may not reflect actual feature or operation.

QUICK TIP

The Front View of SVM will turn off when the gear shift is moved into Park or Reverse or the Parking/View button is pressed.

REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- While the SVM is active the volume will be lowered on all audio modes

When engaged, Surround View Monitoring (SVM) is only a supplemental system. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

See section 4 in the Owner's Manual for more information.

QR CODE

Surround View Monitor (SVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†3}

Rear Cross-traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver under certain conditions. It may activate the Electronic Stability Control (ESC) and temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.

 
 
 
When the RCCA rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

RCCA Settings:

- RCCA can be turned on/off by going to the User Settings* ⚙️ in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* ⚙️ in the Instrument Cluster** - Press the Mode button **C** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **D** up/down to toggle to Driver Assistance, then Parking Safety. Select Rear Cross Traffic Safety and press the OK button **D**
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross Traffic Safety
- **Warning Timing** - When in the Driver Assistance menu, select Warning Timing and one of the following:
 - **Normal:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - **Later:** Reduces the amount of distance between the vehicles before the initial warning occurs

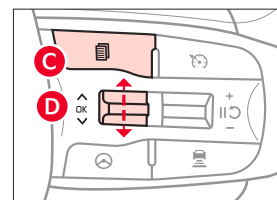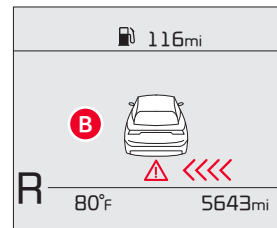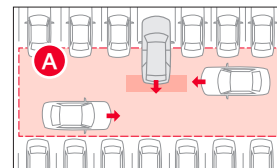

(Buttons located on right side of steering wheel)

QUICK TIP

The Warning Volume can be adjusted in the User Settings ⚙️ in the Instrument Cluster or the Vehicle Settings on the Infotainment System. Go to Driver Assistance, then Warning Volume.

QR CODE

Rear Cross-traffic Collision-Avoidance Assist (RCCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Reverse Parking Collision-Avoidance Assist (PCA)^{†3}

Reverse Parking Collision-Avoidance Assist (PCA) is designed to detect certain objects/pedestrians behind the vehicle and issues an audible warning and/or applies emergency braking to help reduce the possibility of a collision when the vehicle is in reverse.

PCA Settings:

- PCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, the ignition is on or the Engine Start/Stop button* is in the on position
- To access User settings* in the Instrument Cluster - Press the Mode button  **A** on the Steering Wheel to toggle to User Settings . Press the OK  up/down to toggle to Driver Assistance, then Driving Assist. Select Parking Safety and press the OK button  **B**
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driver Convenience, then select Parking Safety

There are three modes:

 
- **Rear Active Assist** - PCA will warn the driver with an audible alert and may apply temporary braking
- **Rear Warning Only** - PCA will warn the driver with an audible alert
- **Off** - PCA is disabled

REMINDERS:

- PCA is operational when Active Assist is selected in the Vehicle Settings
- PCA will only operate when:
 - The vehicle's speed is below 6 mph
 - The trunk is closed
 - The gear shift is in R (Reverse)
 - Other systems such as Rear View Monitor are operating under normal conditions

When engaged, Reverse Parking Collision-Avoidance Assist (PCA)* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Reverse Parking Collision-Avoidance Assist (PCA) may not detect every object around the vehicle.

Refer to section 4 in the Owner's Manual for more information.

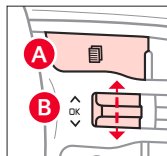


Forward/Reverse Parking Distance Warning (PDW)^{†3}

Forward/Reverse Parking Distance Warning (PDW) is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the front, rear and sides of the vehicle when backing up.

When the ignition is ON, **Reverse** PDW is on and activates when gear shift is moved into reverse.

To turn on **Front** PDW, press the Parking Safety button  **C**.

 To activate or deactivate Parking Distance Warning Auto On, press the **SETUP** key on the Infotainment System → Vehicle (onscreen) → Driver Assistance → Parking Safety → Parking Distance Warning > Auto On.

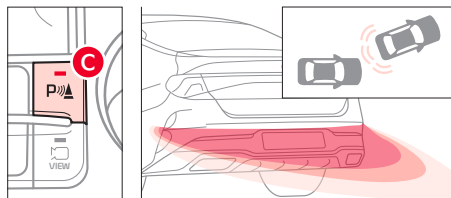

QUICK TIP

PDW warning volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the Infotainment System

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, PDW may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

When engaged, PDW is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object behind the vehicle.

QR CODE

Reverse Parking Collision-Avoidance Assist (PCA) Video



Forward/Reverse Parking Distance Warning (PDW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images shown are for illustration purposes only. Actual operation may vary. Refer to section 4 in the Owner's Manual for more information.

Instrument Cluster Illumination Control*

Press left/right side of switch **A** to adjust the display brightness of the instrument panel illumination.

REMINDER: Instrument Cluster Control does not adjust brightness on the Infotainment System screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 5 in the Owner's Manual for more information.

Electronic Stability Control (ESC)^{†5}

ESC is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON for daily driving whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

 
To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

REMINDEES:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever ESC is in operation

Refer to section 5 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

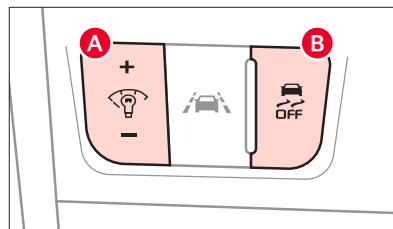

(Button panel located left of Steering Wheel)

Hill-start Assist Control (HAC)^{†5}

HAC can help prevent the vehicle from rolling backward, for two seconds, when accelerating from a stop while on a steep incline.

HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a two-second delay before the vehicle may start rolling backward

REMINDEES:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see an authorized Kia dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 5 in the Owner's Manual for more information.

Engine Start/Stop Button†6

To start the engine:

- Press the brake pedal
- Press the ENGINE START/STOP button while the gear shift is in **P** (Park) or **N** (Neutral)

To turn the engine OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person.

QUICK TIPS

To use electrical accessories:

 
ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once

ON position

- When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice

Keeping the vehicle in ACC or ON position without turning the engine on may discharge the vehicle's battery

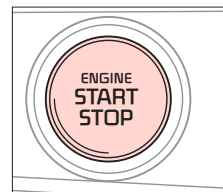

(Located right of Steering Wheel)

For illustrative purposes only.
Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

QR CODE

Start/Stop Button Video



Electronic Child Safety Lock System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds.

Refer to section 4 in the Owner's Manual for more information.

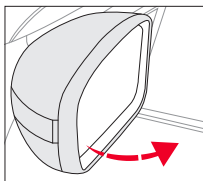


Electronic Child Safety Lock System*

Press button **A** to lock the rear passenger doors. An indicator will illuminate showing the system is active.

This system is on by default, and then activated once the button **A** is pressed. To deactivate, press the button again.

 Button located on door panel.
Button configuration may vary depending on vehicle model.

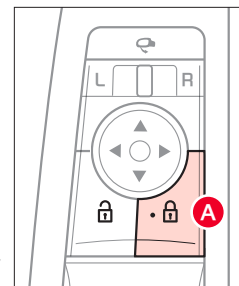

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Driver's and Passenger's Windows Auto-Up/Down*

QUICK TIP

Press button again to stop Auto-Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows / activate Electronic Child Safety Lock System

QUICK TIPS

- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

 
REMINDERS:

- When **C** is pressed, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Refer to section 4 in the Owner's Manual for more information.

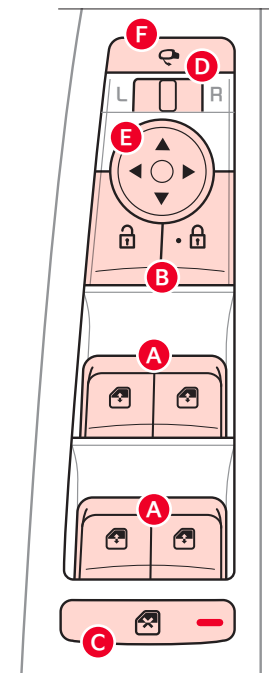

Button configuration may vary depending on vehicle model.

Power Folding Outside Mirrors*

Press the L or R buttons **D** to select the mirror to adjust.

Press button arrows **E** left/right or up/down to adjust mirror position.

Toggle button **F** left/right to unfold/fold the outside rearview mirrors.

Toggle button **F** to center to automatically fold/unfold mirrors when:

- The Smart Key Lock/Unlock buttons are pressed
- The door outside handle button is pressed

QUICK TIPS

- The mirrors will automatically unfold when the Smart Key is within close proximity to the vehicle
- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

Power/Heated Outside Mirrors

Mirror heaters controlled with Rear Defroster. Use mirror to defog/deice side mirrors.

Move toggle switch **D** left or right to select mirror. Then press arrows **E** left/right or up/down to adjust mirror position.

For more information on all items on this page, refer to section 4 in the Owner's Manual.

Headlights & High Beams

 
To operate:

- Rotate lever **A** to change the Headlight function
- Push the lever to turn High Beams ON **B**
- Pull the lever to flash Headlights / High Beams **B**

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

AUTO Light function - When the light switch is in the AUTO Light position, the taillights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

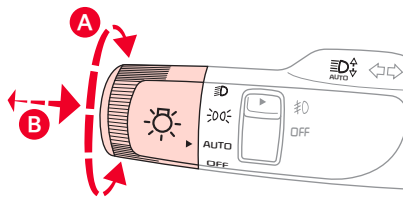

- Headlight position
- Parking light position
- AUTO** Auto Light / HBA / DRL
- OFF** OFF position

REMINDER: DRL only operates during the daytime.

Images are for illustrative purposes only and may not reflect actual feature or operation.

High Beam Assist (HBA)*

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

QR CODE

High Beam Assist (HBA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Refer to section 4 in the Owner's Manual for more information.

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal **A**
- Fog Lights - Rotate switch **B** up/down to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

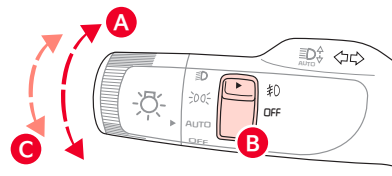

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing **C**. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster modes.

 
Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary

Windshield Wipers & Washers

To operate:

- Move lever Up/Down **D** to change wiper modes
- Press switch **E** Up/Down to adjust Intermittent Wipe Speed to Fast/Slow
- Pull lever to spray and wipe

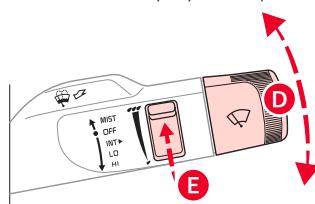

MIST: Single wipe

OFF: Wiper off

INT: Intermittent wipe

LO: Slow wipe

HI: Fast wipe

QUICK TIPS

- Pressing button **E** up increases Intermittent wipe frequency and wipe speed. Pressing the button down decreases the frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 4 in the Owner's Manual for more information.

Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **F** to prevent damaging the hood.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch **E** to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

Refer to section 7 in the Owner's Manual for more information.

 
QR CODE

Wipers and Wiper Stalk Video

Lifting Wipers / Wiper Service Mode Video

Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


Refer to section 4 in the Owner's Manual for more information.

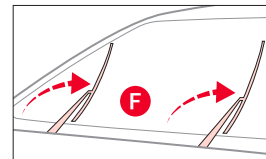

Heated Steering Wheel*

Press button **A** to turn ON/OFF the steering wheel heater, while the ignition or Engine Start/Stop button is in the ON position.

 The steering wheel heater will turn off automatically in 30 minutes or when the button is pressed again to deactivate.

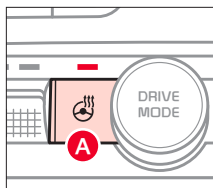

QUICK TIP

If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Refer to section 4 in the Owner's Manual for more information.

 
Tilt/Telescoping Steering Wheel†19

To adjust the Steering Wheel, push the lock-release lever **B** down and adjust to the desired angle **C** and distance **D**.

When finished, pull the lock-release lever **B** up to lock Steering Wheel in place.

QUICK TIP

It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle.

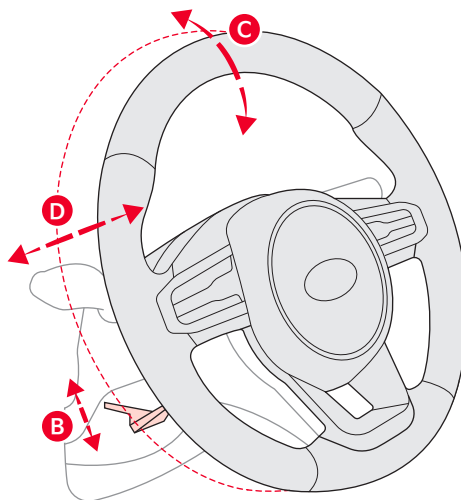

QR CODE

Tilt/Telescoping/Heated Steering Wheel Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

For illustrative purposes only; your steering wheel may differ.

Refer to section 4 in the Owner's Manual for more information.

Audio Controls^{†17}

 
- A Audio System MODE button:** Press to cycle through FM/AM/SiriusXM^{®†18}/Media modes
Audio System ON/OFF: Press to turn power on; Press and hold to turn power off
- B Seek/Presets button:**
 FM/AM/SiriusXM[®] Modes: Press to advance through Preset Stations. Press and hold to auto seek
 Media Modes: Press to move track up/down. Press & hold to forward/rewind (except for Bluetooth[®] Audio)
- C Volume button:** Press up/down to raise/lower volume
Mute button: Press to mute all audio (Media pauses in some Media modes when pressed)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide, depending your audio system. For other audio system information, refer to pages 30-36.

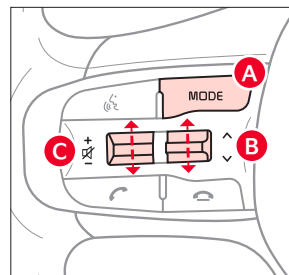

QR CODE

Steering Wheel Controls Video



Star, Favorite & Radio Presets Buttons Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Bluetooth® Wireless Technology†2,17

 
- A Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition

Kia Connect with Navigation system* - When enrolled with a Kia Connect subscription, press this button to activate the Kia Connect Assist to use navigation guidance and search destinations

QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

- B Volume button:** Press up/down to raise/lower the speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause *Bluetooth®* streaming media
- C Receive/Place Call button:** Press to place/answer calls. If no phone is paired, press button to pair a phone
- D End Call button:** Press to end a call, reject an incoming call or cancel a function

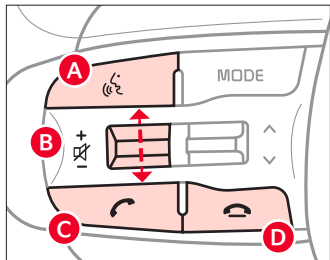

QUICK TIPS

- The system can register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth®* Wireless Technology chip programming, functionality may differ from one phone to another

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Infotainment System Quick Reference Guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth®* connection requests

How to Place a Call Using Steering Wheel Controls

When using the voice command feature, wait for the system beep before speaking the command.

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** (displays the phone screen with call history)
- Option 2: Press the Talk button **A**. Then say the command "Call {name}" or "Dial {number}" followed by contact name or number

REMINDER: *Bluetooth®* Wireless Technology audio and calling functions are supported when connected to a *Bluetooth®* enabled device.

Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide. For *Bluetooth®* Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for *Bluetooth®* Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific *Bluetooth®* Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology*†2,17 (continued)

Voice Recognition* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

REMINDER: Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device.

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner's Manual.

QUICK TIPS

- The system may register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- Bluetooth® Music Streaming - If the Bluetooth® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODE

Voice Recognition Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Android Auto™^{†2} / Apple CarPlay®^{†2} Setup

Android Auto™ compatible smartphone setup — Download the Android Auto™ app from the Google Play™ Store.^{†3} Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Standard Audio System-Value only):

1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ (Standard Audio System-Value & Kia Connect with Navigation):

1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION, select PHONE PROJECTION SETTINGS, then ANDROID AUTO™. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the Infotainment System home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturers website for Android Auto™ / Apple CarPlay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Refer to the Car Infotainment System Quick Reference Guide for more information.

Cable Connection setup for Apple CarPlay® (Kia Connect with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone®^{†3} with the vehicle's USB port using the manufacturer's cable provided with your iPhone®^{†3}
2. Press the **SETUP** key on the Infotainment System
3. Press DEVICE CONNECTION on the screen, select PHONE PROJECTION SETTINGS, then select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY®. Review all terms, conditions and requests on the Infotainment System and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the Infotainment System home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection):
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

 
QR CODE

Wireless Apple CarPlay® & Android™ Auto Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Standard Audio System - Value* — FM/AM/SiriusXM®⁺¹⁶/Media (USB, *Bluetooth*®⁺² Audio, My Music)

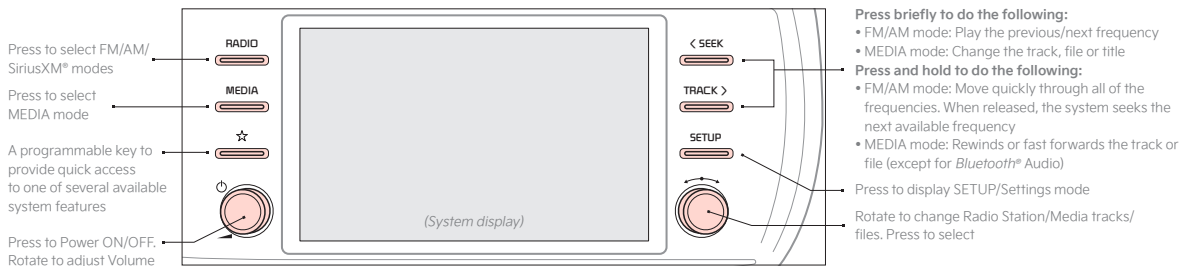

Sound Settings: To adjust the sound settings:

1. Press the **SETUP** key on the Infotainment System or the onscreen MENU button, when in MEDIA mode.
2. Select the onscreen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button  to save settings

Presets: To Save a Preset, press and hold the desired slot. This saves the current station in the selected slot.

SiriusXM® Smart Favorites - In Radio mode, choose SiriusXM®, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: To program the Custom Key, press the **SETUP** button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

To Program the Custom Key: Press and hold the Custom key. Select one of the available features you would like the Custom key to open.

Software updates - To keep your software up to date, free of charge, visit the official Kia update webpage at <https://update.kia.com>. **Note**, visiting a dealer for software update may include an additional charge.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- Prolonged use of the Infotainment System in ACC mode may drain the vehicle's battery
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QR CODE

Standard Audio System - Value Video



Standard Audio System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Your audio system may differ from those in the illustrations. For further system information, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 29-36.

Kia Connect Activation^{*†1} (Systems equipped with Kia Connect only):

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press **SETUP** key
 - b. Press Kia Connect icon
 - c. Press Activate Kia Connect
 2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
 3. Enter number or email address to receive a verification code, then press SUBMIT
 4. Follow these steps to receive your verification code using your phone text message or email:
 - a. Check your phone text message or email for verification code
 - b. Open the link in your text message or email. A page will open requesting that you create your account
- Note:** If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code
- c. Enter your first name, last name, email, phone number, and account password, and click CREATE ACCOUNT. A page will open displaying your verification code
 - d. Enter the code in the head unit and press ACTIVATE

- e. Go back to the page with your verification code and press "I have entered my PIN."
A link will be provided to download the Kia Access app from your app store. After installing the app, log in and enjoy

REMINDER: This vehicle is not equipped with over-the-air system updates. You can also download map updates for the navigation system by going to update.kia.com. Check for updates that are generally available twice a year.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

 
Kia Connect Assistance*

Virtual Assistant ⓘ ⓘ — Press to connect to a virtual assistant to hear information about the Kia Connect features

Kia Connect ⓘ (non-navigation systems) — Connect to the Kia Connect Call Center

Kia Connect Local Search ⓘ (systems with navigation) — Press to connect to the search function to find points of interest or other locations, like "cafe"

Roadside Assist ⓘ ⓘ — Press to connect to a roadside assistant where you can request vehicle towing services

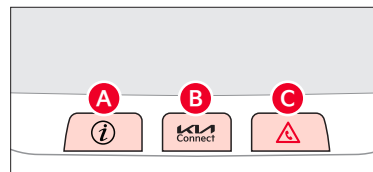

(Buttons on rearview mirror*. Kia Connect button may be located on the overhead console area)

QR CODE

Kia Connect Activation Video



Kia Access app Video



Kia Connect Assistance Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information, refer to the Car Infotainment System Quick Reference Guide.

Kia Access App Download

Go to an app marketplace to download the new Kia Access App. Once you download, make sure you register your vehicle and start an account (refer to Kia Connect Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect. If these conditions are not met, remote command may not execute or takes a long time. It will also effect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Connect will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Connect again



Kia Access App Features Guide

The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia Access App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts.

See Kia Connect Terms of Service at owners.kia.com for more information.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

QR CODES

Download the Kia Access App by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.

 


Kia Access App Features Guide

Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Connect⁺¹ with Navigation⁺⁸ – FM/AM/SiriusXM^{®+16}/Media (USB, Aux, *Bluetooth*^{®+12} Audio)

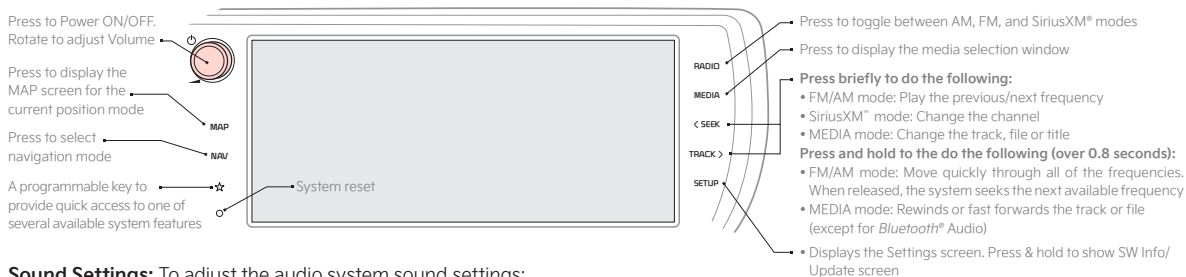

Sound Settings: To adjust the audio system sound settings:

1. Press the **SETUP** key on the Infotainment System or the on-screen **MENU** button, when in MEDIA mode. Select the on-screen **SOUND** button
2. Select the menu item (Position, Volume, Tone, Priority, Navigation Volume, Advanced, Reset)
3. Use the on-screen buttons to adjust settings

Radio Presets: To save a preset, press and hold the desired slot. This saves the current station in the selected slot.

SiriusXM[®] Smart Favorites: In Radio mode, choose SiriusXM[®], then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: To program the Custom Key, press and hold the Custom Key, then select one of the available features you would like the Custom Key to open.

Map/software updates - To keep your map and software up to date, visit the official Kia update webpage at <https://update.kia.com>. **Note**, visiting a dealer for software update may include an additional charge.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- At any time, you can interrupt Kia Connect Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- This system supports Android Auto[™] and Apple CarPlay[®] (USB connection only)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's audio system may differ from that in the illustration.

QR CODE

Kia Connect with Navigation Video



Navigation System Important Tips Video

 


Navigation System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Multimedia USB Port & Power Outlets

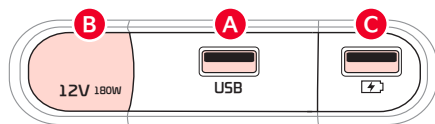

- A** Multimedia USB Port: Use the Multimedia USB Port to connect USB audio and smartphone devices
- B** Power Outlet: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

 
REMINDERS:

- Using the power outlet (accessory plug) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) and AC Inverter for prolonged periods of time with the Engine Start/Stop button in the IGN Position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device
- The USB data port (Multimedia USB port) is located near the Power Outlets. The USB Charger ports do not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

Refer to section 4 in the Owner's Manual for more information.

USB Charger Ports*

The USB Charger Ports are located on the Center Panel and inside the Center Console **C** and on the rear of the Center Console **D**.

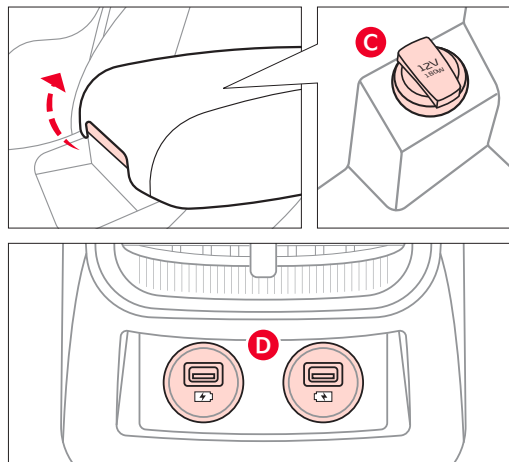

QR CODE

Multimedia USB Port,
Power Outlets & USB
Charger Port Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDER: The USB Charger Ports do not support data transfer.

Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Digital Clock (Infotainment System)

Press the **SETUP** key, then select General. Press the onscreen Date/Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup. To access the manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect with Navigation*).

REMINDER: When needed, Daylight Savings must be enabled in the Clock Settings screen.

For more information, refer to the Car Infotainment System Quick Reference Guide.

Idle, Stop & Go (ISG) System*

The ISG system is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the green AUTO STOP indicator (A) on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode. When engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

 
 
To deactivate the ISG System, press the ISG OFF button (B). If you press again, the system will be activated.

QUICK TIPS

- If the AUTO STOP indicator (A) is solid yellow, the system is functional, but just has not met all its enabling criteria to activate ISG at that time.
- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

REMINDERS:

- ISG is active by default at vehicle startup. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator (A) is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

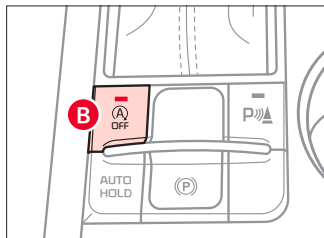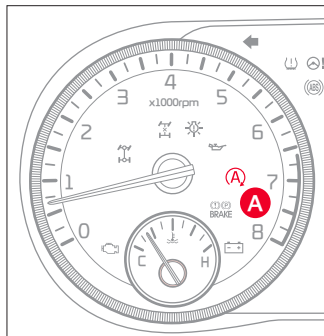

(Button on center console below gear shift)

QR CODE

Idle, Stop & Go Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.

Wireless Smartphone Charging System*†21

Charge a compatible Qi Certified smartphone wirelessly by placing it on the charging pad/slot **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

 
1. Enable Wireless Charging in the User Settings* in the Instrument Cluster LCD or the Vehicle Settings* in the infotainment system, select Convenience, then Wireless Charging System
2. Place compatible smartphone on the center of the charging pad
3. Indicator light **B** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

QUICK TIPS

- For the wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place the smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging as to not impede the charging area

REMINDERS:

- The smartphone must be a compatible Qi certified phone with Qi function available. Some smartphone models are not Qi certified, which may affect the availability, speed or performance of the wireless charging
- If driver door is opened, charging will be disabled
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- Wireless charging technology allows for a device to be charged using inductive charging; however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance - Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness

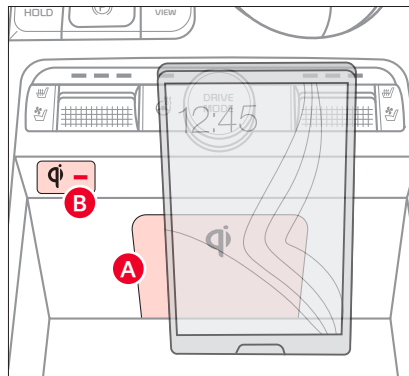

(Located behind Gear Shift. Qi-enabled smartphone shown is for representation only, and is not to scale.)

QR CODE

Wireless Smartphone Charging Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Automatic Climate Control (Type B)

Climate Control Auto Function

1. Select AUTO for Full Auto Operation. Press once for the air flow high setting, twice for medium setting and once more for the lower setting. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired Temperature
3. Press SYNC to synchronize driver and passenger temperature

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:



 
Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set Temperature to Hot
3. Press the Front Defrost button

Defog Inside Windshield:

1. Set Fan Speed to highest position
2. Set Temperature to highest position
3. Press the Front Defrost button

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

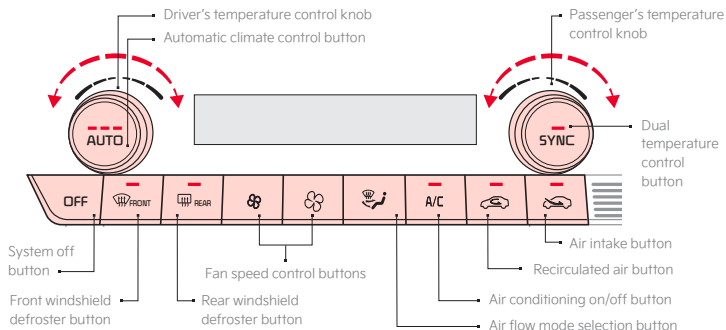

Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep the inside glass as clean as possible to reduce window fogging

QR CODE

Automatic Climate Control Operation Video



Auto Defogging System (ADS) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:

 
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light **(P) BRAKE** is illuminated on the instrument cluster.

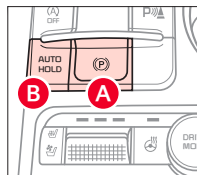

(Located below gear shift)

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- Pull up and hold EPB switch for 3 seconds to increase brake pressure if parked on a decline or incline
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to page 4 for location of Instrument Cluster indicators. Refer to section 5 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **B** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood, trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - With vehicle in Park and at a standstill, when the AUTO HOLD button **B** is pressed on, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn Off when the AUTO HOLD button **B** is manually pressed Off or when the EPB is manually turned On.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive or Neutral. Auto Hold turns off when the ignition is cycled
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Refer to section 5 in the Owner's Manual for more information.

QR CODE

Electric Parking Brake (EPB) / Auto Hold Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Automatic Gear Shift with Sportmatic[®]+2 Shifting (Manual Mode)

P: Park

R: Reverse

[+]: Manual Mode Upshift

N: Neutral

[-]: Manual Mode Downshift

D: Drive

 
Manual Mode: To enter Manual mode, move shift lever from D to left gate **A**.

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

QUICK TIPS

- Press brake pedal and depress release lock button to move gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Refer to section 5 in the Owner's Manual for more information.

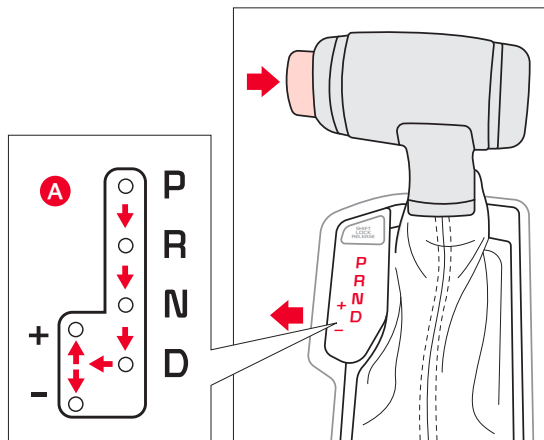

QR CODE

Sportmatic[®] Shifting Video



Automatic Transmission Sportmatic Shifting with Paddle Shifters



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Paddle Shifters*

 
Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

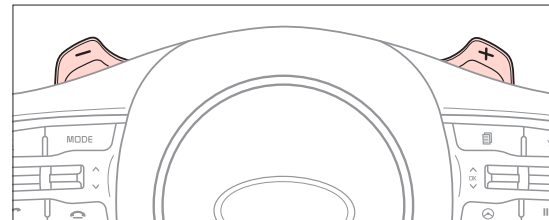

(Paddles on rear side of steering wheel)

Dual Clutch Transmission (DCT)*

Some Kia vehicles are equipped with Dual Clutch Transmission (DCT) for automatic transmissions. The following are unique driving tips for the Dual Clutch Transmission:

- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers

 
If the clutch is overheating, an amber warning light* will be displayed in the instrument cluster.

Should this condition occur, pull over and place the vehicle in Park and idle the engine.

Refer to section 5 in the Owner's Manual for additional information on DCT operation or call Kia Consumer Affairs for additional information.

Seat Warmers*†15

Toggle button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

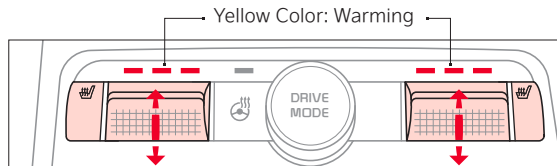


Refer to section 4 in the Owner's Manual for more information.

Seat Warmers*†15 / Ventilated Seats*

Seat Warmers - Press top of button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

 Ventilated Seats - Press bottom of button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

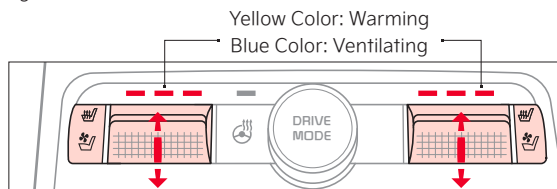

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default. To turn system ON again, press the Heated Steering Wheel button
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

QR CODE

Dual Clutch Transmission (DCT) Video



Seat Warmers/Ventilated Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

 
REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

Driver Position Memory System^{†13}

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store a seating position into memory, first place the shifter into **P** (Park) while the ignition is ON. Then:

1. Adjust the driver's seat and outside mirrors
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored
4. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD screen

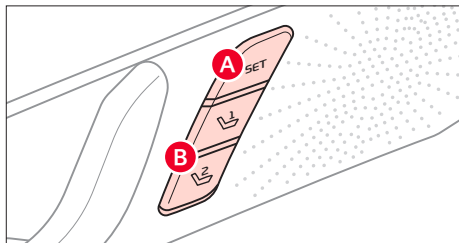



(Buttons located on Driver's Door Panel)

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 3 in the Owner's Manual for more information.

Power Adjustable Driver's Seat^{†*†13}

  Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar up/down/forward/backward.

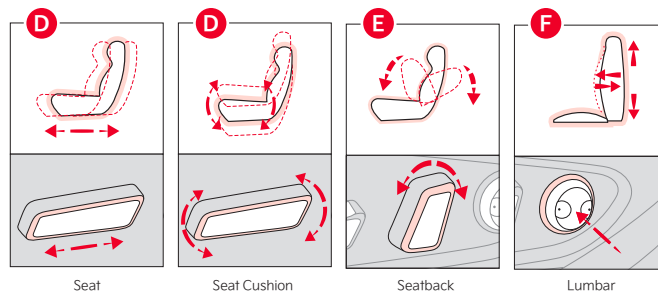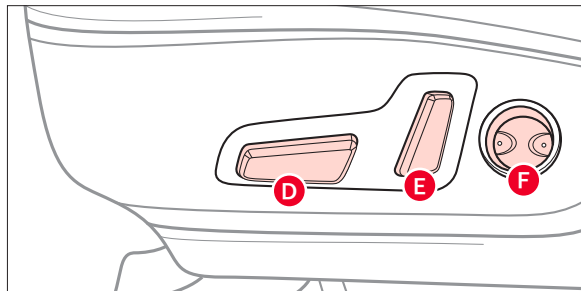

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.

QR CODE

Power Adjustable
Driver's Seat with
Memory Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

6-Way Manual Adjustable Driver's Seat*†13

 
Pull lever **A** to slide Seat forward/backward.

Pull lever **B** up several times to raise Seat Height.

Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback recline.

Press **D** to adjust Lumbar support.

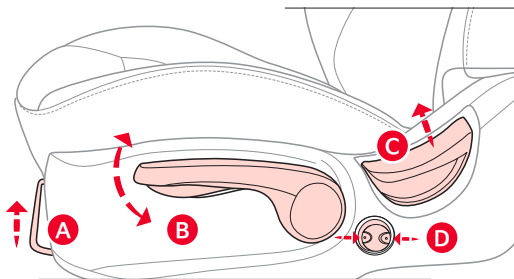

QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.

Rear Occupant Alert (ROA) with Door Monitoring†10

The Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to "Check rear seats" **E** and a chime will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to User Settings in the Instrument cluster or Vehicle Settings*, on the Infotainment System select Convenience, then Rear Occupant Alert and check/uncheck the box.

REMINDER: Always be sure to check the passenger areas before leaving the vehicle.

ROA is not a substitute for one's attention. Always check the vehicle's interior before exiting.

Refer to section 4 in the Owner's Manual for more information.

Image is for illustrative purposes only and may not reflect actual feature or operation.

Check rear seats



Front Seat Headrest Adjustment†7

 
To raise headrest: Pull headrest up to the desired position.

To lower headrest: Press lock **F**, then press the headrest down.

REMINDERS:

- Button may be hard to see if headrest is in its lowest position
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

Refer to section 3 in the Owner's Manual for more information.

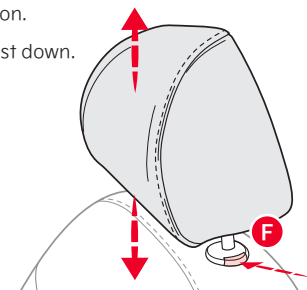

QR CODE

Rear Occupant Alert (ROA) with Door Monitoring Video



Manual Adjustable Driver's Seat Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

 
Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button* is OFF.

Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds
- Press button **D** to turn the Room Lamp ON/OFF

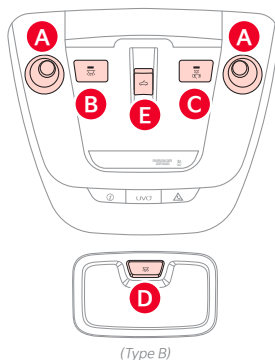

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Panoramic Sunroof with Power Sunshade*

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever. The ignition or Engine Start/Stop button* needs to be in the ON position to operate the sunroof.

To slide the sunshade and sunroof:

- Auto Open: Slide the lever **E** backward to the farthest position and release
- Auto Close (sunroof only): Slide the lever **E** forward to the farthest position and release

To slide the sunshade only:

- Open: Slide the lever **E** partially backward to the first detent position and release
- Auto Close: Slide the lever **E** partially forward to the first detent position and release

To slide the sunroof (with sunshade open):

- Open: Slide the lever **E** backward to the first detent position and release
- Close: Slide the lever **E** forward to the first detent position and release to close sunroof glass only. Slide the lever forward to the farthest position and release to close sunroof glass and sunshade

To tilt the sunroof:

- Raise: Push lever **E** upward
- Lower: Push lever **E** forward

REMINDERS:

- Sunshade needs to remain OPEN while sunroof is open
- When closing, be mindful of any objects or persons
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Sunroof Operation Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIPS

- To stop the sunroof/sunshade at any position, push or pull the sunroof control lever in any direction
- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately one inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

Smart Key with Remote Start^{†6}

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold to open Trunk. Then lift by the handle

REMINDER: Trunk lid will partially open. To fully open, lift up manually. The Trunk unlocks when the Smart Key fob is within close proximity to the vehicle.

- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key (on reverse side of fob)
- F** Mechanical Key
- G Remote Start^{*}:** First, lock the doors by pressing the door lock button **A** within 32 feet from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **G** for more than two (2) seconds to start the vehicle. Press **G** again to turn off. If driver does not enter vehicle within three minutes of starting the vehicle, the engine will automatically turn off

Driver's Door Lock/Unlock button **H**:

 
- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors

Mechanical Key: Use to unlock/lock Driver's Door:

1. Pull out door handle
2. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **I**
3. Insert Mechanical Key **J** and turn right to Unlock Driver's Door
4. Turn twice within 4 seconds to Unlock All Doors
5. Insert Mechanical Key and turn left to Lock All Doors
6. Return keyhole cover to its original position

Note: Use to unlock trunk, lock glove box* and to turn Child Protector Rear-Door Locks.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

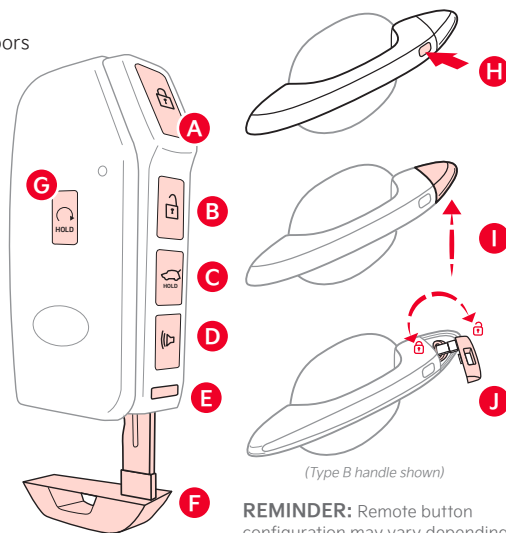

(Type B handle shown)

REMINDER: Remote button configuration may vary depending on vehicle options

QR CODE

Kia Smart & Folding Key Fobs Video



Remote Start - Smart Key Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

REMINDER: When reinserting the mechanical key, ensure it is pushed all the way in until you hear a click.

 
For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 4 in the Owner's Manual for more information.

Double-Turn Lock/Unlock All

- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors


For illustrative purposes only.
Your actual display, buttons
and/or features may vary.

Refer to section 4 in the
Owner's Manual for more
information.

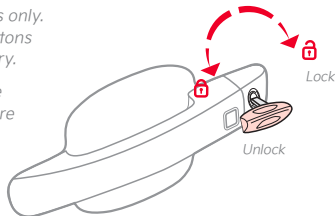

Fuel Cap / Malfunction Indicator (Check Engine Light)

 Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

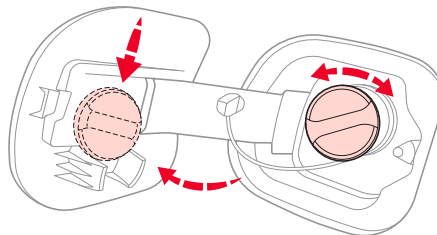

REMINDERS:

- Vehicle must be unlocked first before attempting to open fuel door
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Kia Fuel Cap Video



Fuel Filler Lid Video

 


Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Fuel Filler Door Release

To open the Fuel Door, turn off the engine and ensure driver's door is unlocked. Press on the right center edge **A** of the Fuel Filler Door.


Refer to section 4 in the Owner's Manual for more information.

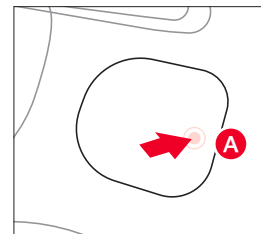

Trunk Release Buttons

Press the button **A** to unlock the Trunk (located to the left of the steering wheel).

 With the Trunk unlocked, press the exterior Trunk Release button **B** (located underneath the Trunk lid) and pull the Trunk lid up by the handle to open.

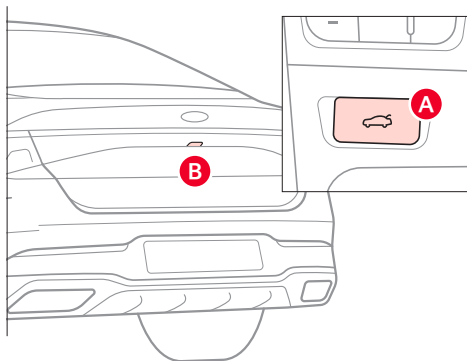

QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- Smart Key - The Trunk unlocks automatically, can then be opened manually, (tail lights flash two times), and automatically locks when closed (tail lights flash one time), when the Smart Key fob is within close proximity to the vehicle

REMINDER: When closing, be mindful of any objects or persons.

 
Refer to section 4 in the Owner's Manual for more information.

Smart Trunk with Auto Open^{†11}

When the Smart Key fob is on your person and you are within close proximity of the back of the vehicle, the hazard warning lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Trunk is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Trunk.

The Smart Trunk feature is OFF by default. To enable the Smart Trunk, go to User Settings in the LCD Instrument Cluster modes or Vehicle Settings* in the Infotainment System (vehicles with Navigation).

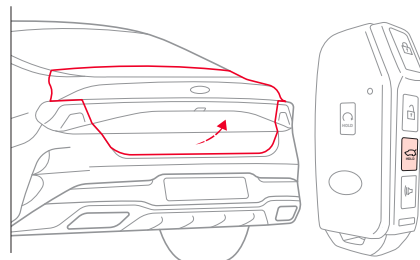

QUICK TIP

During the Smart Trunk alert, the Smart Power Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

REMINERS:

- When closing, be mindful of any objects or persons
- The Smart Key must be outside of the vehicle for the Smart Power Trunk to operate
- All doors are closed and locked after about 15 seconds
- The Smart Trunk feature will not operate when the doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles, a door is not locked or closed, or the Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Trunk function
- When the ignition is on, the Smart Trunk will only operate with the gear shift in the Park (P) position
- Ensure obstacles and people are out of the way of the Smart Trunk

QR CODE

Liftgate Buttons and Operation Video



Manual Liftgate & Key Fob Controls Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

Sunvisor^{†18}

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

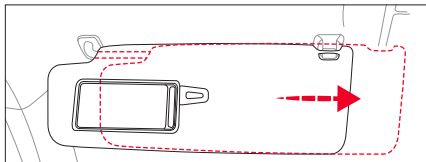

REMINDERS:

 
- The Sunvisor may impair visibility if not adjusted properly
- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sunvisor around from the front or side windows

Refer to section 4 in the Owner's Manual for more information.


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

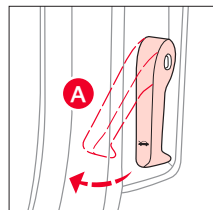

(Located on Driver side kick panel)

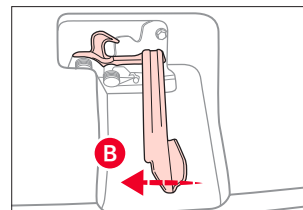 

(Located inside of Hood's center)

Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

Refer to section 4 in the Owner's Manual for more information.

 
Occupant Detection System (ODS)^{†9} / Passenger Airbag Off Indicator^{†14}

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy the airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" light will illuminate.

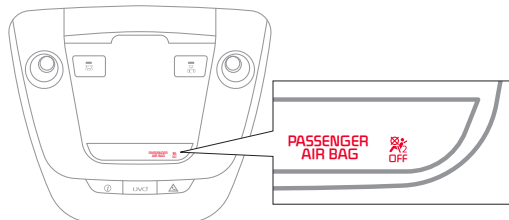

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

 
For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 3 in the Owner's Manual for more information.

Child-Protector Rear Door Locks (Manual)*

Locate these locks on the rear edge of the rear passenger doors. Turn the Child-Protector Rear Door Lock to the LOCK position to disable the inner door handles from opening the rear doors.

REMINDER: Child-Protector Rear Door Locks are located on rear passenger's door jamb.


Refer to the Owner's Manual for more information.

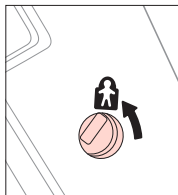

Seat Belts^{†14}

To properly fasten your safety belts:

 1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

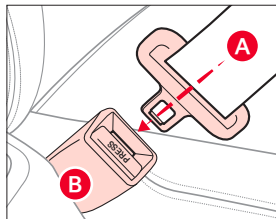

QUICK TIP

The seat belt warning chime operates for driver's seat only.

 
REMINDER: For maximum protection, always wear your Seat Belt.

Seat Belt Retractor Locks^{†14}

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

Refer to section 3 in the Owner's Manual for more information.

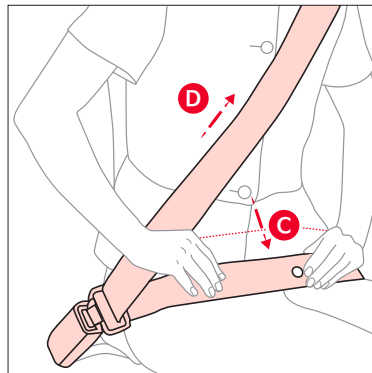

QR CODE

LATCH Anchors for the Child Restraint System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

LEGAL DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **Kia Connect:** Purchase/lease of certain 2022 and newer Kia vehicles with Kia Connect includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access app is available from the Apple® App Store® or Google Play Store®. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.

2. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic™, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.

3. **Driver Assist Features - Highway Driving Assist (HDA), Safe Exit Assist (SEA), Blind-Spot Collision-Avoidance Assist (BCA), Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Lane Following Assist (LFA), Surround View Monitor (SVM), Rear View Monitor (RVM), Forward/Reverse Parking Distance Warning (PDW), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Leading Vehicle Departure Alert (LVDA), Parking Collision-Avoidance Assist-Rear (PCAR-):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

4. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

5. **Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

6. **Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

7. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.

8. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

9. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.

10. **Rear Occupant Alert with Door Monitoring:** When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.

11. **Smart Trunk with Auto Open:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

12. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.

13. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

14. **Seat belts/Airbags:** For maximum protection, always wear your seatbelt.

15. **Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

16. **SiriusXM®:** SiriusXM® Satellite Radio, SiriusXM® Traffic and SiriusXM® Travel Link each require a subscription sold separately, or as a package, by SiriusXM® Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM® Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM®. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM® is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM® satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM® Internet Radio service is available throughout our satellite service area and in AK and HI. ©2022 SiriusXM® Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM® Radio Inc.

17. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

18. **Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.

19. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.

20. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

21. The **myQ logo** is a registered trademark of The Chamberlain Group, Inc.



K5 NORMAL MAINTENANCE SCHEDULE TURBO

(up to 80,000 miles)^A

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)									
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000	72,000	80,000
Add fuel additive ^C	P	P	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P	P	P
Engine oil and filter (Full Synthetic Oil) ^D	R	R	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R	I	R
Air cleaner filter	I	I	R	I	I	R	I	I	R	I
Brake fluid	I	I	I	I	I	R	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I	I	I
Intercooler, in/out hose, air intake hose	I	I	I	I	I	I	I	I	I	I
Driveshaft and boots		I		I		I		I		I
Propeller shaft AWD		I		I		I		I		I
Fuel tank air filter/fuel tank and cap ^{†E}		I		I		I		I		I
Cooling System				I		I		I		I
Drive belts (First 48,000 miles, then every 15,000 miles) ^F						I	I	I	I	I
Dual clutch transmission fluid				I				I		
Differential oil (rear) (AWD)					I					I
Spark Plugs (Every 48,000 miles)						R				
Transfer case oil (AWD) ^G										I

P=Perform **R**=Replace **I**=Inspect^B

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect account by logging into your Kia Access or your account on <https://owners.kia.com/> (Vehicles equipped with Kia Connect only - See page 34 for setup information)

‡ If equipped

- See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule
- And, if necessary, adjust, correct, clean or replace
- If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives
- Check the engine oil level and leaks when stopping for fuel or before starting a long trip. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions

- Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
- The drive belt should be replaced when cracks occur or tension is reduced excessively
- Transfer case oil and rear differential oil should be changed anytime they have been submerged in water

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

QR CODES

Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

©2022 Kia Motors America, Inc.
All rights reserved.

Consumer - Roadside Assistance¹¹²:
1-800-333-4KIA (4542)

Part Number: DL230-PS-004

† LEGAL DISCLAIMERS ON BACK INSIDE COVER